

150 Milford Road

Conair Corporation

Please ship to:

drawn on U.S. banks, in U.S. dollars only.

weeks for delivery. Outside U.S.A., payments must be

include cost for airmail and parcel post. Allow 4 to 6

ordering outside continental U.S.A., consumer must

Note: Prices subject to change without notice. When

Daytime Phone: () _____

City: _____ State: _____ Zip: _____

Address: _____

Name: _____

from \$10.01 and over – add \$1.50 to order.

\$5.01 to \$10.00 – add \$1.00 to order. Any order

up to \$5.00 – add \$.50 to order. Any order from

Please add postage and handling to all orders.

RP3CHV28 3 Jumbo Rollers \$7.75

RP3CHV28 10 Plastic Clips \$7.75

REPLACEMENT PARTS

8 Plastic Clips



8 2-inch-diameter Jumbo Rollers



SMOOTH WAVES / MEGA VOLUME 8-2 INCH ROLLER HAIRSETTER

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO. MANTÉNGALO ALEJADO DEL AGUA

PELIGRO —

enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA —


1. **Nunca deje el aparato desatendido mientras esté conectado.**
2. **No jale, retuerza ni enrolle el cable alrededor del aparato.**

IMPORTANT: After using the hairsetter several times, you will find the best timing for the texture of your hair and for the result you desire.

add volume.

of softer, sophisticated hair styles and

Jumbo rollers create smooth, sleek lines

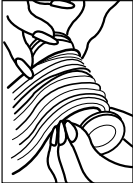

your hair.

add volume to

help smooth and

in diameter, which

rollers are 2 inches

hair. These hot

cool for one minute and then style your

roller has been completely removed. Let


(do not pull) and let hair bounce back after

the remaining rollers on the sides and back

rollers on the top front layer of your hair. Use

For soft curls and waves, use one or two

STYLING TIPS

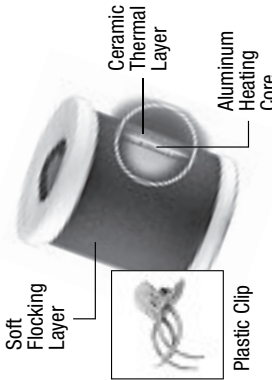

3. Supervise el uso de este aparato cuidadosamente cuando esté usado por, sobre o cerca de niños o personas con alguna discapacidad.
4. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
5. No utilice este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. **Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.**

6. Mantenga el cable alejado de superficies calientes.

7. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.
8. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.

9. No utilice el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
10. Este aparato se vuelve muy caliente. Mantenga los ojos y la piel alejados de las superficies calientes.

11. Nunca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanca, como una cama o una sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
12. No utilice una extensión con este aparato.

13. No toque las partes calientes de este aparato. Utilice el mango y los botones o perillas.
14. Ponga el aparato sobre una superficie llana.
15. No toque las barras de metal ni los elementos calefactores que calientan los rulos. Se vuelven muy calientes.

GUARDE ESTAS INSTRUCCIONES DE OPERACION

Modo de empleo

1. Ponga el aparato sobre una superficie llana y segura. Cierre la cubierta y enchufe el cable en una toma de corriente. El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, invértela. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.
2. Nunca deje el aparato desatendido después de encenderlo. Desconecte el aparato después de usarlo. Permita que el aparato enfríe después del uso. Guarde el aparato en un lugar seguro.
3. Su cabello deberá estar limpio y seco, o ligeramente húmedo. No fije el cabello mojado.

HOW TO STYLE YOUR HAIR

1. Place ends of hair on roller and wind toward scalp. Roll hair up firmly. Open plastic clip, position on roller, and gently slide the plastic clip toward the scalp for a firm hold. Do not place plastic clip in roller slit.

2. The wave is regulated by the temperature and the length of time the roller is left in your hair.
3. Leave rollers in hair for 10 minutes or until rollers are cool before removing.

4. Removing roller: When roller cools, hold roller in one hand and remove plastic clip with other. Then gently remove from hair (do not pull) and let hair bounce back after roller has been completely removed. Let cool for one minute and then style your hair. These hot rollers are 2 inches in diameter, which help smooth and add volume to your hair.

OPERATING INSTRUCTIONS

How to operate your hairsetter

1. Place hairsetter on a firm, flat surface. With the lid closed, plug cord into outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Never leave your hairsetter plugged in and unattended. Always unplug the hairsetter when not in use. Allow the hairsetter to cool down after use. Store unit in safe place.
3. When using the hairsetter, your hair should be clean and dry (or slightly damp), never wet.

SAVE THESE INSTRUCTIONS

the rollers – they are hot.

rollers, nor the aluminum posts that heat

Do not touch the metal rails that heat the

Use handles or knobs.

this appliance.

Do not use an extension cord with

of lint and other debris.

may be blocked. Keep the air openings free

as a bed or couch, where the air openings

appliance or place on a soft surface such

Never block the air openings of the

surface touch eyes or skin.

Unit is hot when in use. Do not let heated

where oxygen is being administered.

aerosol (spray)(gel) products are being used or

Do not use outdoors or operate where

opening or hose.

Never drop or insert any object into any

Keep the cord away from heated surfaces.

center for examination and repair.

the appliance should not be used.

damaged, or dropped into water. Return

properly or if it has been dropped or

damaged cord or plug, if it is not working

Never operate this appliance if it has a

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially children are present, basic safety precautions should always be followed, including the following:

KEEP AWAY FROM WATER. BEFORE USING.

DANGER Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. **Immediately unplug the appliance after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance.**
3. Close supervision is necessary when the unit is used by, on or near children or individuals with certain disabilities.

ONDAS SUAVES – MEGA VOLUMEN SET DE 8 RULOS CALIENTES



8 pinzas de plástico

5 cm de diámetro

8 rulos "jumbo" de

PIEZAS DE REPUESTO

Modelo	Producto	Precio
RPPC-2	10 pinzas de plástico	\$7.75
RP3CHV28	3 rulos "jumbo"	\$7.75

Gastos de manejo y envío: US\$0.50 para pedidos de menos de \$5.00, US\$1.00 para pedidos entre \$5.01 y \$10.00 US\$1.00 para pedidos entre \$5.01 y \$10.00

Nombre: _____

Dirección: _____


Ciudad: _____ Estado: ____ Código postal: _____

Teléfono: (____) _____

Nota: Los precios están sujetos a cambio sin previo aviso. Los consumidores que residen fuera de los Estados Unidos continentales también deben incluir el precio del envío de un paquete desde los EE.UU. La entrega demora entre 4 y 6 semanas. Solamente se aceptan pagos en dólares americanos, girados sobre bancos estadounidenses.

Favor de mandar su pedido a:

Conair Corporation
150 Milford Road,
East Windsor, NJ 08520

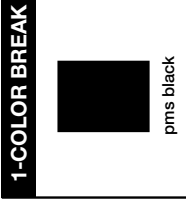

Other Instructions:
White K/O
Bleed edges
PMS black


KEY AREA ROTOC-1



infiniti**PRO**
by **CONAIR**

Instant Heat
Ceramic Flocked
2-Inch Roller Setter

Instruction & Styling Guide
Model CHV28

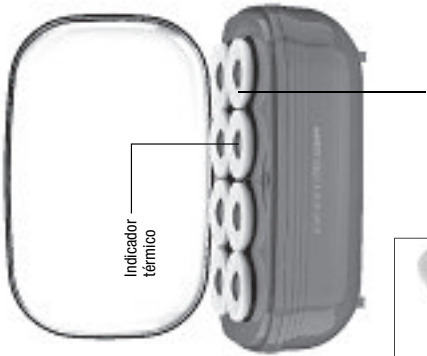

Rulos suaves con cuerpo de cerámica

8 pinzas de plástico

- 8 rulos suaves con cuerpo de cerámica de 5 cm de diámetro
- 8 pinzas de plástico


SENTIENTA
SUS RULOS
FAMILIARÍCESE
CON

INSTRUCCIONES
DE MANTENIMIENTO

Este producto ha sido diseñado para uso doméstico y requiere poco mantenimiento, usando un alto nivel de tecnología y competencia, y requiere poco mantenimiento. Cuando sea necesario limpiarlo, desenchúfelo, permita que enfríe y limpie la superficie exterior con un paño limpio. Limpie el cuerpo del aparato y los elementos calefactores con un paño ligeramente húmedo. De vez en cuando, limpie los rulos usando un paño húmedo y detergente o jabón suave. En caso de mal funcionamiento, desconecte el aparato, permita que enfríe y regréselo a un centro de servicio autorizado.

AL MACENAJE

Permita que el aparato enfríe. Manipule el cable con cuidado para prolongar su vida útil. No lo tiree ni lo retuerza, especialmente al nivel del enchufe. Guarde el aparato en un lugar seco y seguro, fuera del alcance de los niños.

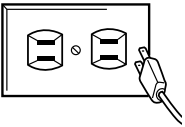

MANTÉNGALO ALEJADO
DEL AGUA

ADVERTENCIA:
SI CREE QUE NO HAY
CORRIENTE CUANDO
EL APARATO ESTÁ
APAGADO, ESTÁ
ENCENDIDO


SIEMPRE DESENCHUFE
LOS APARATOS PEQUEÑOS

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

WARNING:

IF YOU THINK THE
POWER IS OFF WHEN
THE SWITCH IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER

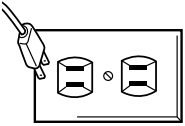

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG
SMALL APPLIANCES

12PH136636

IB-11830

Instrucciones

Modelo CHV28

©2012 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N Glen Harbor Blvd., Glendale, AZ 85307

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Centro de Servicio

Para registrar su producto, visítenos en:

www.conair.com/registration.

infiniti**PRO**
by **CONAIR**


Rulos suaves con cerámica
de 5 cm de diámetro con
calentamiento instantáneo



ONDAS SUAVES
MEGA VOLUMEN
RULOS DE 5 CM
DE DIÁMETRO

GETTING TO KNOW
YOUR HAIRSETTER

- 8 2-inch Diameter Ceramic Flocked Rollers
- 8 Plastic Clips

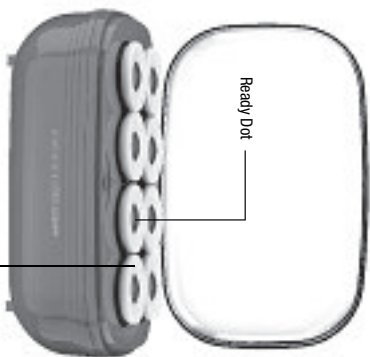

Ceramic Flocked Rollers

8 Plastic Clips

MAINTENANCE

Your hairsetter is designed for household use and is virtually maintenance free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool. Clean the unit and the metal rails with a damp cloth. (Occasionally you may want to clean the rollers. Use a damp cloth and mild detergent or soap.) If any abnormal condition occurs, unplug the hairsetter, allow it to cool, and return it to an authorized service representative for repair.

STORAGE

Allow hairsetter to cool. Handle cord carefully for longer life; avoid jerking or straining at plug connections. Place hairsetter out of reach of children in a safe, dry location.