

OWNER'S MANUAL


ULTRAVIS (OJN) ™



Download
& Connect



App Store

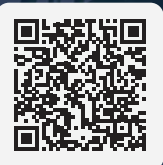

Google Play

bObsweep



ULTRAVISIONTM

OWNER'S MANUAL

Model PET24-7-915
Version 2025.a



Congratulations!

Congratulations on your new intelligent floor cleaner! UltraVision Pet is now at your service. To see him at his best, please read the Quick Start Guide and this manual thoroughly.

Welcome to the bObsweep family and Happy Sweeping!

If you have any questions or concerns, feel free to contact our helpful support team at support@bobsweep.com or 1-888-549-8847.

Business Hours: Monday – Friday, 9 a.m. – 5 p.m. Pacific Time.

Table of Contents

1 General
Safety Instructions
Declaration of Conformity
Warranty
Contact Us

3 Box Contents

4 Anatomy
The bot
Screen & Buttons
Charging Station
Dustbin
Mop Attachment

9 Getting Started
Who is UltraVision Pet?
Navigating Difficult Obstacles

11 First-Time Setup
Install Side Brush
Power UltraVision Pet ON
Set up Charging Station
Charge UltraVision Pet
Download the bObsweep App
Let your bot Sweep

18 Maintenance
Charging Station
Dustbin and Filters
Brushes
Sensors
Front Wheel
Battery

25 Mopping
Wet Mop Attachment

27 Troubleshooting
Trouble messages
Home Checkup Test

29 FAQs

31 Manuel
D'utilisation
Franciase

67 End User
License
Agreement

Important Safety Instructions

Power UltraVision Pet OFF and remove him from a power source when you are not using him and before conducting maintenance.

UltraVision Pet is not intended for use by persons (including children) with reduced physical or mental capabilities, or lack of experience and knowledge, unless under the close supervision of a person responsible for their safety.

Leaks from the battery cells can occur under extreme usage or temperature conditions. If the liquid gets on the skin, wash quickly with water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes, and seek medical attention.

UltraVision Pet is composed of electronic components that in rare and unintended cases can cause hazards of heating, fire, and other malfunctions. Furthermore, because UltraVision Pet is capable of autonomous movement, his use poses the risk of collision with property, pets, and persons. Unintended removal of articles — such as small valuables, jewelry, or hair of persons or pets lying on the floor — may also occur.

If UltraVision Pet or his charging station has been damaged in any way, do not operate them. Contact our support team for further assistance.

Do not handle UltraVision Pet or his charging station with wet hands; use only on dry surfaces.

Do not pull or carry the charging station by the cord, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces. To unplug the cord, grasp the plug, not the cord.

Do not expose UltraVision Pet’s SLAM LiDAR to direct sunlight or infrared light.

Do not let UltraVision Pet drop. The impact from a drop can damage the SLAM LiDAR.

Place physical barriers at the edge of sofas and stairs to ensure secure and smooth operation of UltraVision Pet.

Do not look directly into the rotating transmitting part (laser) of the SLAM LiDAR.

For your safety, do not insert tools, fingers, or other items into the rotating part of the SLAM LiDAR.

Do not attempt to open the charging station. Repairs on the station should only be carried out by our qualified technicians.

With the exception of the wet mop attachment, do not immerse any part of UltraVision Pet into water or other liquids.

Do not mutilate or incinerate the battery, as it will explode at high temperatures.

Do not use UltraVision Pet outdoors. And , do not store UltraVision Pet in a car.

Do not expose UltraVision Pet or his charging station to temperatures higher than 113° F (45° C), moisture, or humidity.

Do not dispose of your battery in fire. Old batteries should be recycled safely through your local recycler.

Do not let UltraVision Pet pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Do not use a broken or damaged power inlet/wire.

Do not open or handle UltraVision Pet’s charging station when plugged into the wall. Unplug first.

Declaration of Conformity

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

Every UltraVision Pet purchased from an authorized seller comes with our warranty coverage:

- 2-Year Standard Warranty
- 5-Year Subsidized Repair Plan
- Lifetime of Customer Service

To claim your warranty, register your bot at bobsweep.com/warranties.

Contact Us

If you have any questions or concerns, please contact our helpful support team at support@bobsweep.com or 1-888-549-8847.

Business Hours:
Monday – Friday, 9 a.m. – 5 p.m. Pacific Time

Additional troubleshooting tips and how-to guides are available on the bObsweep app and at bobsweep.com/ultravision-pet-support.

Box Contents

Anatomy



UltraVision Pet™



Charging Station



Charging Bed




Cleaning Tool



Bristled Main Brush



Side Brush (2)




Filter



Mop Attachment




Microfiber Mop (2)

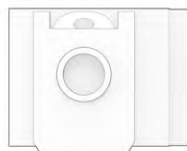


Dust Bag

UltraVision Pet

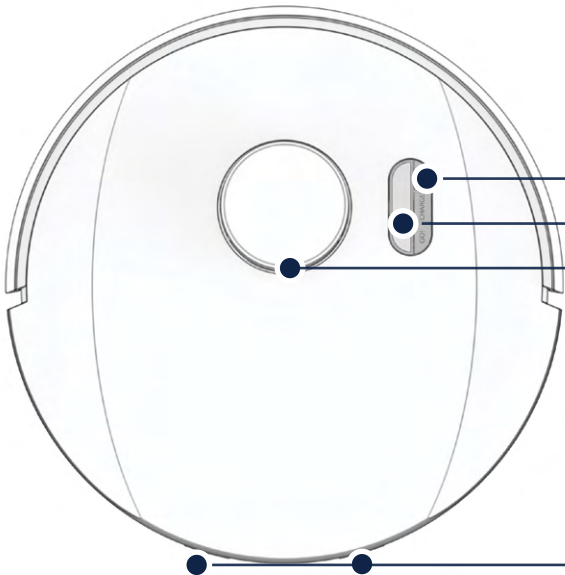

- Buttons
- Display Screen
- SLAM LiDAR

Charging Plates

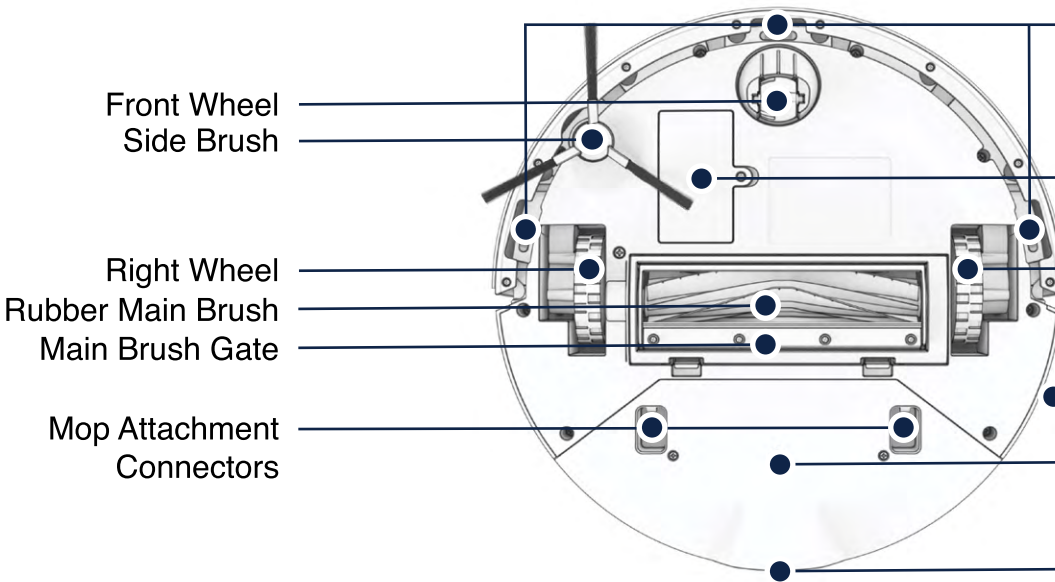

- Front Wheel
- Side Brush

- Right Wheel
- Rubber Main Brush
- Main Brush Gate

- Mop Attachment Connectors

Edge Sensors

Battery


Left Wheel

Speaker


Dustbin

Disposal Vent Aperture


Display Screen & Buttons

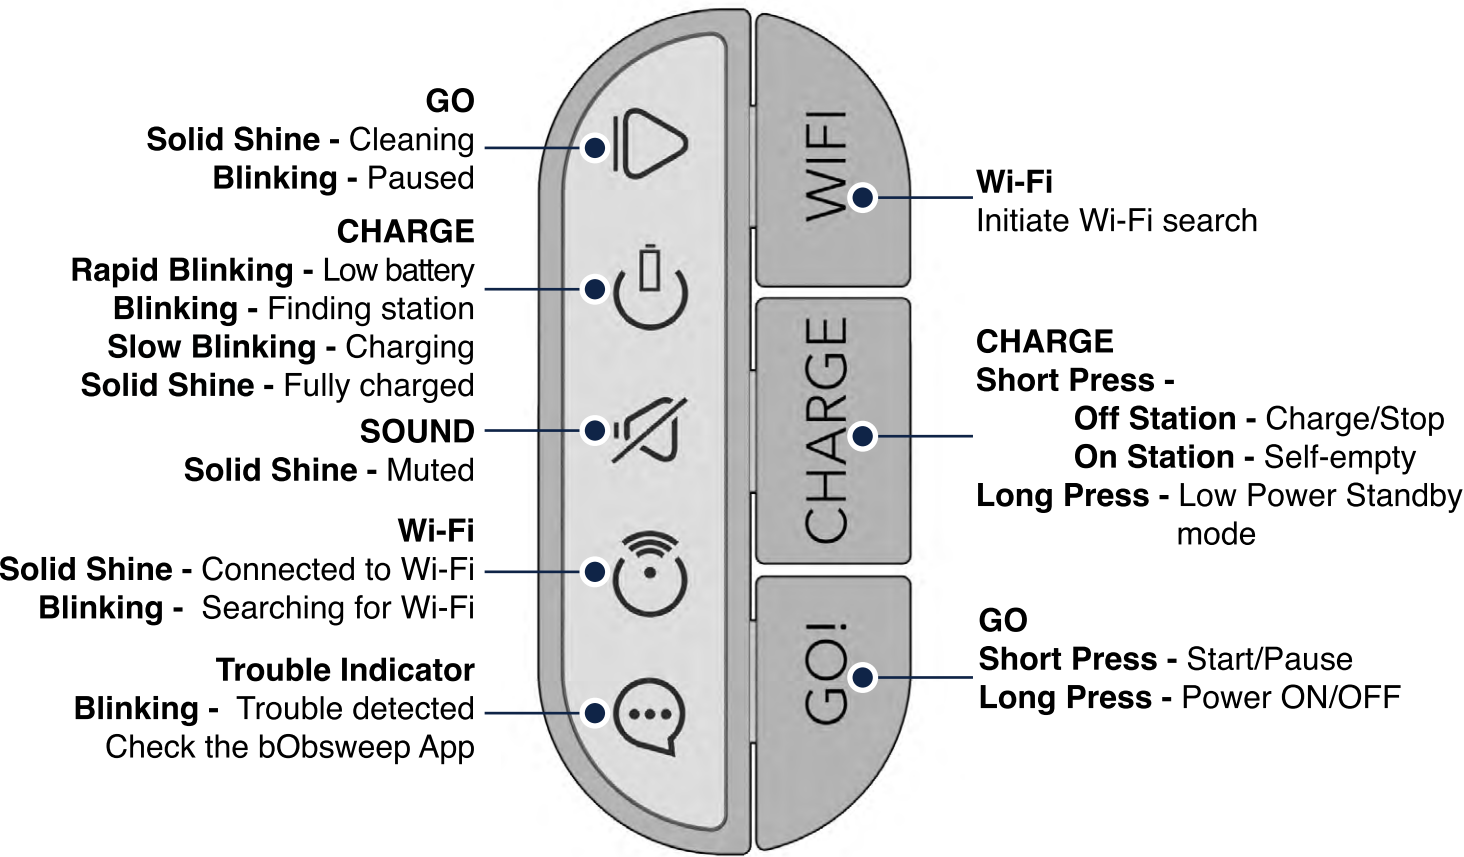


Charging Station

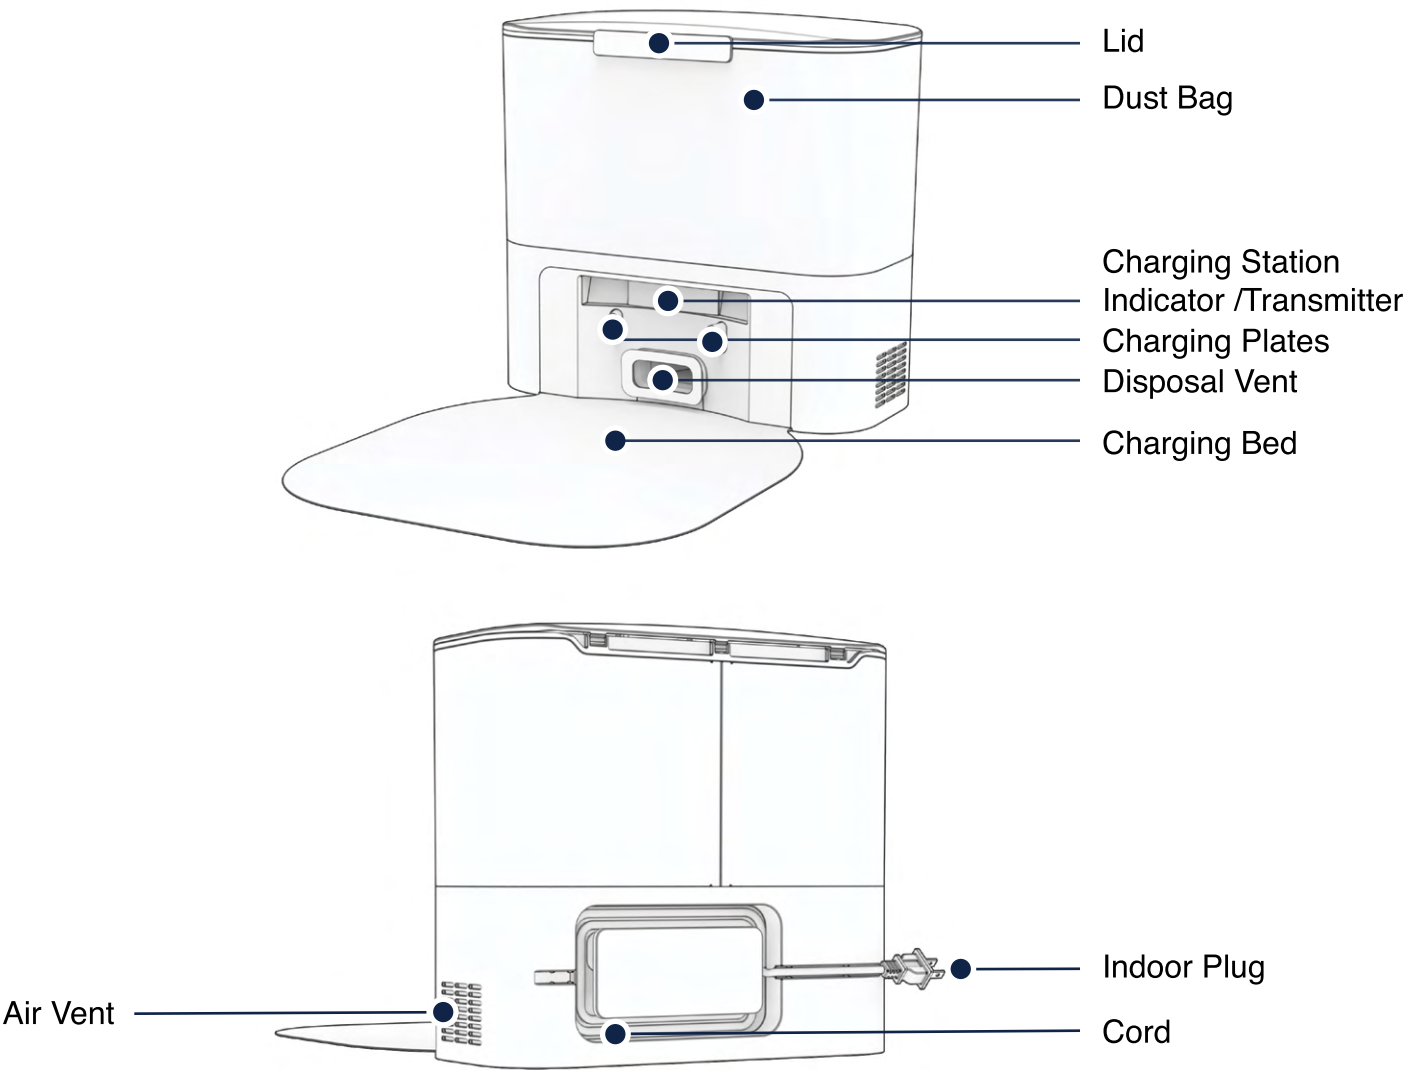

Charging Station

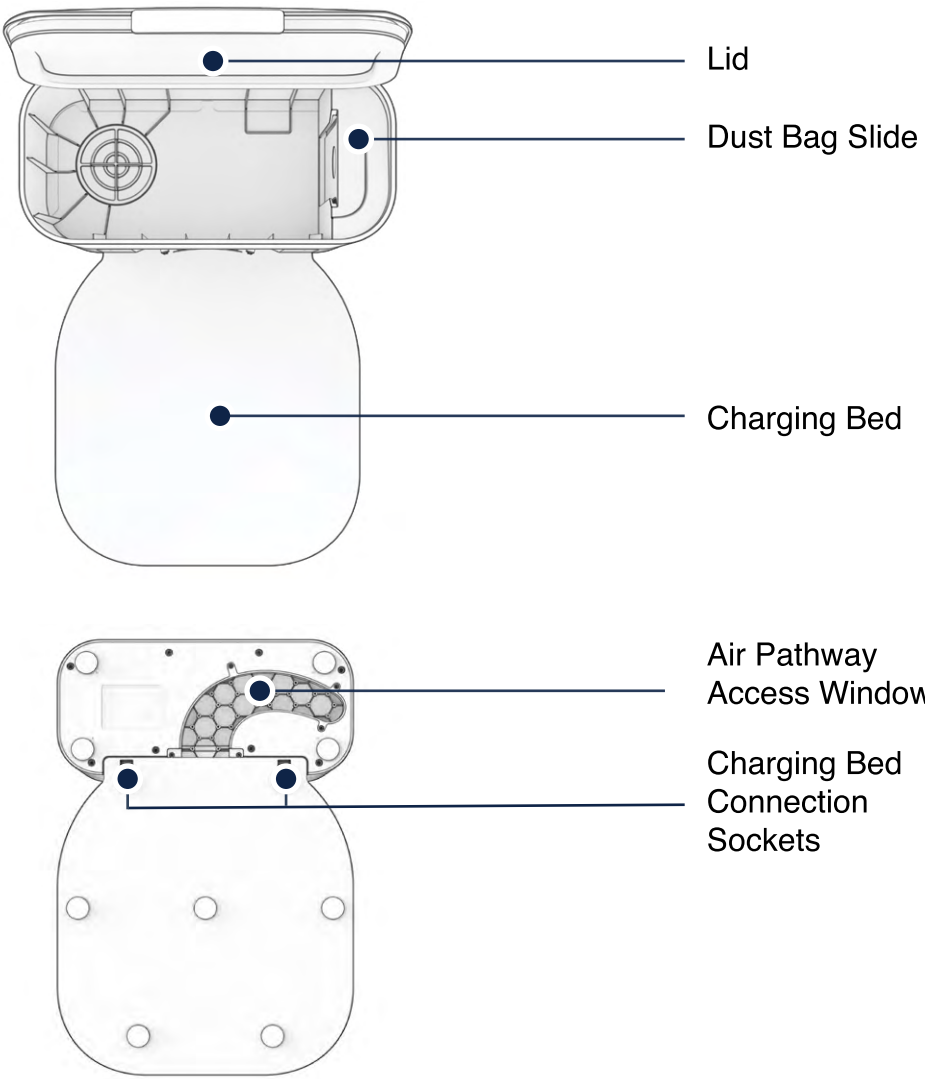

Dustbin & Mop Attachment

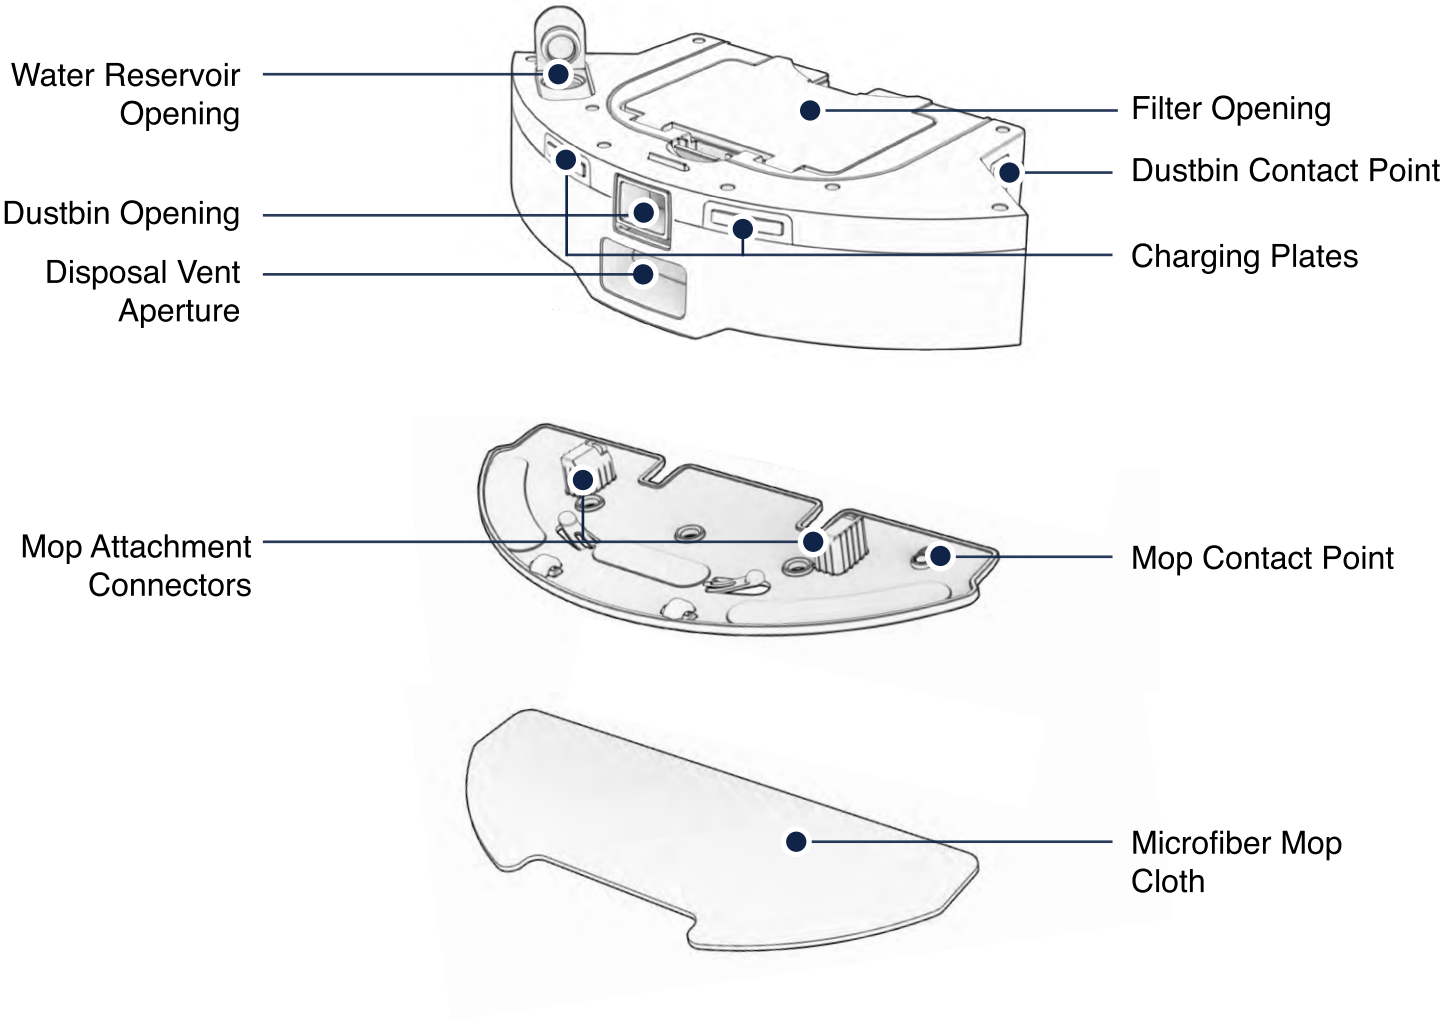

Who is UltraVision Pet?

UltraVision Pet is an autonomous robotic vacuum cleaner, at your service! Connect UltraVision Pet to Wi-Fi and use the bObsweep app to create a customized cleaning plan. UltraVision Pet will clean your home, your way.


How does UltraVision Pet find his way around?

UltraVision uses laser vision, a network of sensors, and a state-of-the-art mapping and localizing technology to detect walls, furniture, and obstacles.


As UltraVision cleans, he simultaneously creates a map of the areas he is able to access and clean. Areas where furniture and small items are found are marked on the map. View the map by clicking the Map Icon on the bObsweep App, and customize it as desired. Using the map, and the app's customization criteria, UltraVision efficiently cleans your home over the course of a full cycle.

After cleaning, UltraVision returns to his station and empties his dustbin into his charging station's dust bag. Forget about vacuuming and enjoy effortlessly clean floors for months!

Learn about UltraVision Pet's map features:

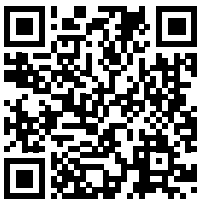

Check out UltraVision Pet's how-to videos:

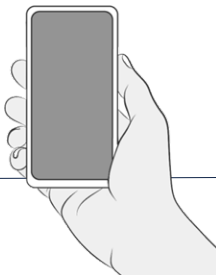

Navigating Difficulties

Specialty furniture, such as desk chairs with wheels or stools with circular bases, may take longer for UltraVision to clean around; he may get stuck on a ledge for a few minutes, and then decide to clean somewhere else. Allow him to continue cleaning and finding his own way around.

NoSweep™ Zones

UltraVision respects your space & boundaries! Set NoSweep™ zones in areas you want to keep off-limits.

NoSweep™ zones can be added to the map in the bObsweep app.

NoMop™ Zones

Set NoMop™ zones in areas with area rugs or carpeted floors to keep UltraVision Pet from mopping those spaces.

You can easily add NoMop™ zones on the map in the bObsweep app.

Dark-Colored Carpet

If UltraVision repeatedly backs up, or displays a trouble message while cleaning dark carpets, deactivate the edge sensors on the app (Settings >> Cleaning Preferences >> Edge-detection). With his edge sensors deactivated UltraVision **can't see and will fall off stairs**. Draw NoSweep™ lines or zones to block off the entire width of stairs.

Stairs and Edges

Remove small objects such as shoes, toys, or mats near the stairs. Otherwise, Ultra-Vision may fall down while trying to avoid those objects.

Shag Carpet

UltraVision's main brush is not designed to clean shag carpets or rugs with long fibers and fringes. If you'd like UltraVision Pet to clean shag carpet or long-fibered rugs, you may remove his main brush and allow him to vacuum without it.

Spacious Spaces

If UltraVision doesn't cover the whole floor in one charge, use his Auto-Resume feature (go to Settings > Cleaning Preferences > Auto-Resume) to have him resume from where he had left off after recharging.

Install the Side Brush

Install UltraVision Pet's side brush to help him reach the corners and edges of rooms.

Parts You'll Need:


Side Brush

Before Using UltraVision Pet

Remove protective pieces, and ant invisible plastic films from UltraVision Pet, his bumper, and charging station.



Place the side brush over the socket and press down firmly until it clicks into its locked position. You should feel two snaps; as it locks into place.

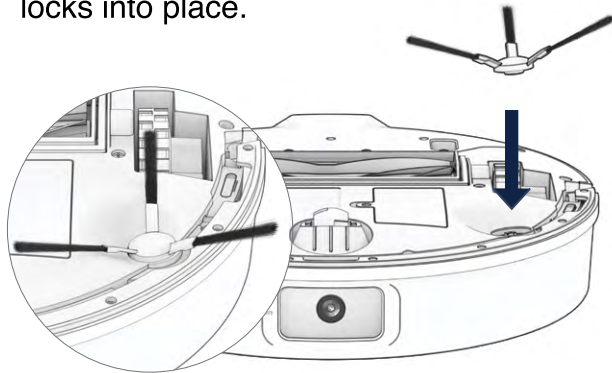


Important Note: The strength of side brush's connection can be increased by slightly rotating the screw in the center of the side brush socket counter-clockwise.

Power UltraVision Pet ON

Press and hold the GO button until the screen lights up.

Storing UltraVision Pet

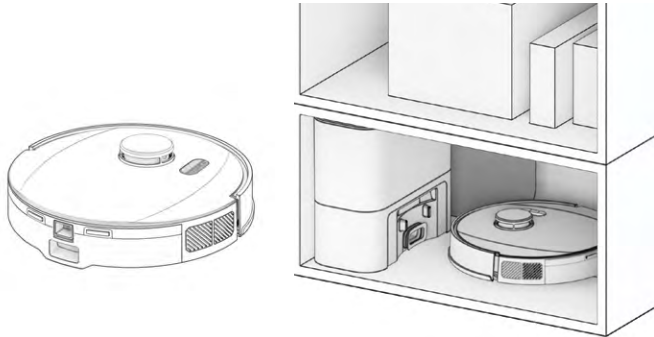

If you are not using UltraVision Pet for an extended period of time (over a month), power him OFF, remove his battery, and unplug his charging station. Store everything in a dry room, away from direct sunlight or extreme temperature.

If you won't be using UltraVision Pet for a while, you can switch him to Low Power Standby (LPS) mode. To activate this, place UltraVision Pet on his charging station and press and hold the CHARGE button for 5 seconds. You'll hear "low power mode," indicating that UltraVision Pet is in LPS mode. To exit, either press the GO button while he's on the charging station or remove him from the station.



Important Note: In this mode, UltraVision Pet is offline and the bObsweep App is not able to connect to UltraVision Pet. Furthermore, any scheduled cleaning will be paused.

Set up the Charging Station

Bright sunlight, shiny surfaces, and reflective objects can interfere with UltraVision's docking signals. Set up UltraVision Pet's station away from uncovered windows, mirrors, and shiny furniture or objects.

Parts You'll Need:




Charging station




Charging bed

Positioning

UltraVision Pet returns to his charging station after cleaning. To help him, place the charging station on a hard, flat surface, far away from edges and stairs, with plenty of room around it.

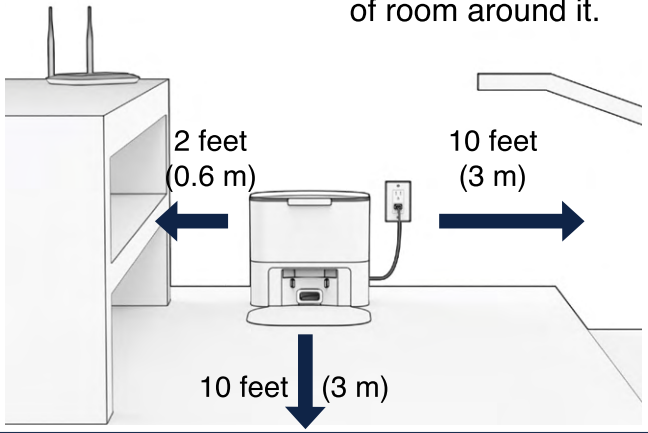

Place the charging station over the sockets on the charging bed. Place down to hold into place.

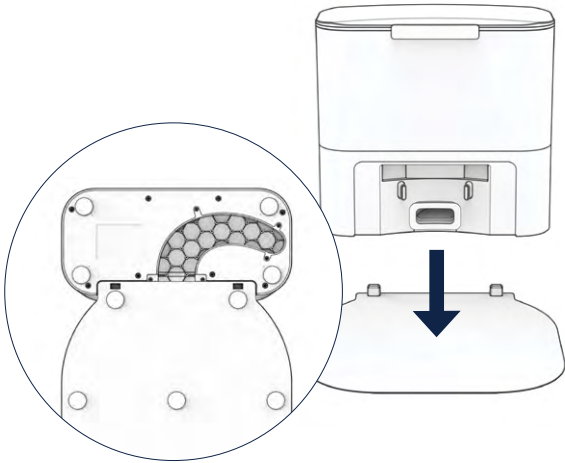

Quick Tip: The sockets on the charging bed fit into the charging station on its front.


Charging Station Indicator

When UltraVision Pet finishes docking on his charging station, and there is no station error, the indicator light on the station turns off.



Light Status	Station Status	What to do
● Off	Powered OFF	Plug into the outlet.
● Solid Blue	Ready	Send UltraVision Pet to charge / self-empty.
● Solid Red	Dust bag not detected / Dust bag opening is closed	Insert the dust bag into the slot and push the tab all the way down to open it, ensuring it aligns with the air pathway.
● Blinking Red	Congestion in air pathway.	- Remove and open the dustbin to clean and clear any heavy congestion. - Clean the Disposal Vent Aperture on the back of the dustbin. Ensure the flap moves freely. - Place UltraVision on the station and press CHARGE to initiate a self-empty. If the air pathway remains blocked: - Unplug the station, turn it around to open the Air Pathway Access Window, and remove any blockages. - Place UltraVision Pet back on the station and press CHARGE to initiate another self-empty.

Learn more about troubleshooting self-emptying issues:

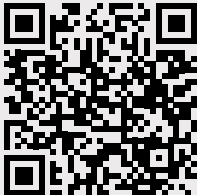

Charge UltraVision Pet

Press CHARGE on UltraVision Pet to send him to his charging station.

Parts You'll Need:




Charging Station

Charging Indicator



- Low Battery:** blinks rapidly.
- Finding Station:** blinks.
- Charging:** blinks slowly.
- Fully Charged:** shines white.

To charge UltraVision manually, place him on his charging bed with the metal nodes on his back resting against the plates on the station.

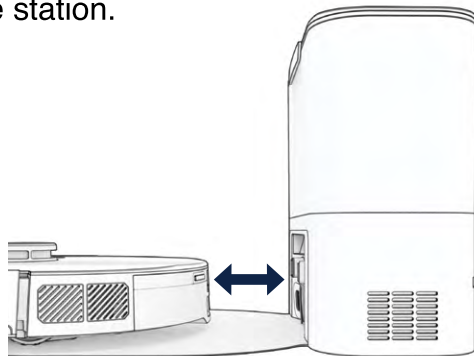

Quick Tip: UltraVision Pet empties his bin each time he docks at the end of a cleaning session. Define how often UltraVision Pet self-empties by going to Settings > Cleaning Preferences on the bObsweep App.

Download the bObsweep App

Connect UltraVision Pet to Wi-Fi to gain access to UltraVision Pet's full suite of features and important software updates. Follow the instructions on the app to connect to Amazon Alexa or Google Home devices.

Items You'll Need:




Smart Phone





2.4GHz Wi-Fi Connection

Swift Mapping

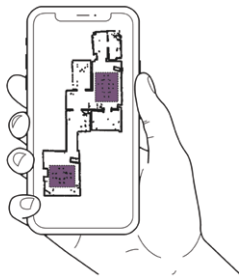

UltraVision maps the area at first glance. Choosing Swift Map makes UltraVision Pet start a map-only run. UltraVision Pet returns to his charging station after he explore and maps the entire floor. Leave all the doors open and remove clutter before initiating a Swift Map.


Open the bObsweep App, create your account, and follow instructions to connect your bot to Wi-Fi. Scan for a step by step guide:

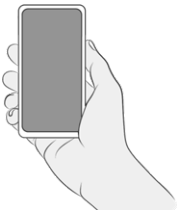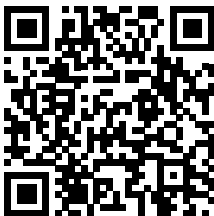

Let UltraVision Pet Sweep!

UltraVision Pet is now ready to sweep! Press GO on UltraVision or the App.

Lifting & Moving

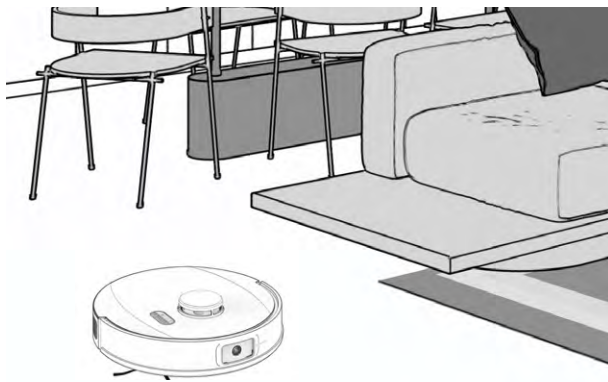

Avoid picking up UltraVision Pet while cleaning to prevent disrupting the map.

Do not move the charging station after UltraVision has mapped the area. If you do, initiate a new Swift Map.

Customize the map, assign room names, and set cleaning schedules using the bObsweep App. With the map and app’s customization options, UltraVision cleans your home efficiently throughout the entire cycle.



For Best Performance

To maximize UltraVision Pet’s efficiency, keep his charging station, brushes, filters, and sensors clean.


Part	Maintenance Frequency	Replacement Frequency
Charging Station	Monthly	
Dustbin	Monthly	
Filter	Monthly	Every 6 months
Brushes	Weekly	Every 12 months
Sensors	Weekly	
Front Wheel	Weekly	
Battery		Every 24 to 36 months

- Quick Tips:** Clear debris out of nooks and crannies around the brushes and wheels.
- Use tweezers to remove congestion from the brush ends and main and side brush compartments on UltraVision Pet.
- Use scissors or the included cleaning tool to cut hair wrapped around the brushes.




Dust Bag


1. Open the lid.

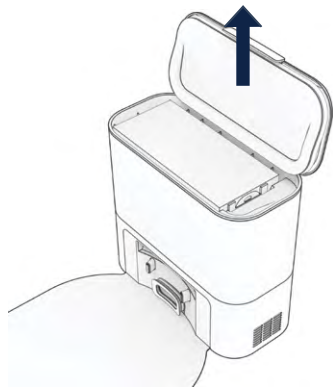

2. Lift the tab to close the dust bag opening. Remove the full dust bag and discard it.

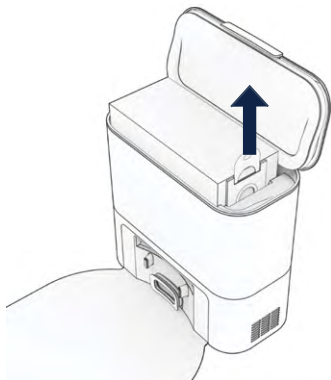

3. Insert the new dust bag, ensuring the card slides into place completely. Then, slide the opening tab all the way down.

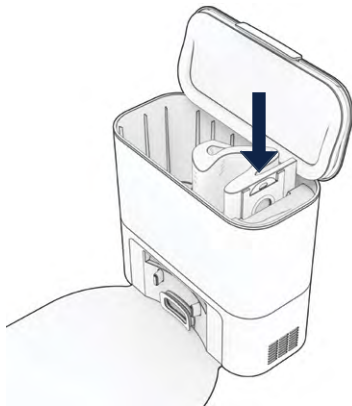

4. Close the lid.



Self-emptying Charging Station

Before cleaning the charging station, unplug it.


1. Wipe the charging nodes (contact points).




2. Wipe the transmitter window clean, making sure it is not blocked or covered.



3. Remove the dustbag and clean the dustbag container from debris buildups or any blockage for free flow of air.

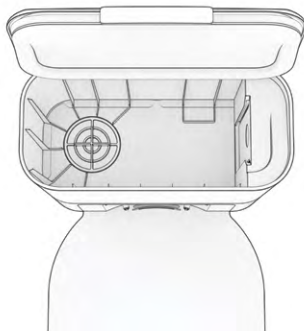


4. Unplug the station. Inspect the disposal vent and air pathway. Clean and remove any congestion.

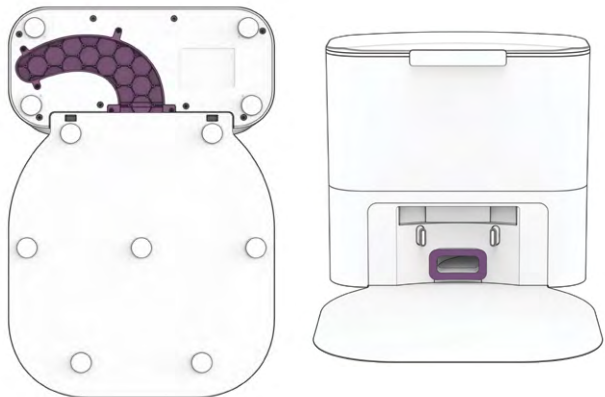


Brushes


1. Pull up to remove the side brush.

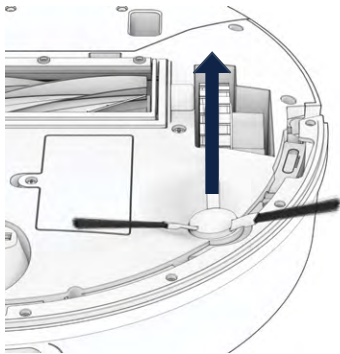


2. Remove debris from the side brush and its socket.

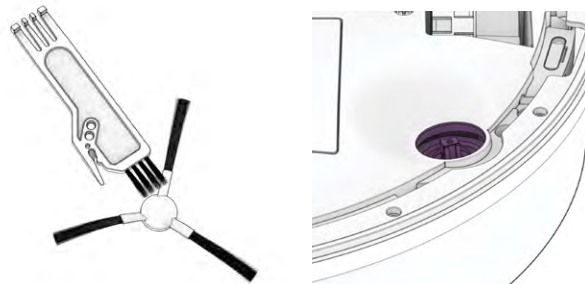

3. Pinch the tabs on the main brush gate and lift.

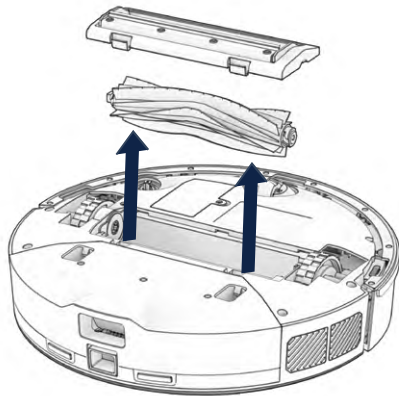


4. Clean the main brush and all its components, including the brush gate and brush compartment.

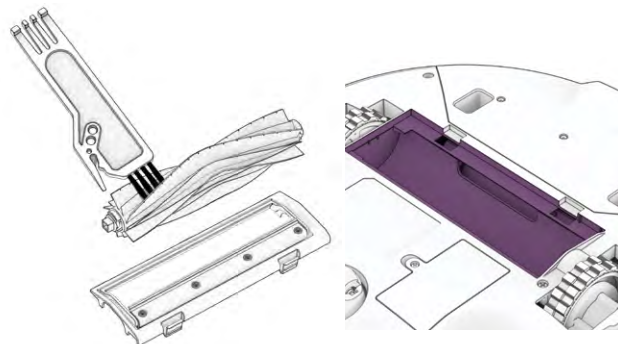


Sensors

Use a soft cotton cloth to wipe the sensors.


1. Wipe the camera, edge sensors, and obstacle sensors.

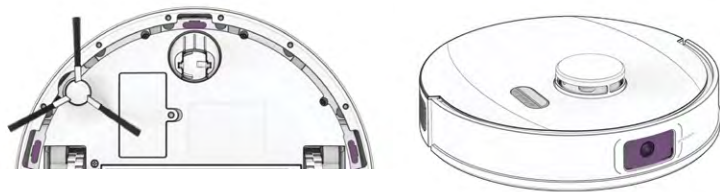


2. Wipe the charging nodes on UltraVision Pet and his station.

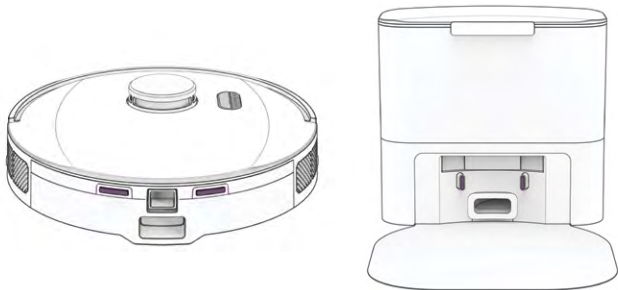

3. Wipe the metal connectors on the dustbin and wet mop attachment.

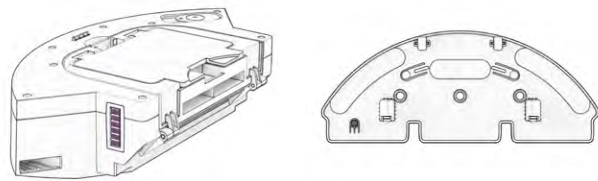

4. Wipe the top and the area around the SLAM LiDAR.

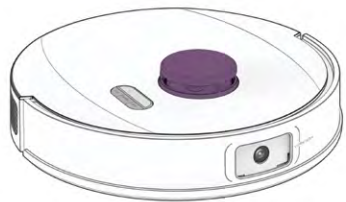


Important Note: The SLAM LiDAR is a sensitive sensor. Do not apply force, insert objects, or adjust the SLAM LiDAR. Do not sit on UltraVision Pet or place items on top of him.

Front Wheel


1. Using a flat head screwdriver for leverage, grip the wheel firmly and pull.




2. Once the wheel is removed, use the screwdriver to pry out the wheel assembly.

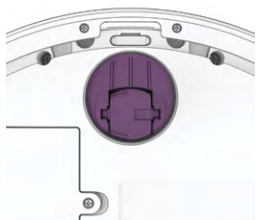

3. Clean the wheel and all its components, including the assembly and wheel socket.

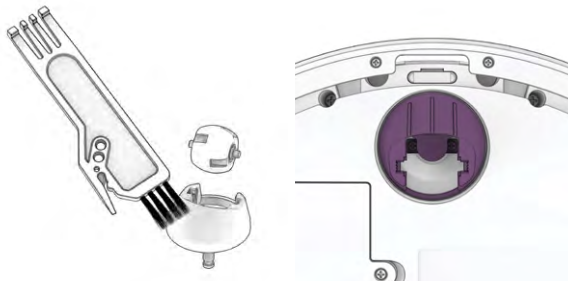


4. Replace both parts when done. Push down to lock them into place.

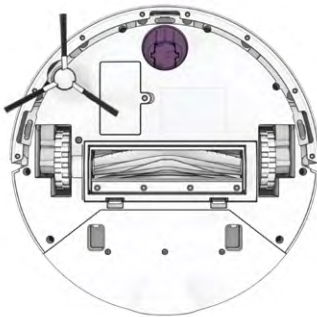

Battery

Power OFF UltraVision Pet before replacing the battery. Press and hold the GO button.


1. Use a Phillips head screwdriver to open the battery compartment.

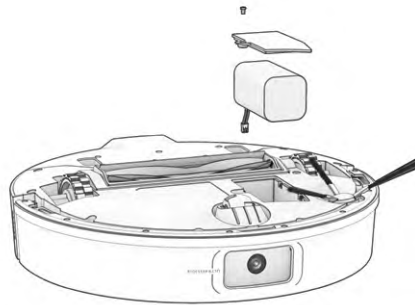

2. Unplug the old battery and plug in your new one.



3. Slide the new battery into UltraVision Pet.

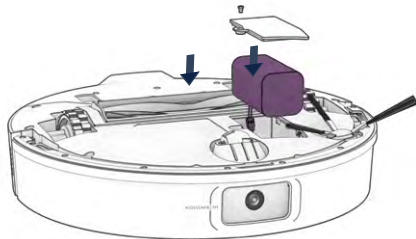


Important Note: High power mode exponentially increases UltraVision Pet's battery use. Use low power mode to reduce power usage on UltraVision Pet.


UltraVision Pet’s First Mop

Open the App and draw NoMop zones over carpeted areas and rugs on the map. To set up UltraVision Pet’s mop:


1. Remove the dustbin.

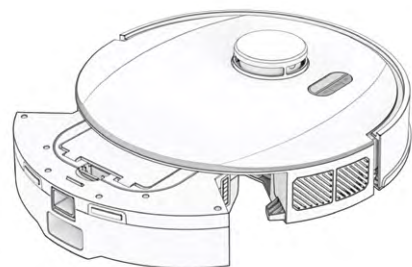

2. Open the reservoir tab and fill it with water. Use distilled water in hard water areas.

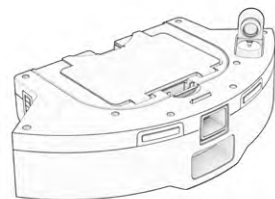


3. Align the mop attachment connectors with the dustbin’s and press to lock in place.

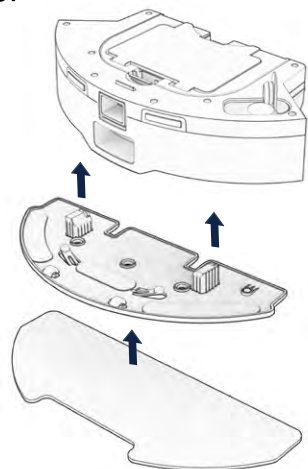

4. Replace the dustbin.


Note: With the mop attachment connected, UltraVision Pet will not enter any NoMop zones added to his map.

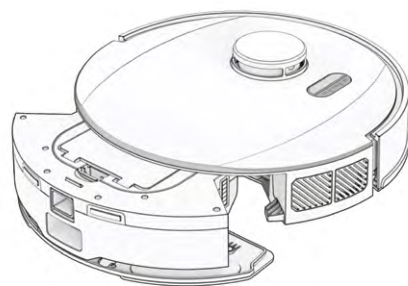


Mop Attachment Maintenance

The reservoir should be drained after use to avoid possible water damage.


1. Remove the mop attachment.

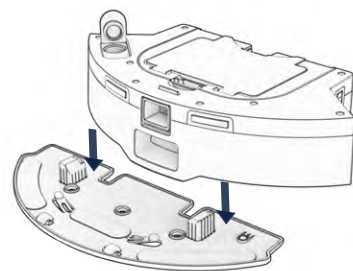

2. Pull open the tab and empty the reservoir.

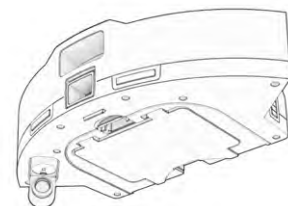

3. Wash the mopping cloth. Air-dry all parts when done.

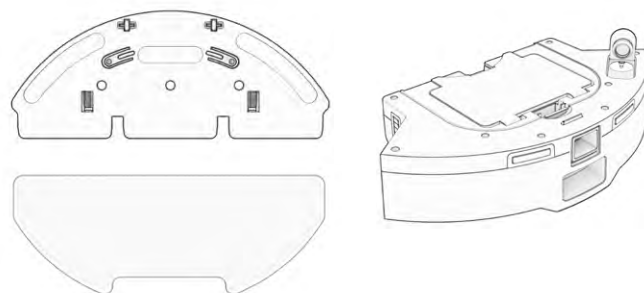

4. Learn more about UltraVision Pet’s mop feature:



Troubleshooting

Whenever UltraVision Pet runs into trouble, he will stop and his trouble indicator will blink. Check the bObsweep app for trouble details.

Trouble	Solution
Battery	Low or disconnected battery. Check connection. Reset, and charge UltraVision Pet.
Left/Right Wheel	Left/Right wheel is jammed. Check for obstruction and clean.
Main/Side Brush	Main/side brush is jammed. Remove and clean.
Camera	Camera component error. Reset UltraVision Pet (Power OFF and back ON).
Dustbin	Dustbin is disconnected or contact points are dirty. Clean contact points and reinsert. Or, the vacuum Motor is jammed. Check for obstruction and clean.
Mop Attachment	UltraVision Pet is trying to mop but the mop attachment is disconnected or contact points are dirty. Check for obstruction and clean.
Edge Sensors	UltraVision Pet is stuck near a cliff, is off ground, or the edge sensors are dirty. Move UltraVision Pet to safety, and clean the edge sensors.
Bumper	Bumper is dirty or jammed. Wipe around the bumper; remove any obstruction.
LiDAR Bumper	SLAM LiDAR's bumper is jammed. Check for obstruction and clean.
LiDAR	SLAM LiDAR is not clean/lost visibility. Clean the SLAM LiDAR and move UltraVision Pet away from mirrors/metallic surfaces/walls and to the center of the room.
Charging Station	Can't locate the charging station. Replug the charging station and charge UltraVision Pet.
User Interface	UltraVision Pet's UI/USB port is not responding. Reset UltraVision Pet & ensure the USB port is empty.
Electronic	Electronic component error. Reset UltraVision Pet (Power OFF and back ON).
Stuck	UltraVision Pet is stuck. Clear away obstacles/clutter/wires & reset UltraVision Pet.
Navigation	UltraVision Pet is not able to navigate. Clear away any clutter/wires & reset UltraVision Pet.
Localization	UltraVision Pet can't self locate on map. Check map accuracy/erase map for remapping.
Settings	Current room settings don't match UltraVision Pet's. Change map settings/schedules.

Home Checkup Test

If UltraVision Pet is not performing as well as he should, you can diagnose the problem with a simple home checkup test.

Putting UltraVision Pet in/out of checkup mode

To put UltraVision Pet in Checkup mode:
Press and hold the “GO” “CHARGE” and “WI-FI” buttons simultaneously for a few seconds until the bot says: “Home Checkup Mode Activated”. In this mode, UltraVision Pet’s LiDAR sensor rotates.

To exit the Checkup mode:
Press the “GO” “CHARGE” and “WI-FI” buttons together again. You’ll hear “Exiting Home Checkup Mode” and UltraVision Pet’s LiDAR sensor stops rotating.

- Important Notes:**
- During the test, if UltraVision Pet’s left idle for over a minute, he’ll automatically exit the Home Checkup Test.
 - To move among Steps in the Checkup test, press the Wi-Fi button.
 - To start / stop the tests in each Step, press the GO button until you hear “Begin Test” and “Stop Test”. Always stop a test before moving to the next step.

Step	Part(s) Tested	Description
1	Battery	After a full charge, test UltraVision Pet’s battery.
2	Edge Sensors	Test edge sensors individually.
3	Charging Station	Test charging sensors individually.
4	Bumpers, Wi-Fi, and Camera	Test the Wi-Fi module, touch sensors, and camera.
5	Motors (wheels, brushes, vacuum, mop)	Test each of UltraVision Pet’s motors individually.
6	SLAM LiDAR, Charging and Self-empty	Test UltraVision Pet’s SLAM LiDAR, charging contact points, and self-empty function.
7	Hard Resetting UltraVision Pet	Factory reset UltraVision Pet and erase all data.

For a step-by-step guide visit: www.bobsweep.com/ultravision-pet-support.

FAQs

UltraVision Pet won't turn on no matter what I do.

The bot's battery has likely drained too low for him to operate. Place him on his charging station ensuring that the metal charging plates on the rear side of your bot (the same side as the dustbin) are making physical contact with the charging plates on the station. If the issue persists, perform a battery hard reset. Visit [**bobsweep.com/ultravision-pet-support**](https://bobsweep.com/ultravision-pet-support) to learn how.

UltraVision Pet runs out of battery before he's finished mapping.

Use the 'Swift Map' feature on the bObsweep app to ask UltraVision Pet to map the floor without cleaning it. In this mode, UltraVision Pet explores and maps the house, then returns to his charging station without cleaning it. If the floor is too large for UltraVision Pet to fully clean in one charge, toggle on Auto-resume under Settings > Cleaning Preferences on the bObsweep app, and UltraVision Pet will pickup where he left off after recharging.

UltraVision Pet's not picking up as much as he used to.

UltraVision Pet will have trouble cleaning if his dustbin is clogged, or his main brush is clogged or tangled with hair. Remove UltraVision Pet's main brush and clean it thoroughly from end to end. Remove and open the dustbin, and remove any large debris from UltraVision Pet's dustbin container to ensure smooth flow of air.

UltraVision Pet is not self-emptying and the indicator on the station is flashing red.

By default, every time UltraVision Pet docks, a loud vacuuming process empties his dustbin into his station's disposable dust bag. You can change the frequency using the bObsweep App. If UltraVision Pet's dustbin gets too packed, or if the station's air passage is clogged, contents cannot be vacuumed out. Remove and open the dustbin and dump its contents. Unplug the station and open the air passage to remove anything clogging it.

UltraVision Pet can't find his station.

Make sure UltraVision Pet's charging bed is installed. You may need to relocate UltraVision Pet's station to a more accessible area. Make sure the station is placed in a centralized area, on a hard, flat surface away from stairs or edges, direct sunlight, mirrors or reflective surfaces, and with plenty of open space around it. Then, erase the old map and let UltraVision Pet remap the house from his new station.

Can I pick UltraVision Pet up?

Picking up and moving UltraVision Pet during a cleaning session is not recommended, as it can affect his current cleaning cycle/map. Furthermore, it's best not to relocate UltraVision Pet's charging station once he has mapped his environment. If you have to relocate the station, erase the old map and let UltraVision Pet map the house again.

FAQs

Can't connect UltraVision Pet to Wi-Fi.

You can connect UltraVision Pet to a 2.4GHz Wi-Fi after he's fully charged. To do so, turn ON 'Location Services' and 'Bluetooth' on your phone settings. Also allow 'Local Network' access and turn off 'Wi-Fi Calling' on your phone. Write down your 2.4GHz Wi-Fi network and its password (note that they are case sensitive). Bring UltraVision Pet and your phone close to your modem or router and be sure to select the model name 'UltraVision' from the list of bots.

Can I make changes to or delete the map UltraVision Pet made?

Yes. UltraVision Pet's map is fully customizable.

How can I diagnose UltraVision Pet's exact problem?

You can check UltraVision Pet's health with a Home Checkup Test. Watch a video guide at

www.bobsweep.com/ultravision-pet-support.

UltraVision Pet is Offline.

UltraVision Pet may be hibernating or is powered OFF and disconnected himself from Wi-Fi. To bring him back online, place him on the charging station and let him charge and power ON. If UltraVision is offline while fully charged, check your Wi-Fi signal strength near the charging station and consider repositioning the station.

UltraVision Pet stopped cleaning and the trouble indicator is flashing.

When UltraVision Pet is in trouble and needs your help, he will stop and the trouble indicator blinks.

Open the bObsweep app and find the trouble details at the top of the Control page.

UltraVision Pet is getting stuck.

If there are areas of repeat problem in the house that UltraVision Pet gets stuck under or stops on, draw NoSweep zones over them on the map to keep UltraVision Pet out of trouble.

Does UltraVision Pet work with Google and Alexa devices?

Yes! UltraVision Pet can be connected to Google Home and Alexa apps / devices.

Can UltraVision Pet clean my multi floor house?

Yes. UltraVision Pet can save up to 3 floor maps.

How can I get support?

Connect with a bObsweep support representative by emailing support@bobsweep.com or calling 1-888-549-8847. We're available Monday to Friday, 9 a.m. – 5 p.m. Pacific Time.

ULTRAVISIONTM

MANUEL D'UTILISATION

Model PET24-7-915
Version 2025.a



Félicitations!

Félicitations pour votre nouvel aspirateur de sol intelligent ! Ultra-Vision Pet est maintenant à votre service. Pour que UltraVision Pet donne le meilleur de lui-même, lisez attentivement le guide de démarrage rapide et le présent manuel.

Bienvenue dans la famille bObsweep et bon nettoyage !

Si vous avez des questions ou des préoccupations, n'hésitez pas à contacter notre équipe d'assistance à support@bobsweep.com ou au 1-888-549- 8847. Heures d'ouverture : Du lundi au vendredi, de 9 h à 17 h, heure du Pacifique.

Table des Matieres

37 Généralités
Consignes de sécurité
Déclaration de conformité
Garantie
Nous contacter

45 Bien commencé
Qui est UltraVision Pet ?
Franchir des obstacles difficiles

61 Accessoires
Netoyage humide

67 End User
License
Agreement

39 Contenu de la Boîte

47 Premier nettoyage
Installer la brosse latérale
Allumer UltraVision Pet
Installer la station de charge
Charger UltraVision Pet
Télécharger l'app bObsweep
Laisser UltraVision Pet balayer

63 Dépannage
Messages d'erreur
Test de contrôle check-up

40 Anatomie
UltraVision Pet
Écran et boutons
Station de charge
Bac à poussière et accessoire a nettoyage

54 Maintenance
La Station et Poubelle
Filtres
Brosses
Capteurs
Roue Avant
Batterie

65 FAQs

Consignes de sécurité importantes

Mettez UltraVision hors tension et retirez-le de la source d'alimentation lorsque vous ne l'utilisez pas et avant d'effectuer des opérations de maintenance.

UltraVision n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques ou mentales sont réduites, ou qui manquent d'expérience et de connaissances, sauf sous la surveillance vigilante d'une personne responsable de leur sécurité.

Des fuites des cellules de la batterie peuvent se produire dans des conditions d'utilisation ou de température extrêmes. Si le liquide entre en contact avec la peau, lavez-la rapidement à l'eau. Si le liquide entre en contact avec les yeux, les rincer immédiatement à l'eau claire pendant au moins 10 minutes et consulter un médecin.

UltraVision est composé d'éléments électroniques qui, dans des cas rares et involontaires, peuvent entraîner des risques de surchauffe, d'incendie et d'autres dysfonctionnements. En outre, UltraVision étant capable de se déplacer de manière autonome, son utilisation présente un risque de collision avec des biens, des animaux domestiques et des personnes. Le retrait involontaire d'articles - tels que de petits objets de valeur, des bijoux ou des poils de personnes ou d'animaux domestiques posés sur le sol - peut également se produire.

Si UltraVision ou sa station de recharge ont été endommagés de quelque manière que ce soit, ne les utilisez pas. Contactez notre équipe d'assistance pour obtenir de l'aide.

Ne manipulez pas UltraVision ou sa station de recharge avec des mains mouillées ; utilisez-les uniquement sur des surfaces sèches.

Ne pas tirer ou porter la station de recharge par le câble, ne pas fermer une porte sur le câble et ne pas faire passer le câble par des arêtes ou des

coins tranchants. Tenir le câble à l'écart des surfaces chauffées. Pour débrancher le câble, saisissez la fiche et non le câble.

Ne pas exposer le SLAM LiDAR de UltraVision à la lumière directe du soleil ou à la lumière infrarouge.

Ne laissez pas tomber UltraVision. L'impact d'une chute peut endommager le SLAM LiDAR.

Placez des barrières physiques au bord des sofas et des escaliers pour assurer un fonctionnement sécuritaire et fluide d'UltraVision.

Ne regardez pas directement la partie émettrice rotative (laser) du SLAM LiDAR.

Pour votre sécurité, n'insérez pas d'outils, de doigts ou d'autres objets dans la partie rotative du SLAM LiDAR.

N'essayez pas d'ouvrir la station de recharge. Les réparations de la station ne doivent être effectuées que par nos techniciens qualifiés.

À l'exception de l'accessoire pour nettoyage humide, n'immergez aucune partie de UltraVision dans l'eau ou dans d'autres liquides.

Ne pas mutiler ou incinérer la batterie, car elle explose à haute température.

N'utilisez pas UltraVision à l'extérieur.

Ne pas stocker UltraVision dans une voiture.

N'exposez pas UltraVision ou sa station de charge à des températures supérieures à 45°C, à l'humidité.

Ne jetez pas votre batterie au feu. Les anciennes batteries doivent être recyclées en toute sécurité par votre recycleur local.

Ne laissez pas UltraVision ramasser des objets brûlants ou fumants, tels que des cigarettes, des allumettes ou des cendres chaudes.

N'utilisez pas d'entrée/fil électrique cassé ou endommagé.

N'ouvrez pas et ne manipulez pas la station de recharge de UltraVision lorsqu'elle est branchée au mur. Débranchez-la d'abord.

Déclaration de Conformité

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

(1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

Le fabricant n'est pas responsable des interférences radio ou TV causées par des modifications ou des changements non autorisés apportés à cet équipement. De telles modifications ou changements pourraient annuler le droit de l'utilisateur à faire fonctionner l'équipement.

Cet équipement a été testé et déclaré conforme aux limites imposées aux appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre des fréquences radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur.
- Brancher l'appareil sur une prise de courant située sur un circuit différent de celui sur lequel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

Garantie

Chaque UltraVision Pet acheté auprès d'un vendeur agréé est couvert par notre garantie:

- Garantie standard de 2 ans
- Plan de réparation subventionné de 5 ans
- Service clientèle à vie

Pour bénéficier de la garantie, enregistrez votre robot à l'adresse suivante:
www.bobsweep.com/warranties.

Nous Contacté

Si vous avez des questions ou des préoccupations, veuillez contacter notre équipe d'assistance à l'adresse suivante:
support@bobsweep.com or 1-888-549-8847.

Heures d'ouverture :

Du lundi au vendredi, de 9 heures à 17 heures (heure du Pacifique)

Des informations de dépannage supplémentaires et des guides pratiques sont disponibles sur l'application bObsweep et sur le site:
www.bobsweep.com/UltraVision-Pet-support.

Contenu de la Boîte

Anatomie

UltraVision Pet



UltraVision Pet™



Station de recharge auto-videuse



Lit de charge



Brosse de nettoyage




Brosse principale à poils



Brosse latérale (2)




Filtre




Accessoire de nettoyage



Serpillère en microfibre (2)

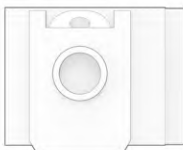


Sac à poussière

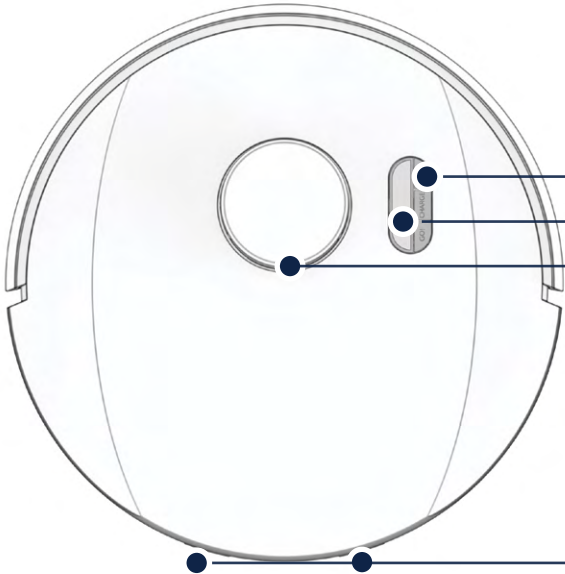

Buttons
Ecran
SLAM LiDAR

Nœuds de charge

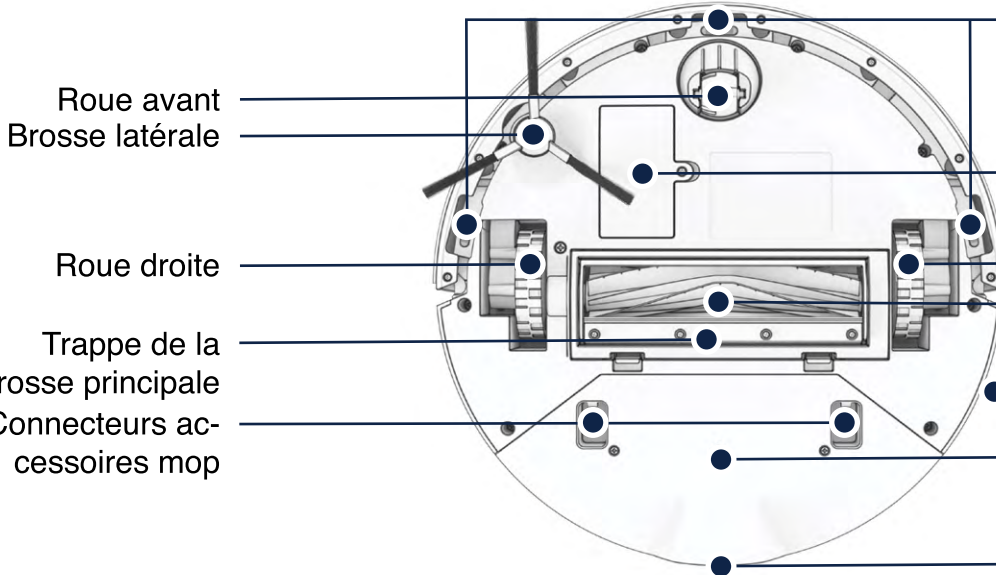

Roue avant
Brosse latérale

Roue droite

Trappe de la brosse principale
Connecteurs accessoires mop

Capteur de Bord

Batterie


Roue gauluche
Brosse principale en caoutchouc

Haut-parleur


Poubelle (Dustbin)

Ouverture de ventilation


Écran d'affichage & boutons

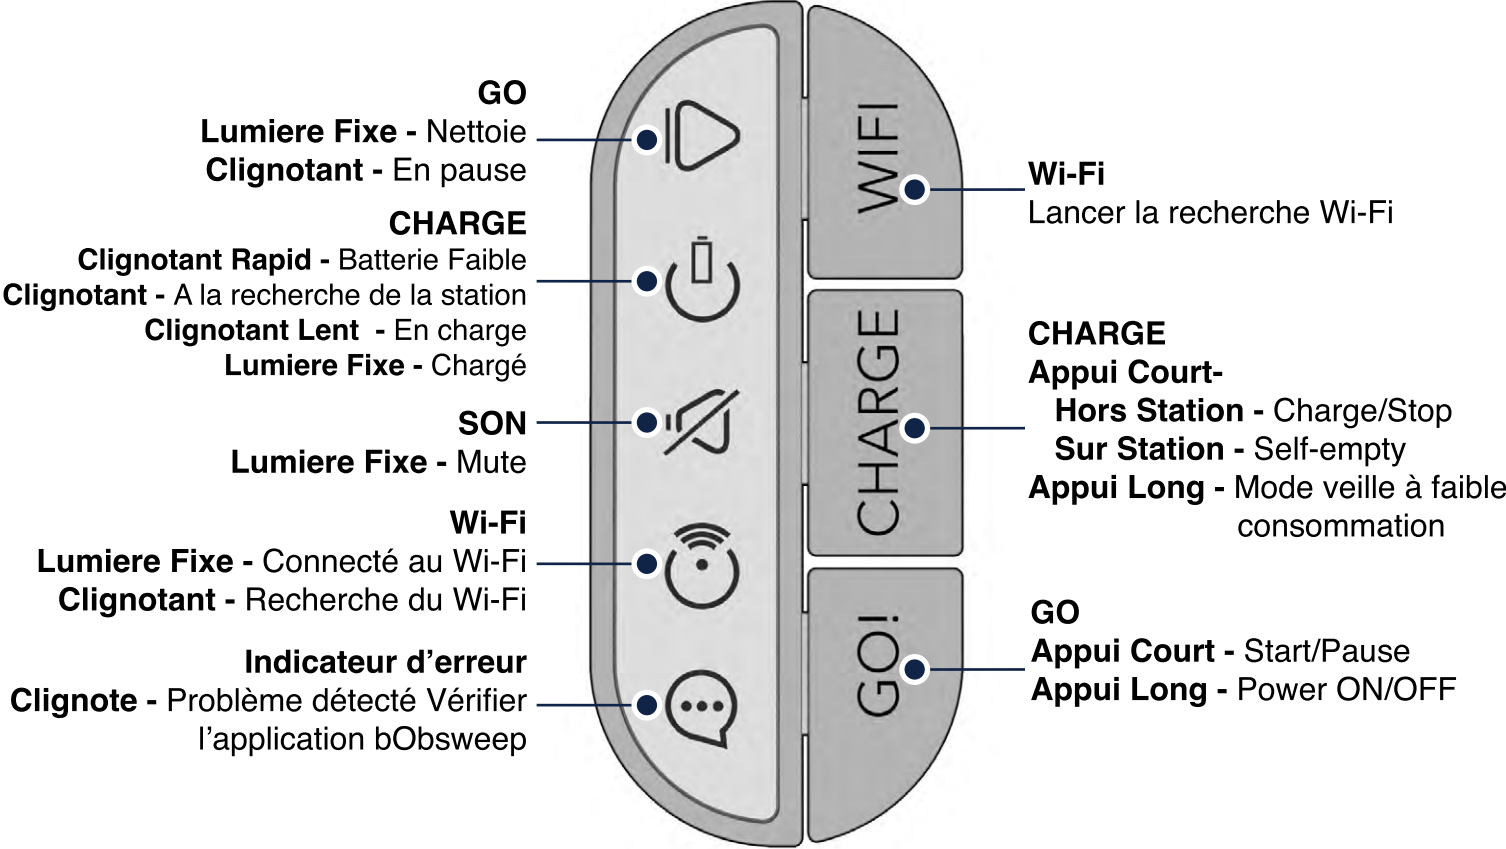


Station de recharge et d'auto-vidage

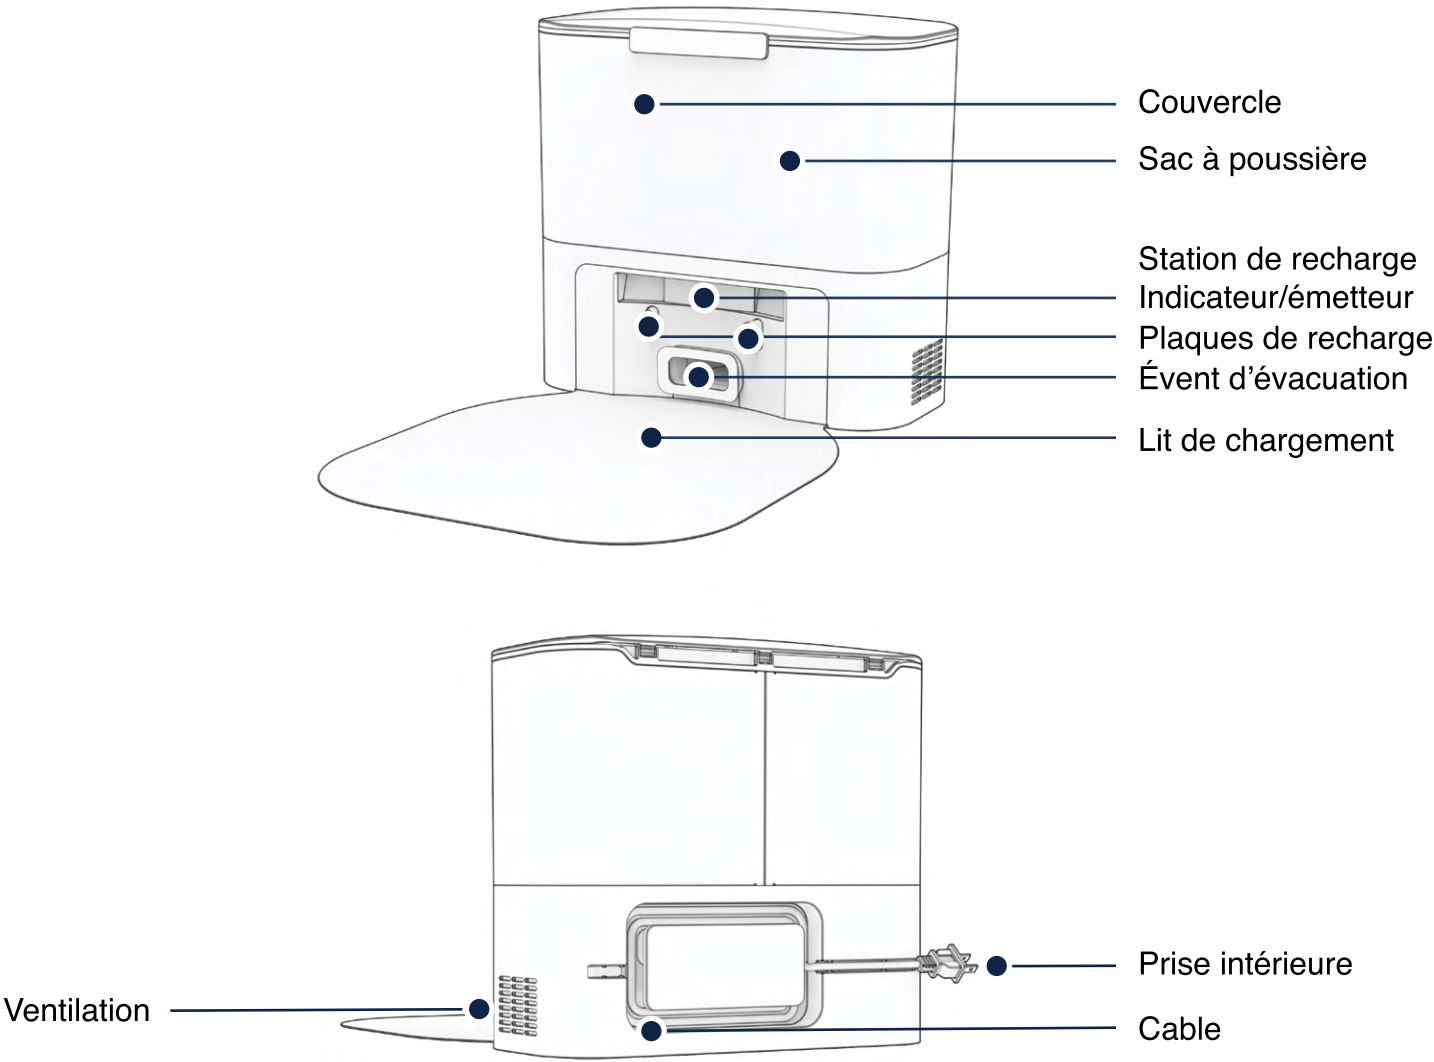

Station de recharge & d'autovidage

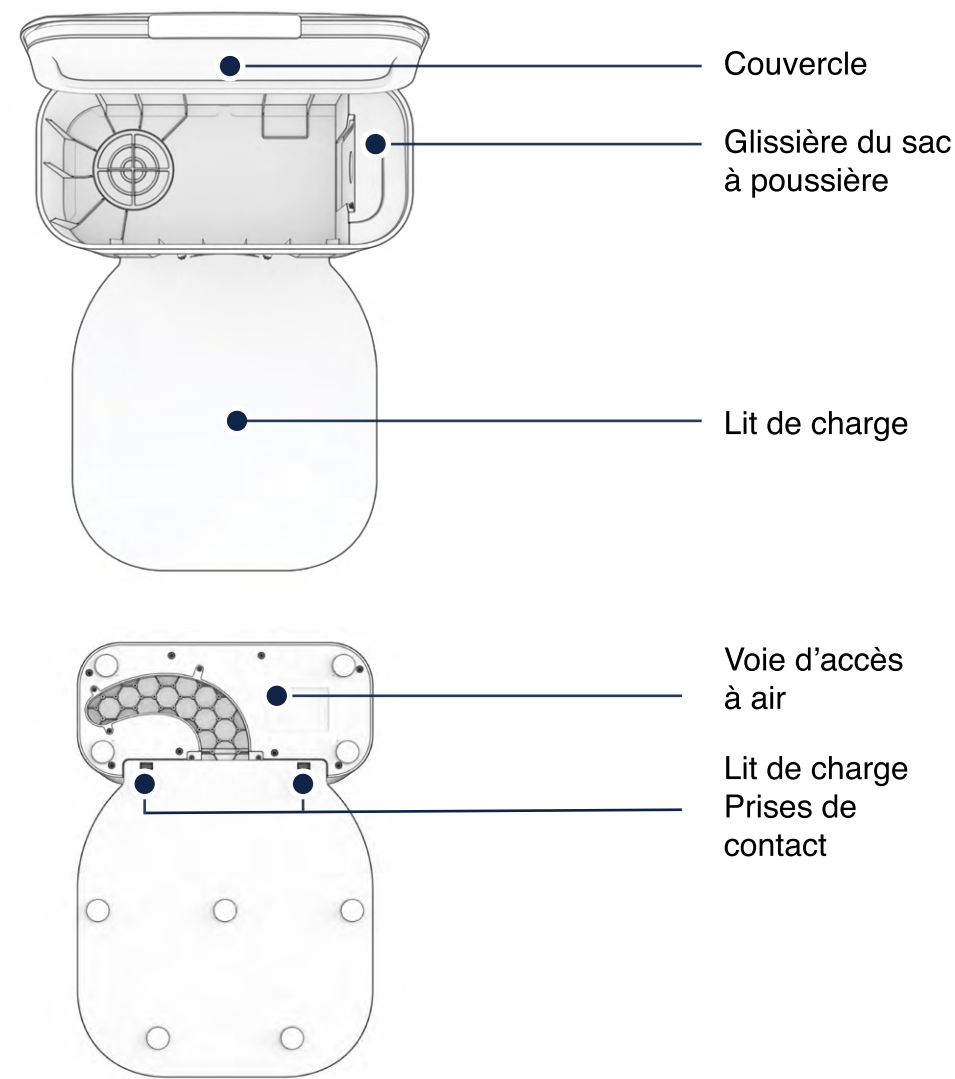

Poubelle et Accessoire à nettoyage

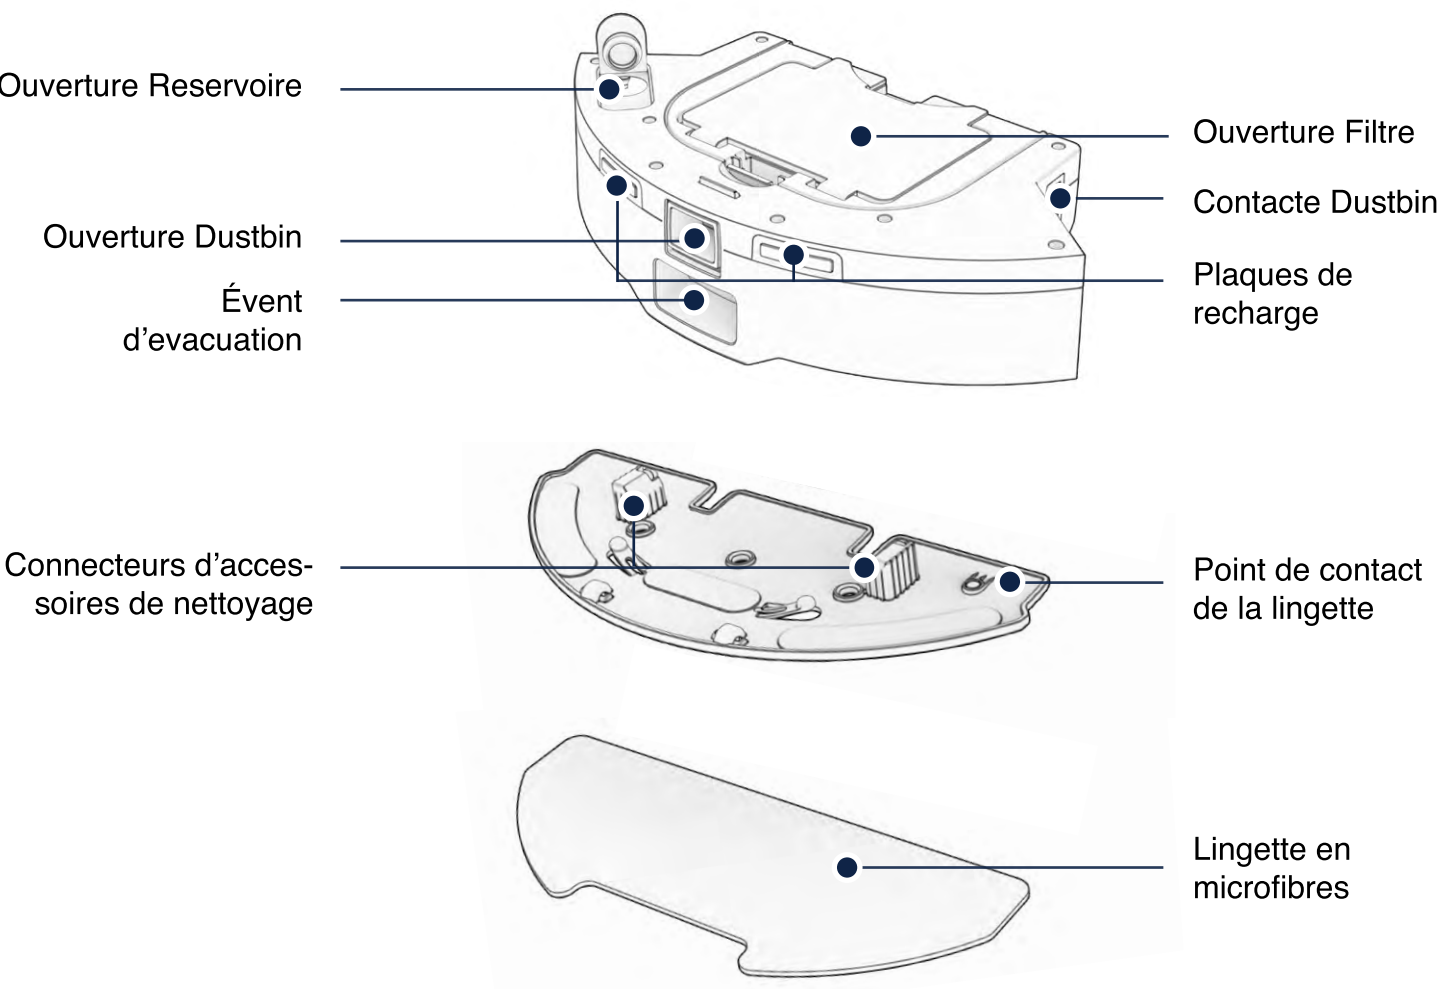

Qui est UltraVision Pet?

UltraVision Pet est un robot aspirateur autonome, à votre service ! Connectez UltraVision Pet au Wi-Fi et utilisez l'application bObsweep pour créer un plan de nettoyage personnalisé. UltraVision Pet nettoiera votre maison, à votre manière.


Comment UltraVision Pet s'y prend-il pour s'orienter ?

UltraVision Pet utilise la vision laser, un réseau de capteurs et une technologie de cartographie et de localisation de pointe pour détecter les murs, les meubles et les obstacles.


Tout en nettoyant, UltraVision Pet crée une carte des zones auxquelles il peut accéder et qu'il peut nettoyer. Les zones où se trouvent les meubles et les petits objets sont marquées sur la carte. Vous pouvez afficher la carte en cliquant sur l'icône Carte de l'application bObsweep et la personnaliser à votre guise. En utilisant la carte et les critères de personnalisation de l'application, UltraVision Pet nettoie efficacement votre maison au cours d'un cycle complet.

Après le nettoyage, UltraVision Pet retourne à sa station et vide sa poubelle dans le conteneur de sa station de recharge. Oubliez le nettoyage et profitez de sols propres pendant des semaines !

Découvrez les fonctions de la carte de UltraVision Pet :

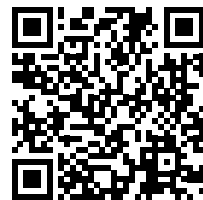

Plus de vidéos et d'instructions :

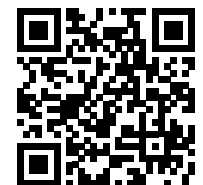

Franchir des obstacles difficiles

Les meubles spécialisés, tels que les chaises de bureau avec roues ou les tabourets avec des bases circulaires, peuvent prendre plus de temps pour qu'UltraVision les nettoie. Il pourrait se coincer sur un rebord pendant quelques minutes, puis décider de nettoyer ailleurs. Laissez-le continuer à nettoyer et trouver son propre chemin.

Tapis a poil long

La brosse principale de UltraVision Pet n'est pas conçue pour nettoyer les tapis à poils longs ou les tapis à fibres longues et à franges. Si vous souhaitez que UltraVision Pet nettoie des tapis à poils longs ou à fibres longues, vous pouvez lui retirer sa brosse principale et lui permettre de passer l'aspirateur sans elle.

Espaces Spacieux

Si UltraVision ne couvre pas l'ensemble du sol en une seule charge, utilisez sa fonction Auto-Resume (allez dans Paramètres > Préférences de nettoyage > Auto-Resume) pour qu'il reprenne là où il s'était arrêté après la recharge.

Tapis sombres

Si UltraVision Pet recule de manière répétée ou affiche un message d'erreur lors du nettoyage de tapis sombres, désactivez les capteurs de bord.

Pour les désactiver, ouvrez l'application bObsweep et désactivez " Edge detection" dans Settings ⚙️.

N'oubliez pas que si les capteurs de bord de UltraVision Pet sont désactivés, il ne pourra pas détecter les bords ou les escaliers et tombera du bord s'il s'en approche ! Ajoutez une ligne NoSweep à l'endroit du bord ou de l'escalier pour assurer la sécurité de UltraVision Pet.

Zones NoSweep™ & NoMop™

Prenez note des zones que UltraVision trouve les plus difficiles et, si possible, ajustez les meubles ou ajoutez des zones NoSweep™. Définissez des zones No Mop™ dans les zones avec des tapis ou des sols recouverts de moquette pour empêcher UltraVision Pet de nettoyer ces espaces. Vous pouvez facilement ajouter des zones No Mop™ sur la carte dans l'application bObsweep.

Enlevez les petits articles comme les souliers, les jouets ou les tapis près des escaliers. Sinon, UltraVision pourrait tomber en essayant d'éviter ces objets.

Installez la Brosse Latérale de UltraVision Pet

Installez la brosse latérale de UltraVision Pet pour l'aider à atteindre les coins et les bords des pièces.


Pièces nécessaires :  Brosse Latérale

Avant de commencer

Retirer les pièces de protection de UltraVision Pet, de son bumper et de la station de charge.



Placez la brosse latérale sur le socle vide de UltraVision Pet. Appuyez pour fixer.

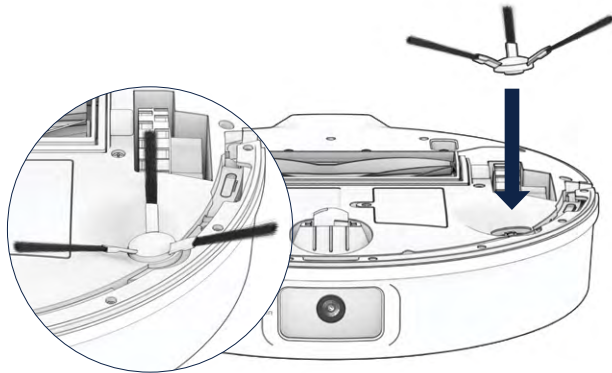


Note Importante : La force de la fixation de la brosse latérale peut être augmentée en tournant la vis au centre de la brosse latérale dans le sens inverse des aiguilles d'une montre.

Allumer UltraVision Pet

Appuyez sur le bouton GO et maintenez-le enfoncé jusqu'à ce que l'écran s'allume.

Conserver UltraVision Pet

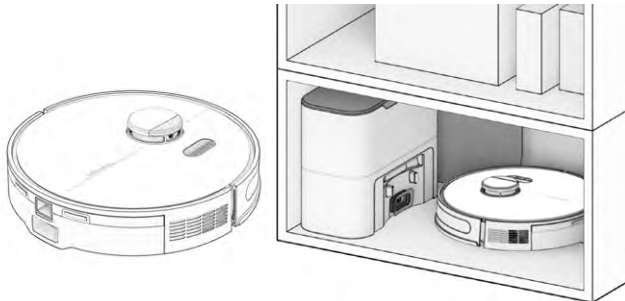

Si vous n'utilisez pas UltraVision Pet pendant une période prolongée (plus d'un mois), éteignez-le, retirez sa batterie et débranchez sa station de charge. Stockez le tout dans une pièce sèche, à l'abri de la lumière directe du soleil et des températures extrêmes.

Si vous n'avez pas l'intention d'utiliser UltraVision Pet pendant un certain temps, vous pouvez le mettre en mode veille à faible consommation (mode LPS). Dans ce cas, placez UltraVision Pet sur sa station de charge. Appuyez sur le bouton CHARGE de UltraVision Pet et maintenez-le enfoncé pendant 5 secondes. Vous entendrez "low power mode", confirmant que UltraVision Pet est en mode LPS. Pour quitter ce mode, appuyez sur le bouton GO de UltraVision Pet lorsqu'il est sur la station de charge, ou retirez-le de la station.



Note Important : Dans ce mode, UltraVision Pet est hors ligne et l'application bObsweep ne peut pas se connecter à UltraVision Pet. De plus, tout nettoyage programmé sera mis en pause.

Mise en place de la station de UltraVision Pet

La lumière vive du soleil, les surfaces brillantes et les objets réfléchissants peuvent interférer avec les signaux d’amarrage de UltraVision Pet. Placez la station de UltraVision Pet loin des fenêtres non couvertes, des miroirs et des meubles ou objets brillants.


Pièces nécessaires :

 Station de recharge


 Lit de recharge

Positionnement

UltraVision Pet retourne à sa station de recharge après avoir nettoyé. Pour aider UltraVision Pet, placez la station de recharge sur une surface plane et dure, loin des bords et des escaliers, avec suffisamment d’espace autour.

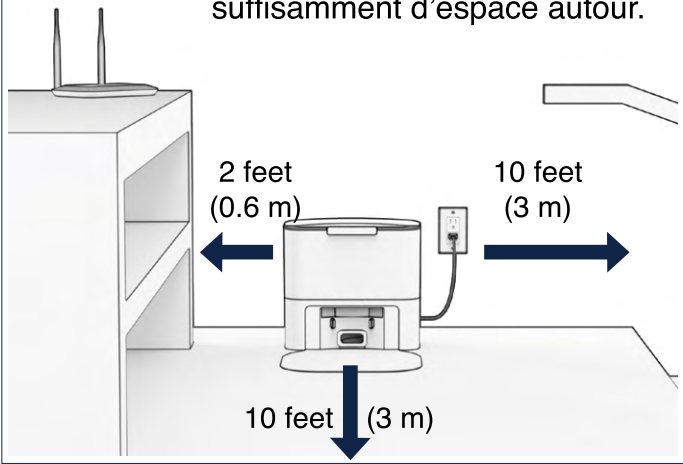


Placez la station de recharge sur les socles du lit de recharge. Appuyez pour la maintenir en place.

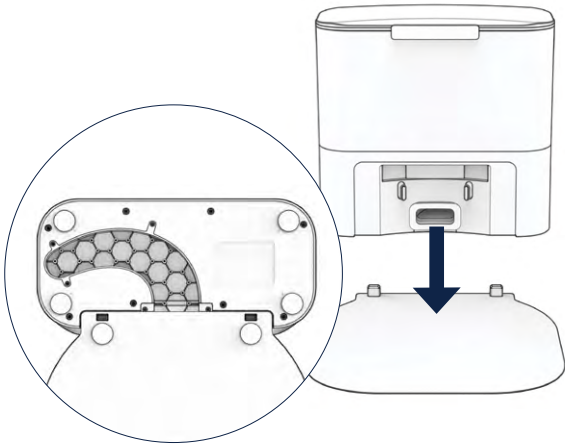

Quick Tip : Les socles du lit de recharge s’insèrent dans la station de recharge située à l’avant de celui-ci.


Indicateurs de la station de recharge

Lorsque UltraVision Pet a fini de stationner sur sa station de recharge et qu’il n’y a pas d’erreur de la station, le voyant lumineux de la station s’éteint.

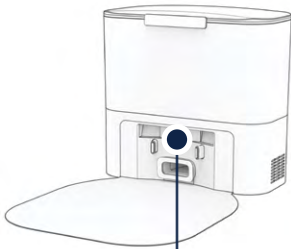

État de LED	État de la station	Ce qu’il faut faire
● Désactivé	Eteint	Brancher dans la prise de courant.
● Bleu	Prés	Envoyer UltraVision Pet pour charger/s’auto-vider.
● Rouge uni	Le sac à poussière n’est pas détecté/l’ouverture du sac à poussière est fermée	Insérer le sac à poussière dans la glissière et pousser la languette vers le bas pour l’ouvrir et l’aligner avec le passage d’air.
● Rouge clignotant	Encombrement de la voie aérienne	-Retirez et ouvrez le poubelle afin de le nettoyer et de le débarrasser des encombrements importants. -Nettoyez l’orifice d’évacuation situé à l’arrière du dustbin. Vérifiez que le clapet se déplace librement. -Débranchez la station puis ouvrez la fenêtre d’accès au passage d’air pour éliminer les encombrements du passage d’air. - Placez UltraVision Pet sur la station et appuyez « Charge » pour lancer un auto-vidé. Si cela ne résout pas le problème: - Débranchez la station, retournez la station pour ouvrir la voie d’accès à air. Accédez à la fenêtre et supprimez tout congestion. - Placez UltraVision Pet sur la station et appuyez « Charge » pour lancer une auto-vidé.

En savoir plus sur la résolution des problèmes de vidange automatique :

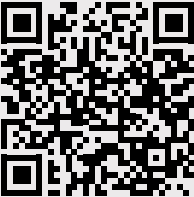

Rechargé UltraVision Pet

Appuyez sur le bouton CHARGE de UltraVision Pet pour l’envoyer à sa station de recharge.

Pièces nécessaires :




Station de recharge & d’autovidage

Charging Indicator



- Batterie Fiable :**  Cligne rapidement.
- Recherche Station :**  Cligne.
- En charge :**  Cligne lentement.
- Chargé :**  Brille en blanc.

Pour recharger UltraVision Pet manuellement, placez-le sur son lit de recharge, les nœuds métalliques de son dos reposant sur les plaques de la station.

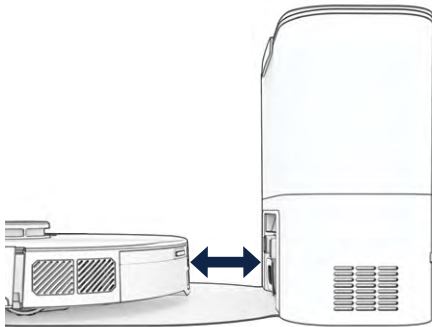

Quick Tip : UltraVision Pet vide son bac à chaque fois qu’il se stationne à la fin d’une session de nettoyage. Définissez la fréquence à laquelle UltraVision Pet se vide lui-même dans “Cleaning Preferences” sur l’application bObsweep.

Télécharger l’application bObsweep

Connectez UltraVision Pet au Wi-Fi pour accéder à l’ensemble des fonctionnalités de UltraVision Pet et aux mises à jour logicielles importantes. Suivez les instructions de l’application pour vous connecter aux appareils Amazon Alexa ou Google Home.

Articles nécessaires :




Smart Phone





Connexion Wi-Fi 2.4GHz

Cartographie Rapide

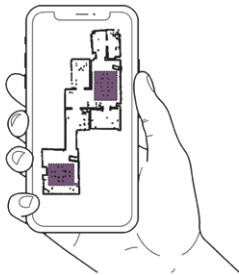

UltraVision Pet cartographie la zone au premier coup d’œil. Modifiez, personnalisez la carte de nettoyage de UltraVision Pet, puis définissez des horaires de nettoyage et profitez de sols propres sans avoir à lever le petit doigt pendant plusieurs semaines d’affilée.


Ouvrez l’application bObsweep, créez votre compte et suivez les instructions pour connecter votre robot.

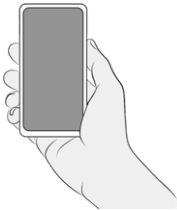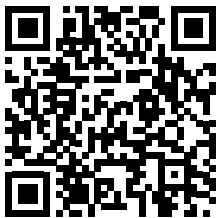

Laissez UltraVision Pet balayer !

UltraVision Pet est maintenant prêt à balayer ! Éliminez tout encombrement ou câble et appuyez sur le bouton GO.

Levage et déménagement

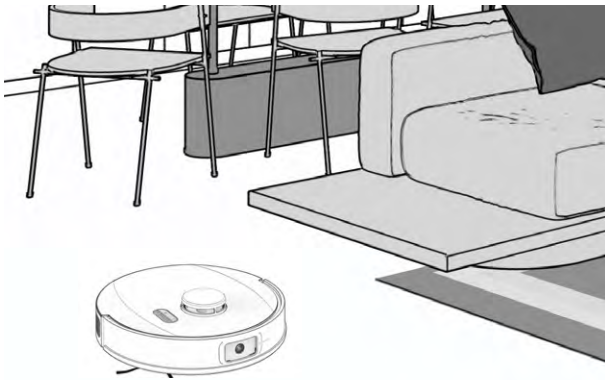

Ne soulevez pas UltraVision Pet pendant le nettoyage pour éviter de déformer sa carte.

Ne changez pas l'emplacement de la station de UltraVision Pet une fois la carte terminée.

Doté de la technologie de nettoyage Room-to-Room™, UltraVision Pet explore et nettoie automatiquement votre maison, en évitant les meubles et les obstacles sur son chemin. Pour de meilleurs résultats, retirez le désordre et les petits objets.



Pour une meilleure performance

Pour optimiser l'efficacité de UltraVision Pet, il est préférable de maintenir ses brosses, ses filtres et ses capteurs propres.

Partie	Maintenance recommandé	Remplacement Frequency
Poubelle et Station	Au mois	
Filtre	Au mois	Tous les 6 mois
Brosses	Chaque semaine	Tous les 12 mois
Capteurs	Chaque semaine	
Roue avant	Chaque semaine	
Batterie		Tous les 24 à 36 mois

Quick Tips : Enlevez les débris des coins et recoins autour des brosses et des roues.


Utilisez une pince à épiler pour éliminer la congestion des extrémités des brosses et des compartiments de la brosse principale et des brosses latérales de UltraVision Pet.

Utilisez des ciseaux ou l'outil de nettoyage fourni pour couper les poils qui s'enroulent autour des brosses.




Sac de poussière


1. Ouvrez le couvercle.

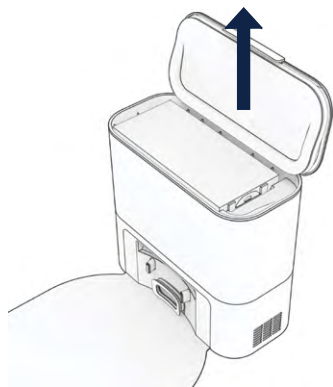


2. Tirez la languette vers le haut pour fermer l'ouverture du sac à poussière. Soulever pour retirer le sac à poussière plein et le jeter.

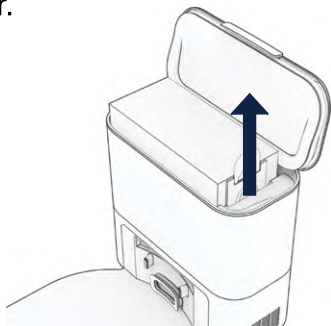

3. Placez le nouveau sac à poussière, en faisant glisser la carte complètement en place. Faites glisser la languette d'ouverture vers le bas.

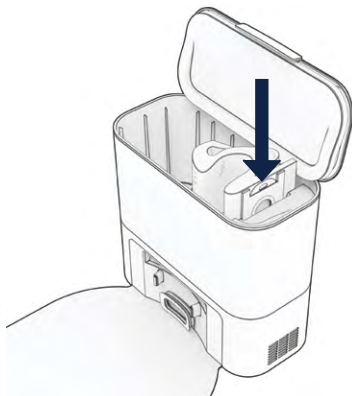

4. Fermez le couvercle.

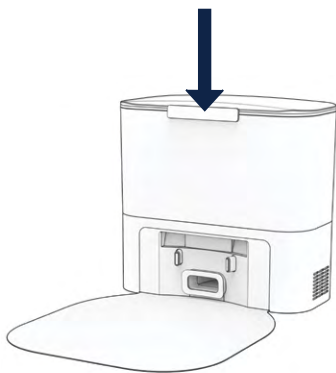

Station de recharge et d'autovidage

Avant de nettoyer la station de recharge, débranchez-la.


1. Essuyez les nœuds de charge (points de contact).




2. Essuyer la fenêtre de l'émetteur, en s'assurant qu'elle n'est pas bloquée ou couverte.



3. Retirez le sac à poussière et nettoyez le bac à poussière pour éviter l'accumulation de débris ou toute obstruction à la libre circulation de l'air.

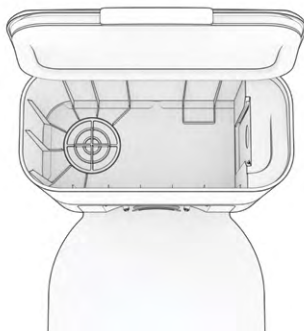


4. Débranchez la station. Inspectez l'évent d'évacuation et le passage de l'air. Nettoyez et éliminez tout encombrement.

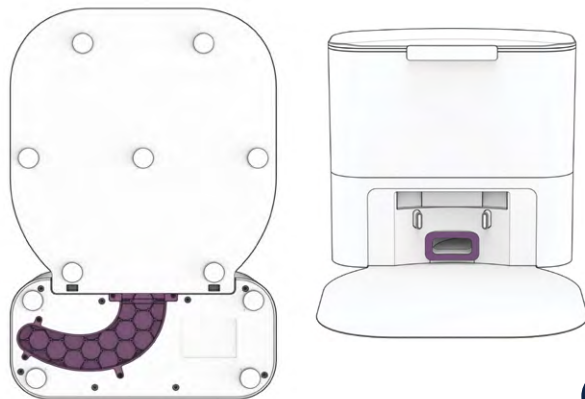

Brosses


1. Tirez vers le haut pour retirer la brosse latérale.

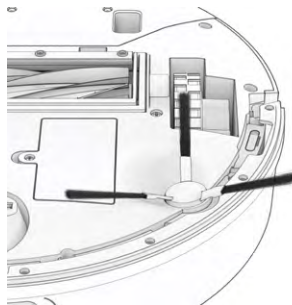


2. Retirez les débris de la brosse latérale et son logement.



3. Pincez les languettes de la porte principale des brosses et soulevez-la.

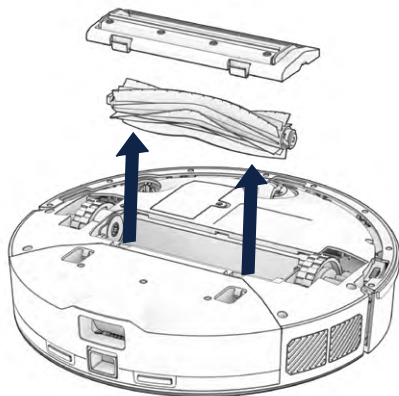


4. Nettoyez le balai principal et tous ses composants, y compris la porte de la brosse et le compartiment de la brosse.

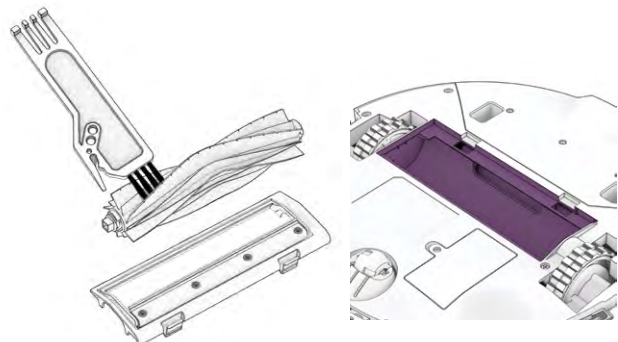


Capteurs

Utilisez un chiffon doux en coton pour essuyer les capteurs.


1. Essuyez les capteurs de bord et de mur.

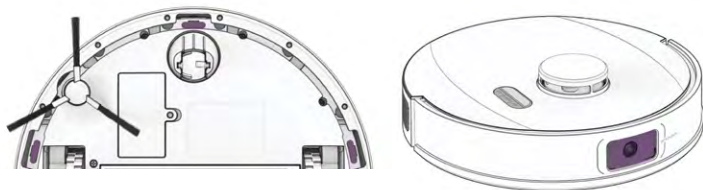


2. Essuyez les nœuds de charge sur UltraVision Pet et sa station.

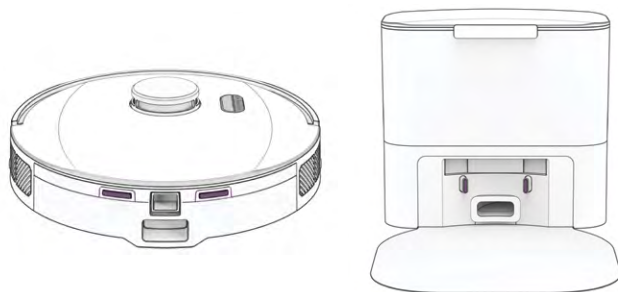

3. Essuyez les connecteurs métalliques du de la poubelle et de la serpillère.

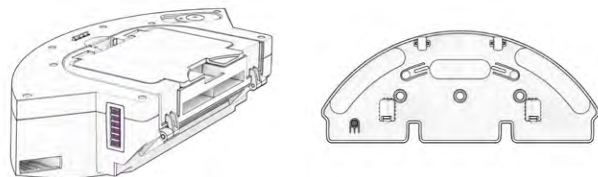

4. Essuyez la partie supérieure et la zone autour du SLAM LiDAR.

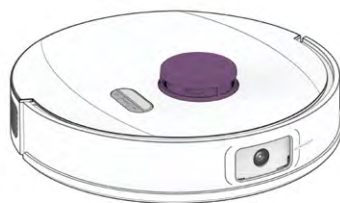


Note importante : Le SLAM LiDAR de UltraVision Pet est un capteur sensible. N'appliquez pas de force, n'insérez pas d'objets et ne réglez pas le SLAM LiDAR. Ne vous asseyez pas sur UltraVision Pet et ne placez pas d'objets sur lui.

Roue avant


1. En utilisant un tournevis à tête plate comme levier, saisissez fermement la roue et tirez, saisissez fermement la roue et tirez.




2. Une fois la roue retirée, utilisez le tournevis pour extraire l'ensemble de la roue.

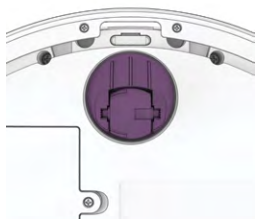

3. Nettoyez la roue et tous ses composants, y compris l'assemblage et la douille de la roue.

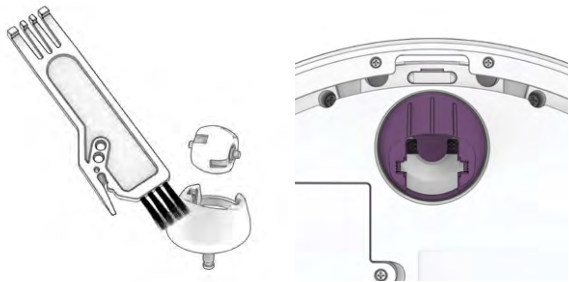


4. Remettez les deux parties en place lorsque c'est fait. Poussez vers le bas pour les verrouiller en place.

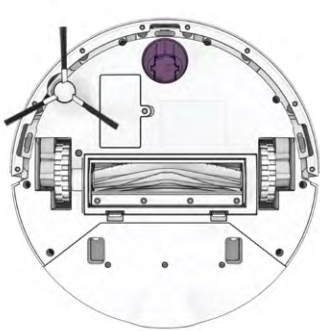

Batterie

Eteignez UltraVision Pet avant de remplacer la pile. Appuyez sur le bouton GO et maintenez-le enfoncé.


1. Utilisez un tournevis cruciforme pour ouvrir le compartiment à piles.

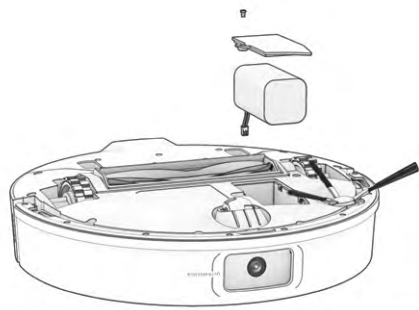

2. Débranchez l'ancienne batterie et branchez la nouvelle.




3. Glissez la nouvelle batterie dans UltraVision Pet.

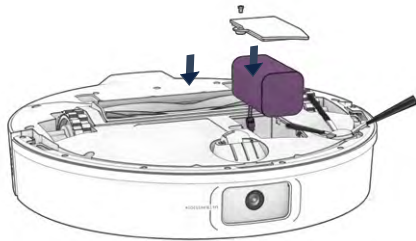


Note importante : Le mode haute puissance augmente de façon exponentielle l'utilisation de la batterie de UltraVision Pet. Utilisez le mode basse consommation pour réduire la consommation d'énergie de UltraVision Pet.

Accessoire de Nettoyage


1. Retirer la poubelle.

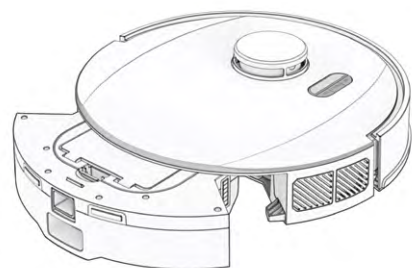

2. Ouvrez la languette du réservoir et remplissez-le avec de l'eau. Utilisez de l'eau distillée dans les régions où l'eau est calcaire.

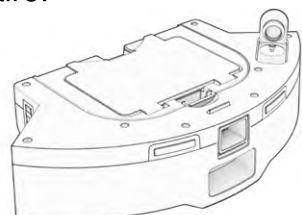


3. Alignez les connecteurs de l'accessoire de nettoyage avec ceux de la poubelle et appuyez pour verrouiller en place.

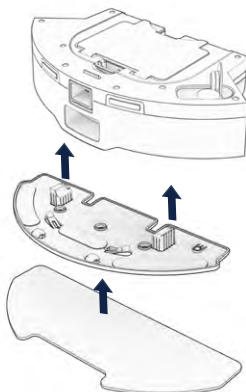

4. Remplacez la poubelle.


Remarque : si l'accessoire de nettoyage est connecté, UltraVision Pet n'entrera pas dans les zones NoMop.

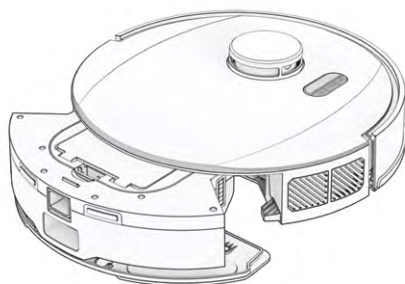


Maintenance de l'accessoire de Nettoyage :

Le réservoir doit être vidé après utilisation afin d'éviter tout dommage causé par l'eau.


1. Retirer l'accessoire de nettoyage.

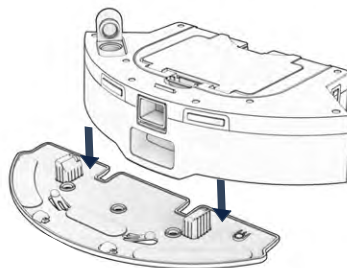


2. Ouvrez la languette et videz le réservoir.

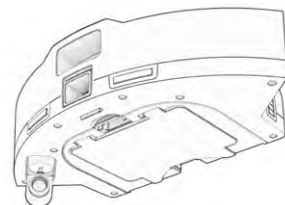

3. Laver la serpillière. Sécher à l'air toutes les parties une fois fini.

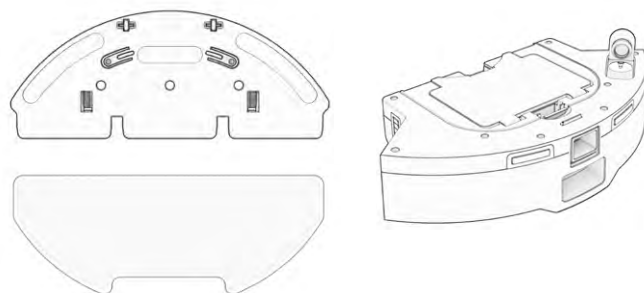

4. Découvrez les fonction de l'accessoire de Nettoyage de UltraVision Pet :

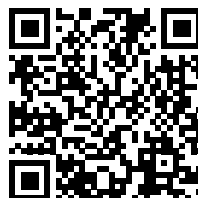

Dépannage

Lorsque UltraVision Pet rencontre un problème, il s’arrête et son indicateur de trouble clignote. Consultez l’application bObsweep pour connaître les détails des problèmes.

Trouble	Solution
Battery	Batterie faible ou déconnectée. Vérifier la connexion. Réinitialisez et chargez UltraVision Pet.
Left/Right Wheel	La roue gauche/droite est bloquée. Vérifier qu’il n’y a pas d’obstruction et nettoyer.
Main/Side Brush	La brosse principale / latérale est obstruée. Retirer et nettoyer.
Camera	Erreur de composant de la caméra. Réinitialisez UltraVision Pet (Éteignez et allumez UltraVision Pet).
Dustbin	Poubelle est déconnectée ou les points de contact sont sales. Nettoyez les points de contact et remettez-les en place. Ou le moteur d’aspiration est bloqué. Vérifier qu’il n’y a pas d’obstruction et nettoyer.
Mop Attachment	UltraVision Pet essaie de nettoyer mais l’accessoire est déconnecté ou les points de contact sont sales. Vérifier qu’il n’y a pas d’obstruction et nettoyer.
Edge Sensors	UltraVision Pet est coincé près d’un bord, ou n’est pas en contact avec le sol ou les capteurs de bord sont sales. Mettez UltraVision Pet en sécurité et nettoyez les capteurs de bord.
Bumper	Le Bumper est sale ou bloqué. Essayez autour du bumper ; éliminez toute obstruction.
LiDAR Bumper	Le bumper du SLAM LiDAR est bloqué. Vérifiez qu’il n’y a pas d’obstruction et nettoyez-le.
LiDAR	Le SLAM LiDAR n’est pas propre/perte de visibilité. Nettoyez le SLAM LiDAR et éloignez UltraVision Pet des miroirs/des surfaces métalliques/des murs et placez-le au centre de la pièce.
Charging Station	Impossible de localiser la station de recharge. Rebranchez la station de charge et chargez.
User Interface	L’interface utilisateur de UltraVision Pet/le port USB ne répond pas. Réinitialisez UltraVision Pet et assurez-vous que le port USB est vide.
Electronic	Erreur de composant électronique. Réinitialisez UltraVision Pet (Éteignez et allumez UltraVision Pet).
Stuck	UltraVision Pet est coincé. Éliminez les obstacles,et les fils et réinitialisez UltraVision Pet.
Navigation	UltraVision Pet ne peut pas naviguer. Éliminez les encombrements et les fils et réinitialisez UltraVision Pet.
Localization	UltraVision Pet ne peut pas se repérer sur la carte. Vérifier l’exactitude de la carte/effacer la carte pour la refaire.
Settings	Les paramètres actuels de la chambre ne correspondent pas à ceux de UltraVision Pet. Modifier les paramètres/horaires de la carte.

Test de contrôle check-up

Si UltraVision Pet ne fonctionne pas aussi bien qu’il le devrait, vous pouvez diagnostiquer le problème à l’aide d’un simple test de contrôle check-up.

Mettre UltraVision Pet en mode check-up :
Appuyez simultanément sur les boutons “GO”, “CHARGE” et “WI-FI” et maintenez-les enfoncés pendant quelques secondes jusqu’à ce que le robot indique : “Home Checkup Mode Activated” (Mode de contrôle à domicile activé). Dans ce mode, le capteur LiDAR de UltraVision Pet tourne.
Pour quitter le mode check-up :
Appuyez à nouveau simultanément sur les boutons “GO”, “CHARGE” et “WI-FI”. Vous entendrez “Exiting Home Checkup Mode” et le capteur LiDAR de UltraVision Pet s’arrêtera de tourner.
Notes Importantes :

Pendant le test, si UltraVision Pet reste inactif pendant plus d’une minute, il quittera automatiquement le test de contrôle à domicile.
Pour passer d’une étape à l’autre du test de contrôle, appuyez sur le bouton Wi-Fi.
Pour démarrer/arrêter les tests à chaque étape, appuyez sur le bouton GO jusqu’à ce que vous entendiez “Begin test” et “Stop test”. Arrêtez toujours un test avant de passer à l’étape suivante.

Etape	Partie (s) Testé	Description
1	Battery	Après une charge complète, testez la batterie de UltraVision Pet.
2	Edge Sensors	Testez les capteurs de bord.
3	Charging Station	Tester les capteurs de charge.
4	Bumpers, Wi-Fi, and Camera	Testez le module Wi-Fi, capteurs tactiles et caméra
5	Motors (wheels, brushes, vacuum, mop)	Test chacun des moteurs de UltraVision Pet individuellement.
6	SLAM LiDAR, Charging and Self-empty	Testez le SLAM LiDAR de UltraVision Pet, les points de contact de charge et la fonction d’auto-vidage.
7	Hard Resetting UltraVision Pet	Réinitialisez UltraVision Pet aux paramètres d’usine et effacez toutes les données.

Guide vidéo étape par étape du test de contrôle check-up:
bobsweep.com/ultravision-pet-support

FAQs

UltraVision Pet ne s’allume pas, quoi que je fasse.

La batterie est probablement trop faible pour qu’il puisse fonctionner. Placez-le sur sa station de recharge en vous assurant que les plaques de chargement métalliques situées à l’arrière de votre robot (du même côté que la poubelle) entrent en contact physique avec les plaques de chargement de la station. Si le problème persiste, effectuez une réinitialisation matérielle de la batterie. Visitez **bobsweep.com/ultravision-pet-support** pour savoir comment procéder.

UltraVision Pet doit être rechargé avant de terminer la cartographie de ma maison.

Utilisez la fonction Swift Map de l’application bObsweep pour demander à UltraVision Pet de cartographier les sols sans les nettoyer. Dans ce mode, UltraVision Pet explore et cartographie la maison, puis retourne à sa borne de recharge sans la nettoyer. Assurez-vous qu’UltraVision Pet est complètement chargé avant de lancer cette fonctionnalité.

UltraVision Pet ne ramasse plus autant qu’avant.

UltraVision Pet aura du mal à se nettoyer si son bac à poussière est bouché ou si sa brosse principale est obstruée ou emmêlée de poils. Retirez la brosse principale de UltraVision Pet et nettoyez-la soigneusement d’un bout à l’autre. Retirez et ouvrez le bac à poussière, et enlevez tous les gros débris du bac à poussière de UltraVision Pet pour assurer une bonne circulation de l’air.

Comment puis-je savoir que UltraVision est complètement chargé et prêt à nettoyer ?

Lorsque UltraVision Pet est en cours de chargement, le voyant de chargement clignote lentement. Lorsque UltraVision Pet est entièrement chargé et prêt à nettoyer, l’indicateur de charge brille en blanc.

UltraVision Pet a du mal à trouver son poste.

Assurez-vous que le lit de recharge de UltraVision Pet est installé. Vous devrez peut-être déplacer la station de UltraVision Pet dans un endroit plus accessible. Assurez-vous que la station est placée dans une zone centrale, sur une surface dure et plate, loin des escaliers ou des bords, de la lumière directe du soleil, des miroirs ou des surfaces réfléchissantes, et avec beaucoup d’espace libre autour d’elle. Ensuite, effacez l’ancienne carte et laissez UltraVision Pet refaire la carte de la maison à partir de sa nouvelle station.

Est ce que je peux passer prendre UltraVision Pet ?

Il n’est pas recommandé de prendre et de déplacer UltraVision Pet pendant une session de nettoyage, car cela peut affecter son cycle de nettoyage/carte en cours. En outre, il est préférable de ne pas déplacer la station de charge de UltraVision Pet une fois qu’il a cartographié son environnement. Si vous devez déplacer la station, effacez l’ancienne carte et laissez UltraVision Pet cartographier à nouveau la maison.

FAQs

Impossible de connecter UltraVision Pet au Wi-Fi.

Vous pouvez connecter UltraVision Pet à un Wi-Fi 2,4 GHz une fois qu’il est complètement chargé. Activez «Location Services» et «Bluetooth» dans votre téléphone. Autorisez également l’accès au «Local Networks» et désactivez les «Wi-Fi Calling» sur votre téléphone. Notez votre réseau Wi-Fi 2,4 GHz et son mot de passe (notez qu’ils sont sensibles à la casse). Rapprochez UltraVision Pet et votre téléphone de votre modem ou routeur et assurez-vous de sélectionner le nom de modèle correct «UltraVision Pet» dans la liste des robots.

UltraVision Pet peut-il nettoyer ma maison à plusieurs étages ?

Oui. UltraVision Pet peut sauvegarder jusqu’à 3 cartes d’étage. Pour obtenir des instructions étape par étape sur la façon de sauvegarder les cartes, visitez : **bobsweep.com/ultravision-pet-support**.

UltraVision Pet a arrêté le nettoyage et l’indicateur de panne clignote.

Lorsque UltraVision Pet est en difficulté et a besoin de votre aide, il s’arrête et l’indicateur de panne clignote.Ouvrez l’application bObsweep et trouvez les détails du problème en haut de la page Control.

UltraVision Pet est Offline.

UltraVision Pet est peut-être en veille prolongée ou est éteint et s’est déconnecté du Wi-Fi. Pour le remettre en ligne, placez-le sur la station de recharge et laissez-le se charger et s’allumer. Pour obtenir des instructions visitez : **bobsweep.com/ultravision-pet-support**.

UltraVision Pet est souvent coincé.

S’il y a des zones à problèmes répétés dans la maison sous lesquelles UltraVision Pet se coince ou s’arrête, dessinez des zones NoSweep au-dessus de ces zones sur la carte pour éviter à UltraVision Pet d’avoir des ennuis.

Comment puis-je diagnostiquer le problème exact de UltraVision Pet ?

Si UltraVision Pet n’est pas aussi performant qu’il le devrait, vous pouvez diagnostiquer le problème à l’aide d’un test de contrôle à domicile. Pour plus d’informations sur la manière d’effectuer ce test, consultez : **bobsweep.com/ultravision-pet-support**.

Puis-je modifier ou supprimer la carte que UltraVision Pet a créée ?

Oui. La carte de UltraVision Pet est entièrement personnalisable et modifiable. Examinez la carte créée par UltraVision Pet et apportez-y toutes les modifications que vous souhaitez. Pour des instructions étape par étape, visitez : **bobsweep.com/ultravision-pet-support**.

End User License Agreement

IMPORTANT - READ BEFORE USING. Do not use the robot (“UltraVision Pet” or “bObsweep”) accompanying this license agreement (“Agreement”) until you have carefully read and agreed to the following terms and conditions.

By using the bObsweep, you agree to the terms of this End User License Agreement (“EULA”) and any amendment or addenda accompanying this Agreement. If you do not agree to the terms of this EULA, you may not use the bObsweep. The bObsweep contains an electronic and software interface that allows you to control or modify its behavior, and remotely monitor its sensors.

THIS IS A LEGAL AGREEMENT. BY ACCESSING AND USING THE PRODUCT AND PRODUCT SOFTWARE, YOU ARE ACCEPTING AND AGREEING TO THIS EULA ON BEHALF OF YOURSELF OR THE ENTITY YOU REPRESENT IN CONNECTION WITH THE ACCESS. YOU REPRESENT AND WARRANT THAT YOU HAVE THE RIGHT, AUTHORITY, AND CAPACITY TO ACCEPT AND AGREE TO THIS EULA ON BEHALF OF YOURSELF OR THE ENTITY YOU REPRESENT. YOU REPRESENT THAT YOU ARE OF SUFFICIENT LEGAL AGE IN YOUR JURISDICTION OR RESIDENCE TO USE OR ACCESS THE PRODUCT SOFTWARE AND TO ENTER INTO THIS EULA. IF YOU DO NOT AGREE WITH ANY OF THE PROVISIONS OF THESE TERMS, YOU SHOULD CEASE USING THE PRODUCT AND PRODUCT SOFTWARE.

Terms and Conditions

LICENSE: Subject to all of the terms of this Agreement, Bobsweep Inc. (“bObsweep”) grants to you one (1) revocable, royalty-free, personal, non-exclusive, non-transferable, non-assignable, non-commercial intellectual property license to use the Bobsweep software contained on the bObsweep (“Bobsweep Software”), including the protocol for communicating with the bObsweep Software, and to use the bObsweep.

NONCOMMERCIAL LICENSE: You may use the Bobsweep Software and the bObsweep only for personal, non-commercial, educational, and research purposes. The Bobsweep Software and the bObsweep may not be used for any other purpose, whether “for profit” or “not for profit.” Any work performed or produced using the bObsweep, including any software that you create for your bObsweep (“Your Software”), cannot be performed or produced for the benefit of other parties for a fee, compensation, or any other reimbursement or remuneration. A separate license is required for each additional use and/or individual user in all other cases. If you are an entity, Bobsweep grants you the right to designate one individual within your organization to have the sole right to use the Bobsweep Software and the bObsweep in the manner provided above.

RESTRICTIONS: You agree not to: (i) use or copy the Bobsweep Software or the bObsweep except as provided in this Agreement; (ii) rent or lease the Bobsweep Software or the bObsweep to any third party; (iii) assign this Agreement or transfer the Bobsweep Software or the bObsweep except as provided in this Agreement; (iv) modify, adapt, or translate the Bobsweep Software or the bObsweep in whole or in part except as expressly provided in this Agreement; (v) reverse engineer, reverse compile, or disassemble the Bobsweep Software or the bObsweep; or (vi) distribute, sublicense or transfer the source code form of Your Software and derivatives thereof to any third party except as provided in this Agreement.

YOUR SOFTWARE : Your Software is also subject to the following limitations: You (i) shall be solely responsible for any update or support obligation or other liability which may arise from your use or distribution, (ii) shall not make any statement that Your Software is “certified,” or that its performance is guaranteed, by Bobsweep, (iii) shall not use Bobsweep’s name

or trademarks, (iv) shall prohibit disassembly and reverse engineering of the bObsweep Software and the bObsweep, (v) shall not publish reviews of bObsweep products designated as beta without written permission from bObsweep, and (vi) shall indemnify, hold harmless, and defend bObsweep and its suppliers from and against any claims or lawsuits, including attorney’s fees, that arise or result from Your Software, including your use and your distribution.

TITLE: Title to the bObsweep Software remains with bObsweep or its suppliers. The bObsweep Software is licensed, not sold. Except as expressly provided herein, bObsweep does not grant any express or implied right to you under bObsweep patents, copyrights, trademarks, or trade secret information. You will not remove any copyright or patent notice from the bObsweep Software or the bObsweep.

ONE-TIME TRANSFER: The initial user of the bObsweep Software and the bObsweep may make a one-time permanent transfer of this Agreement, the bObsweep Software, and the bObsweep to another end user, provided that the initial user retains no copies of the bObsweep Software and the bObsweep. This transfer must include the bObsweep Software, the bObsweep, and all of the materials accompanying the bObsweep (including all component parts and printed materials, any upgrades, and this End User License Agreement document). The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the bObsweep Software and the bObsweep must agree to all the terms of this Agreement.

NO WARRANTY AND LIMITED REPLACEMENT: EXCEPT AS STATED IN THE LIMITED WARRANTY TO THE ORIGINAL PURCHASER, THE SOFTWARE AND THE BOBSWEEP ARE PROVIDED “AS IS” WITH NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION, OR SAMPLE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY BOBSWEEP OR ITS AGENTS SHALL CREATE A WARRANTY.

If the Bobsweep Software or the bObsweep is found to be defective in material or workmanship under normal use for a period of one (1) year from the date of receipt, Bobsweep’s entire liability and your exclusive remedy shall be the replacement of the Bobsweep Software or the bObsweep. This offer is void if the defect results from accident, abuse, misapplication, or software that you developed for your bObsweep. Any updates or supplements to the Bobsweep Software or the bObsweep provided to you after the expiration of the one (1) year period are not covered by any warranty or condition, express, implied or statutory.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. LIMITATION OF LIABILITY: THE ABOVE REPLACEMENT PROVISION IS THE ONLY WARRANTY OF ANY KIND. BOBSWEEP OFFERS NO OTHER WARRANTY EITHER EXPRESS OR IMPLIED INCLUDING THOSE OF MERCHANTABILITY, NON INFRINGEMENT OF THIRD- PARTY INTELLECTUAL PROPERTY OR FITNESS FOR A PARTICULAR PURPOSE. NEITHER BOBSWEEP NOR ITS SUPPLIERS SHALL BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, VICARIOUS LIABILITY, CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THE BOBSWEEP SOFTWARE, THE BOBSWEEP, OR SOFTWARE THAT YOU DEVELOPED FOR YOUR BOBSWEEP, EVEN IF BOBSWEEP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS

PROHIBIT THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU UNAUTHORIZED USE: THE BOBSWEEP SOFTWARE AND THE BOBSWEEP ARE NOT DESIGNED, INTENDED, OR AUTHORIZED FOR USE IN ANY AERONAUTICAL, NUCLEAR, MEDICAL, LIFE SAVING OR LIFE SUSTAINING SYSTEMS, OR FOR ANY OTHER APPLICATION IN WHICH THE USE OF THE BOBSWEEP SOFTWARE OR THE BOBSWEEP COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR.

Should you use the Bobsweep Software or bObsweep for any such unintended or unauthorized use, you shall indemnify and hold harmless Bobsweep and its officers, subsidiaries and affiliates against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of product liability, personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Bobsweep was negligent regarding the design or manufacture of the Bobsweep Software, the bObsweep, or any part or portion thereof.

USER SUBMISSIONS: You agree that any material, information or other communication, including all data, images, sounds, text, and other things embodied therein, that you transmit or post to a Bobsweep website or provide to Bobsweep (“Communications”) will be considered non-confidential. Bobsweep will have no confidentiality obligations with respect to the Communications. You agree that Bobsweep and its designees will be free to copy, modify, create derivative works, publicly display, disclose, distribute, license and sublicense through multiple tiers of distribution and licensees, incorporate and otherwise use the Communications, including derivative works thereof, for any and all commercial or non-commercial purposes without the payment of any royalty to you, and that such license will survive the termination of this Agreement.

TERMINATION: This Agreement becomes effective on the date you accept this Agreement and will continue until terminated as provided for in this Agreement. You may terminate this Agreement voluntarily at any time. Bobsweep may terminate this Agreement at any time if you are in breach of any of its terms and conditions, and may refuse to license the Bobsweep Software or the bObsweep to you after termination. Upon termination by either party, you will immediately return to bObsweep or destroy the Bobsweep Software and the bObsweep and all your copies thereof. Articles 5 and 7 through 17 of this Agreement shall survive such termination. U.S. GOVERNMENT RESTRICTED RIGHTS: The Bobsweep Software and the bObsweep are provided with “RESTRICTED RIGHTS.” Use, duplication or disclosure by the Government is subject to restrictions set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor. Use of the Bobsweep Software or the bObsweep by the Government constitutes acknowledgment of Bobsweep’s rights in them.

NO EXPORT: You may not export the Bobsweep Software or the bObsweep in violation of applicable export laws.

INTERPRETATION PROVISION: The provisions of this Agreement are severable. If any provision of this Agreement is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not apply to this Agreement.

INTEGRATION: This Agreement represents the complete agreement concerning the subject matter hereof, and any and all understandings, conversations and communications, proposals, and counterproposals, oral and written (including any draft of this Agreement) are merged into and superseded by this Agreement and shall be of no force or effect, except as expressly provided herein. No such understandings, conversations, communications, proposals, counterproposals or drafts shall be

referred to in any proceeding concerning this Agreement. Further, no understanding contained in this Agreement shall be modified, altered or amended, except by a writing signed by the party against whom enforcement is sought.

ARBITRATION: All disputes relating to this Agreement (excepting any dispute relating to intellectual property rights) shall be subject to final and binding arbitration, with the losing party paying all costs of arbitration. Any arbitration relating to this Agreement shall be held in California, under the auspices of an arbiter selected by Bobsweep. Any litigation relating to this Agreement shall be subject to exclusive venue and jurisdiction in the federal and state courts of California, with the losing party responsible for costs, including without limitation, court costs and reasonable attorneys fees and expenses.

APPLICABLE LAWS: Any claim arising under or relating to this Agreement shall be governed by the internal substantive laws of the Commonwealth of California, without regard to its principles of conflict of laws. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded.