INSTALLATION & USER MANUAL
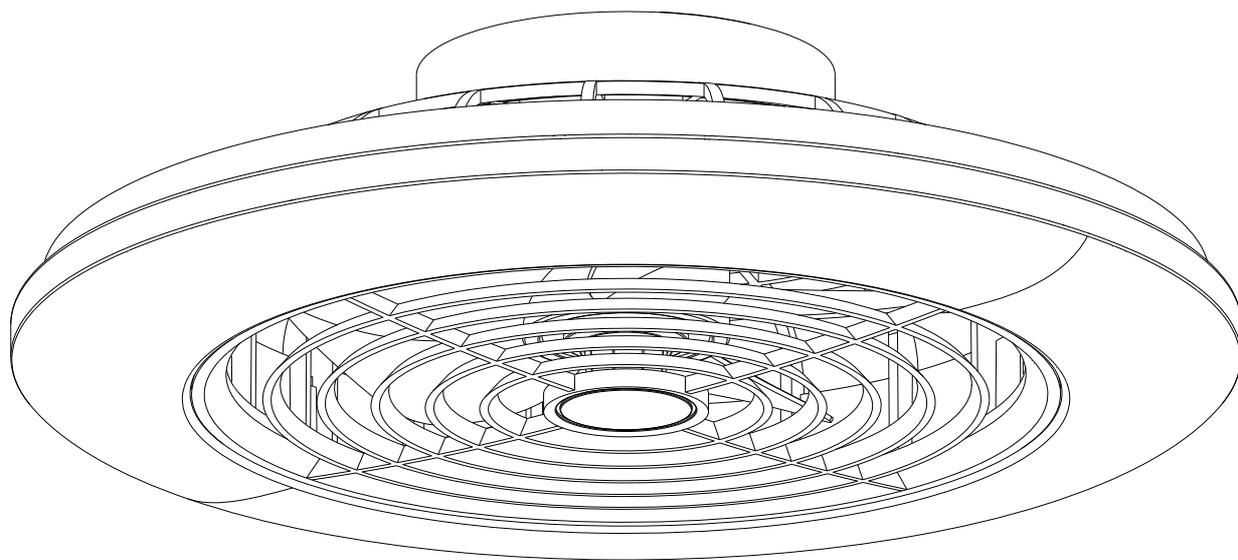
CEILING FAN WITH LIGHT

Item#24032B

Customer Service:support@ceilingfanhelp.com

Table of Contents

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before you begin.

2. All wiring must be in accordancce with the National Electrical Code "ANSI/NFPA 70" and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.

3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL Listed outlet boxes marked " Acceptable for Fan Support of 35 lbs. (15.9 kg) or less. "

4. Do not place objects in the path of the blades.

5. To clean the fixture,turn off the power, wait for it to cool, and wipe the fixture with a clean, soft cloth.

6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.

7. All setscrews must be checked and retightened where necessary before installation.

WARNING: To reduce the risk of electrical shock or fire, not use this fan with any solid-state fan speed control device. It will permanently damage the electronic circuitry.

WARNING: To reduce the risk of personal injury, do not bend the blade brackets when installing the rackets balancing the blades, or cleaning the fan. Do not insert balancing the blades, or cleaning the fan. Do not insert

WARNING: To reduce the risk of fire, electric shock or personal injury , mourt to outlet box mark ed "acceptable for fan support of 35 lbs. (15.9 Kg) or less" and use screws provided with the outlet box.

WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.

WARNING: To reduce the risk of electrical shock, this must be inst alled wit h an i solating wal control / swit ch.

CAUTION: To reduce the risk of personal injury, use only the screws provided with the outlet box.

CAUTION: Please use carefully when working around or cleaning the fan to avoid injury or damage of fan.
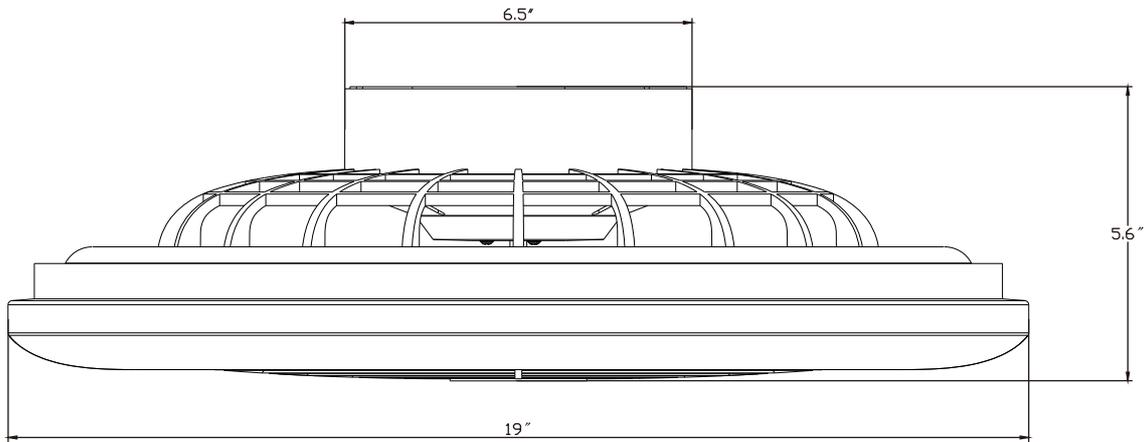
CAUTION: The fan must be mounted with a minimum of 7 ft (2.1 m) clearance from the trailing edge of the blades to the floor.
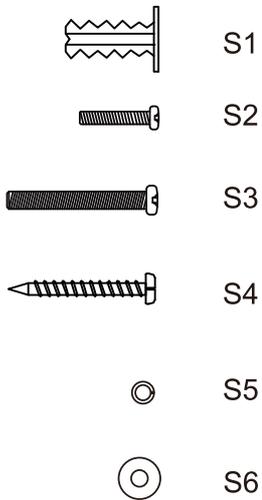
CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
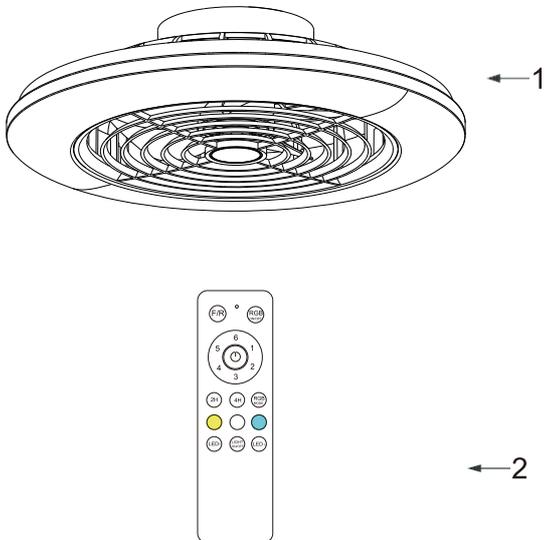
Dimension Reference

6.5″

5.6″

19″

Hardware Included

	S1
	S2
	S3
	S4
	S5
	S6

Hardware Package	Quantity
S1. Wall Stopper	4
S2. Machine Screw	2
S3. Machine Screw	2
S4. Wood Screw	4
S5. Lock Washer	4
S6. Washer	4

Fan Parts Included

1

2

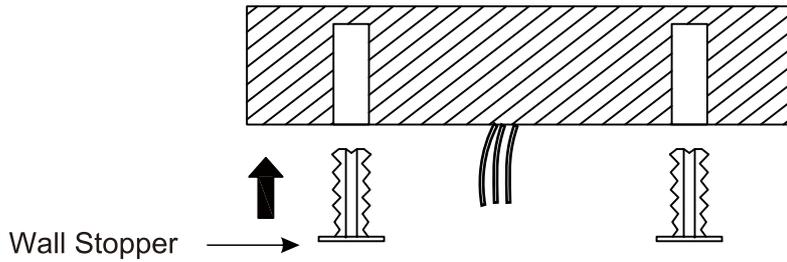| Item Name	Quantity
1. Motor Assembly	1
2. Remote Control (Batteries not included)	1

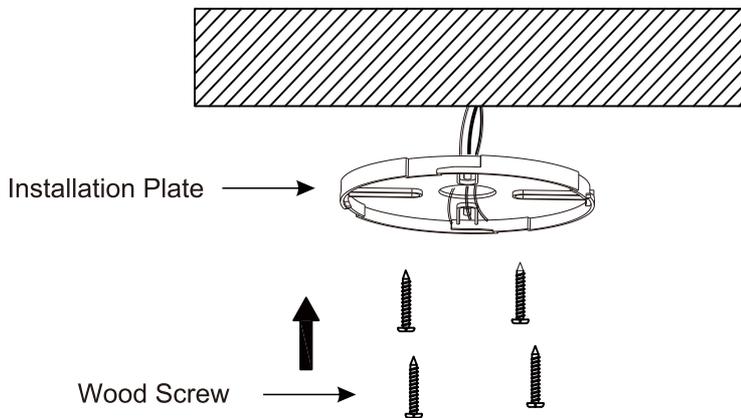# Installation Instructions

STEP.1 INSTALLATION WALL STOPPER

Caution：Turn off all switches and make sure there is no power when installing .

If it is a cement roof, four holes need to be drilled according to the position of the holes on the installation plate, and then inserted into the wall plug. If it's a wooden roof, it doesn't need to be.
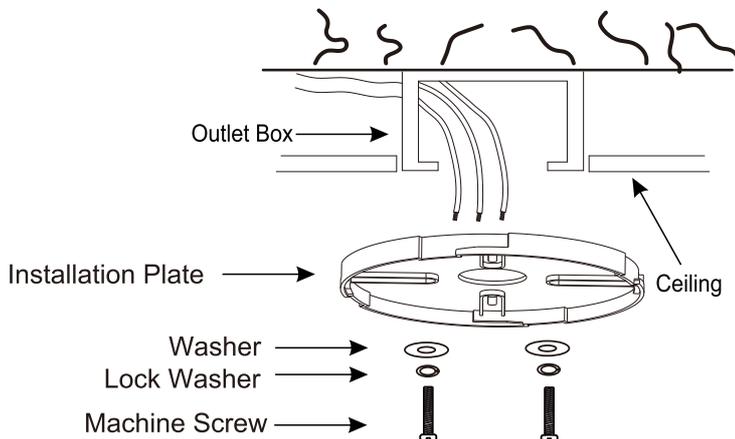
Wall Stopper

STEP.2 INSTALLATION PLATE

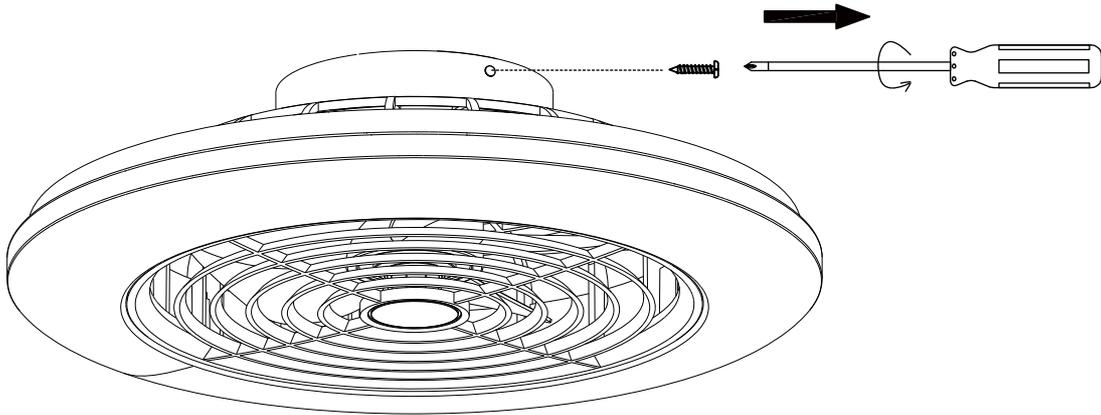 - Thread the power cord through the holes on the installation plate.

Installation Plate

Wood Screw

  - If installed on the outlet box, Install using machine screws according to the diagram.

Outlet Box

Installation Plate
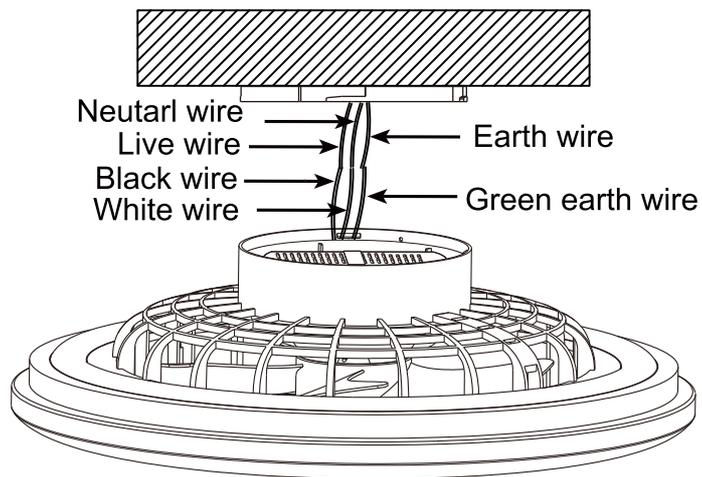
Ceiling

Washer
Lock Washer
Machine Screw

Installation Instructions

STEP.3 CONNECTING WIRE

- Prepare electrical tape.
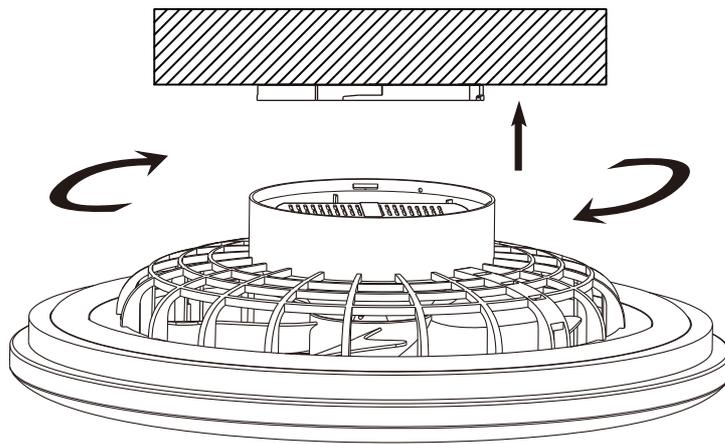- Remove the screws on the hanging board for later use.

- Cut off the power supply.

- Connect the green earth wire of the fan to the earth wire.

- Connect the white wire of the fan to the neutral wire.

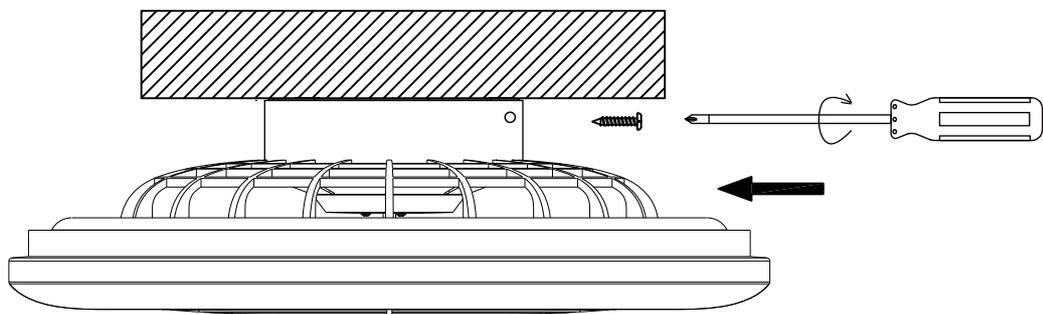- Connect the black wire of the fan to the live wire.

Neutarl wire
Live wire
Black wire
White wire
Earth wire
Green earth wire

Installation Instructions

STEP.4 INSTALLATION MOTOR ASSEMBLY

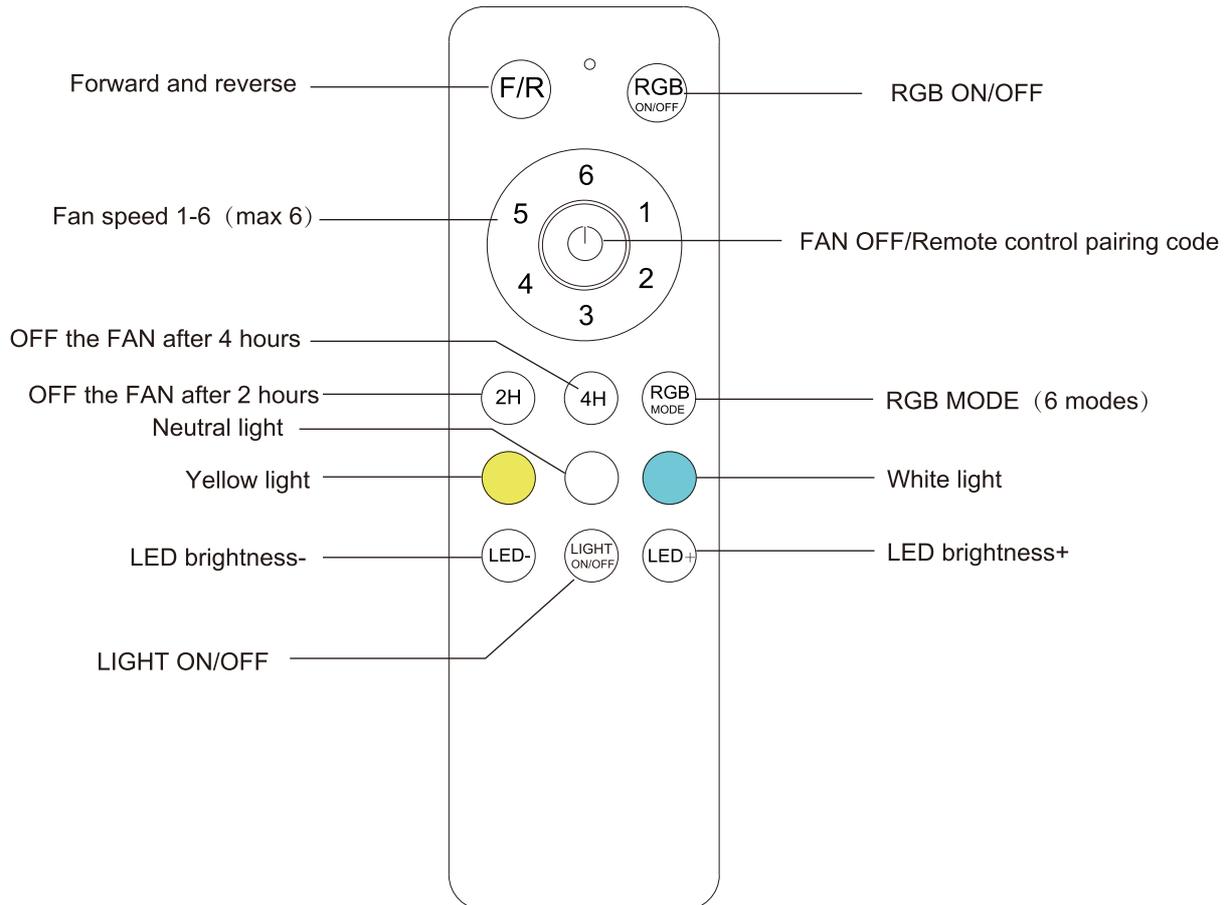- After wiring is completed, screw the fan into the installation plate as shown in the diagram.

- Lock the previously reserved screws into the installation plate from the holes.

Remote contorl instruction

-Please pair the remote with the fan before using it.

- Open the battery cover on the hand-held remote and install a battery, pair of AAA emitter (1.5V) that are not included.

Forward and reverse — F/R

RGB ON/OFF — RGB ON/OFF

Fan speed 1-6 （max 6） — 5 6 1 4 3 2

FAN OFF/Remote control pairing code

OFF the FAN after 4 hours

OFF the FAN after 2 hours — 2H 4H

Neutral light

RGB MODE — RGB MODE （6 modes）

Yellow light

White light

LED brightness- — LED- LIGHT ON/OFF LED+

LED brightness+

LIGHT ON/OFF

Remote control pairing code:

Turn on the power, and press the pairing code button .⏻. within 10 seconds. When you hear a "beep" sound or the light flashes, the code pairing is successful. If you need to match the code again, wait 30 seconds and repeat the above operations.

Light Memory Function:

1.The default light color when the ceiling fan is turned on.

2.The light will lock in a specific color temperature after turning off the light for 1 minute.

3.The color temperature will be the same as the last time when turning on the light next time.

NOTICE: If you turn it on and off immediately, it will change the light color.

Remote contorl instruction

Download APP

- **Download and install App:**
  Use your phone to scan the QR code below or search "Tuya Smart" / "Smart Life" at Appstore/Googleplay.
- **For the first use, you need to use your mobile phone number or Email address to register then log in.**
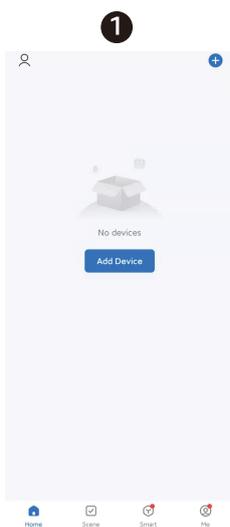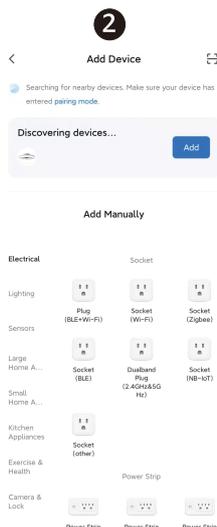

IMPORTANT:
!!! Turn on Bluetooth and connect the Wi-Fi on your phone. !!!

Before adding devices, please reset the device. Pressing and hold on the "4H" key for 3s, the buzzer emits a long sound of about 1.5s, indicating a successful reset the device.
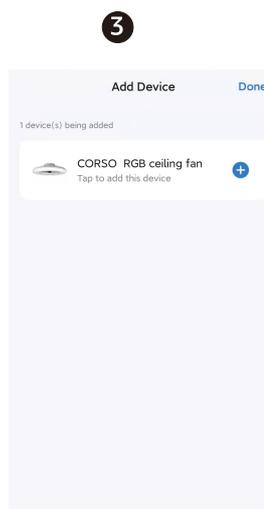
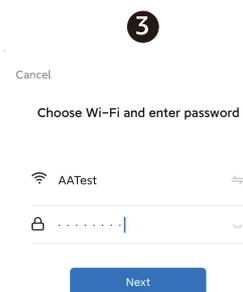Note: Only 2.4 GHz Wi-Fi networks are supported.

❶ Click "Add Device" or "+" to add new device

❷
1. Automatically add devices
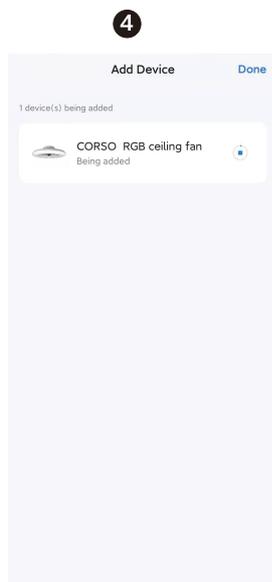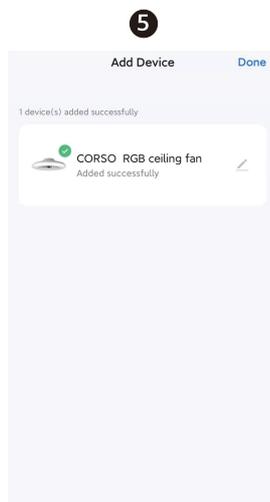2. find the device
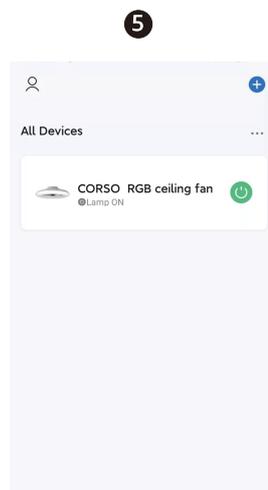3. Click "Add"

❸ Click "+"
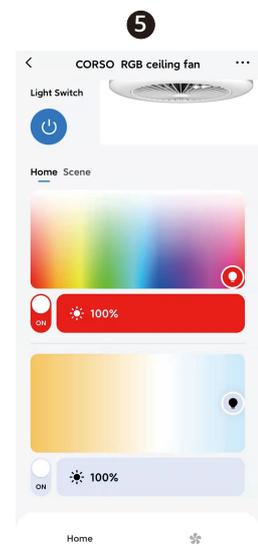
❸ Enter the Wi-Fi password

❹

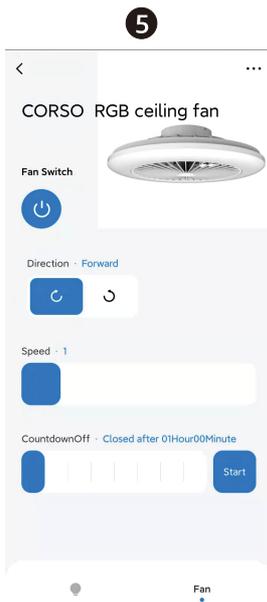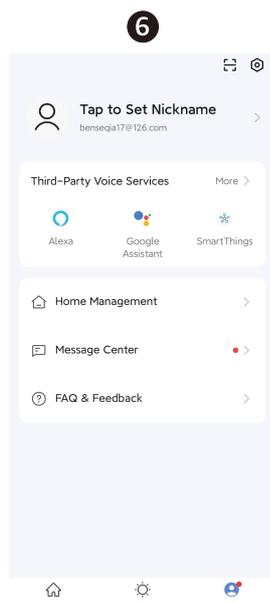Adding the device

❺

Successfully added

❺

Click on the "CORSO RGB ceiling fan" to enter setting interface

❺

1. RGB and CW light ON/OFF
2. RGB light colour
3. RGB light ON/OFF
4. CW light temperature
5. CW light ON/OFF

❺

1. Fan ON/OFF

2. FAN direction

3. Fan Speed

4. Fan timer

❻

Click Me in the bottom right corner, click Third-Party Voice Services, Get the method of voice connection.

Troubleshooting Guide

If you have difficulty in operating your new ceiling fan it may be the result of incorrect assembly, installation, or wiring. In some cases these installation errors may be mistaken for defects. If you experience any faults please check this troubleshooting guide.

	Problem	Suggested Remedy
1	If fan does not work.	□ Check the main and branch circuit fuses or breakers. □ Check the line wire connections to the fan and switch wire connections in the switch housing. □ Check the battery in the remote control. □ Ensure you are in the normal range of 10-20 feet.
2	If fan sounds noisy.	□ Ensure all motor housing screws are snug. □ Ensure the screws that attach the fan blade bracket to the motor hub are tight. □ Ensure the wire nut connections are not rattling against each other or the interior wall of the switch housing. □ Allow a 24-hour "breaking in" period. Most noises associated with a new fan disappear during this time. □ If you are using the Ceiling Fan light kit, ensure the screws securing the glassware are tight. Check that the light bulbs are also secure. □ Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling. □ Ensure your outlet box is secure and rubber isolator pads were used between the mounting plate and outlet box.
3	If fan wobbles.	□ Check that all blades are screwed firmly into blade holders. □ Check that all blade holders are tightened securely to motor. □ Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. □ Most fan wobble problems are caused when blade levels are unequal.Check this level by selecting a point on the ceiling above the tip of one of the blades keeping measure within 1/8 in.Rotate the fan until the next blade is positioned for measurement.Repeat for each blade.If all blade levels are not equal you can adjust blade levels by the following procedure.To adjust a blade tip down insert a washer(not supplied)between the blade and blade holder at the screw closest to the motor.To adjust a blade tip up insert washer(not supplied)between the blade and blade holder at the two screws farthest from the motor. □ If blade wobble is still noticeable interchanging two adjacent (side by side)blades can redistribute the weight and possibly result in smoother operation.
4	If light does not work.	□ Check blue wire from fan to make sure it is connected to hot wire from the house. □ Check for loose or disconnected wires in fan switch housing. □ Check for loose or disconnected wires in light kit. □ Check for faulty light bulbs.CAUTION:Make sure main power is turned off before entering switch housing. □ If the fan light shuts off shortly after being switched on it may be due to excessive current demand.Turn off power to the fan and replace the light bulbs with lower wattage bulbs.Turn on power to the fan using the pull chain,wall switch,or remote control (whichever is installed on the particular fan).