

IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

ELECTRIC FIREPLACE HEATER



ITEM NO: S520222

MODE NO: YH-2211



ITEM NO: S520232

MODE NO: YH-20-3D

NO VENTING REQUIRED



Read and understand this manual thoroughly before plugging in or using the appliance. Failure to comply with these precautions could result in fire, electric shock, or serious personal injuries.



Important Instructions

INTENDED USE

This product is intended ONLY for indoor household or office use.

It is NOT intended for industrial or commercial use. Do not use outdoors.

IMPORTANT INSTRUCTION

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS When

using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used near children, pets or the disabled. NEVER leave heater unattended while operating.
4. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools, or other damp areas such as flooded basements, garages, or any place where the heater could come in contact with water, etc.
5. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
6. To disconnect heater, first turn controls to off, then remove plug from outlet.
7. Always unplug heater by removing the plug end from the outlet when not in use. Never unplug by pulling on the cord as this can damage the power cord.
8. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
9. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
14. Do not operate heater with any safety guards removed.
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
17. The output of this heater may vary and its temperature may become intense enough to

burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS.

PLEASE READ AND SAVE THESE INSTRUCTIONS

INSTRUCTIONS IMPORTANTES

S'IL VOUS PLAÎT LIRE ET CONSERVER CES INSTRUCTIONS IMPORTANTES. Lors de l'utilisation d'appareils électriques, les précautions de base doivent toujours être suivies pour réduire le risque d'incendie, d'électrocution et de blessures aux personnes, y compris les suivantes:

1. Lire tous les instructions avant d'utiliser cet appareil.
2. Ce radiateur est chaud lorsqu'il est utilisé. Pour éviter les brûlures, ne laissez pas toucher les surfaces chaudes. Si fourni, utiliser les poignées pour le transfert de cet appareil. Gardez les matériaux combustibles, tels que meubles, oreillers, la literie, papiers, vêtements et tenez-les à au moins 3 pieds (0.9 m) de l'élément chauffant.
3. Une extrême prudence est nécessaire lorsque le réchauffeur est utilisé par ou près des enfants, des animaux domestiques ou invalides et quand le chauffage est laissé sans surveillance et d'exploitation.
4. Utilisez votre chauffe uniquement dans des environnements secs. Cet appareil est destiné à être utilisé dans des salles de bains, buanderie et autres endroits à l'intérieur. Ne jamais placer les chauffants où il pourrait tomber dans une baignoire ou autre contenant d'eau. Ne pas utiliser votre appareil de chauffage extérieur. Ne pas utiliser près des éviers, des piscines, ou d'autres zones humides comme les sous-sols inondés, garages, etc ou n'importe où le réchauffeur pourrait entrer en contact avec l'eau.
5. Un chauffe comporte des pièces chaudes et des arcs électriques ou des étincelles. Ne pas utiliser dans les zones où de l'essence, la peinture, ou inflammables sont utilisés ou stockés.
6. Pour débrancher l'appareil, les commandes tournent d'abord vers éteint, puis retirez la fiche de sortie.
7. Emporter et débrancher le radiateur en enlevant le bouchon d'extrémité de la prise lorsqu'il n'est pas utilisé. Ne jamais débrancher en tirant sur le cordon, car cela peut endommager le cordon d'alimentation.
8. Ne pas utiliser un appareil de chauffage avec un cordon endommagé ou. Avant ou après la malfonction du chauffage, a été déchiré ou endommagé de quelque manière. Retourner au centre de service autorisé pour examen, un réglage électrique ou mécanique, ou une réparation.
9. Toujours brancher le chauffe directement dans une prise murale / réceptacle. Ne jamais utiliser avec une rallonge ou une prise électrique extensible (sortie / puissance de sortie).
10. Ne pas passer le cordon sous le tapis. Ne pas couvrir le cordon de tapis, coureurs, ou similaires. Gardez le cordon loin de la zone de circulation et où il ne sera pas piétiné.
11. Il est normal que la fiche se sente au chaud au toucher, mais un ajustement lâche entre la prise secteur (prise) et la fiche peut provoquer une surchauffe et une distorsion de l'plug. Contactez un électricien qualifié pour remplacer la prise lâche ou usée.

12. Ne pas insérer de corps étrangers d'entrer dans un système de ventilation ou d'ouverture d'échappement, car cela pourrait provoquer un choc électrique ou d'incendie ou d'endommager l'appareil.

13. Pour éviter un incendie, ne bloquez pas les entrées d'air ou d'évacuation de quelque manière. Ne pas utiliser sur les surfaces molles, comme un lit, où les ouvertures pourraient être bloquées.

14. Do pas fonctionner avec n'importe quel appareil de chauffage gardes de sécurité enlevés

15. Use appareil tel que décrit dans ce manuel, toute autre utilisation non recommandée par le fabricant peut causer un incendie choc électrique ou de blessures.

16. Cet appareil attire 12.5 ampères pendant le fonctionnement, Pour éviter de surcharger un circuit, ne pas brancher le chauffe dans un circuit qui a déjà d'autres appareils de travail.

17. La sortie de cet appareil de chauffage peut varier et sa température peut devenir suffisamment intense pour une sensibilité réduite à la chaleur ou une incapacité à réagir pour éviter les clochards.

L'hyperthermie peut entraîner la mort. Les symptômes de l'hyperthermie comprennent une température corporelle élevée, des maux de tête, des nausées, des vomissements, de la fatigue, des étourdissements, des évanouissements et un pouls rapide. Si vous commencez à ressentir des symptômes liés à l'hyperthermie, éteignez le radiateur et consultez un médecin.

Pour éviter des températures ambiantes excessives susceptibles de provoquer une hyperthermie : NE PAS laisser le produit fonctionner sans surveillance dans un espace confiné autour de nourrissons ou de personnes aux capacités physiques, sensorielles ou mentales réduites.

CONSERVEZ CES INSTRUCTIONS

Specification


Model	Voltage	Frequency	Power
YH-2211	120V	60Hz	1500W
YH-20-3D	120V	60Hz	1500W

Parts List

- 1 Electric heater
- 1 User manual
- 4 Legs
- 12 Screws

User Guide

Location of Controls

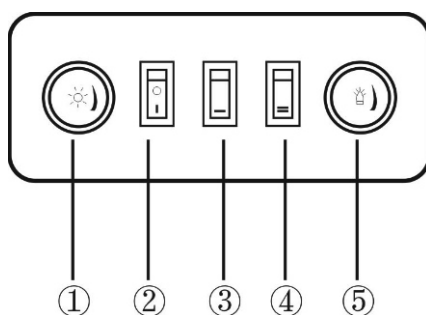


1. Thermostat control knob (**TEMPERATURE SETTING**) – Adjust to maintain the room temperature
2. Flame switch – Switch the flame effect and turn the power on/off
3. Heating setting – Please press “” for 1000W
4. Heating setting – Please press “” and “” at the same time for 1500W (it can not operate without pressing “” first)
5. Flame dimmer control – Adjust the flame intensity

Attaching The Legs

1. Turn the product on its side to start attaching the legs.
2. Place a leg on each corner and use 3 screws to fix each leg.
3. Tighten the screws clockwise until each leg is tightened.
4. Turn the unit back up to standing position and make sure it is stable.
5. Place the unit on the required location and plug in. It is now ready for use.

NOTE: The drawing below is for illustration purposes only. Your product may be slightly different in appearance but the operations are the same.

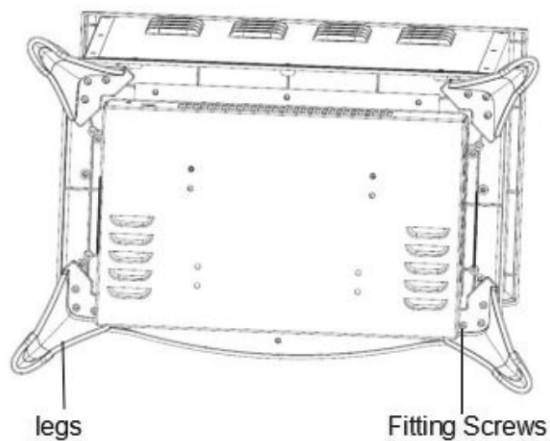

Overheating Safe Device

If the heater stops working, turn off the heater and inspect the blockage of the inlet or outlet. **Disconnect the plug and wait at least 10 minutes** for the protection system to reset before attempting to restart the heater. If the safe device still switches off the heater and makes the heater fail to operate, contact us via Amazon Message, or call customer service numbers: 818-468-1498

Attention: Before restarting the heater, **the plug must be disconnected for at least 10 minutes**

Cleaning

1. Always disconnect the appliance from the main supply before cleaning.
2. Clean the outside of the heater by wiping it with a damp or dry cloth.
3. Do not use petroleum, any other detergent or chemical solvent to clean the heater.
4. When the heater is not used for a long time, it should be protected from the dust and stored in a clean and dry place.

Disposal



Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Thank you for purchasing this product! If you have any question about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via customer service number: **818-468-1498**

IMPORTANT

Please call our customer service department for any consulting:

818-468-1498

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veillez appeler le service à la clientèle pour toutes questions au:

818-468-1498

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

818-468-1498

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

ROWAN ELECTRIC APPLIANCE LLC

Phone: 818-468-1498