arlo®

Base Station
Quick Start Guide

Welcome

Thank you for choosing Arlo.

Getting started is easy.

Base station
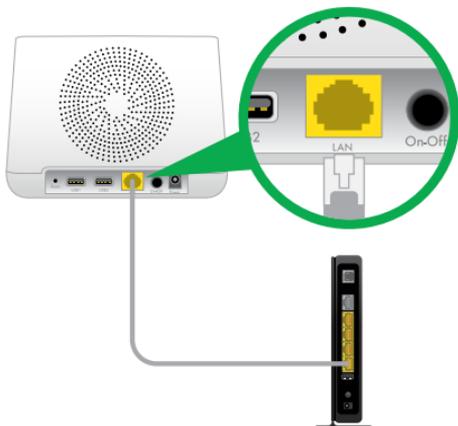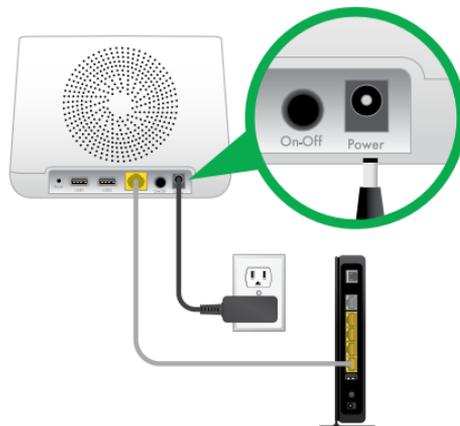
Base station AC
power adapter

Ethernet cable

Quick Start Guide

1 Connect Your Base Station to the Internet

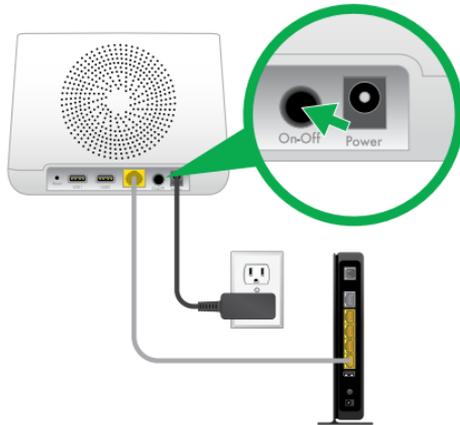a. Connect the base station to your router using an Ethernet cable.

b. Connect the base station AC adapter to your base station and plug it in.

c. Turn the base station on by pressing the **On-Off** button.

The Power LED and Internet LED on the front of the base station light green in about two minutes.

2 Sync Cameras With the Base Station

a. Bring the camera within one to three feet (30 to 100 centimeters) of the base station.

Note: Cameras must be synced one at a time.

1' - 3'
30 cm – 100 cm

b. Press the **Sync** button on the top of the base station for about two seconds and then release the button.

c. Wait for the Sync Status LED to blink green.

d. Press the **Sync** button on top of the camera for about two seconds and then release the button.

A blue LED on the camera blinks slowly when the sync process starts. The blue LED blinks rapidly to confirm that the sync process was successful.

The camera is ready for viewing.

The LED blinks amber if the sync is not successful. You must repeat the sync process.
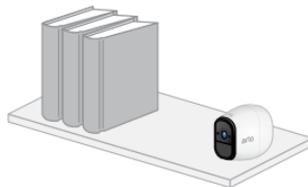
Syncing more than one camera or syncing a previously synced camera to your new base station?

Go to Page page 6 and repeat steps 2a through 2d for each camera.

3 Place or Mount Your Cameras

You can place your camera on a shelf or other flat surface, or you can mount it to the wall.
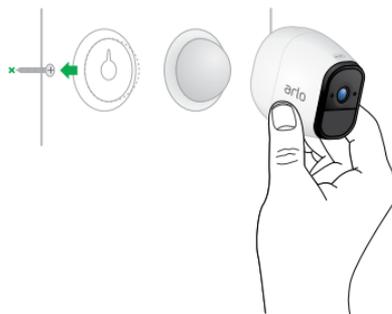
Tip: Use the Arlo app in Position mode
(found in Camera Settings) to help aim the camera.

➢ **To mount your camera to the wall:**

Fasten the mounting screw into the wall, and hang the magnetic mount from the screw.

If you're mounting the camera to drywall, be sure to use the plastic drywall anchors that are provided.

You're Done!

Congratulations! Your Arlo System is set up and ready to go.

To view useful tutorial videos, find troubleshooting tips, or get support, visit *arlo.com/support*.

Base Station LED Guide

Power

Green
The base station is powered on.

Blinking green
A firmware update is in progress. DO NOT TURN OFF THE BASE STATION OR CAMERAS.

Amber
The base station is booting.

Off
The base station is powered off.

Internet

Green
The base station is connected to the Internet.

Blinking green
The base station is sending or receiving data over the Internet.

Amber
The base station is connected to the router but did not establish an Internet connection.

Off
The base station is not connected to your router.

Camera

Green
Cameras are connected to the base station.

Blinking green
The base station is attempting to sync with a camera.

Blinking amber
A camera is too far from the base station. Signal strength is weak.

Off
No cameras are detected..

Compliance

For regulatory compliance information including the EU Declaration of Conformity, visit
www.arlo.com/about/regulatory/.

CE Arlo International, Ltd.
Floor 3, Building 3 University Technology Center
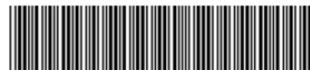Curraheen Road, Cork, Ireland

Arlo Technologies, Inc.
2200 Faraday Ave. Suite 150
Carlsbad, CA 92008 USA

www.arlo.com

www.arlo.com/support

November 2018

201-21571-02