

Motherboard

STRIX H270F GAMING

quick start guide

دليل التشغيل السريع

Кратко упу̀тване за бърз старт

Stručná příručka

Quick Start-vejledning

Snelstartgids

Lühijuhend

راهنمای شروع سریع

Guide de démarrage rapide

Pikakäynnistysopas

Schnellstarthilfe

Οδηγός γρήγορης έναρξης

Beüzemelési útmutató

Guida Rapida

Panduan Ringkas

クイックスタートガイド

Жылдам іске қосу нұсқаулығы

빠른 시작 설명서

Greitos darbo pradžios vadovas

İsa pamācība

Hurtigstartsveiledning

Guia de consulta rápida

Instrukcja szybkiej instalacji

Краткое руководство

Ghid de pornire rapidă

Guía de inicio rápida

Vodič za brzo korišćenje

Stručný návod na spustenie

Snabbstartsguide

คู่มือเริ่มต้นอย่างเร็ว


Hızlı Başlatma Kılavuzu

Höðung daðnir khóu i ñoàng nhanh

vodič za brzi početak rada

Стисле керівництво для початку експлуатації

Motherboard Layout

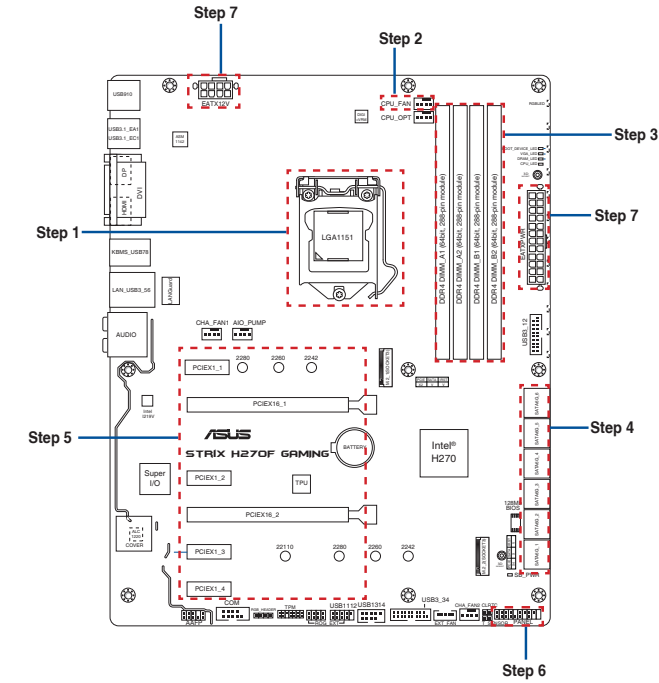

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit <http://support.asus.com>. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://support.asus.com>

India E-waste (Management and handling) Rule 2011


This product complies with the "India E-waste (Management and Handling)Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls(PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1 % by weight in homogenous materials and 0.01 % by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule-II of the Rule.

AEEE Yönetmeliğine Uygundur




Step 1

Install the CPU
(CPU) قم بتثبيت وحدة المعالجة المركزية
Инсталируйте процессора
Instalace procesoru
Installer CPU'en
De CPU installeren
Paigaldage CPU
CPU را نصب کنید
Installer le CPU
Asenna suoritin
Installieren der CPU
Εγκατάσταση της CPU
Helyezze be a CPU-t
Installare la CPU
Pasang CPU
CPUを設置する
CPU орнатыңыз

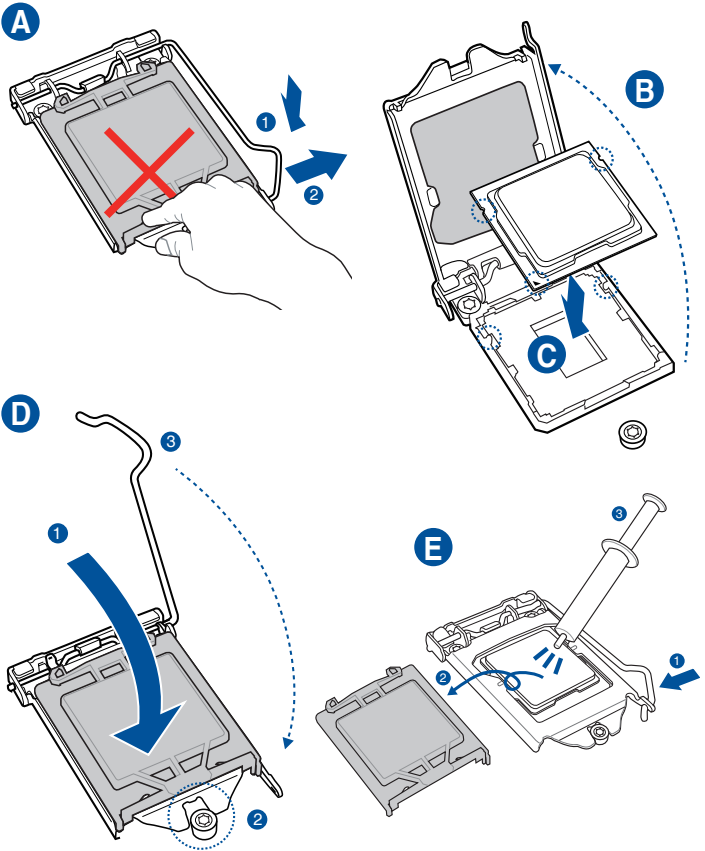

Step 3

Install memory modules
تثبيت وحدات الذاكرة
Инсталируйте модули памяти
Instalace paměťových modulů
Installer hukommelsesmodulerne
Geheugenmodules installeren
Paigaldage mäluoodulid
مادول های حافظه را نصب کنید
Installer les modules mémoire
Asenna muistimoduulit
Installieren der Speichermodule
Εγκατάσταση των στοιχείων μνήμης
Helyezze be a memória modulokat
Installare i moduli di memoria
Pasang modul memori
メモリーモジュールを設置する
Жад модульдерін орнатыңыз

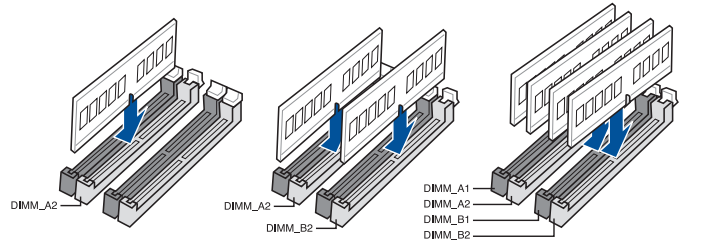


CPU 설치
Sumontuokite centrinį procesorių
Uzstādiet centrālo procesoru
Installer sentralprocessoren (CPU)
Instale a CPU
Instalacja procesora
Установка процессора
Instalați CPU-ul
Instalar la CPU
Instalirajte CPU
Inštalácia centrálneho procesora
Installera CPU
ติดตั้ง CPU
CPU'yu takın
Lâp CPU
Instalacija procesora
Інсталюйте процесор

메모리 모듈 설치
Sumontuokite atminties modulius
Uzstādiet atmiņas modulus
Installer minnemoduler
Instale módulos de memória
Instalacja modułów pamięci
Установка модулей памяти
Instalați modulele de memorie
Instalar los módulos de memoria
Instalirajte module memorije
Inštalácia pamäťových modulov
Installera minnesmoduler
ติดตั้งโมดูลหน่วยความจำ
Bellek modüllerini takın
Lắp các thanh nhớ
Instalacija memorijskih modula
Інсталюйте модулі пам'яті

--- DRAFT 3 / 11-09-16 ---

Step 2


Install the CPU fan
تثبيت مروحة وحدة المعالجة المركزية
Инсталируйте вентилятор на процессора
Instalace ventilátoru procesoru
Installer CPU-blæseren
De CPU-ventilator installeren
Paigaldage CPU ventilaator
پنکه CPU را نصب کنید
Installer le ventilateur de CPU
Asenna suorittimen tuuletin
Installieren des CPU-Lüfters
Εγκατάσταση του ανεμιστήρα της CPU
Szerelje be a CPU ventilátort
Installare la ventola della CPU
Pasang kipas CPU
CPUファンを設置する
CPU желдеткішін орнатыңыз
CPU 팬 설치
Sumontuokite centrinio procesoriaus ventiliatorių
Uzstādiet centrālā procesora ventilatoru
Installer CPU-viften
Instale a ventoinha de CPU
Instalacja wentylatora procesora
Установка вентилятора
Instalați ventilatorul CPU-ului
Instalar el ventilador de la CPU
Instalirajte CPU ventilator
Inštalácia ventilátora centrálneho procesora
Installera CPU-fläkten
ติดตั้งพัดลม CPU
CPU fanını takın
Lắp quạt CPU
Instalacija ventilatora procesora
Інсталюйте вентилятор процесора

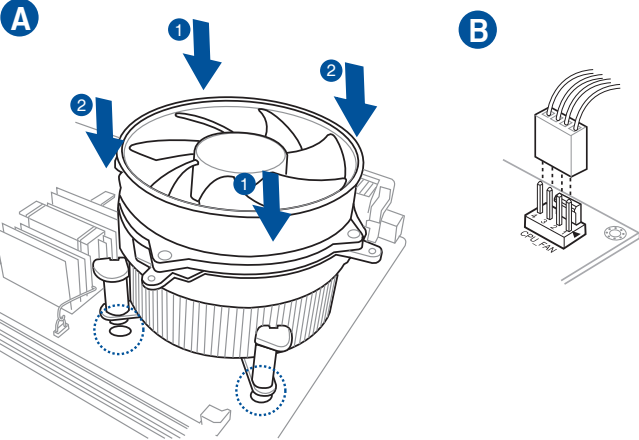

Step 4


Install SATA devices
تثبيت أجهزة SATA
Инсталируйте SATA устройства
Instalace zařízení SATA
Installer SATA-udstyret
SATA-apparaten installeren
Paigaldage SATA seadmed
دستگاه های SATA را نصب کنید
Installer des périphériques SATA
Asenna SATA-laitteet
Installieren der SATA-Geräte
Εγκατάσταση συσκευών SATA
Szerelje be a SATA eszközöket
Installare i dispositivi SATA
Pasang perangkat SATA
SATA デバイスを取り付ける
SATA құрылғыларын орнатыңыз

SATA 장치 설치
Sumontuokite SATA įrenginius
Uzstādiet SATA ierīces
Installer SATA-enheter
Instale dispositivos SATA
Instalacja urządzeń SATA
Установка SATA устройств
Instalați dispozitivele SATA
Instalar dispositivos SATA
Instalirajte SATA uređaje
Inštalácia zariadení SATA
Installera SATA-enheter
ติดตั้งอุปกรณ์ SATA
SATA aygıtlarını takın
Pasang perangkat SATA
Instalacija SATA uređaja
Інсталюйте пристрої SATA

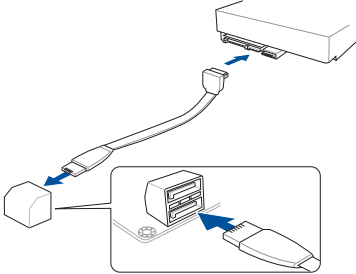


Step 5

- Install expansion card(s)
- تثبيت بطاقة (بطاقات) التوسعة
- Инсталирайте допълнителна карта (допълнителни карти)
- Instalace přídatné karty (karet)
- Installer udvidelseskortene
- Uitbreidingskaart(en) installeren
- Paigaldage laienduskaart(-kaardid)
- کارت های گسترش را نصب کنید
- Installer une carte d'extension
- Asenna laajennuskortti/kortit
- Installieren der Erweiterungskarte(n)
- Εγκατάσταση καρτών επέκτασης
- Helyezze be a bővíthőkártyá(ka)t
- Installare le schede di espansione
- Pasang kartu ekspansi
- 拡張カードを設置する
- Кеңейту картас(лар)ын орнатыңыз
- 확장 카드 설치
- Sumontuokite išplėtimo plokštę (-es)
- Uzstādiet izvērses karti(-es)
- Installer utvidelseskort
- Instale placas de expansão
- Instalacja kart(y) rozszerzenia
- Установка карт расширения
- Instalați cardul/cardurile de extensie
- Instalar tarjetas de expansión
- Instalirajte ekspanzionu/e karticu/e
- Inštalácia rozširujúcich kariet
- Installera expansionskort
- ติดตั้งเอ็กซ์แพนชันการ์ด
- Geniştetme kartlarını takın
- Lắp các thẻ mở rộng
- Instalacija kartica za proširenje
- Інсталюйте плати розширення

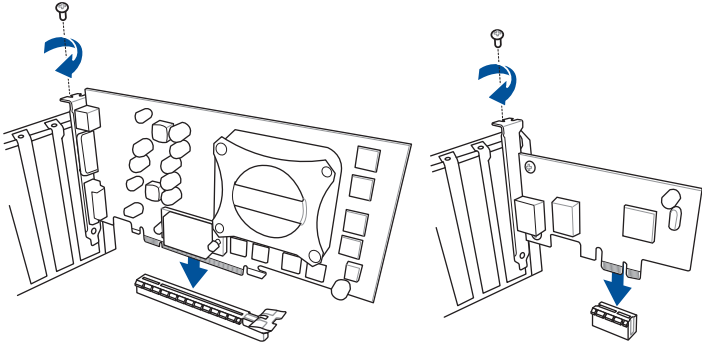


Step 8

- Connect input/output devices
- توصيل أجهزة الدخل/الخروج
- Свързване на I/O устройства
- Připojení vstupních/výstupních zařízení
- Tilslut input-/outputudstyr
- I/O-apparaten aansluiten
- Ühendage sisend -/väljundseadmed
- دستگاه های ورودی/خروجی را متصل نمایید
- Connecter les périphériques d'entrée/sortie
- Liitä tulo/lähtölaitteita
- Eingabe-/Ausgabe-Geräte verbinden
- Σύνδεση συσκευών εισόδου/εξόδου
- Bemeneti/kimeneti eszközök csatlakoztatása
- Collegate i dispositivi di input/output
- Sambungkan perangkat input/output
- 入出力デバイスに接続する
- Кіріс/шығыс құрылғыларын қосу

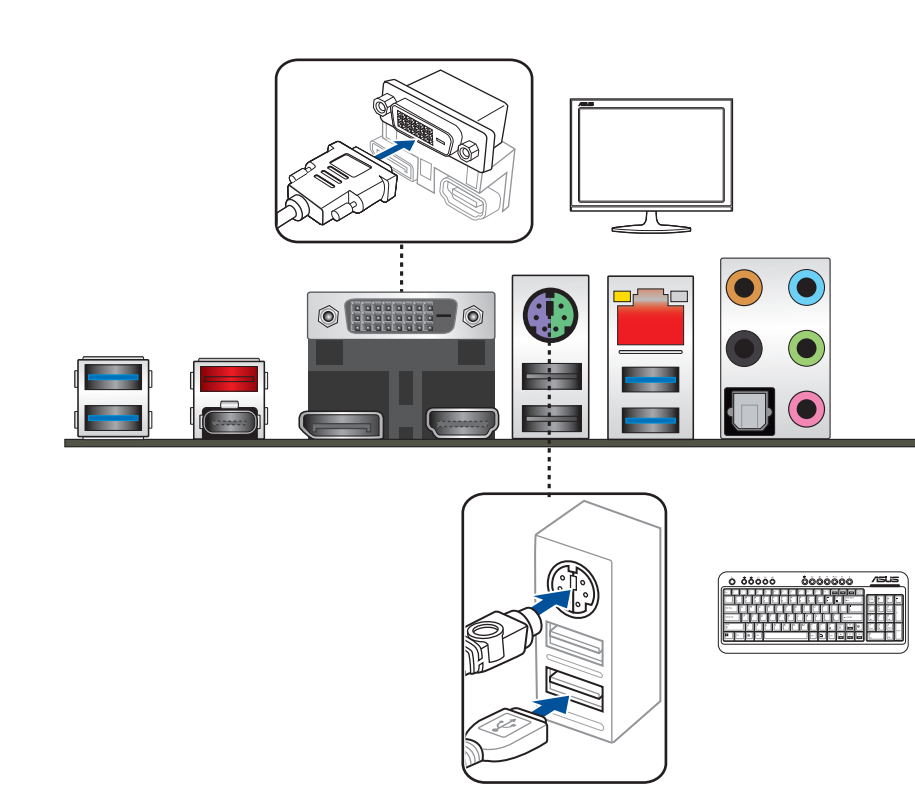


Step 6

- Install system panel connectors
- تثبيت وحدات توصيل لوحة النظام
- Инсталирайте конекторите на ситемния панел
- Instalace konektorů panelu systému
- Installer systempanelets tilslutninger
- Aansluitingen op het systeepaneel installeren
- Paigaldage süsteemi paneeli konnektorid
- رابط های صفحه سیستم را نصب کنید
- Installer les connecteurs système
- Asenna järjestelmäpaneelin liittimet
- Installieren des Systemtafelanschlusses
- Εγκατάσταση συνδέσμων πάνελ συστήματος
- Szerelje be a rendszerpanel csatlakozóit
- Installare i connettori del pannello del sistema
- Pasang konektor panel sistem
- システムパネルコネクターを取り付ける
- Жүйе тақтасының қосқыштарын орнатыңыз
- 시스템 패널 커넥터 설치
- Sumontuokite sistemos plokštės jungtis
- Uzstādiet sistēmas paneļa savienotājus
- Installer kontakter for systempanelet
- Instale os conectores do painel do sistema
- Instalacja złączy panela systemu
- Установка соединений системной панели
- Instalați conectorii pentru placa de bază
- Instalar conectores del panel del sistema
- Instalirajte systemske priključke
- Inštalácia konektorov ovládacieho panela
- Installera systempanelkontakter
- ติดตั้งขั้วต่อแผงระบบ
- Sistem paneli konnektörlerini takın
- Lắp các đầu nối hệ thống ra ngoài
- Instalacija konektora ploče sustava
- Інсталюйте розніми системної панелі

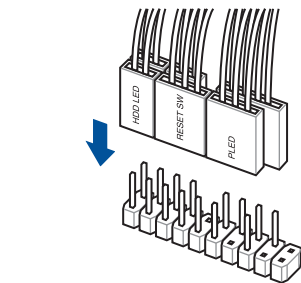

Step 7

- Install ATX power connectors
- تثبيت توصيلات الطاقة ATX
- Инсталирайте ATX конекторите за захранване
- Instalace konektorů napájení ATX
- Installer ATX-strømtilslutningerne
- ATX-voedingsaansluitingen installeren
- Paigaldage ATX-i toitekonnektorid
- رابط های برق ATX را نصب کنید
- Installer les connecteurs d'alimentation ATX
- Asenna ATX-virtaliittimet
- Installieren des ATX-Stromanschlusses
- Εγκατάσταση συνδέσμων τροφοδοσίας ATX
- Csatlakoztassa az ATX tápcsatlakozókat
- Installare i connettori di alimentazione ATX
- Pasang konektor daya ATX
- ATX 電源コネクターを取り付ける
- АТХ электр қуат қосқыштарын орнатыңыз
- ATX 전원 커넥터 설치
- Sumontuokite ATX maitinimo jungtis
- Uzstādiet ATX strāvas savienotājus
- Installer kontakter for ATX-strøm
- Instale os conectores de alimentação ATX
- Instalacja złączy zasilacza ATX
- Установка АТХ разъема
- Instalați pinii conectori ATX
- Instalar conectores de alimentación ATX
- Instalirajte ATX električne priključke
- Inštalácia napájacích konektorov ATX
- Installera ATX strömkontakter
- ติดตั้งขั้วต่อ ATX เพาเวอร์
- ATX güç konnektörlerini takın
- Lắp các đầu nối nguồn ATX
- Instalacija konektora ATX napajanja
- Інсталюйте розніми живлення АТХ

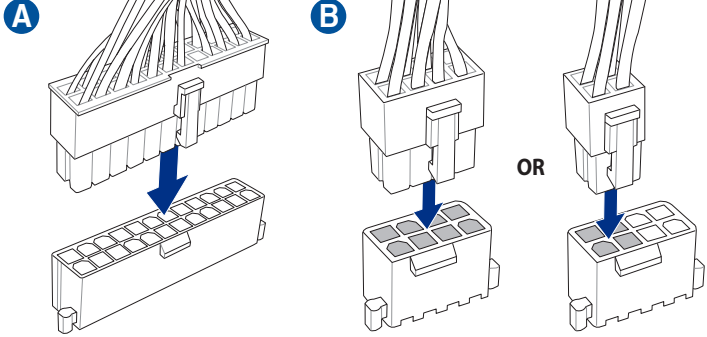

Step 9

- Power on the system and install operating system and drivers
- تشغيل الجهاز وتثبيت نظام وبرمجيات التشغيل
- Включете системата и инсталирайте операционната система и драйверите
- Zapnutí napájení systému a instalace operačního systému a ovladačů
- Tænd for systemet, og installer operativsystemet og de tilhørende drivere
- Het systeem inschakelen en het besturingssysteem en de stuurprogramma's installeren
- Lülitage süsteemi toide sisse ning installige operatsioonisüsteem ja draiverid
- سیستم را روشن کرده و درایورها و سیستم عامل را نصب کنید
- Allumer le système et installer le système d'exploitation et les pilotes
- Käynnistä järjestelmä ja asenna käyttöjärjestelmä ja ohjaimet
- Einschalten des Systems und installieren des Betriebssystems und der Treiber
- Ενεργοποιήστε το σύστημα και εγκαταστήστε το λειτουργικό σύστημα και τα προγράμματα οδήγησης
- Kapcsolja be a rendszert és telepítse az operációs rendszert és illesztőprogramokat
- Accendere il sistema e installare il sistema operativo e i driver
- Hidupkan sistem, lalu instal sistem operasi dan driver
- システムの電源をONにし、OSとドライバーをインストールする
- Жүйені қосып, операциялық жүйені және драйверлерді орнатыңыз
- 시스템 전원 켜기 및 운영체제와 드라이버 설치
- Ijunkite sistemą ir įdiekite operacinę sistemą ir tvarkykles
- Ieslēdziet sistēmu un instalējiet operētājsistēmu un draiverus
- Slå på systemet og installer operativsystem og drivere
- Ligue o sistema e instale o sistema operativo e os controladores
- Włącz zasilanie i zainstaluj system operacyjny oraz sterowniki
- Включение системы и установка операционной системы и драйверов
- Porniți sistemul și instalați sistemul de operare și driverele
- Proporcionar alimentación al sistema e instalar el sistema operativo y los controladores
- Uključite sistem i instalirajte operativni sistem i drajvere
- Zapnutie systému a inštalácia operačného systému a ovládačov
- Slå på systemet och installera operativsystem och drivrutiner
- เปิดระบบ และติดตั้งระบบปฏิบัติการและไดรเวอร์
- Sistemi açıp işletim sistemini ve sürücülerini yükleyin
- Bật nguồn hệ thống và cài đặt hệ điều hành cũng như các driver
- Uključivanje sustava i instaliranje operativnih sustava i upravljačkih programa
- Увімкніть живлення системи та інсталюйте операційну систему та драйвери

