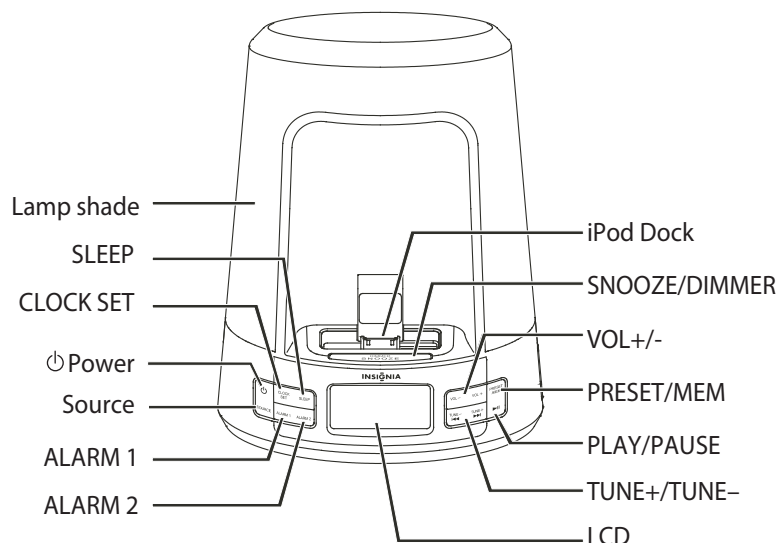Congratulations on your purchase of a high-quality Insignia product. Your Clock Radio with Wake-up Light is designed for reliable and trouble-free performance. Use this guide for initial setup. See your *User Guide* for more information.
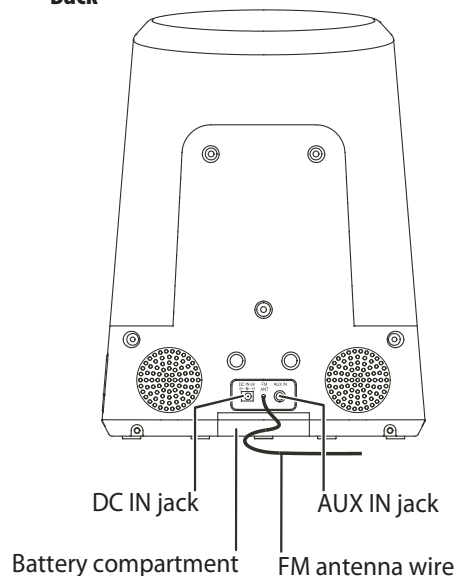
Package contents
- Clock Radio with Wake-up Light
- AC Power cord
- *User Guide*
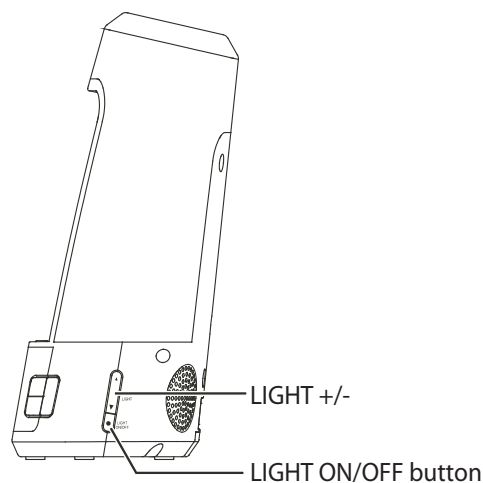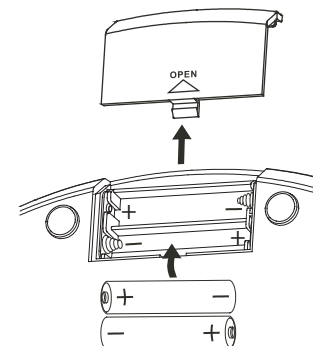- *Quick Setup Guide*
- *AAA batteries(2)*

Features
Front

- Lamp shade
- SLEEP
- CLOCK SET
- ⏻ Power
- Source
- ALARM 1
- ALARM 2
- iPod Dock
- SNOOZE/DIMMER
- VOL+/-
- PRESET/MEM
- PLAY/PAUSE
- TUNE+/TUNE–
- LCD

Back

- DC IN jack
- AUX IN jack
- Battery compartment
- FM antenna wire

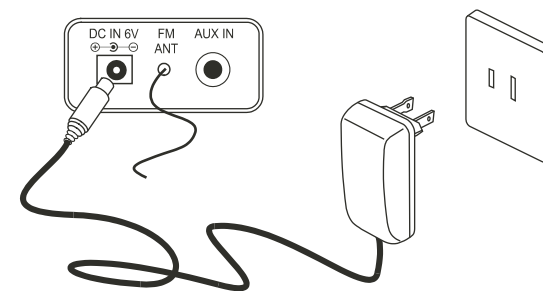### Side

- LIGHT +/-
- LIGHT ON/OFF button

Installing batteries

1 Push the battery cover locking tab in the direction of the arrow, then remove the cover.
2 Insert 2 AAA size batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
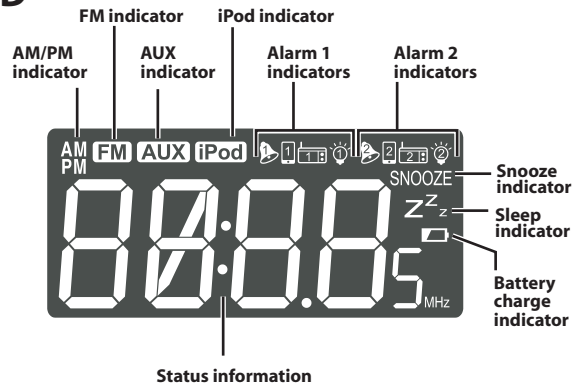**3** Replace the battery compartment cover.

Connecting the AC adapter

Plug the AC adapter into the DC IN jack on the back of your clock radio and into a power.

Warning:
When your clock radio is in standby mode, power still flows into it. To completely disconnect the power, unplug the AC adapter.

LCD

AM/PM indicator
FM indicator
AUX indicator
iPod indicator
Alarm 1 indicators
Alarm 2 indicators

AM PM FM AUX iPod

SNOOZE — Snooze indicator
Z^Z z — Sleep indicator
▭ — Battery charge indicator
MHz

Status information

Setting the time

1 Press and hold **CLOCK SET** for about three seconds. The hour flashes on the LCD.
2 Press **TUNE**+/▶▶ or **TUNE**−/◀◀ to set the hour, then press **CLOCK SET** to save your setting. The minutes flash on the LCD.
3 Press **TUNE**+/▶▶ or **TUNE**−/◀◀ to set the minutes, then press **CLOCK SET** to save your setting.

Setting the alarms

Your clock radio has two alarms.
1 Press and hold **ALARM 1** or **ALARM 2** for about three seconds. The hour flashes on the LCD.
2 Press **TUNE**+/▶▶ or **TUNE**−/◀◀ to set the hour, then press the same button you pressed in Step 1 to save your setting. The minutes flash on the LCD.
3 Press **TUNE**+/▶▶ or **TUNE**−/◀◀ to set the minutes, then press **CLOCK SET** to save your setting. You can also press and hold **TUNE**+/▶▶ or **TUNE**−/◀◀ to move quickly through the minutes.
Options for alarm are iPod/iPhone, Radio, or Beeper.

Using the wake-up light
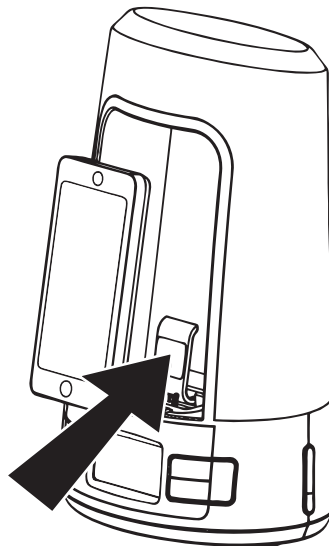
• To turn the wake-up light on or off, press wake-up **LIGHT ON/OFF**.
• To adjust the wake-up light brightness, press **LIGHT ▲** or ▼.

Docking an iPod or iPhone

You can use your clock radio as a battery charger for iPods or iPhones that have connectors. While an iPod is docked you can play files stored on the iPod.

To dock an iPod or iPhone:
• Push the supporting plate behind the iPhone connector and carefully insert the iPod or iPhone into the connector.

Playing iPod files

1 Insert the iPod into the iPod dock.
2 Press **SOURCE** one or more times to select **iPod**.
3 On your clock radio:
   • Press **TUNE**+/▶▶ or **TUNE**−/◀◀ on your clock radio to select the next or previous music file.
   • Press ▶॥ (play/pause) on your clock radio to start or pause iPod playback.
   • Press **VOL**+ or **VOL**− to adjust the volume.

Listening to FM radio

1 Press **SOURCE** one or more times to select **FM**. "FM" appears on the LCD.
2 Press **TUNE**+/▶▶ or **TUNE**−/◀◀ to go to the next or previous radio frequency. Press and hold **TUNE**+/▶▶ or **TUNE**−/◀◀ to automatically go to the next or previous station with a strong signal.