




MOOSOO

**CORDLESS HANDHELD
VACUUM CLEANER**

INSTRUCTION MANUAL

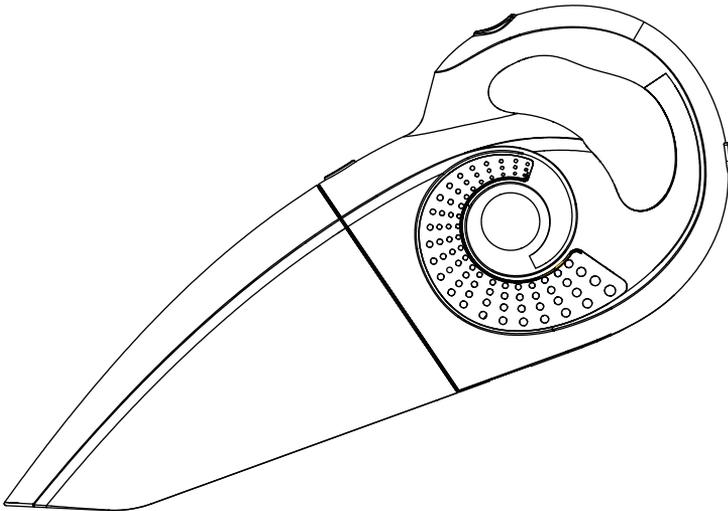

Model: M4

For any questions and malfunctions of the appliance during use, please contact our customer service email: usa@imoosoo.com

CONTENT

English

IMPORTANT WARNINGS AND SAFETY PRECAUTIONS	01
INTENDED USE	01
SPECIFICATIONS	02
INTRODUCTION OF COMPONENTS	02
INSTRUCTIONS FOR USE	03
CARE AND MAINTENANCE	04
WARRANTY	05
TROUBLESHOOTING	06

日本語

安全上のご注意	07
用途	07
仕様	08
各部のご紹介	08
使い方	09
手入れとメンテナンス	10
アドバイス	10
FAQ	11
カスタマーケア	11

IMPORTANT WARNINGS AND SAFETY PRECAUTIONS

Please read all of the instructions carefully and retain for future reference.

- ◆ Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- ◆ Children under 8 years old and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge should not use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
 - Keep the appliance out of the reach of children, especially when it is switched on or cooling down.
- ◆ The vacuum cleaner should only be used and stored indoors. In order to avoid the risk of an electric shock, please follow below warnings:
 - Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects that could cause damage.
 - Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.
 - Do not use the appliance for anything other than its intended use.
 - Do not immerse the appliance in water or any other liquid.
 - Do not operate the appliance with wet hands.
 - Do not expose the appliance to rain.
 - Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.
 - Do not use the adaptor to recharge non-rechargeable batteries.
 - Do not use the appliance or adapters if it has been dropped or if there are visible Do not use any parts/accessories or adapters other than those supplied with this appliance, as this may cause damage.
 - Do not use this appliance if any of the openings are blocked.
- ◆ This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- ◆ Use of an extension cord with the appliance is not recommended.
- ◆ Take care when equipping accessories with rotating parts as this could cause entrapment.
- ◆ Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
- ◆ Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.
- ◆ This appliance should not be operated by means of an external timer or separate remote control system.

INTENDED USE

The vacuum cleaner is intended for vacuuming and extracting materials that are not hazardous to one's health.


The vacuum cleaner is intended for normal domestic non-commercial/indoor use, for example, in cars, departments, houses, hotels, schools, factories, shops, offices, etc.

SPECIFICATIONS

Model	M4
Battery	14.8V 2200mAh rechargeable Li-ion battery
Adaptor output	DC 18V 400mA
Charging time	5.5H
Power	80W
Noise	≤75dB
Mode	8.5Kpa/21min
Dust suction volume	0.45L
Liquid suction volume	0.1L

INTRODUCTION OF COMPONENTS

1. On/off switch
2. 14.8V rechargeable battery unit
3. Dust container release button
4. Washable filter
5. Waterproof cover
6. Dust container
7. Air inlet
8. Charging port
9. Squeegee nozzle
10. 2-in-1 Dust brush
11. Adaptor
12. Crevice tool

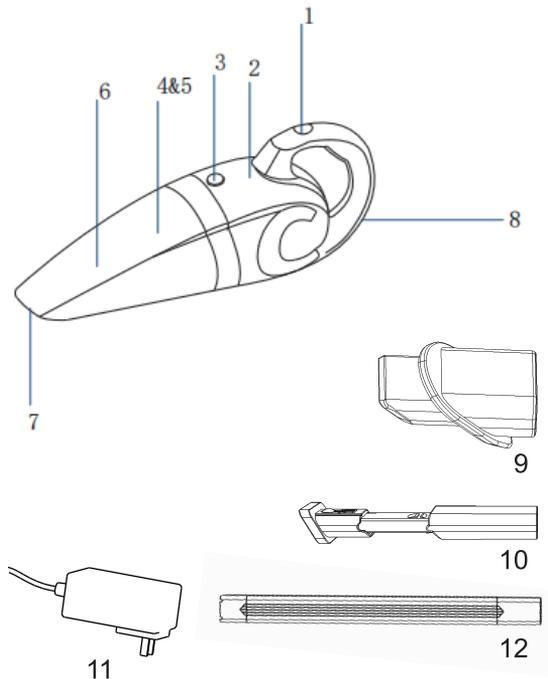


INSTRUCTIONS FOR USE

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

1. Charging the Cordless Wet and Dry Vac

Before using the vacuum cleaner, it must be charged for approx. 5.5 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner battery runs down completely during use, it may take up to 5.5 hours to fully recharge again.

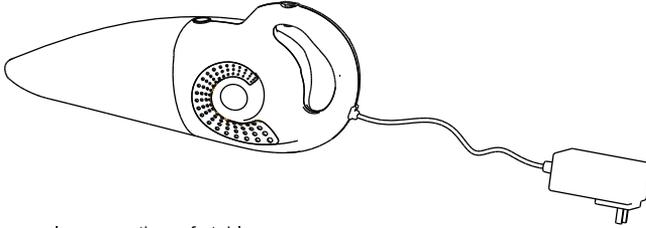

STEP 1: Put the vacuum cleaner on the safe table.

STEP 2: Plug in and switch on the mains power adaptor at the mains power supply; the indicator light will flash blue to confirm that the vacuum cleaner is correctly clocked and charging.

STEP 3: Blinking blue light while charging, once the battery is fully charged, the indicator light will stop flashing and will remain solid blue.



Note: Turn off the vacuum cleaner before charging.

Whilst charging, the vacuum cleaner may begin to heat up and become warm; always switch off and unplug from the mains power supply when charging is complete.

Warning: Never recharge the vacuum cleaner whilst liquid is present inside the dust container. Always empty and dry the dust container after vacuuming liquid spillages.

2. Using the Cordless Wet and Dry Vac

The handheld vacuum cleaner comes with a crevice tool, ideal for reaching into awkward corners and recesses in fabrics. It also includes a squeegee nozzle, suitable for clearing up wet spillages.

STEP 1: To use the vacuum cleaner, disconnect it from the adaptor.

STEP 2: Fit the selected attachment (crevice tool or squeegee nozzle), by firmly inserting it into the air inlet.

STEP 3: Turn on the vacuum cleaner by sliding the 'On/Off switch forward to the 'On' position.



Note: The handheld vacuum cleaner can be used to clean up both wet and dry spillages but the two functions cannot be mixed. When using the vacuum cleaner to pick up liquid spillages, empty the liquid as soon as possible and that the vacuum cleaner is thoroughly dry before using as a regular vacuum cleaner. Similarly, empty the dust container of any debris before attempting to clean up liquid.

3. Mixing Wet and Dry Functions

To preserve the life of vacuum cleaner and maintain optimum performance, do not mix the wet and dry functions.

Empty the dust container of any debris or dust before attempting to vacuum liquid.

Never tilt the vacuum cleaner backwards as this will allow liquid to enter the waterproof cover.

4. Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied thoroughly. If there is a reduction in suction power, empty the dust container.

STEP 1: Hold the vacuum cleaner with the dust container facing downwards. Press the dust container release button and carefully remove the dust container from the vacuum cleaner.

STEP 2: Remove the washable filter.

STEP 3: Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

STEP 4: Refit the washable filter and dust container.



Note: It is recommended that the dust container is emptied outdoors.

5. Cleaning the Washable Filter

The washable filter can only be accessed when the dust container is removed (following the instructions in the section entitled 'Emptying the Dust Container').

STEP 1: Hold the washable filter out over a waste bin, preferably outdoors and gently shake off any dust and debris.

STEP 2: Once the majority of the dust and dirt has been removed, rinse away any residue by placing the washable filter under cold water. Allow to dry thoroughly.

STEP 3: Refit the washable filter and dust container following the instructions in the section entitled 'Emptying the Dust Container'.



Note: The washable filter and dust container should be thoroughly cleaned at least once every three weeks.

Do not clean the washable filter with detergent or using external heat sources, such as a radiator to dry it.

Warning: Do not reassemble or use the vacuum cleaner until the washable filter has fully dried, as this could cause damage.

CARE AND MAINTENANCE

Always unplug the vacuum cleaner from mains power supply before attempting any cleaning or maintenance.

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.

Do not immerse the vacuum cleaner in water or any other liquid.

Keep the washable filter clean after every removal of the dust container.

Dos and Don'ts

Do:

Check that the washable filter is kept clear of obstruction.

Make sure that the dust container and washable filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Empty any liquid immediately after picking up liquid spills.

Clean the dust container and washable filter at least once every three weeks.

Don't:

Use the vacuum cleaner without the washable filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Empty the dust container indoors.

Warranty

CUSTOMER CARE

The 1-year Limited Warranty is valid for products purchased from our MOOSOO only, starting from the date of the original retail purchase. We will provide customer service for any defects in quality or materials under normal, non-commercial use.

1. According to the requirements outlined in this instruction manual, the warranty is subject to the following conditions and exclusions.
2. This warranty provides, at no extra cost to you all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.
3. We provide the repair or replacement of your MOOSOO appliance if your MOOSOO appliance is found to be defective due to faulty materials, workmanship function within 1 year of purchase or delivery. (If any part is no longer available or out of manufacture, we will replace it with a functional replacement part).

WHAT IS NOT COVERED

1. Under your MOOSOO guarantee, MOOSOO shall not be liable for costs of repair or replacement of a product incurred as a result of: Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the MOOSOO appliance which is not in accordance with this MOOSOO Operation Manual.
2. Machines purchased from an unauthorized dealer.
3. Use of parts and accessories other than those produced or recommended by MOOSOO.
4. Repairs or alterations carried out by unauthorized parties or agents.
5. Use of the machine other than for normal domestic purpose, e.g. for commercial or rental purposes.
6. Reduction in battery run time due to battery age or use.

WARRANTY SERVICE

1. If you have a query about your MOOSOO appliance, please contact the MOOSOO customer service email: usa@imoosoo.com
2. Please inform us your model name/number, purchase date, order number, machine problem and your requirement.
3. Your model number can be found on rating plate. For information on your rating plate see the inside front cover.
4. Please keep your purchase receipt in a safe place to ensure you have this information.
5. Service under this warranty will not extend the available time of warranty.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	<ol style="list-style-type: none"> 1. The mains power adaptor is not securely connected. 2. The vacuum cleaner is not turned off . 	<ul style="list-style-type: none"> - Check if charge socket work well and the charger & charging base are connected correctly. (If there is no light on when charging, contact the seller for help.) - Check that vacuum cleaner is turned off before charging.
The vacuum cleaners suction is reduced.	<ol style="list-style-type: none"> 1. The air inlet or attachment is blocked. 2. The dust container is almost full. 3. The washable filter is blocked. 4. The battery is running out of charge. 	<ul style="list-style-type: none"> - Disconnect the attachment and clear any blockage. - Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'. - Clean the filter following the instructions in the section entitled 'Cleaning the Washable Filter'. - Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Cordless Wet and Dry Vac'.
The vacuum cleaner has stopped working.	The battery has run out of charge.	<ul style="list-style-type: none"> - Recharge the vacuum cleaner following the instructions in the section entitled 'Charging the Cordless Wet and Dry Vac'.

安全上のご注意

1. ご使用前には、必ず同封の取扱説明書をお読みください。また、読んだ後には、必ず取扱説明書をいつでも見られる場所に保管してください。
2. 本製品は、幼児等の身体・知能・経験等が不十分な方が使用するように設計されていませんので、保護者等の監督のもとでない限り、使用させないようにして下さい。また、お子様の手の届かないところに置くようお願い申し上げます。
3. 本製品は家庭用です。感電や火災のリスクを避けるために、以下の警告に従ってください：
 - 本製品で可燃性・爆発性・腐蝕性・高温なものを吸わないでください。また、引火性液体または可燃性液体やこれらの蒸気がある場所やその近くでも使わないで下さい。
 - 水などの液体を吸い込まないようにしてください。
 - 硬い物・鋭い物（例えば：ネジ・ガラスくず・ネジ・コイン）を吸い込まないで下さい。掃除機が故障する恐れがあります。
 - 本製品は家庭用の掃除機であり、業務用を意図したものではありませんので、使用目的にご注意下さい。
 - 本製品を濡れた手で使用しないで下さい。
 - 吸込み口が詰まった場合は使用しないでください。
 - コンセントから抜くときは、必ず電源プラグを持って抜いてください。破損等による故障、事故の原因になるので、絶対に電源コードを引っ張らないでください。
 - 本製品を水などの液体に浸すことは禁止です。
 - 付属するアダプターを使って、他のバッテリーを充電することはおやめ下さい。
 - 破損した部品があった場合には、絶対に使用しないで下さい。
4. 製品が故障または部分的に破損があった場合でも、ご自身で修理しないようお願い致します。怪我や事故の原因になります。弊社のカスタマーサービスセンターにご連絡くださいますようお願いいたします。
5. 延長コードの使用はお避け下さい。
6. 組立の時には十分にお気をつけ下さい。
7. アダプタープラグを抜く前やお手入れをする前には必ず電源スイッチを切ってください。
8. お手入れは製品が完全に冷えたことを確認した後に行ってください。
9. 本製品はリモコンでコントロールすることはできません。

用途

本製品は以下の用途を目的として設計されます。


- 住宅・アパート内での掃除
- 車の掃除
- ショップ・オフィス・学校での掃除
- ホテル・モーテルを含む住宅施設での掃除

仕様

型番	M4
バッテリー	14.8V 2200mAh
アダプター出力	DC 18V 400mA
充電時間	5.5H
消費電力	80W
騒音レベル	≤75dB
吸引力・時間	8.5Kpa/21min
集塵容量	0.45L
集水容量	0.1L

各部のご紹介

1. スイッチ
2. バッテリー
3. ダストバッグ取外しボタン
4. HEPAフィルター
5. 防水カバー
6. ダストバッグ
7. 吸込口
8. 充電口
9. 隙間ノズル
10. 2 in 1ブラシ
11. アダプター
12. 延長ノズル

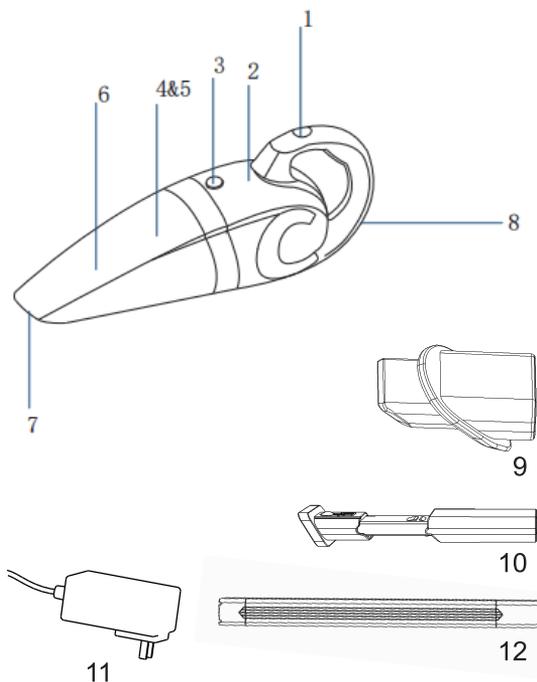


使い方

初回のご使用の前には製品を濡れた柔らかいタオルで拭いて、乾かしてください。

1. 充電

お掃除する前にはクリーナーを約5.5時間充電してください。次回の充電時間は使用時間により異なります。バッテリーが完全に放電したら、再び5.5時間の充電時間が掛かります。

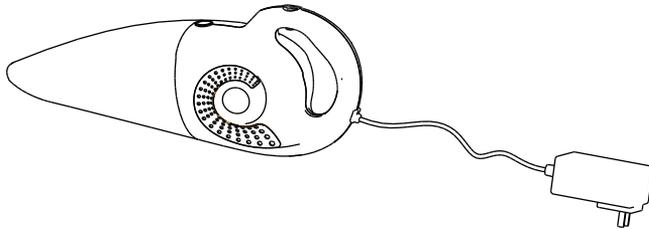

1. 安全な場所にクリーナーを置いてください。
2. アダプターの小さなプラグを本体の充電口に差し込んでから、アダプターを電源コンセントに差し込んでください。充電している時には指示ライトが青色に点滅します。
3. バッテリーの充電が完了したら、指示ライトは青く点灯ようになります。

ご注意: 充電中には必ずスイッチを「off」にしてください。充電中は本体の温度が高くなりますので十分に注意し、充電完了した場合にはすぐにアダプターを電源コンセントから抜いてください。

ご注意: ダストバッグに液体が残っている場合には充電しないでください。感電の恐れがあります。毎回お掃除が終わったら、ダストバッグに残った液体を捨ててください。

2. 使い方

本製品には延長ノズルや隙間ノズルが付属され、家の隅々まで掃除できます。

1. お掃除する前には必ずアダプターを電源コンセントから抜いてください。
2. 延長ノズルまたは隙間ノズルを吸込口に装着してください。
3. スイッチを「on」にしてください。

ご注意: 本製品は液体の掃除ができます。但し、液体とほかのゴミを同時に吸い込むことは故障の原因となる為できませんので、毎回液体掃除した後は、お早めにダストバッグに集めた液体を捨ててクリーナーを乾かしてください。同じように、液体掃除する前には、ダストバッグに残った乾燥したゴミを捨ててください。

3. 液体掃除

本製品は液体の掃除ができます。但し、液体とほかのゴミを同時に吸い込むことはできません。また、逆さに持つと、液体が防水カバー内に流れる恐れがございますので、逆さには持たないようお願い致します。

4.ダストバッグの洗浄

最高のパフォーマンスを得るために、吸引力が弱くなったら、お掃除する前にダストバッグに残ったゴミを捨ててください。

1. ダストバッグを下に向けたまま握りながら、ダストバッグ取外しボタンを押してゴミを捨ててください。
 2. HEPAを取り外して下さい。
 3. ゴミを捨てる時には気をつけてください。必要に応じて、各部を柔らかいタオルで拭いてください。
 4. 再びダストバッグとHEPAをクリーナー本体に装着してください。
- ご注意: 室外でダストバッグの手入れをすることはお勧めします。

手入れとメンテナンス

1. お手入れやメンテナンスをする前には必ずスイッチを「off」にしてください。
2. 柔らかいタオルで製品の外側を拭いてください。刺激性の強い洗剤を使わないでください。
3. 製品を水またはほかの液体に浸さないでください。

アドバイス

お勧めすること

1. 定期的にHEPAにほこりが詰まっていないことをご確認ください。
2. 製品の吸引力と寿命を維持するために、定期的にダストバッグとHEPAを洗浄してください。
3. 液体掃除をした後はすぐにダストバッグに留まった液体を捨ててください。
4. 少なくとも三週ごとにダストバッグとHEPAの掃除をしてください

禁止すること

1. ダストバッグまたはHEPAを装着しないまま製品を使用すること。
2. 可燃物・マッチ・タバコの吸い殻・熱い灰などの高温物を吸い込むこと。
3. 室内でダストバッグの掃除をすること。

FAQ

問題	原因	対策
充電できない	<ol style="list-style-type: none">アダプターは電源コンセントに完全に差し込んでない。スイッチを「off」にしていない。	<ol style="list-style-type: none">電源コンセントをチェックしてから、アダプターのプラグは根元までに差し込むことを確認してください。(指示ライトは点滅しなかったら、販売者までご連絡ください。)充電する前にスイッチを「off」にしてください。
吸引力が弱くなる	<ol style="list-style-type: none">吸込口が塞がれる。ダストバッグに残ったゴミが多すぎる。HEPAはほごりに塞がれる。バッテリーの電量が少ない。	<ol style="list-style-type: none">電源を切ってから吸込口の異物を取り出してください。ダストバッグとHEPAの掃除をしてください。クリーナーを充電してください。
動きが止まる	バッテリーの電量が少ない。	またクリーナーを充電してください。

カスタマーケア

1. 1年間の限定保証は、お客様の正常なご使用状態のもとで万一故障した場合、大変お手数ですが、ご使用状態を添えて弊社までご連絡頂きますようお願いいたします。

尚、本取扱説明書に記載されている要件に従わず、誤った使用方法での破損などでは交換の保証となりませんので、予めご了承ください。

2. MooSoo アプライアンスに関するご質問がある場合は、MooSooカスタマーサービスの電子メール(japan@imoosoo.com)にご連絡ください

3. 上記の際には、お買い上げ頂いた商品のモデル名/型番、ご購入日、注文番号、機械の問題および要件をお知らせください。

本保証書は再発行できませんので、紛失しないよう大切に保存してください

4. お買い上げ日から1年以内に、製品、部品または製品の一部に製造上の環疵があると認められる場合、すべての部品の交換及び製品修理サービスまたは交換を無料でご提供致します。(該当する部品の生産が終了するなど部品の在庫がない場合は、MooSoo社が代替となる別の部品に交換します) また、これに伴う修理・交換作業はすべて MooSoo 社が承ります。

5. 本製品は日本国内での使用のみが保証の対象となります。

6. 保証適用外となるケースとして、下記の場合は、保証期間内でも保証の適用外とさせていただきます。

• 本取扱説明書に従わない、不注意な操作や取り扱いによる故障及び損傷。ならびに、必要なお手入れを怠ったことによって生じた故障及び損傷。

• 一般家庭用品以外の用途(例えば業務用など)に使用された場合。

• MooSoo 社製純正部品以外を使用した場合。

