## FOSPOWER®

### Model: FOSHP-2446PA & FOSHP-2447PB

FosPower Kids Wireless
Headphones with Light Up Ears BTH20K
(Max 94dB)

## STOP

**PLEASE DO NOT RETURN THIS PRODUCT**

There are good days and bad days. If there is a problem with your product or you are unhappy with it,
**PLEASE GIVE US A CHANCE TO MAKE IT RIGHT.**

Email: support@fospower.com
US Toll Free: 1-833-3-FOSP
(1-833-888-3577)
Local/International: (612) 389-4432

---

Thank you for purchasing this FosPower product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.
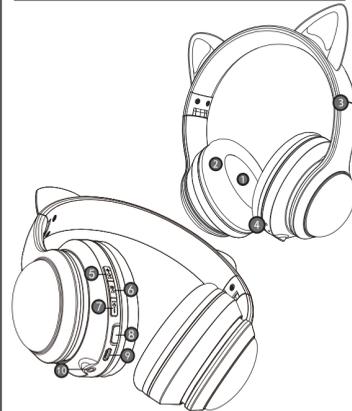
### Package Includes

1x Wireless Cat Ears Headphones
1x USB-C Charging Cable
1x 3.5mm Audio Cable
1x User Manual

### Specifications

| | |
|---|---|
| Speaker Size | 40 mm |
| Impedance | 32 Ohm |
| Volume Limits | 85 dB/94 dB |
| Range | ≥ 10 m/33 ft |
| Battery Type | Lithium-ion Polymer (3.7 V/800 mAh) |
| Battery Charge Time | 2 hours |
| Battery Usage Time | 100% Volume: 60 hours with LED off, 8 hours with LED on |

**1**

---

**Wireless Headphones Buttons and Diagram**



1 - Wireless headphones speakers
2 - Soft ear pads
3 - Adjustable headband / rotatable earmuffs
4 - Built-in microphone
5 - Headphone Volume + (up)
6 - MFB button (multi-function button)
7 - Headphone Volume - (down)
8 - Power switch button
9 - USB-C charging port
10 - 3.5mm audio port

### Wireless Headphone Functions

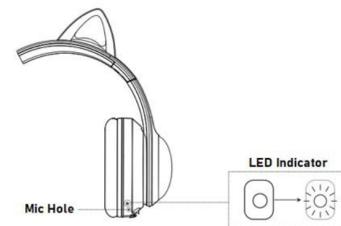| | |
|---|---|
| Power On | Slide the power switch button to the on side |
| Power Off | Slide the power switch button to the off side |
| Volume Up | Short press the volume + button |
| Volume Down | Short press the volume - button |
| Previous Song | Long press the volume - button for 2 seconds |
| Next Song | Long press the volume + button for 2 seconds |
| Play/Pause | Short press the MFB button |
| Answer/hang up the phone | Short press the MFB button |
| Refuse to answer the phone call | Long press the MFB button for 3 seconds |
| LED colorful light mode | Press the MFB button twice |
| Voice Assistant | Press the MFB button 3 times |
| 85 dB/94 dB limited mode | Short press both the -/+ volume buttons at the same time |

---

### Pairing Instructions

NOTE: Please charge the wireless headphones for at least 30 minutes before pairing to ensure that there is some battery life.

### Pairing with Bluetooth

1. Power on the headphones by switching the power switch to the "ON" position. When powered on, you should hear a "power on" voice prompt and see the blue light of the LED indicator on for 2 seconds before it starts alternatively flashing between red and blue lights. This indicates that the headphones are in Bluetooth searching/pairing mode.
2. On your device, go to your Bluetooth settings and search for the headphones. Look for the headphones' name "BTH20K" on your Bluetooth device list and then select it for pairing. Once the pairing is successful, you should hear a "connected" voice prompt.
3. The wireless headphones will remember previously paired devices so you do not need to re-pair your device. The headphones will connect to your most recently connected device. If it does not automatically connect itself when you power on your connected device, simply re-pair the headphones once again.

Note: When the wireless headphones enter searching/pairing mode, the LED indicator lights on the headphones will flash alternatively from red and blue. Once the pairing is successful, the LED will turn off. While the headphones are in use, the LED will flash blue once every 10 seconds.



LED Indicator

Mic Hole

---

### Wired Listening



1. If you do not want to use your headphones wirelessly through Bluetooth, you can use the provided 3.5mm audio cable and connect your headphones directly to your device if it has a 3.5mm audio port. If the headphones are in Bluetooth mode when you plug in the 3.5mm audio cable, the Bluetooth mode will automatically power off and the headphones will switch into audio line-in mode.

---

### Charging

1. The headphones have a built-in battery, so if you have not used them in an extended period of time, it is important to charge them at least once every two months.
2. You can charge the headphones with the provided USB-C charging cable (power supply/charger not included) by plugging it into the USB-C charging port on the headphones. It is recommended that your charger is at least 5V/1A.
3. While plugged in and charging, the LED indicator will be a steady red. Once the headphones are fully charged, the LED indicator will change to a steady blue.

Note: When the headphones are on low battery, the colorful light LEDs will automatically turn themselves off to preserve battery.

### Colorful Light LED Mode

1. When you power on your headphones, the colorful light LEDs will automatically turn on. The LEDs will be on at the cat ears and the outside of the headphone's earmuffs.
2. You can turn off or on the colorful light LED mode by pressing the MFB button twice.

---

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Limited Lifetime Warranty

Visit fospower.com/warranty for Product Registration, warranty and limited liability details.

### Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.