


READ ME FIRST!

Follow these steps to get started with your remote control.

RCR003RWB QSG 00


R271U1

1

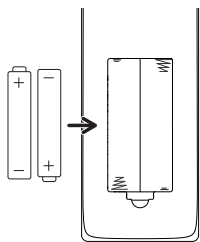

Remove the battery compartment cover, insert 2 AAA batteries (not included), and replace the cover.

2

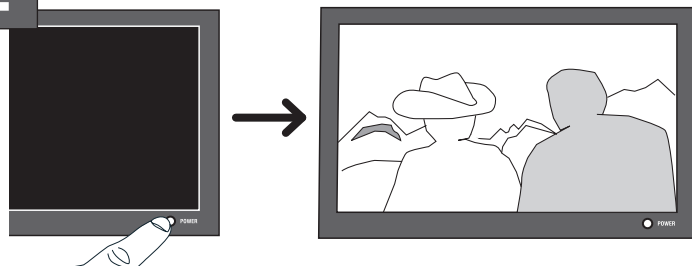

Manually turn on your the component you want to control.


3

Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.

SOAIY	89117
SOLE	93819
SONIC	54312
SONY	31912, 41112, 89616
SOULACA	16118
SOUNDESIGN	54711, 55514, 78613, 79513
SOVA	81213, 85613
SOYO	69613
CECTPA	EA011

If you don't see your brand listed, consult the Owner's Manual for other programming options.

4

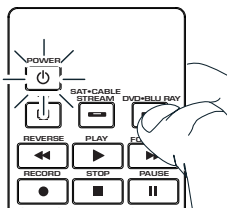


Press and hold the device key you want to program for about 2 seconds, until the POWER key illuminates and stays on. Then release the key.

5



Enter the first five-digit code for your brand in the code list (the POWER key flashes after each digit).

6

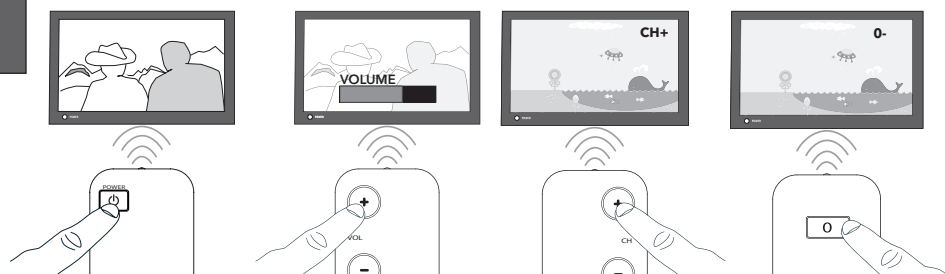

Test the POWER, VOL+, CH+, and 0 keys. If these keys work, **congrats! You've finished programming for this key!** If not, repeat steps 4 and 5, and enter the next code for your brand from the code list.

7

To program the other device keys, follow these instructions again.


The Code List with that's included with your remote provides codes for all major brands of home entertainment components.



¡LÉAME PRIMERO!


Siga los pasos a continuación para empezar a usar el control remoto.

1

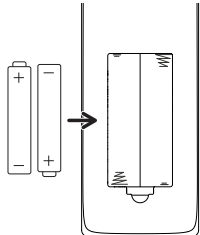

Retire la tapa del compartimiento de las baterías. Inserte dos baterías alcalinas AAA (no suministradas). Vuelva a colocar la tapa del compartimiento de las baterías en su posición

2

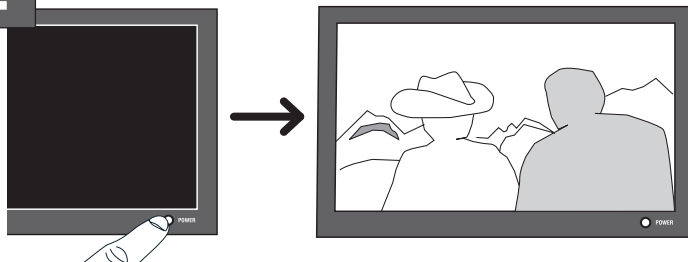


Encienda manualmente el dispositivo que desea manejar.

3 Encuentre la Lista de códigos suministrada con el control remoto. Encuentre la sección para el tipo de dispositivo que desea programar, y localice la marca en esa sección. Marque con un círculo los códigos para la marca y manténgalos a mano.

SOAIY	89117
SOLE	93819
SONIC	54312
SONY	31912, 41112, 89616
SOULACA	16118
SOUNDESIGN	54711, 55514, 78613, 79513
SOVA	81213, 85613
SOYO	69613
CDECTDA	54011

Si su marca no aparece en la lista, consulte el Manual del propietario para ver otras opciones de programación.

4

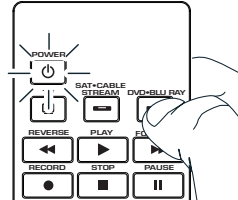


Mantenga oprimida la tecla de dispositivo que desea programar durante aproximadamente 2 segundos hasta que la tecla POWER permanezca encendida. A continuación, suelte la tecla.

5



Ingrese el primer código de cinco códigos para la marca correspondiente en la lista de códigos (la tecla POWER parpadea después de cada dígito).

6

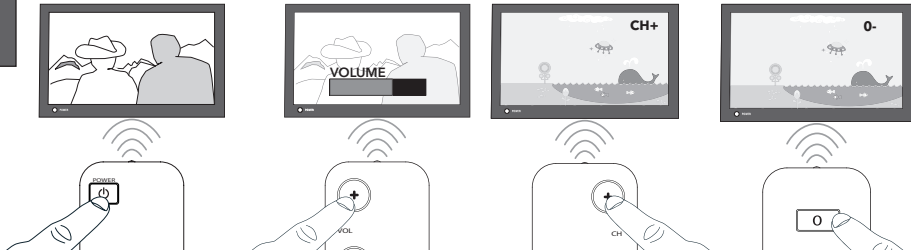

Pruebe las teclas que se utilizan habitualmente con el dispositivo (por ejemplo, POWER, VOL+, CH+ y 0 para un TV). **Si estas teclas funcionan, ¡enhorabuena!** ¡Ha finalizado la programación de esta tecla! De lo contrario, intente los pasos 4 y 5 con el siguiente código para su marca en la lista de códigos.

7 Para programar las otras teclas de dispositivo, repita estas instrucciones.

La lista de códigos que se incluye con el control remoto proporciona códigos para las principales marcas de componentes de entretenimiento en el hogar.

