ADJUSTABLE TAPER CONTROL

Unlike levers on professional clippers that are positioned on the side, the Conair taper control is positioned at the back of the unit. The taper level functions for both the clipper and trimmer blade, so you can hold the clipper in your hand and adjust the lever at the same time...while you're clipping/trimming. This taper control eliminates the need in some situations for an attachment comb, because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper control up as far as it will go to position #5. To increase cutting length, slowly push control down. If you push to the lowest position #1, it will leave hair about the same length as the short attachment comb.

Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades. Packed-in hair can slow down any clipper. To remove it without removing the blades, take your cleaning brush and brush the hair from the blades. If you do this after every clipping, especially with heavy hair cutting, the blades should remain free of cut hair. If clipper stops cutting and this action doesn't help, try loosening the blades to remove the hair.

Any other servicing should be performed by an authorized service representative. The appliance has no user-serviceable parts. The product is for household use (see note).

If clipper stops cutting, check to see if there is a clump of hair lodged between the blades. If that is the problem, unplug the clipper and then loosen the blades to remove the hair.

If the clipper stops cutting, but does not stop running, you will need to check the blades.

For new blades, send check or money order for $6.50, which includes postage and handling, to:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

NOTE: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. Lay it flat with the cord coiled up when not in use.

STORAGE: When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.

Any other servicing should be performed by an authorized service representative.
This appliance has no user-serviceable parts.
This appliance is for household use.

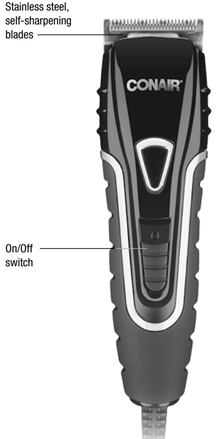

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

FORMULARIO DE PEDIDO – REPUESTOS Y ACCESORIOS

Precios válidos hasta el 31 de diciembre de 2020 Aceptaremos los pedidos enviados después de esta fecha y le informaremos de cualquier cambio de precio.

DESCRIPCIÓN	MODELO	PRECIO	CANTIDAD	TOTAL
Juego de cuchillas para cortar el cabello	HC2000-BLD	$6.50		
4 guías: 1/8", 1/4", 3/8", 1/2"	HC2000-4	$5.00		
3 guías: 5/8", 3/4", 7/8"	HC2000-3	$5.00		
3 tubos de aceite lubricante	HC OIL	$ 1.00		
Tijeras de peluquero	SC-1	$2.00		
Protector de cuchillas	HC-1	$1.00		

Subtotal	
Impuesto a la venta*	
TOTAL	

Favor de incluir un cheque o giro postal a nombre de Conair. Sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de $10.00; de lo contrario se sumará $2.00 al pedido por gastos administrativos.

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Los precios incluyen gastos de manejo y envío. *Los precios están sujetos a cambio sin previo aviso. Precios válidos únicamente para envíos a la parte continental de los EE.UU. **La entrega demora entre 4 y 6 semanas.***

Para evitar demoras, por favor escriba claramente.
Favor de incluir su dirección completa. Nota: UPS no puede hacer entregas a casillas postales.

NOMBRE _____
DIRECCIÓN _____
CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____
TELÉFONO ( ) _____ *(en caso de preguntas)*

Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.

CONAIR

Modelo HC2000

Manual de instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

BARBER SHOP SERIES

BOTÓN DE AJUSTE DE LONGITUD DE CORTE

Al igual que las cortadoras profesionales, esta cortadora cuenta con un botón de ajuste de longitud de corte, ubicado en la parte posterior de la unidad, que permite ajustar el largo del corte a medida que corta el cabello. El botón de ajuste de longitud de corte funciona con ambas cuchillas. El botón de ajuste de longitud de corte permite que el cabello más corto o más largo, sin tener que instalar una guía. Para conseguir el corte más apurado y el cabello más corto, deslice el botón hacia arriba, hasta la posición n.° 5. Para conseguir un corte más largo, deslice el botón hacia abajo. El ajuste más bajo dejará el cabello un corto como la guía más corta.

Usar el ajuste de longitud de corte prolonga la vida útil de las cuchillas, puesto que estas nunca utilizan el mismo filo de corte para cortar. Su cortadora puede perder velocidad si hay recortes de cabello trabados en las cuchillas. Para quitar el pelo de las cuchillas sin tener que sacarlas, utilice el cepillo de limpieza provisto. Hacer esto después de cada uso, especialmente cuando se corta mucho cabello, mantendrá las cuchillas en funcionamiento óptimo. Si la cortadora deja de funcionar y esto no soluciona el problema, afile las cuchillas para limpiarlas.

Cualquier otro servicio debe ser realizado por un técnico autorizado.

Este aparato no contiene ninguna pieza que pueda ser reparada/cambiada por el usuario. Para uso doméstico solamente.

ALMACENAJE: después de usar el aparato, desenchúfelo, permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños.

Cualquier otro servicio debe ser realizado por un técnico autorizado.

Este aparato no contiene ninguna pieza que pueda ser reparada/cambiada por el usuario. Para uso doméstico solamente.

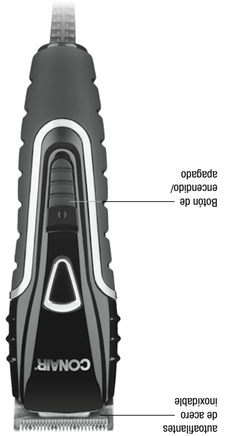

NOTA: nunca jale el cable. Nunca retuerza ni enrolle el cable alrededor del aparato. Enrolle el cable sin apretar al lado del aparato.

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

Para pedir nuevas cuchillas por correo, mandando un cheque o un giro postal de US$6.50 (incluye gastos de envío y manejo) a:

Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Enviar a:

CUIDAD _____ ESTADO _____ CÓDIGO POSTAL _____

TELÉFONO ( ) _____ *(en caso de preguntas)*

Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.

CONAIR

Modelo HC2000

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA



Todos sabemos que no se debe mezclar la electricidad y agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque está apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

GARANTÍA LIMITADA DE 5 AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADA SOLAMENTE)

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 60 meses a partir de la fecha de compra si resulta ser defectuoso en materiales o mano de obra.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US$3.00 para cubrir los gastos de manejo y envío. Los residentes de California necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS, A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

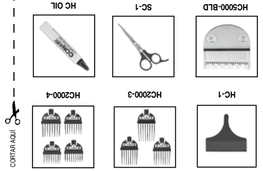

CONAIR

Model HC2000

Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CUT HERE

HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through December 31, 2020. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Clipper Blade	HC2000-BLD	$6.50		
4 Comb Attachments: 1/8", 1/4", 3/8", 1/2"	HC2000-4	$5.00		
3 Comb Attachments: 5/8", 3/4", 7/8"	HC2000-3	$5.00		
Lubricating Oil (pkg. of 3 tubes)	HC OIL	$1.00		
Barber Scissors	SC-1	$2.00		
Blade Guard	HC-1	$1.00		

Subtotal	
Sales Tax*	
TOTAL	

*Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) *CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of $10.00 or a $2.00 handling charge will be added to order.*

All prices include handling and return postage. *Prices are subject to change without notice. Prices are valid only for shipments within the continental United States.*
Please allow 4–6 weeks for delivery.

To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. Box.

NAME _____
ADDRESS _____ APT. _____
CITY _____ STATE _____ ZIP _____
TELEPHONE ( ) _____ *(We call only if we have a question about your order.)*

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

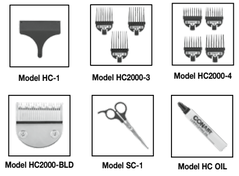

Please register this product at www.conair.com/registration

©2018 Conair Corporation

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

18PG054025

IB-15711

©2018 Conair Corporation

Para registrar su producto, visítenos en:
www.conair.com/registration

Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

18PG054025

IB-15711

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, take basic safety precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

FOR HOUSEHOLD USE ONLY

DANGER – Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Unplug this appliance before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in the shower.
4. Do not place in, or drop into water or other liquids.
5. Do not reach for an appliance that has fallen into water. **Unplug it immediately.** For dry location use only. Do not expose to liquids, vapor or rain.
6. Always unplug this appliance from electrical outlet immediately after using.

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.** Do not pull, twist, or wrap line cord around appliance.
2. This appliance should not be used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water.** Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
12. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on alternating current (AC) 120V AC, 60 hertz only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Your new Conair® haircut kit has everything you need to achieve professional haircuts at home. It features a powerful clipper with adjustable taper control, a no-slip grip® and self-sharpening stainless-steel blades. Also included are 9 comb attachments for different hair lengths, barber comb, barber scissors, barber cape, a soft storage case, lubricating oil, and a blade guard for easy maintenance of the clipper blades.

OILING THE BLADES (OIL INCLUDED)

1. Oil the clipper blades once a month
2. Turn the clipper ON
3. Hold and point the blades downward
4. Spread one drop of oil across the blades
5. Turn the clipper OFF and wipe away any excess oil

KEEP OIL AWAY FROM CHILDREN.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled and running smoothly.
2. Place the barber cape or a towel around the neck of the person whose hair is to be cut.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. First, comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short comb attachment (number 1) cuts hair to 1/8" (3mm).
- Medium-Short comb attachment (number 2) cuts hair to 1/4" (6mm).
- Medium-Long comb attachment (number 3) cuts hair to 3/8" (10mm).
- Long comb attachment (number 4) cuts hair to 1/2" (13mm).
- Long comb attachment (number 5) cuts hair to 5/8" (16mm).
- Long comb attachment (number 6) cuts hair to 3/4" (19mm).
- Long comb attachment (number 7) cuts hair to 7/8" (22mm).
- Left ear attachment comb lightly tapers over left ear.
- Right ear attachment comb lightly tapers over right ear.

Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.



To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:

1. The hair should be combed in its natural direction.
2. Using the longest comb attachment, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the comb attachment pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:

A) Apply more pressure to the head with the comb attachment that is in place. This takes a little practice, of course.
OR
B) Just switch to a shorter comb attachment.

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

OUTLINING

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see illustration), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see illustration) and, holding it against the skin at the length desired, move the clipper downward.

STOP. COMB. CHECK.

For best results, do as the professionals do: Comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORT CUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting.

Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

For a flattop, use the flat comb, not the comb attachment. Just cut hair on top of the head over flat comb (see illustration).

USER MAINTENANCE

CARE OF YOUR CLIPPERS

Detachable Blade Set

This clipper comes with a detachable blade set.

To remove the blades, follow these steps:

1. Hold the front part of the clipper with your thumb pressing on the blade and place another hand against the blade (see Fig. 1)

2. When pressing the blade forward, the blade is detached (see Fig. 2)

TO REPLACE BLADE:

1. Set the Taper Control Button to lowest position "1" (see Fig. 3)



2. Place the blade onto the clipper body by inserting the "Blade Tongue" down below the "Lock Tap" (see Fig. 4)



3. Snap the blade down into position. The blade is now fixed onto the clipper body (see Fig. 5)

MEDIDAS DE SEGURIDAD IMPORTANTES

Al user aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, entre ellas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

5. No trate de alcanzar o aparato después de que se haya caído al agua; **desconéctelo inmediatamente.** Para uso en lugares secos solamente. No intente reparar o desarmar; llévelo a un centro de servicio autorizado para su revisión y reparación.
6. Siempre desconecte el aparato eléctrico, incendio o heridas:
7. Siempre desconecte el aparato inmediatamente después del uso.

ADVERTENCIA – Para reducir el riesgo de quemaduras, descarga eléctrica, incendio o heridas:

1. **Nunca desciúde/deje el aparato sin vigilancia mientras está conectado.** No jale, tiererza ni enrolle el cable alrededor del aparato.
2. Este aparato no debe ser usado por o cerca de niños o personas con ciertas discapacidades.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.
4. **No utilice este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; regréselo a un centro de servicio autorizado para revisión y reparación.**
5. Mantenga el cable alejado de superficies calientes.
6. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
7. No coloque el aparato sobre ninguna superficie mientras está funcionando.
8. Para evitar las lesiones, no utilice este aparato con guías o cuchillas rotas o dañadas, o si le faltan dientes a las cuchillas. Asegúrese de que las cuchillas estén debidamente alineadas antes de usarlo.
9. No utilice el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
10. Nunca bloquee las aberturas de aire ante de enchufar el aparato. Siempre apague (“OFF”) el aparato antes de desenchufarlo.
11. Siempre conecte el cable al aparato antes de enchufarlo en la toma de corriente. Siempre apague (“OFF”) el aparato antes de desenchufarlo.
12. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Utilícelo solamente con corriente alterna (60 Hz) de 120 V AC.

El cable de este aparato está dotado de un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, aquel enchufe se podrá enchufar de una sola manera en las tomas de corriente polarizadas. Si no entra en la toma de corriente, invértelo. Si aun así no entra completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

Su nuevo juego de peluquería Conair® tiene todo lo que usted necesita para lograr cortes de cabello profesionales en casa. Incluye una potente cuchada de cabello con ajuste de longitud de corte, mango de agarre seguro no-slip grip® y cuchillas autoafilantes de acero inoxidable. También incluye 9 guías para distintas longitudes de cabello, un peine de corte, tijeras de peluquero, una capa de cortar cómodamente en su mano. Ya está lista para empezar.

4. Desenrede el cabello. Sostenga la cabeza en el nivel de sus ojos, para mayor visibilidad y control.
3. Siente a la persona de manera que su cabeza esté al nivel de sus ojos, para mayor visibilidad y control.
2. Coloque la capa de corte alrededor del cuello de la persona a quien le va a cortar el cabello.
1. Peine el cabello en dirección de su crecimiento natural.

Para empezar el corte:

2. Empiece el recorte en un lado de la cabeza, usando la guía más larga, y cortando desde abajo hacia arriba. Sostenga la cortadora ligeramente contra el cabello, con los dientes de la guía apuntando hacia arriba y planos contra la cabeza. Pase la cortadora por el cabello gradualmente hacia arriba y hacia fuera, cortando poco cabello a la vez.

Haga lo mismo en el otro lado y atrás de la cabeza. Si quiere un corte de cabello aún más corto:

A) Adelgace más presión (esto necesita un poco de práctica), **O**
B) Utilice una guía más corta.

NOTA: nunca empuje la cortadora para que corte más rápidamente. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

GUÍA DE CONAIR PARA CORTAR EL CABELLO EN CASA

Antes de empezar:

1. Revise el aparato. Cerciórese de que está limpio, que funciona correctamente y que las cuchillas están lubricadas.



Para instalar la guía, sostenga las con los dientes hacia arriba, deslícela por encima de las cuchillas, y luego engánchela a parte trasera.



Para quitar las guías, ponga el dedo índice y el pulgar como se indica en la ilustración, a continuación, desengánchelas jalando hacia arriba y afuera.

CORTES MEDIANOS A LARGOS

Empiece cortando poco cabello, hasta acostumbrarse a cada guía. Use la guía más larga para empezar, y luego acorte el cabello con guías más cortas si desea.

- Guía 1 – Corta el cabello a 1/8" (3 mm)
- Guía 2 – Corta el cabello a 1/4" (6 mm)
- Guía 3 – Corta el cabello a 3/8" (9.5 mm)
- Guía 4 – Corta el cabello a 1/2" (12.5 mm)
- Guía 5 – Corta el cabello a 5/8" (16 mm)
- Guía 6 – Corta el cabello a 3/4" (19 mm)
- Guía 7 – Corta el cabello a 7/8" (22 mm)
- Guía para la oreja izquierda – Corta el cabello alrededor de la oreja izquierda.
- Guía para la oreja derecha – Corta el cabello alrededor de la oreja derecha.

Recuerde que es mejor dejar el cabello demasiado largo que demasiado corto. Si quiere dejar encima cabello más largo encima de la cabeza, utilice el peine de corte o sus dedos para alzar el cabello y cortado al largo deseado. Trabaje siempre desde adelante hacia atrás de la cabeza y cortando desde abajo hacia arriba. Sostenga la cortadora ligeramente contra el cabello, con los dientes de la guía apuntando hacia arriba y planos contra la cabeza. Pase la cortadora por el cabello gradualmente hacia arriba y hacia fuera, cortando poco cabello a la vez.

Haga lo mismo en el otro lado y atrás de la cabeza. Si quiere un corte de cabello aún más corto:

A) Adelgace más presión (esto necesita un poco de práctica), **O**
B) Utilice una guía más corta.

DETÉNGASE. PEINE. VERIFIQUE.

Para obtener resultados óptimos, siga el ejemplo de los profesionales: peine el cabello con frecuencia para verificar los resultados, esto evitará los cortes disparejos en los costados, los flequillos y la nuca.

CORTES CORTOS “TAPA PLANA”, CORTES MILITARES, ETC.

Siempre corte el cabello desde la nuca hasta la coronilla, usando la guía más larga.

Sostenga la guía tres dientes por encima para brinda. Utilice la misma técnica en los costados, cortando el cabello de abajo hacia arriba.

De la frente a la coronilla, corte el cabello en dirección al crecimiento del pelo. Y luego empareje los lados.

Para obtener una “tapa plana”/tabla/mesa, no utilice una guía sino un peine plano, y corte el cabello por encima del peine (véase la ilustración).

CONTORNEO

El contorneo (delinición de contornos) no requiere accesorios. Primero, peine el cabello como desea. Coloque la cortadora entre la patilla y la oreja (véase la ilustración), posicionando la esquina de la cuchilla contra el nacimiento del delo. Mueva la cortadora lentamente alrededor y atrás de las orejas, siguiendo el contorno del cabelo. Para cortar el cabello en la nuca y las sienes, sostenga la cortadora al revés (véase la ilustración), colocuelo contra la piel al nivel deseado y deslícela hacia abajo.

INSTRUCCIONES DE MANTENIMIENTO DE SU CORTADORA DE CABELLO

Cuchillas removibles

Esta cortadora cuenta con cuchillas removibles.

Para sacar las cuchillas:

1. Sostenga el aparato firmemente, ponga su mano libre atrás de las cuchillas y empujeles con el pulgar (Fig. 1)
2. Siga empujando hasta desencajar las cuchillas (Fig. 2)

INSTALACIÓN:

1. Cerciórese de que el botón de ajuste de longitud de corte está en la posición más baja, es decir la posición nº 1 (Fig. 3)
2. Instale el juego de cuchillas sobre el cabezal, introduciendo la “lengüeta” debajo del “pestillo” (Fig. 4)
3. Empuje hasta que encaje y deslice firme en su lugar (Fig. 5)