EASYERA

DIGITAL WALL CLOCK

AC-WC165L

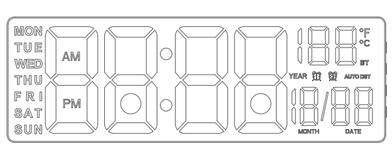

User Manual

- Email: support@easy-era.com -

V1.02

ENGLISH 01-12

ESPAÑOL 13-23

ENGLISH

Thank you for choosing our product.
If you have any questions, concerns or need any help, please contact us at
support@easy-era.com.

PACKING LIST

Digital Wall Clock x 1
Remote Control x 1
User Manual x 1
Power Adapter x 1
Charging Cable x 1
Hole Alignment Tool x 1
Hanging Nails x 2

PRODUCT OVERVIEW

Digital Wall Clock

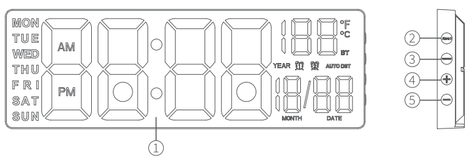

① Time Display
② Alarm Setting Button
③ Time Setting Button
④ + Button
⑤ - Button

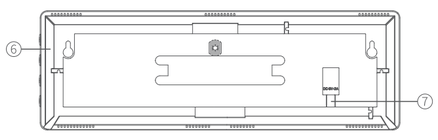

⑥ Wraparound Light
⑦ Power Input

Remote Control

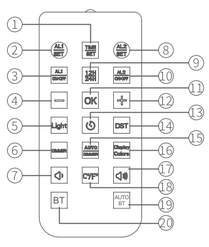

① Time setting
② Alarm 1 setting
③ Alarm 1 on/off
④ Setting -
⑤ Wraparound light on/off
⑥ Screen brightness setting
⑦ Volume -
⑧ Alarm 2 setting
⑨ 12H/24H switching
⑩ Alarm 2 on/off
⑪ OK
⑫ Setting +

⑬ Timer setting
⑭ Daylight saving time mode
⑮ Automatic brightness
⑯ Display color switching (temp, date and week)
⑰ Volume +
⑱ Temperature unit switching
⑲ AUTO BT (for auto time sync)
⑳ BT (for time sync)

QUICK START

Installation

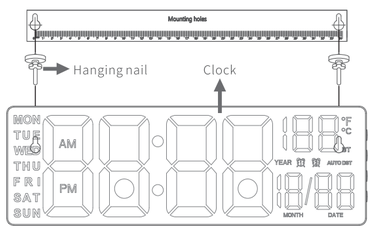

1. Place the hole alignment tool on the wall and align the hanging nails with the holes.
2. Nail the nails into the wall.
3. Hang the clock on the nails securely.

Power Connection

Connect the provided power adapter and charging cable, and then plug the clock into a 100V-240V power supply.

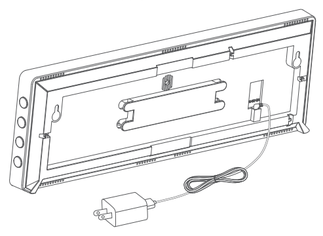

SET UP THE CLOCK

Tip:
When using the remote control, ensure it is directly pointed at the clock.

Time Setting

Option 1: Using Clock Buttons

To set the time, press the button to navigate through the 12H/24H time format, hour, minute, year, month, and date settings. Use the + and − buttons to make adjustments. After making changes, press the button once more to confirm and exit.

Option 2: Using the Remote Control

To set the time, press the button to enter the time setting. Use the + and − buttons to make adjustments and press the OK button to proceed. After making changes, press the OK button once more to confirm and exit.

Time Sync via BT

Press the BT button on the remote to enter BT paring mode. The "BT" indicator will flash on the clock. Then, enable the BT function on your mobile phone. Select EASYERA CLOCK from the search list and pair with it.
After successful pairing, the clock's time will automatically sync with your device. Afterward, the clock will exit BT pairing mode.

Tip:
You can press the AUTO BT button on the remote to turn the auto time sync feature on/off.
ON: The clock automatically enables BT pairing at 10:00 AM and 10:00 PM each day to sync the time when the previously paired device is within 10 meters.
OFF: Auto time sync is disabled.

Alarm Setting

Tips:
* You can use the clock buttons to set alarm 1 and the remote control to set alarm 1 and alarm 2.
* While setting the time, if you don't make any adjustments within 10 seconds, the setting will automatically exit.

Option 1: Using Clock Buttons

Press and hold the Alarm button to enter the alarm setting. Use the + and − buttons to adjust the time, and press the Alarm button to proceed. Then, select the repeated cycle from Monday to Friday, Saturday to Sunday, or Monday to Sunday using the + or − button. Finally, press the Alarm button to finish the setting.

Option 2: Using the Remote Control

Press the ALZ SET or ALZ SET button to enter the alarm setting. Use the + and − buttons to adjust the time, and press the OK button to proceed. Then, select the repeated cycle from Monday to Friday, Saturday to Sunday, or Monday to Sunday using the + or − button. Finally, press the OK button to finish the setting.

Tips:
* Once the alarm is activated, it will ring at the scheduled time. When the alarm goes off, you can stop it by pressing any button. If there is no operation within 20 minutes, the alarm will automatically stop. The subsequent alarms will not be affected.
* To cancel the alarm, press the Alarm button once on the clock or use the ALZ ON/OFF or ALZ ON/OFF button on the remote control. Press the same button once again to enable the alarm.

Screen Brightness

To adjust the screen brightness, press the button on the remote control. Each press will cycle through different brightness levels, including high brightness, medium brightness, low brightness, very low brightness, and finally turning off the screen.

Timer

To enter the timer setting, press the button on the remote control. Use the + and − buttons to set the countdown time and press the OK button to confirm. To turn off the countdown, press and hold the button.

Tips:
* Once the countdown reaches zero, the clock will ring for 10 seconds.
* While setting the time, if you don't make any adjustments within 10 seconds, the setting will automatically exit.

Volume

Use the buttons to adjust the volume (range: V01-V05).

Display Color

To change the display color of temperature, date and week, press the Display Colors button on the remote control. Each press will cycle through different color options, including green, blue, yellow, red, white, pink, purple, gradient, magic color, and gradient color.
Press and hold the Display Colors button on the remote control to display only the current day of the week.

12H/24H Switching

Press the 12H 24H button on the remote control to switch between 12-hour and 24-hour time format.

Daylight Saving Time

Press the DST button on the remote control to enable/disable daylight saving time.

Automatic Brightness

Press the AUTO BRIGHT button on the remote control to enable/disable automatic brightness.

Wraparound Light

Press the Light button on the remote control to enable/disable wraparound light.

Temperature Unit Switching

Press the CYF button on the remote control to switch the temperature unit.

MAINTENANCE

1. Store the clock in a display cabinet or keep it in a box in a cool and dry location.
2. To clean, use a soft damp cloth to wipe off dust. Avoid using liquids or abrasive cleaners.

Please aim at this product when using the remote control.

FCC CAUTION

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator& yourbody.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISEDC WARNING

This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 20cm.
L'appareil est conforme aux directives d'exposition aux RF, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité.
La distance minimale du corps pour utiliser l'appareil est de 20 cm.

- ***This device complies with the Australian/New Zealand Radio communications Standards under RCM. Operation is subject to the following two conditions:**
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation."***

ESPAÑOL

Gracias por comprar en easyera.
Si tiene alguna pregunta o necesita más ayuda, póngase en contacto con nosotros en
support@easy-era.com.

INCLUIDO EN EL PAQUETE

Reloj Digital de Pared x 1
Mando a Distancia x 1
Manual de Usuario x 1
Herramienta de Alineación de Orificios x 1
Adaptador de Corriente x 1
Cable de Carga x 1
Clavo para Colgar x 2

DESCRIPCIÓN DEL PRODUCTO

Reloj Digital de Pared

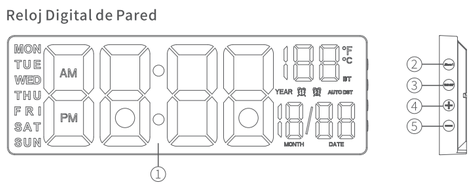

① Visualización Horaria
② Botón de Ajuste de Alarma
③ Botón de Ajuste de Hora
④ Botón+
⑤ Botón-

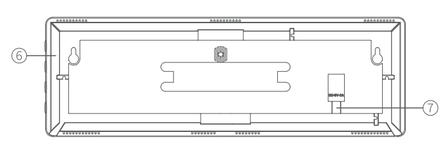

⑥ Luz Envolvente
⑦ Entrada de Corriente

Mando a Distancia

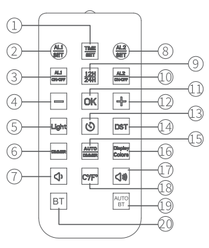

① Ajuste de la hora
② Ajuste de la alarma 1
③ Encendido/apagado de la alarma 1
④ Ajuste -
⑤ Encendido/apagado de la luz envolvente
⑥ Ajuste del brillo de la pantalla
⑦ Volumen -
⑧ Ajuste de la alarma 2
⑨ Conmutación 12H/24H
⑩ Encendido/apagado de la alarma 2
⑪ OK
⑫ Ajuste +
⑬ Ajuste temporizador
⑭ Modo de horario de verano
⑮ Brillo automático
⑯ Cambio de color de la pantalla (temperatura, fecha y semana)
⑰ Volumen +
⑱ Cambio de unidad de temperatura
⑲ AUTO BT (para sincronización horaria automática)
⑳ BT (para sincronizar la hora)

INICIO RÁPIDO

Instalación

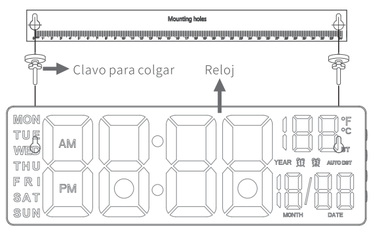

1. Coloque la herramienta de alineación de agujeros en la pared y alinee los clavos que se van a colocar para colgar con los agujeros.
2. Clave los clavos en la pared.
3. Cuelgue el reloj en los clavos de forma segura.

Conexión a la Corriente

Conecte el adaptador de corriente y el cable de carga suministrados y, a continuación, enchufe el reloj a una toma de corriente de 100 V-240 V.

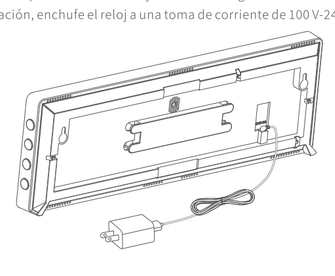

CONFIGURAR EL RELOJ

Consejo:
Cuando utilice el mando a distancia, asegúrese de que está apuntando directamente al reloj.

Ajuste de la Hora

Opción 1: Uso de los botones del reloj

Para ajustar la hora, pulse el botón para navegar por los ajustes de formato de hora 12H/24H, hora, minuto, año, mes y fecha. Utilice los botones + y − para realizar ajustes. Una vez realizados los cambios, pulse el botón una vez más para confirmar y salir.

Opción 2: Utilizar el mando a distancia

Para ajustar la hora, pulse el botón para acceder al ajuste de la hora. Utilice los botones + y − para realizar ajustes y pulse el botón OK para continuar. Una vez realizados los cambios, pulse de nuevo el botón OK para confirmar y salir.

Sincronización horaria por BT

Pulse el botón BT del mando a distancia para acceder al modo de sincronización BT. El indicador «BT» parpadeará en el reloj. Luego, habilite la función BT en su teléfono móvil. Seleccione EASYERA CLOCK en la lista de búsqueda y emparéjelo.
Después del emparejamiento exitoso, la hora del reloj se sincronizará automáticamente con su dispositivo. Después, el reloj saldrá del modo de emparejamiento BT.

Consejo:
Puede pulsar el botón AUTO BT del mando a distancia para activar/desactivar la función de sincronización automática de la hora.
ON: El reloj activa automáticamente el emparejamiento por BT a las 10:00 AM y a las 10:00 PM todos los días para sincronizar la hora cuando el dispositivo emparejado previamente se encuentra dentro de 10 metros.
OFF: La sincronización automática de la hora está desactivada.

Ajuste de la Alarma

Consejos:
* Puede utilizar los botones del reloj para ajustar la alarma 1 y el mando a distancia para ajustar la alarma 1 y la alarma 2.
* Mientras ajusta la hora, si no realiza ningún ajuste en 10 segundos, el ajuste saldrá automáticamente.

Opción 1: Usando los Botones del Reloj

Mantenga pulsado el botón para acceder al ajuste de la alarma. Utilice los botones + y − para ajustar la hora y pulse el botón para continuar. A continuación, seleccione el ciclo repetido de lunes a viernes, de sábado a domingo o de lunes a domingo utilizando los botones + o − . Por último, pulse el botón para finalizar el ajuste.

Opción 2: Usando el Mando a Distancia

Pulse los botones o para acceder al ajuste de la alarma. Utilice los botones + y − para ajustar la hora y pulse el botón OK para continuar. A continuación, seleccione el ciclo repetido de lunes a viernes, de sábado a domingo o de lunes a domingo utilizando los botones + o − . Por último, pulse el botón OK para finalizar el ajuste.

Consejos:
* Una vez activada la alarma, sonará a la hora programada. Cuando suene la alarma, puede detenerla pulsando cualquier botón. Si no se produce ninguna operación en 20 minutos, la alarma se detendrá automáticamente. Las alarmas posteriores no se verán afectadas.
* Para cancelar la alarma, pulse una vez el botón del reloj o utilice los botones ALZ ON/OFF o ALZ ON/OFF del mando a distancia. Pulse de nuevo el mismo botón para activar la alarma.

Brillo de la Pantalla

Para ajustar el brillo de la pantalla, pulse el botón del mando a distancia. Cada pulsación recorrerá diferentes niveles de brillo, incluyendo brillo alto, brillo medio, brillo bajo, brillo muy bajo y, finalmente, apagado de la pantalla.

Temporizador

Para acceder al ajuste del temporizador, pulse el botón del mando a distancia. Utilice los botones + y − para ajustar el tiempo de la cuenta atrás y pulse el botón OK para confirmar. Para desactivar la cuenta atrás, mantenga pulsado el botón .

Consejos:
* Cuando la cuenta atrás llegue a cero, el reloj sonará durante 10 segundos.
* Mientras ajusta la hora, si no realiza ningún ajuste en 10 segundos, se saldrá automáticamente del ajuste.

Volumen

Utilice los botones para ajustar el volumen (rango: V01-V05).

Color de la Pantalla

Para cambiar el color de visualización de la temperatura, la fecha y la semana, pulse el botón del mando a distancia. Cada pulsación hará un ciclo a través de diferentes opciones de color, incluyendo verde, azul, amarillo, rojo, blanco, rosa, morado, degradado, color mágico y color degradado.
Mantenga pulsado el botón del mando a distancia para visualizar sólo el día de la semana en curso.

Cambio 12H/24H

Pulse el botón del mando a distancia para cambiar entre el formato de 12 y 24 horas.

Horario de Verano

Pulse el botón DST del mando a distancia para activar o desactivar el horario de verano.

Brillo Automático

Pulse el botón del mando a distancia para activar o desactivar el brillo automático.

Luz Envolvente

Pulse el botón Light del mando a distancia para activar/desactivar la luz envolvente.

Cambio de la Unidad de Temperatura

Pulse el botón CYF del mando a distancia para cambiar la unidad de temperatura.

MANTENIMIENTO

1. Guarde el reloj en una vitrina o guárdelo en una caja en un lugar fresco y seco.
2. Para limpiarlo, utilice un paño suave y húmedo para quitar el polvo. Evite el uso de líquidos o limpiadores abrasivos.

Por favor, oriente el mando a distancia hacia este producto cuando lo utilice.