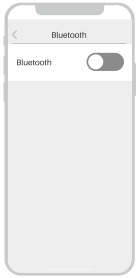

4

Reset

If one of the earbuds not work or fail to pair, please reset it:
Put both of earbuds into the charging case, forget/unpair [TOZO- A3] on your device.
1.Open the charging case and keep the earbuds in it.
2.Hold the charging case button for 8 seconds, the indicator light on the box flash 5 times , and the white light on the earbuds flash fast.
3.Take the earbuds out of charging case and connect with device again.

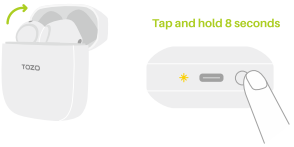

5

Charging

Charge the case via USB-C connector.
(USB-C cable included)

- 0%~20%
- 20%~80%
- 80%~100%

Don't put wet earbuds into
the charging case,
fully dry off the earbuds
before charging.

Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: **www.tozostore.com**
For any assistance please contact Email: **info@tozostore.com**

FC RoHS CE

TOZO®
www.tozostore.com

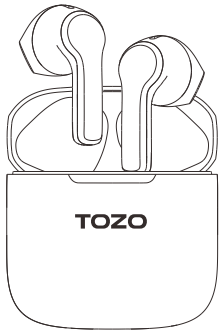

A3 TRUE WIRELESS STEREO

Quick Guide

1

Bluetooth pairing and wearing

Bluetooth pairing
1. In first use, take earbuds out of the charging case and the earbuds will power on and automatically pair with each other. Open the Bluetooth device, search [TOZO- A3] and select the connection.
2. Non first used, the earbuds will auto connect back to the last pairing device when turning on. If auto connect back fail, please select [TOZO- A3] again on "DEVICES" list. If need to connect to other device, please forget/unpair [TOZO- A3] from current device and repeat step1 to connect to the new one.

Wearing
Gently insert the earpiece into the cochlea obliquely and adjust it to an appropriate angle.
When making a call, turn the earbud microphone towards your mouth to make the call clearer.

2

Smart touch control

EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once **X2:** Press twice **X3:** Press three times **Hold:** Press and hold for 2 seconds

X2 L — **Previous song** | 前の曲 |
Vorheriges lied | Chanson précédente |
Canzone precedente | Canción anterior |
Vorig nummer | Föregående låt

X2 R — **Next song** | 次の曲 |
Nächstes lied | Chanson prochaine |
Canzone prossima | Canción siguiente |
Volgende nummer | Nästa låt

Hold L — **Volume down** | 音量を下げる |
Lautstärke runter | Baisser le volume |
Volume basso | Bajar volumen |
Volume verminderen | Sänk volymen

Hold R — **Volume up** | 音量を上げる |
Lauter | Monter le son |
Alza il volume | Sube el volumen |
Volume omhoog | Höj volymen

X1 L/R — **Play/Pause** | 再生/一時停止 |
Spielen/Pause | Jouer/Pause |
Giocare a/Pausa | Tocar/Pausa |
Toneelstuk/Pauze | Spela/Paus

X1 L/R — **Answer** | 答え |
Antworten | Réponse |
Rispondere | Responder |
Antwoorden |Svar

Hold L/R — **Hang up** | 電話を切る |
Auflegen | Raccrocher |
Appendere | Colgar |
Ophangen | Lägg på

Hold L/R — **Reject** | 拒絶 |
Ablehnen | Rejeter |
Rifiutare | Rechazar |
Afwijzen | Avvisa

X3 L/R — **Activate the voice assistant** | 音声アシスタントをアクティブにする |
Aktivieren Sie den Sprachassistenten | Activer l'assistant vocal | Attiva l'assistente vocale |
Activar el asistente de voz | Activeer de stemassistent | Aktivera röstassistenten

3

Power on/off

EN
Power on :
Open the cover of charging case;
or press and hold 3 seconds.
Power off :
Place the earbuds back into the charging case;
or press and hold 5 seconds.

DE
Ein :
Öffnen Sie die Abdeckung des Ladekoffers;
oder 3 Sekunden gedrückt halten.
Ausschalten :
Legen Sie die Ohrhörer wieder in das Ladeetui;
oder 5 Sekunden gedrückt halten.

IT
Accensione :
Aprire il coperchio della custodia di ricarica;
oppure tenere premuto per 3 secondi.
Spegni :
Rimetti gli auricolari nella custodia di ricarica;
oppure tenere premuto per 5 secondi.

NL
Aanzetten:
Open het deksel van de oplaadcassette;
of houd 3 seconden ingedrukt.
Uitschakelen:
Plaats de oordopjes terug in de oplaadcassette;
of houd 5 seconden ingedrukt.

JP
電源オン ：
充電ケースのカバーを開けます。または を3秒
間押し続けます。
電源を切る ：
イヤフォンを充電ケースに戻します。 または5秒
間押し続けます。

FR
Allumer :
Ouvrez le couvercle du boitier de charge;
ou appuyez et maintenez 3 secondes.
Éteindre :
Remettez les écouteurs dans l'étui de chargement;
ou appuyez et maintenez 5 secondes.

ES
Encendido :
Abra la tapa del estuche de carga;
o mantenga presionado durante 3 segundos.
Apagado :
Vuelva a colocar los auriculares en el estuche de carga; o mantenga presionado durante 5 segundos.

SE
Ström på :
Öppna locket på laddningsfodralet;
eller tryck och håll ned 3 sekunder.
Stäng av :
Sätt tillbaka öronsnäckorna i laddningsfodralet;
eller tryck och håll ned 5 sekunder.