INSIGNIA™

Quick Setup Guide | NS-DVL64C1

64-LED On-Camera Video Light

PACKAGE CONTENTS

- 64-LED On-Camera Video Light
- *Quick Setup Guide*

FEATURES

- 64 bright white LEDs illuminate your subject
- Daylight color temperature for natural lighting
- Integrated mount attaches to any camera or camcorder with a hot-shoe
- Threaded mounting hole for easy attachment to a tripod.
- Built-in light diffuser softens the light
- Uses four AA batteries (not included)

INSTALLING THE BATTERIES

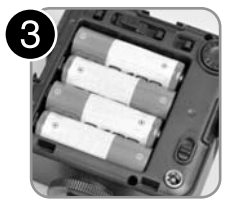

1. Slide the battery compartment lock switch to the right.
2. Put a coin in the battery compartment opening notch and pry outward to open the compartment.
3. Install four AA batteries in the battery compartment, noting the + and - orientation.
4. Replace the battery compartment cover and lock it.

Before using your new product, please read these instructions to prevent any damage.

Front view

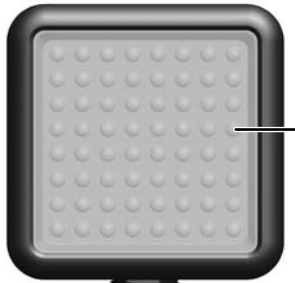

LEDs

Locking ring

Camera hotshoe connection

1/4" bracket mounting hole

Back view

Battery compartment lock

Battery compartment lock/unlock switch

Brightness controller

Power switch

DC power jack

SETTING UP YOUR VIDEO LIGHT

1. Loosen the locking ring by turning it counterclockwise.
2. Slide the light onto the hot-shoe of your camera or camcorder.
3. Tighten the locking ring to secure the light to your camera or camcorder.

Note: If your camcorder has no hotshoe connection, we recommend that you purchase a connecting bracket for your camcorder. The video light has a 1/4" bracket mounting hole. You can easily connect both the light and the camcorder to a bracket.

USING YOUR VIDEO LIGHT

1 Switch the power on.

2 Turn the brightness controller to adjust the brightness.

3 Begin capturing video or images.

Note: For extended photo shoots or recording sessions, we recommend that you use an AC adapter (5V) (purchased separately) instead of AA batteries.

SAFETY INFORMATION

- Do not use in high temperature or high humidity conditions.
- If this product overheats, it will cease operation and resume working only after cooling down. This is due to the built-in overtemperature protection.
- Do not handle with wet hands, immerse in water, or expose to rain.
- Observe precautions when handling batteries:
  - Do not mix new and used batteries or batteries of different types.
  - Do not put batteries into a fire or apply direct heat to it.
  - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product will not be used for a long time or when batteries run out of charge.
  - Should liquid from batteries come into contact with skin or clothing, rinse immediately with fresh water.

SPECIFICATIONS

Dimension (L×W×H)	3.4 × 3.4 × 1.4 in. (8.5 × 8.5 × 3.5 cm)
Net weight	4.5 ounces (127.1 g)
Battery	Four AA batteries (Alkaline or NiMH)
DC power supply	5V
Power (Max.)	<4.5W
Color temperature	5600±300K
Brightness	>1000Lux (0.5m)
Brightness control	Stepless
LED quantity	64
Operation temperature	14~104° F (-10~40° C)

*Operation hours: With four Alkaline batteries, when the brightness is adjusted 100%, the operation hours is 2 hours. When the brightness is adjusted to 50%, operating time will be about 3.5 hours. The brightness will diminish gradually beyond these run times.

**Product design and specifications are subject to change without notice.

LEGAL NOTICES

FCC Caution

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY

For complete warranty, visit www.insigniaproducts.com.

CONTACT INSIGNIA

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries.
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2015 Best Buy. All rights reserved. Made in China