gourmia

Automatic Cold Brewer

Model# GCM-6800

USER MANUAL

Read this manual thoroughly
before using and save it for
future reference

Model: GCM-6800
© 2017 Gourmia
www.gourmia.com
The Steelstone Group
Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestion in this manual.

Welcome to the *Cool Smooth World* of Cold Brewing by Gourmia

Congratulations on your purchase of the Automatic Cold Brewer from Gourmia, exclusively designed for healthier cooking!

You are undoubtedly one of those special people who appreciate the great taste of a smooth ice cold cup of cold brewed coffee, – but until now to get that special strong smooth taste the process would take many long hours if not days! Enter the hottest product in cold brewing: the Gourmia Automatic Cold Brewer.

With your new purchase you can now prepare the same high quality and rich refreshing flavor in a fraction of the time, right in the your own home. Winter, Spring, Summer or Fall, it's as simple as just pressing a button on your new Automatic Cold Brewer from Gourmia. Prepare to discover the kind of cold rich flavor that will warm your heart in just minutes as opposed to hours!

The pages of this manual offer full and comprehensive instructions to guide you through the functions and features of the Automatic Cold Brewer from Gourmia Inside this guide you will also find information on its modes of operation, complete step-by-step instructions for the operation, assembly, cleaning, and maintenance of your appliance.

Please read all safety instructions thoroughly to ensure safe usage at all times.

Thank you for your purchase! We sincerely hope you will enjoy this as well as all the many innovative products brought to you by our family at Gourmia.

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL

When using the Cold Brew Coffee Maker, the following basic safety precautions should always be followed:

1. READ ALL INSTRUCTIONS.
2. Remove all wrappings and packaging from appliance before use.
3. Wash and dry the appliance thoroughly before use.
4. All parts must be properly assembled before use.
5. To protect yourself against the risk of an electrical shock, never immerse cord, plug, or main unit into water or any other liquid.
6. Operate appliance on a stable and dry surface only.
7. Do not operate appliance with a damaged cord or plug. If the appliance malfunctions or is damaged, return the appliance to the supplier for examination, repair, or electrical and/or mechanical adjustment.
8. Do not use any attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock or personal injury.
9. This appliance is intended for indoor and household purposes only. Do not use outdoors.
10. This appliance should not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
11. To clean main unit - wipe the surface with a soft, damp cloth and then dry thoroughly.
12. Never immerse the main unit in water or any other liquid.
13. Children should not be alowed to play with the appliance.
14. Always be sure to uplug the appliance from outlet prior to assembly, disassembly, cleaning, and storage.
17. This appliance is inot intended for commercial or industrial use.
18. Always unplug appliance if left unattended.
19. Check and make sure voltages and currents of the appliance are compatible with your power supply.
20. USE ONLY COLD OR ROOM TEMPERATURE WATER. NEVER USE HOT WATER.

FOR HOUSEHOLD USE ONLY

TABLE OF CONTENTS

Why Cold Brew.....7

Know Your Cold Brewer 8

Using Your Cold Brewer 10

Cleaning & Maintenance.....12

WHY COLD BREW

WHY COLD BREW

Cold brewing makes better iced coffee than refrigerating hot-brewed coffee. When you add hot-brewed coffee to ice, it slowly dilutes, resulting in a weaker-tasting beverage. Cold brew, which generally starts from a concentrate, is meant to be watered down, so adding ice, milk/cream, and not too much water provides a stronger, more flavorful drink. Additionally, hot-brewed coffee over ice can taste bitter (some of those flavors are less noticeable when coffee is hot). Brewing with slow, cold exposure, instead of heat, extracts fewer bitter flavors, so you'll get a sweeter, milder-tasting coffee that's better for drinking cold.

Every cold-brew coffee method works the same way:
Start with a lot of ground coffee (more than you'd typically use to brew drip coffee), add water, let the mixture sit between eight and 24 hours, and then filter it. What's left is either ready to drink or, more often, a concentrate that you should dilute with water or milk.

But now with your purchase of the Gourmia Cool Brewer you can have the same amazing results in just a fraction of the time it normally would take!

So, lets get brewing!

Environment
Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and service
If you need service or information or if you have a problem, please visit our website or contact your distributor.

KNOW YOUR COLD BREWER

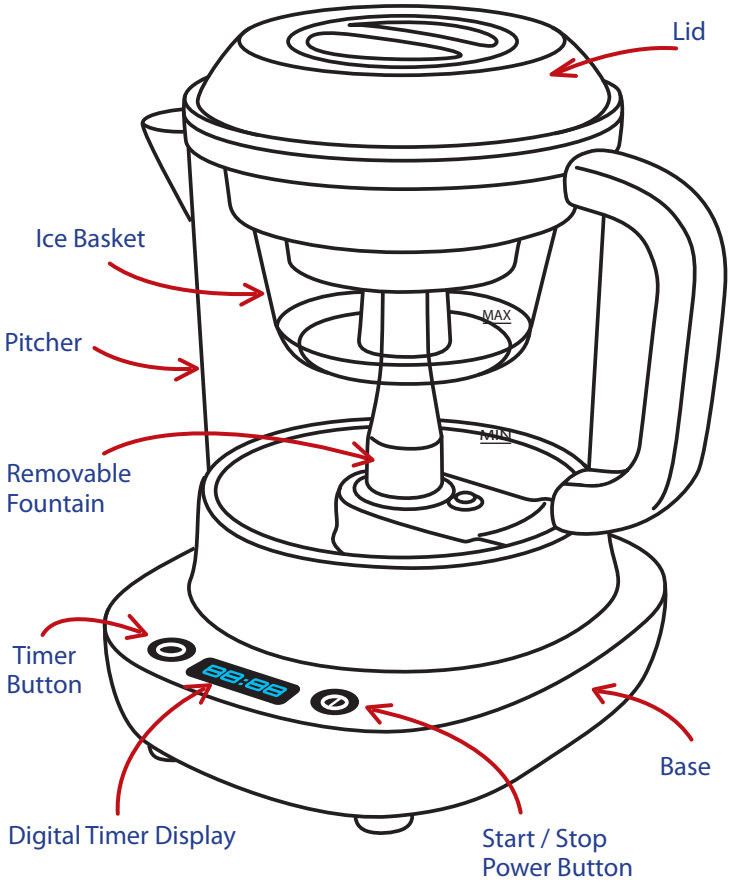

YOUR COLD BREWER PARTS

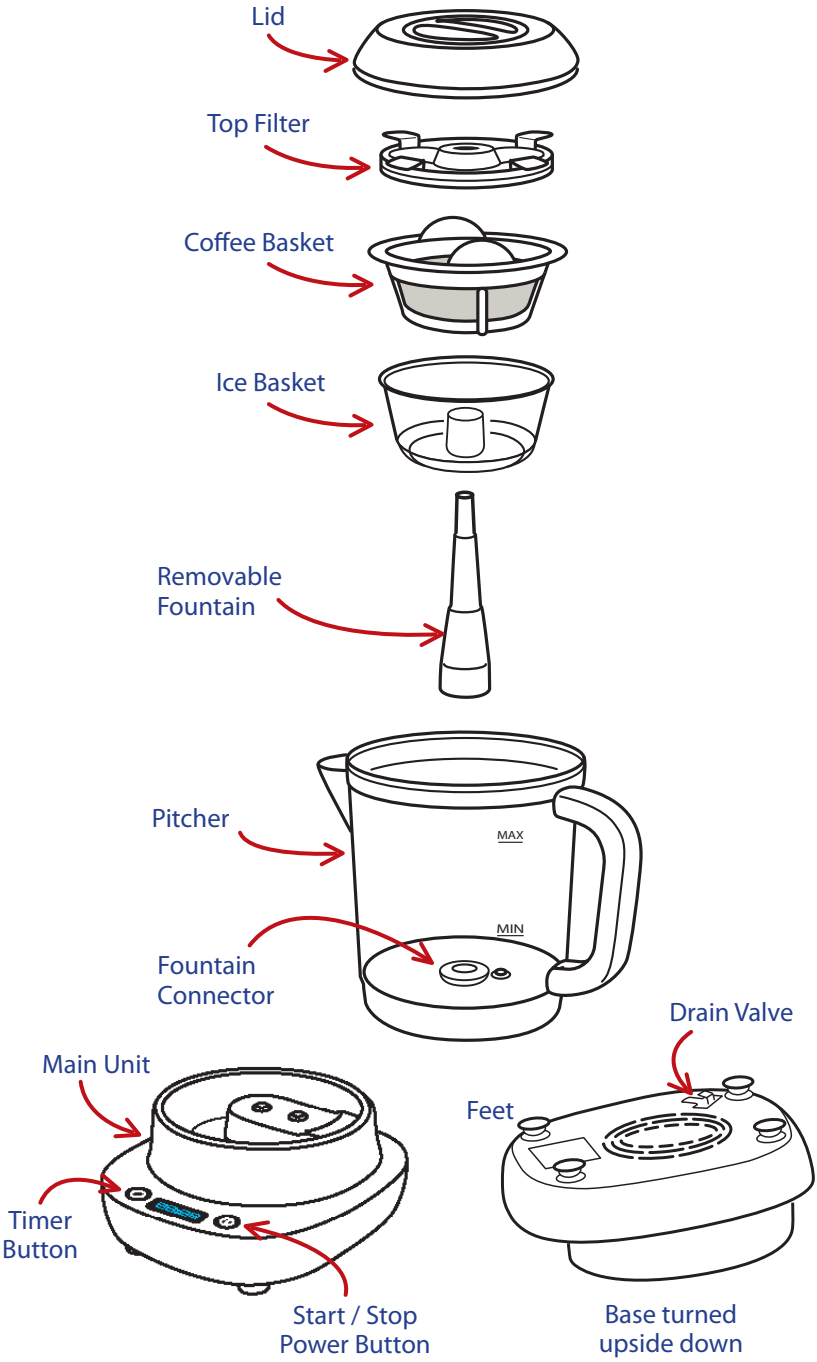

USING YOUR COLD BREW COFFEE MAKER

NOTE: The following directions should be done before the unit is connected to the power source.

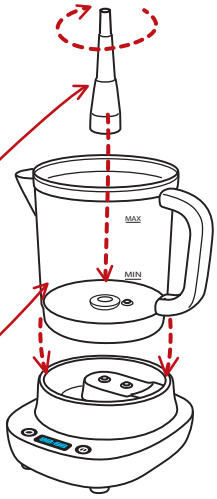

1. Remove all plastic wrappings.
2. Wash and dry the appliance thoroughly before use.
3. Install the REMOVABLE FOUNTAIN into the FOUNTAIN CONNECTOR in the PITCHER, and turn it clockwise to lock it into place.
4. Fill the PITCHER with cold or room temperature water, according to the coffee chart.
5. Attach PITCHER to the main unit.

CAUTION:
TO AVOID HAVING THE GROUND COFFEE BLOCK THE PUMP. ALWAYS USE THIS MACHINE WITH THE TOP FILTER.

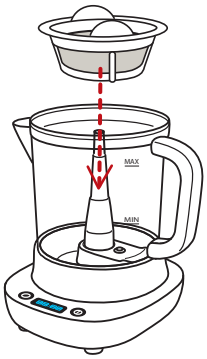

6. Add ground coffee into COFFEE BASKET (maximum weight: 2.1oz / 60 grams). Place the COFFEE BASKET according to the coffee chart, and press down.
7. Place the TOP FILTER onto the COFFEE BASKET of the PITCHER, and press all the way down.
8. Cover the PITCHER with the LID, and turn the LID clockwise to lock into place.
9. Connect the power cord to a nearby power outlet.
10. Select the desired brewing time using the brew guide.
    To begin brewing - press POWER BUTTON.
    To cancel brewing - press POWER BUTTON.
    To reset - hold button for 3 seconds.

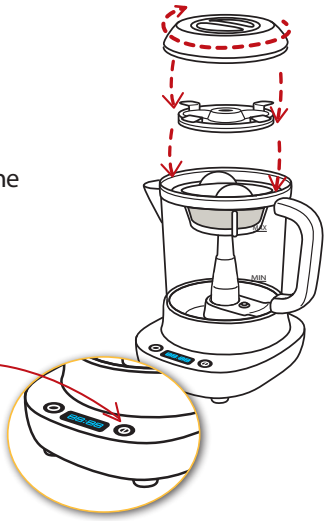

TIP: While the machine is running, you may press the TIMER BUTTON to select a different time.

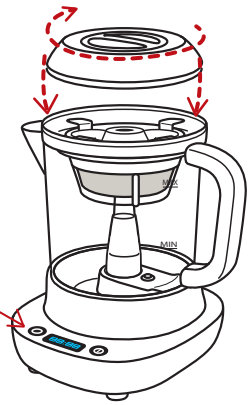

11. Once the countdown has ended, your coffee is ready.

CHILLING CYCLE

1. Remove the COFFEE FILTER BASKET.
2. Insert ICE BASKET and fill with ice.
3. Place the TOP FILTER and lid.
4. Hold the timer button for 3 seconds to select the "Chill Program"
5. Press the POWER BUTTON to begin, the chill cycle will run for 6 minutes.
6. To cancel the chill cycle early, press the POWER BUTTON.

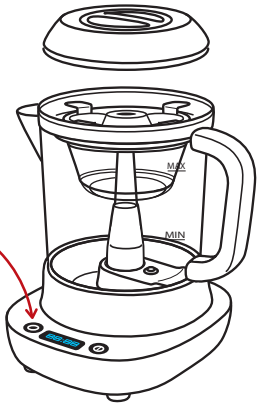

COFFEE BREWING RATIOS *Coffee grind size: medium coarse-coarse*

WATER	COFFEE GRINDS (g)	COFFEE GRINDS(tbsp)
10 minimum	25	5
16	40	8
24	60	12

BREW STRENGTH *Coffee grind size: medium coarse-coarse*

STRENGTH	TIME (minutes)
Light	10
Medium	20
Bold	30
Concentrate	40

NOTE:
To make a strong cup of coffee in 10 minutes, use a drip coffee style medium grind. Anything longer than 10 minutes will produce very strong coffee for concentrate.

CLEANING AND MAINTENANCE

CAUTION:

1. Before cleaning, make sure the appliance is disconnected from the power source.
2. Never immerse the main unit in water or any other liquid. Wipe with a damp cloth and dry thoroughly.

CLEANING:

1. Remove the Lid from the PITCHER by turning it counter clockwise.
2. Remove the TOP FILTER along with the COFFEE BASKET from the PITCHERand discard any leftover ground coffee.
3. Remove the Ice basket from the PITCHER.
4. Use the handle to wiggle off - counter clockwise - the PITCHER from the Main Unit. Pour out any remaining water.
5. Turn the REMOVABLE SPRAYER from the SPRAYER CONNECTOR - counter clockwise - and then lift straight up.
6. Rinse the PITCHER with clean cold water several times to ensure that the unit is thoroughly clean.
7. To remove any old coffee that remained in the MAIN UNIT - turn the MAIN UNIT upside down and lift open the OLD COFFEE LEAKING VALVE. Turn unit over and allow the old coffee or water to drip out from the pump and pipes.

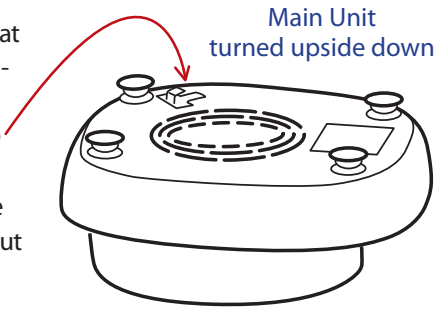

Make sure to reconnect the OLD COFFEE REMOVING VALVE as soon as you are finished cleaning the main unit.

8. The following parts may be washed in warm, soapy water and rinsed thoroughly.
   - Lid
   - Top filter
   - Coffee basket
   - Ice basket
   - Removable spı
   - Pitcher

9. Dry all parts thoroughly after cleaning.

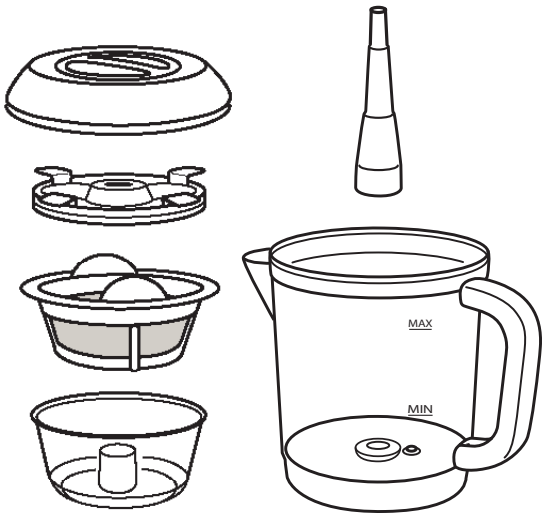

CAUTION:
Do not put any water in the main unit once the PITCHER has been removed.

Environment
Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and service
If you need service or information or if you have a problem, please visit our website or contact your distributor.

WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/part. If product repair/ replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties.
The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

FOR CUSTOMER SERVICE

QUESTIONS OR COMMENTS

VISIT US @ GOURMIA.COM

INFO@GOURMIA.COM

OR CALL 888.552.0033

gourmia