



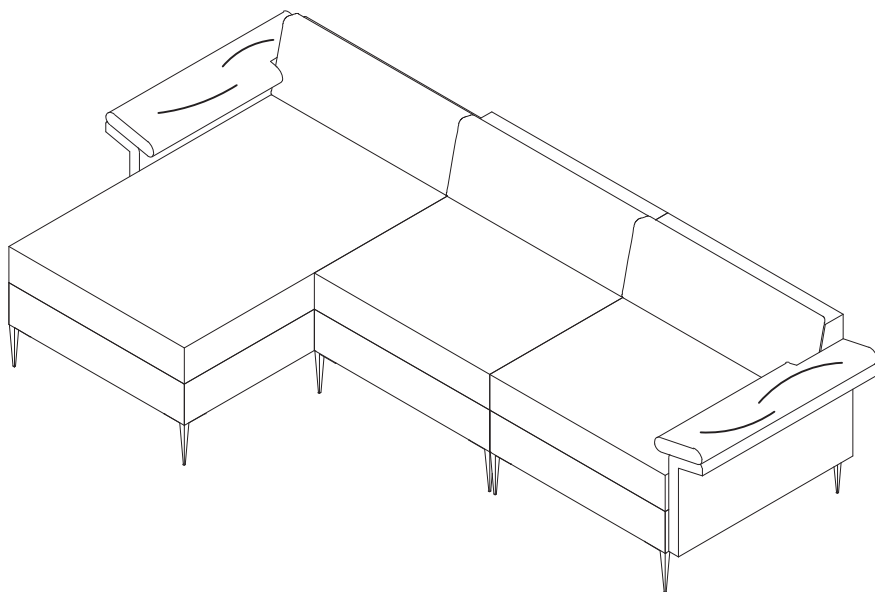


USER'S MANUAL


Sectional Sofa HV10301

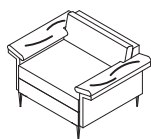


(A+F)

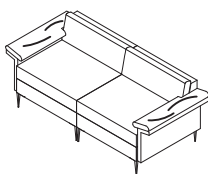


(A+B)

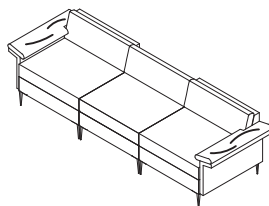


(A+B+C)

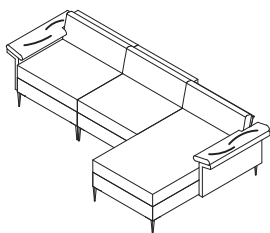


(A+B+D)

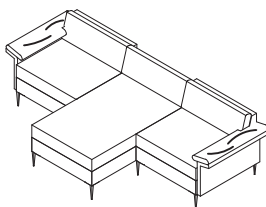


(A+B+D)

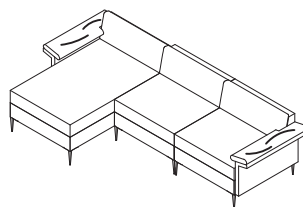

(A+B+D)


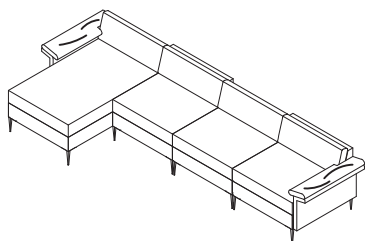


(A+B+C+D)

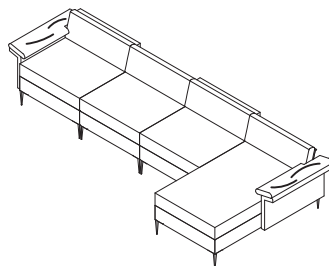

(A+B+C+D)


A

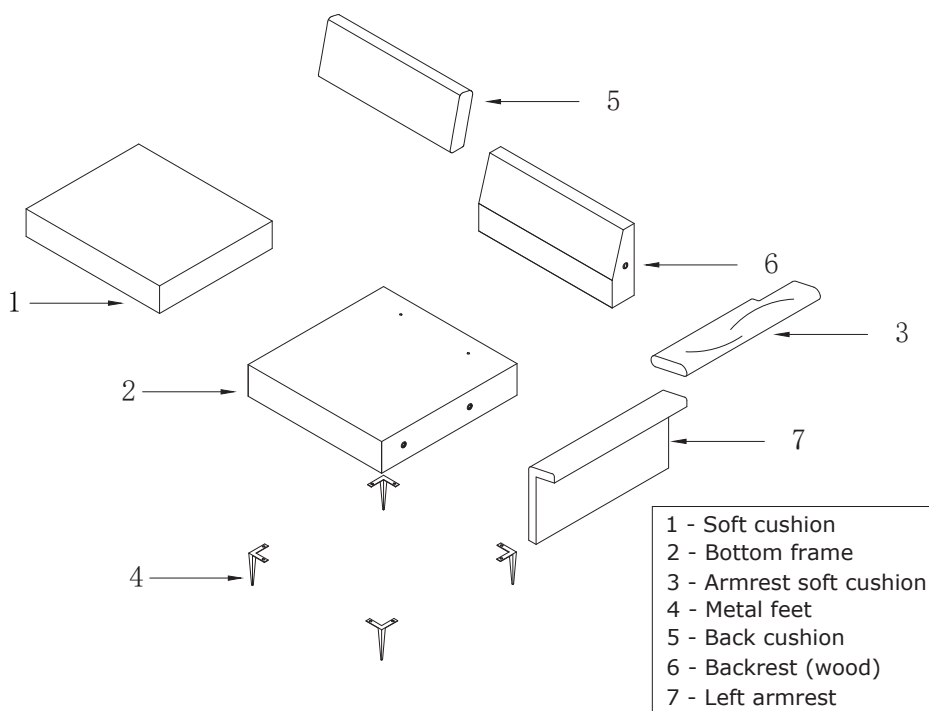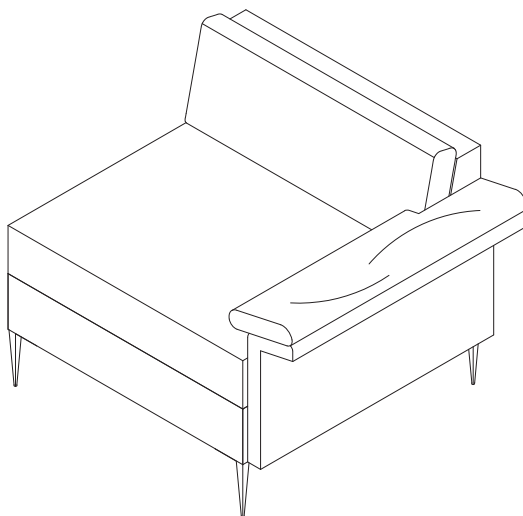

(A - exploded view)

Accessories list-A


Handle screw



a x4

M8*40

Handle screw



b x3

M10*40


Hand knob



c x6

M8

Screw rod



d x1

M8*80

Screw



e x8

M8*25

Nylon gasket



f x8

M8


Allen key



g x1

M6

Open end wrench



h x1

14mm

Nut



j x1

M8

Gasket




i x1


M8

Module A

(step 1)

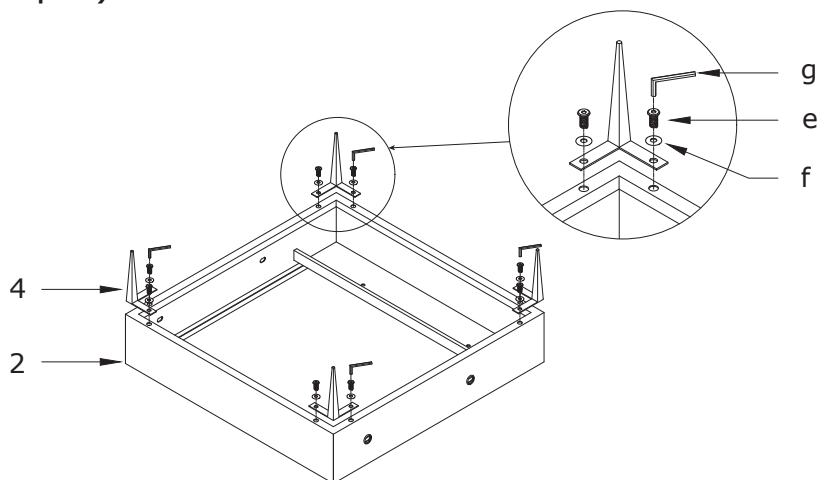

(step 2)

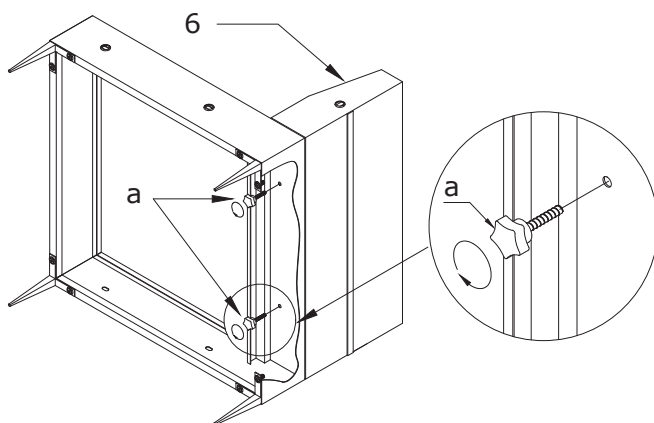


Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.


Module A



(step 3)

Note: First connect the backrest and armrest, but do not tighten, then connect the bottom frame and armrest, and finally tighten them in turn.

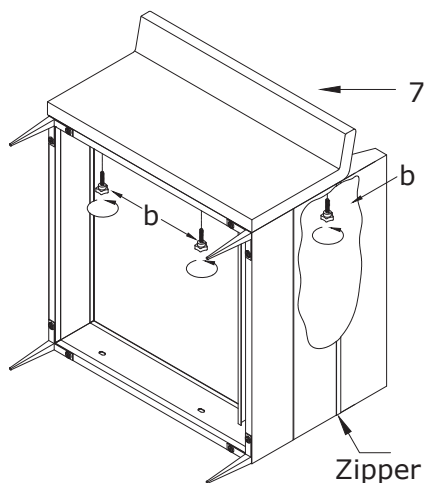

(step 4)

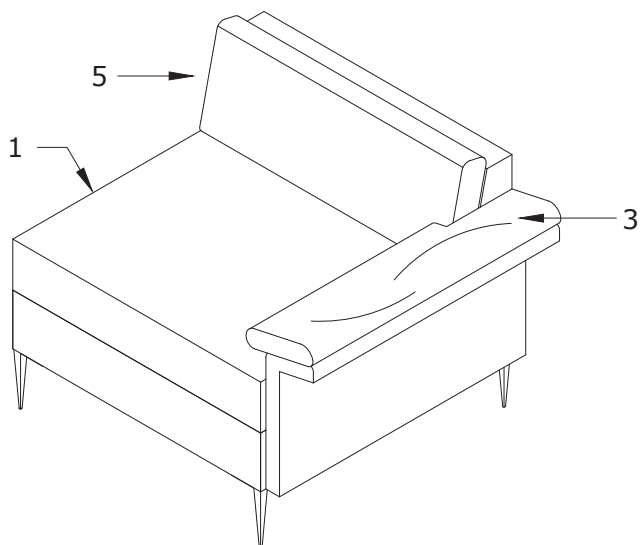

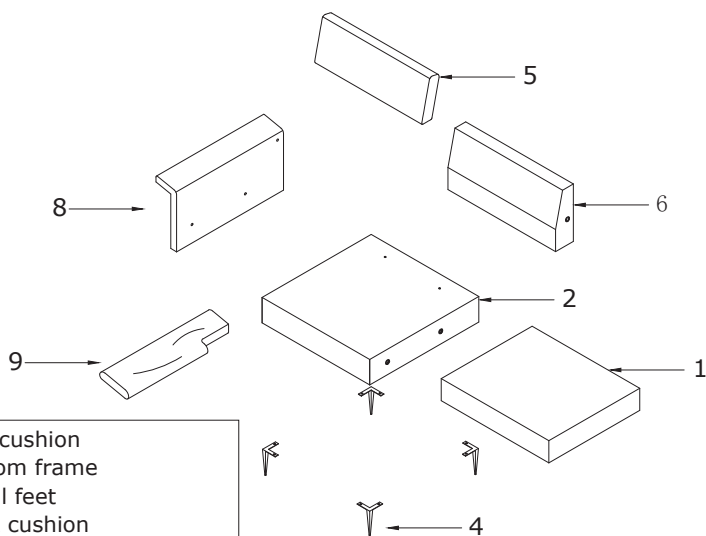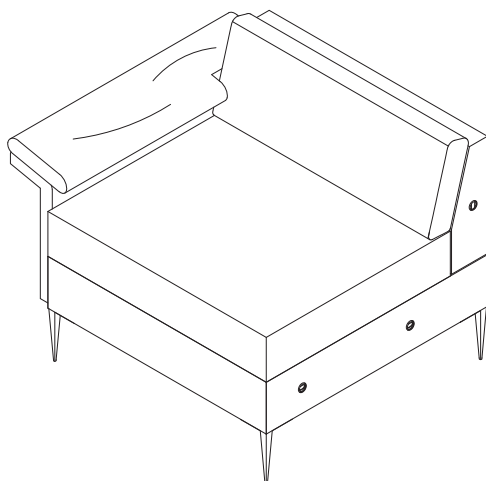

- 1 - Soft cushion
- 2 - Bottom frame
- 4 - Metal feet
- 5 - Back cushion
- 6 - Backrest (wood)
- 8 - Right armrest
- 9 - Armrest soft cushion(R)

(B - exploded view)

Accessories list-B


Handle screw



a x4

M8*40

Handle screw



b x3

M10*40

Hand knob



c x3

M8

Screw



e x8

M8*25

Nylon gasket




f x8

M8

Module B


(step 1)

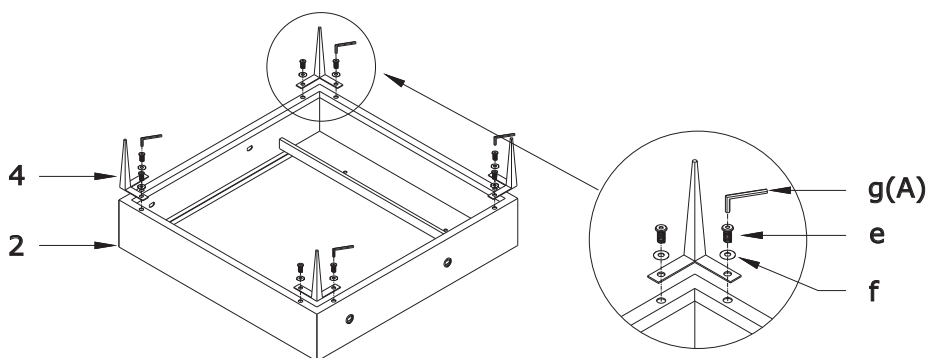

Module B


(step 2)

Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.

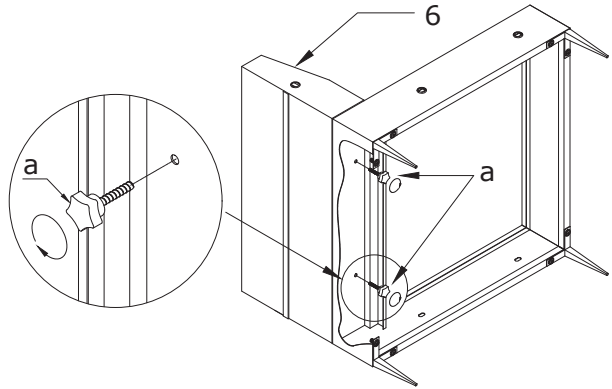


(step 3)

Note: First connect the backrest and armrest, but do not tighten, then connect the bottom frame and armrest, and finally tighten them in turn.

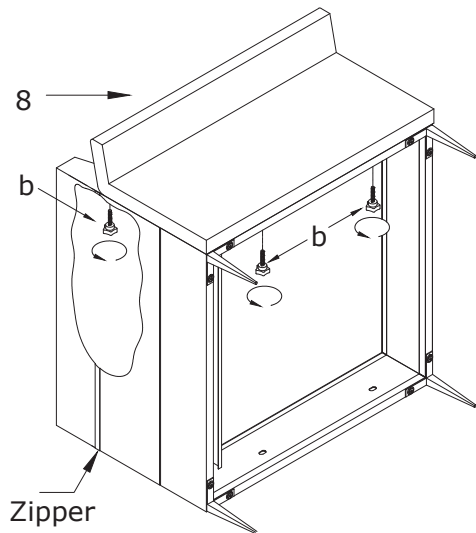



Module B

(step 4)

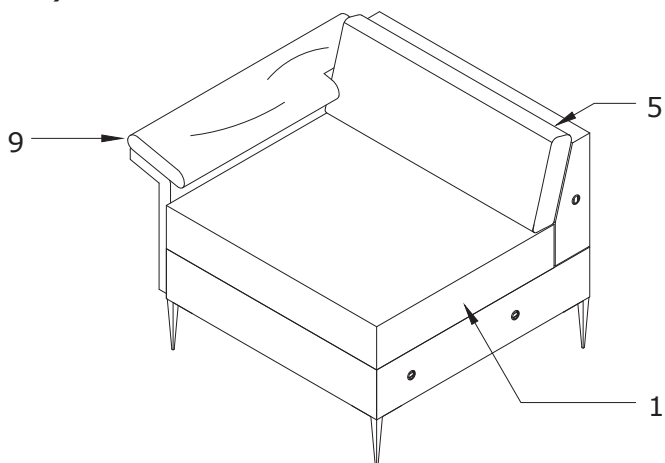


C

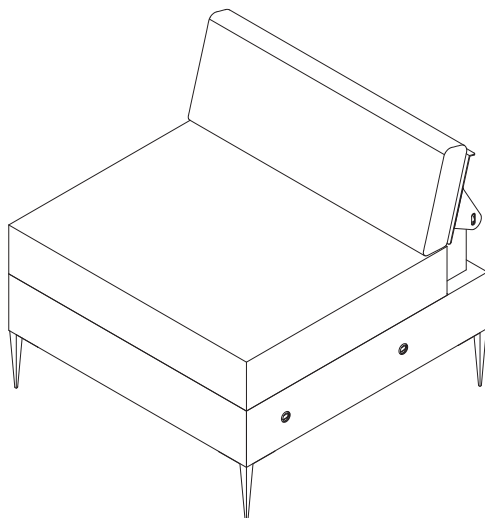

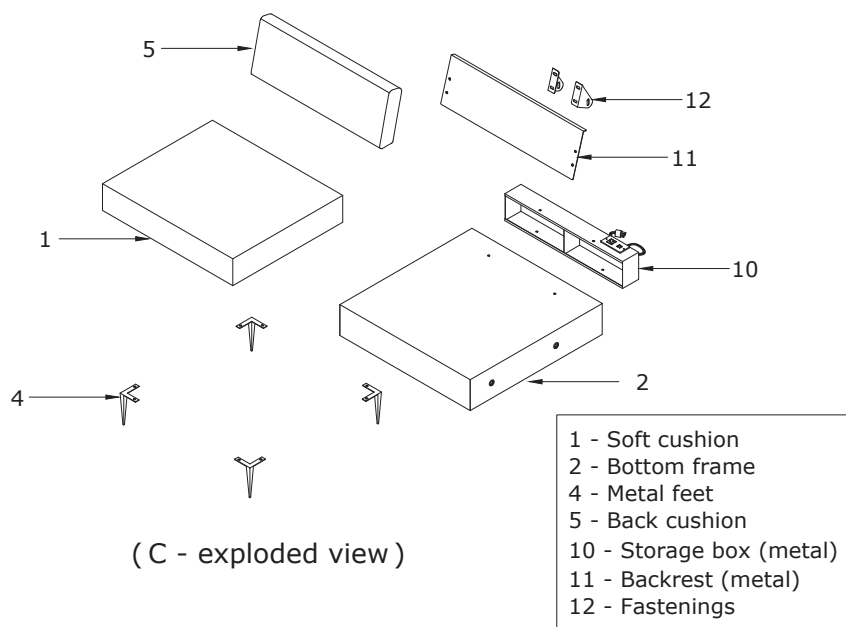

Accessories list-C

Handle screw



a x2

M8*40

Hand knob



c x2

M8


Screw



e x8

M8*25

Nylon gasket



f x14

M8

Screw



i x6

M8*15


Nut



j x6

M8

Screw



k x2

M8*30

Gasket




l x2


M8

Module C

(step 1)

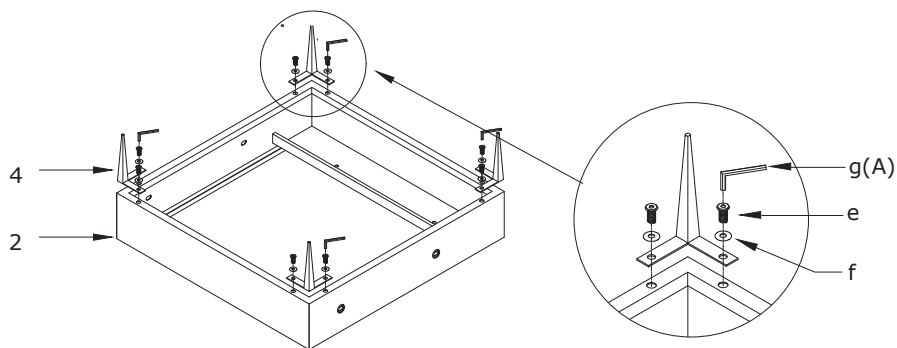


(step 2)

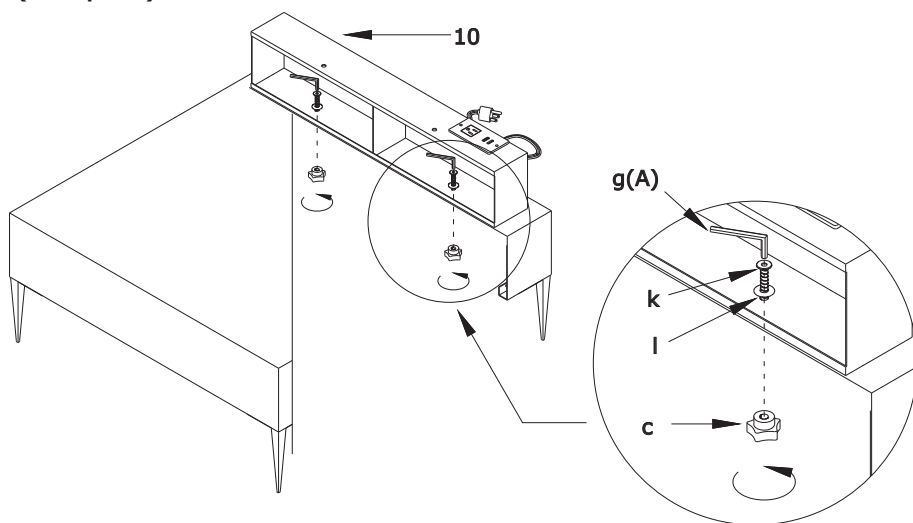

Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.


Module C

(step 3)

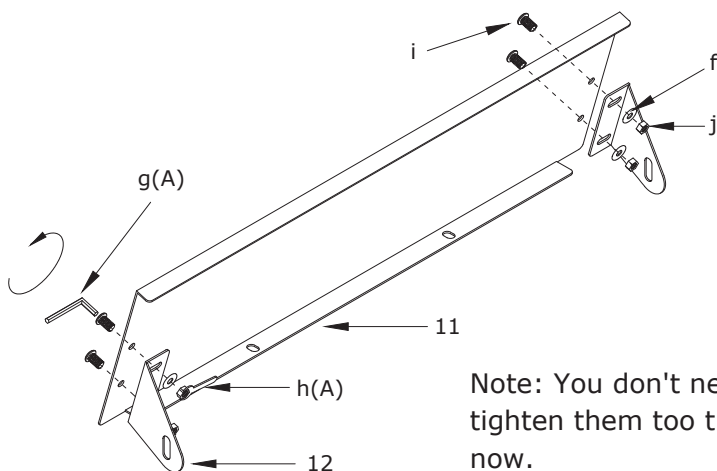


Note: You don't need to tighten them too tightly now.

(step 4)

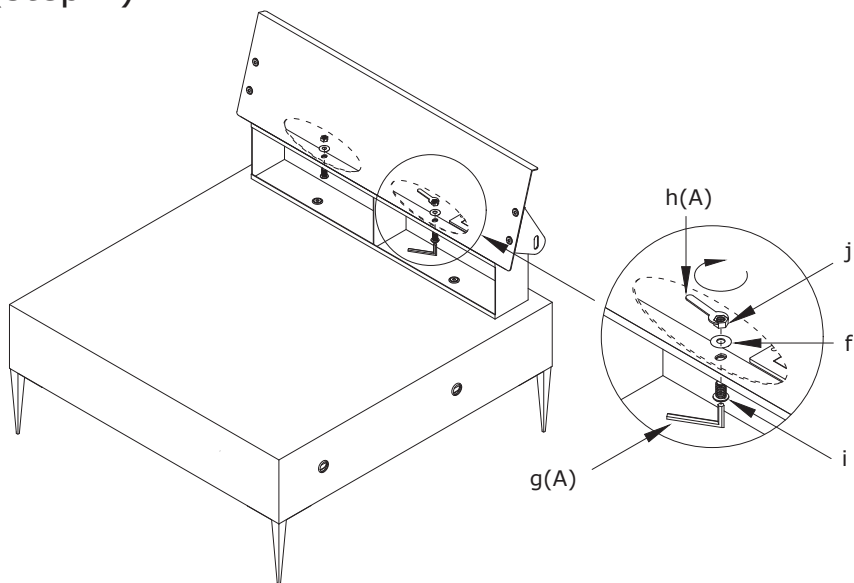



Module C

(step 5)

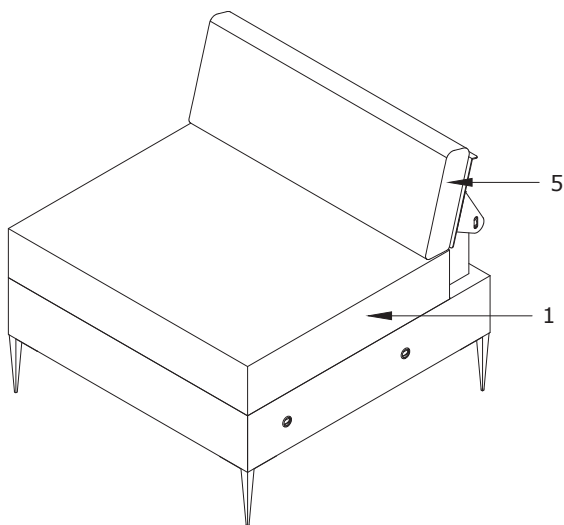

D

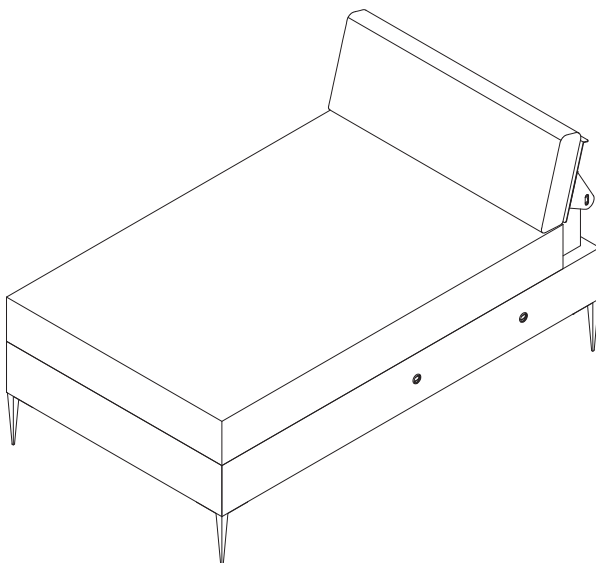

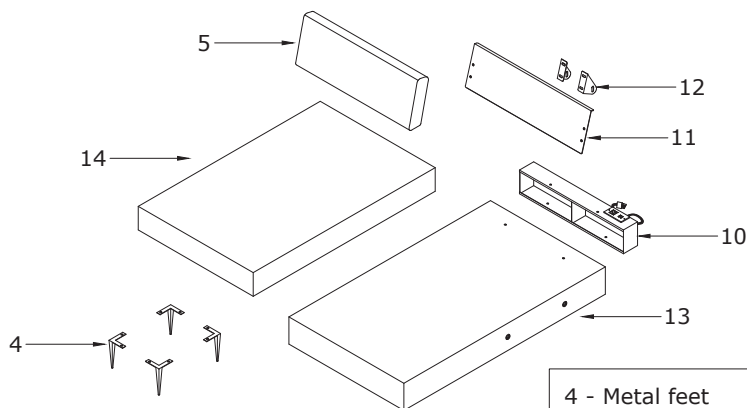


(D - exploded view)

- 4 - Metal feet
- 5 - Back cushion
- 10 - Storage box (metal)
- 11 - Backrest (metal)
- 12 - Fastenings
- 13 - Bottom frame
- 14 - Soft cushion

Accessories list-D

Handle screw



a x2

M8*40

Hand knob



c x2

M8


Screw



e x8

M8*25

Nylon gasket



f x14

M8

Screw



i x6

M8*15


Nut



j x6

M8

Screw



k x2

M8*30

Gasket




l x2


M8

Module D

(step 1)

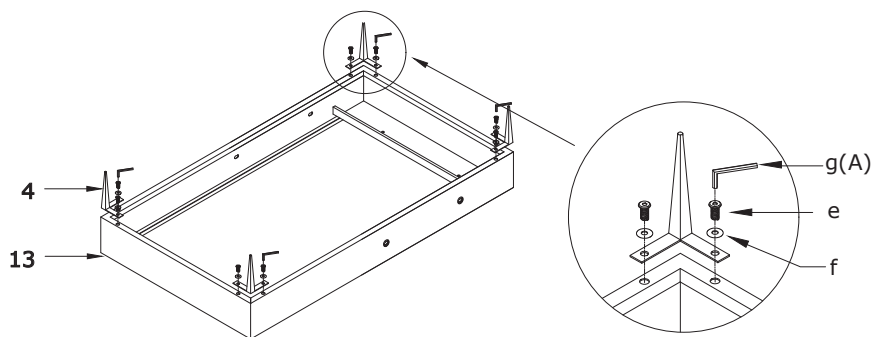


(step 2)

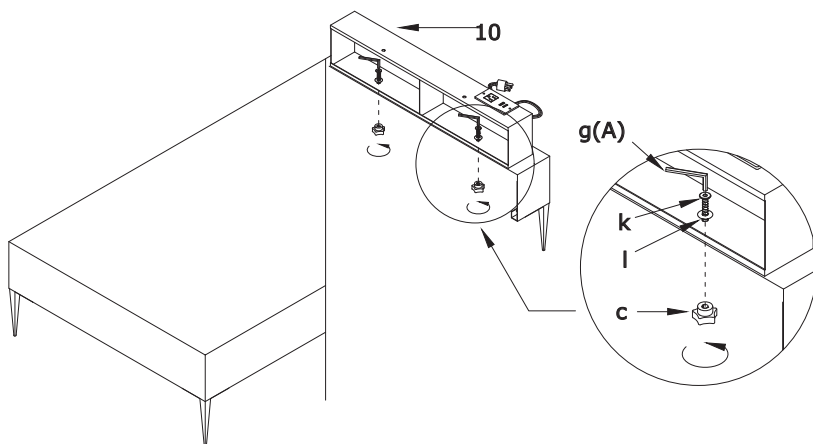

Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.


Module D

(step 3)

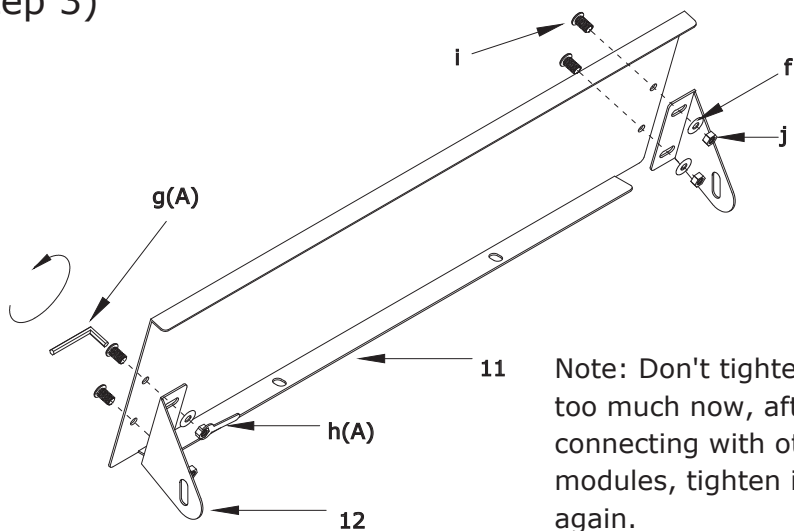


Note: Don't tighten it too much now, after connecting with other modules, tighten it again.

(step 4)

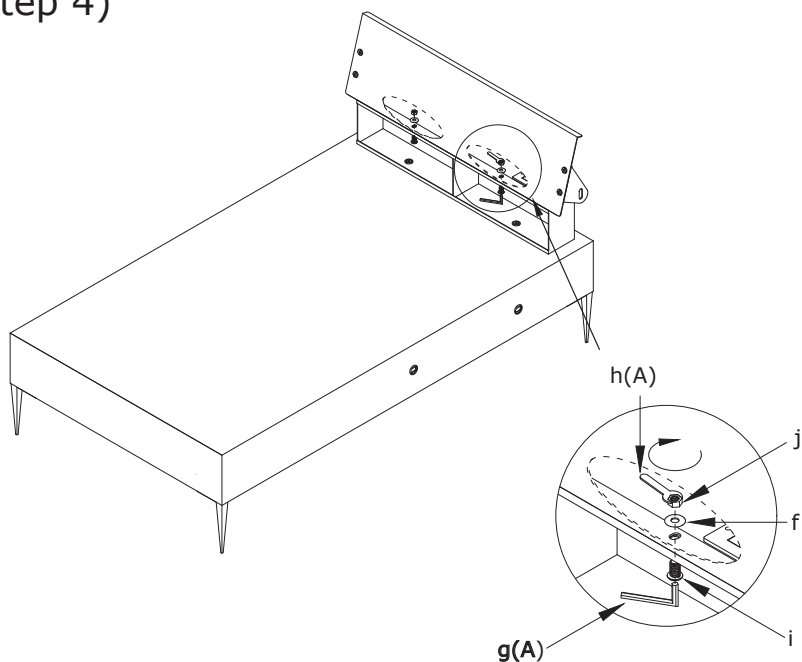



Module D

(step 5)

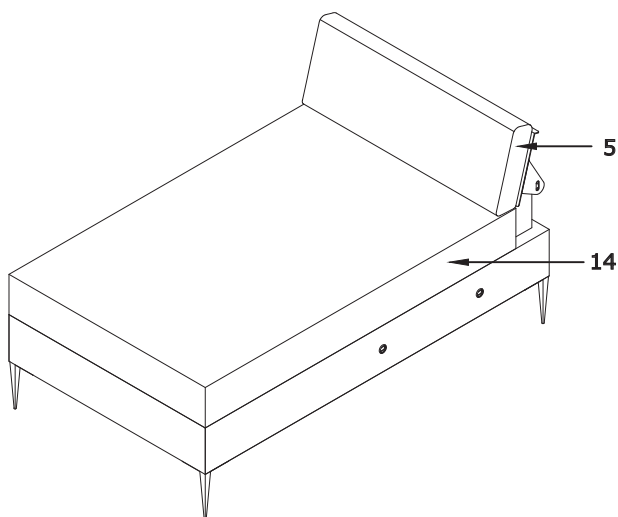


E

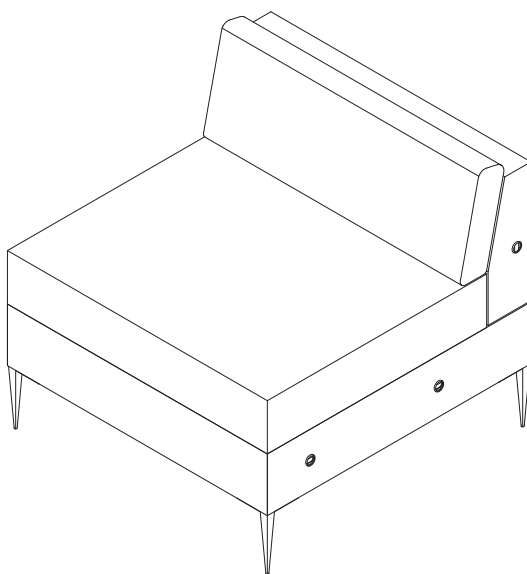

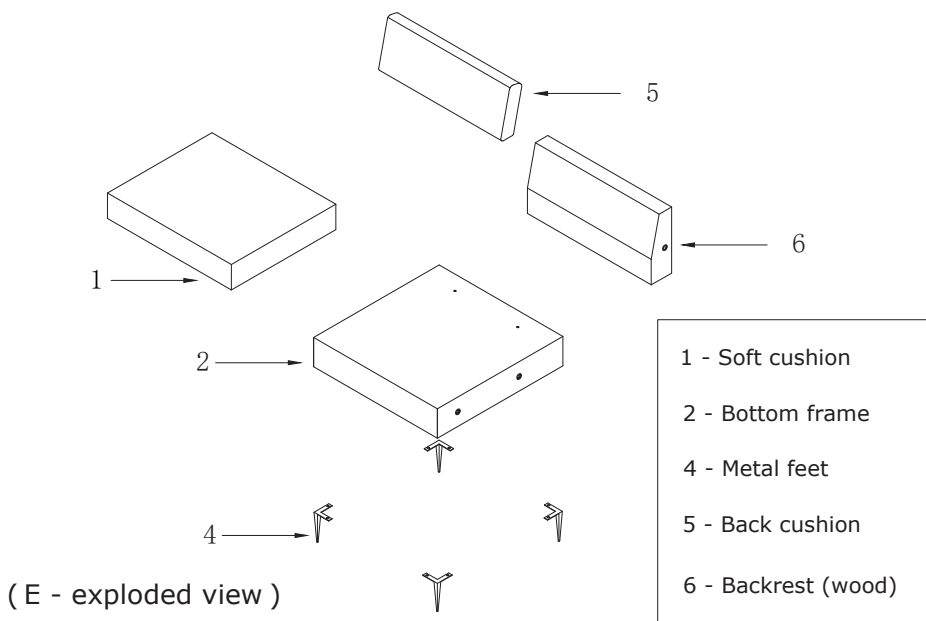

Accessories list-E

Handle screw



a x4

M8*40


Hand knob



c x2

M8

Screw rod



d x1

M8*80


Screw



e x8

M8*25

Nylon gasket



f x8

M8

Nut



j x1

M8

Gasket




l x1


M8

Module E

(step 1)

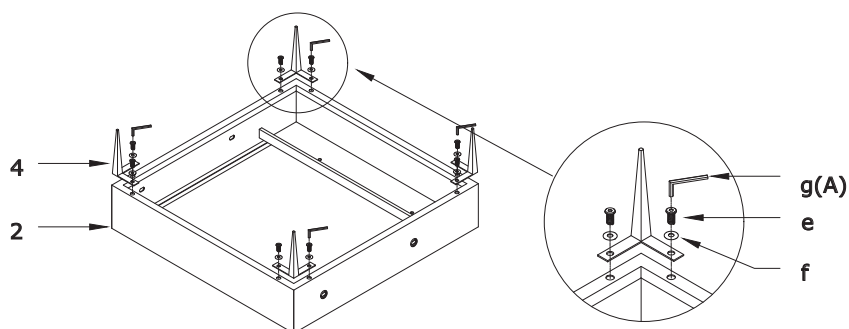


(step 2)

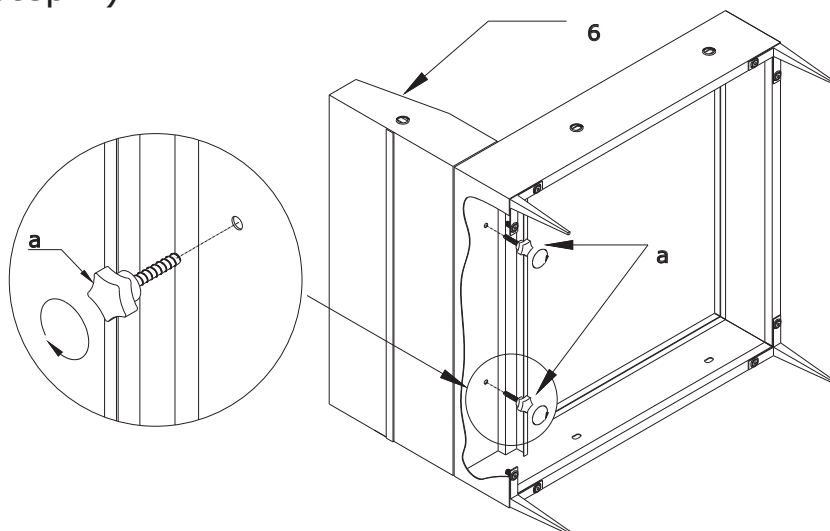


Note: First, use a screwdriver or other tool to pierce the connection hole upwards from the opening at the bottom of the bottom frame.

Module E

(step 3)

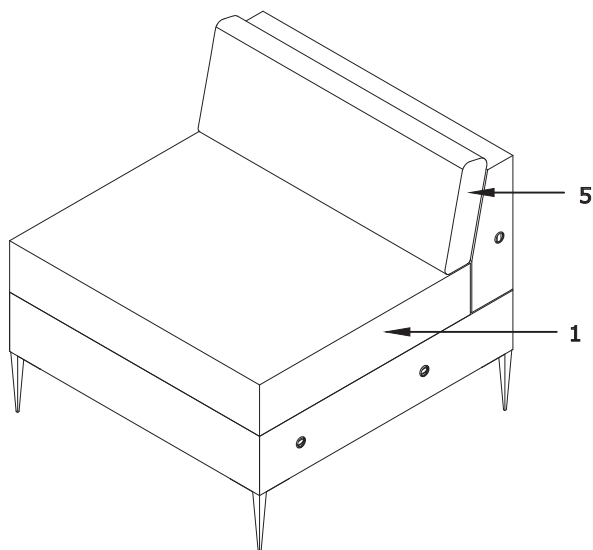


F

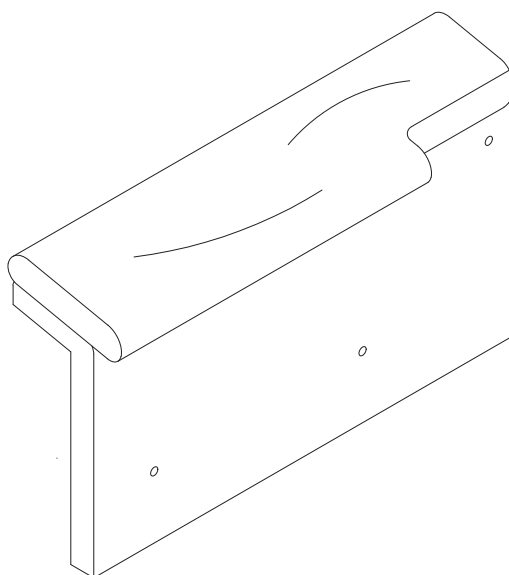

Accessories list-F

Handle screw




b x3

M10*40

Combination steps

For example:(A+B+C)


(step 1)

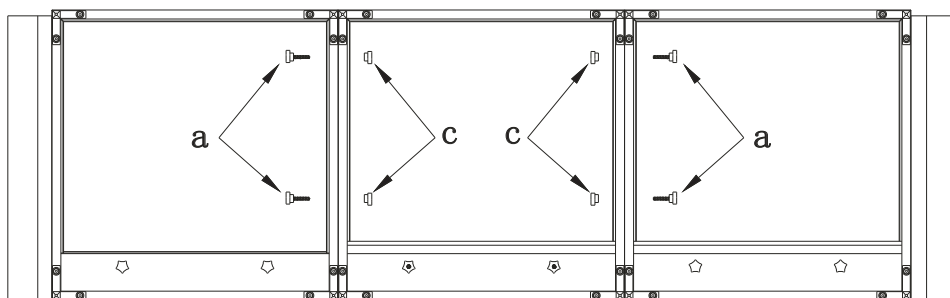

Combination steps

For example:(A+B+C)

(step 2)

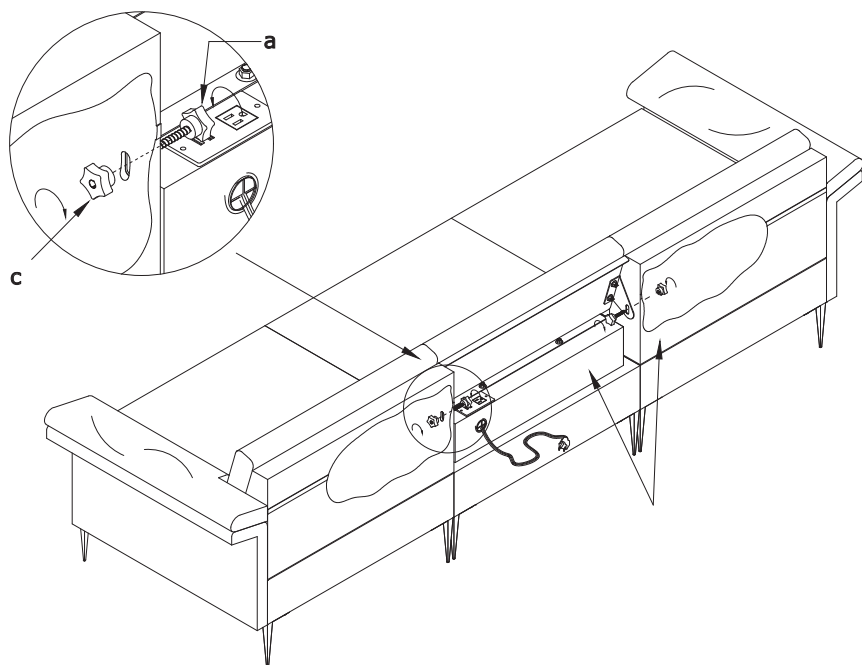


Note: You can attach any backrest to any base frame.

Combination steps

For example:(A+B)


(step 1)

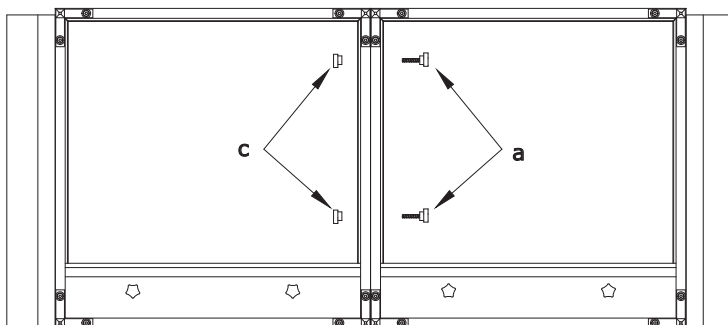

Combination steps

For example:(A+B)

(step 2)

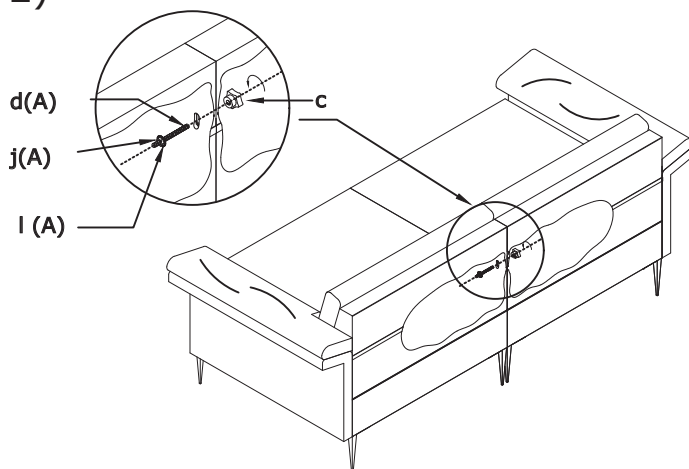

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk