


Bestier

ASSEMBLY
INSTRUCTION


V001-060524-CY

61" TV Stand/Fireplace TV stand

A

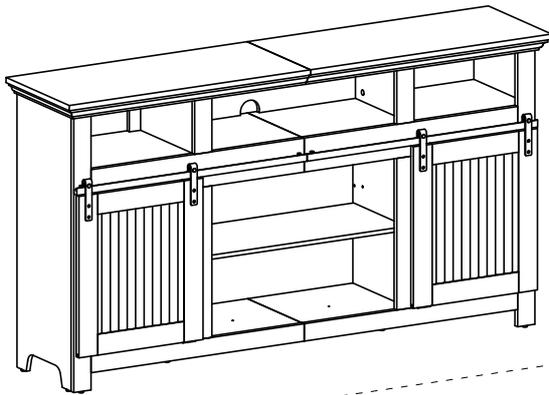

B

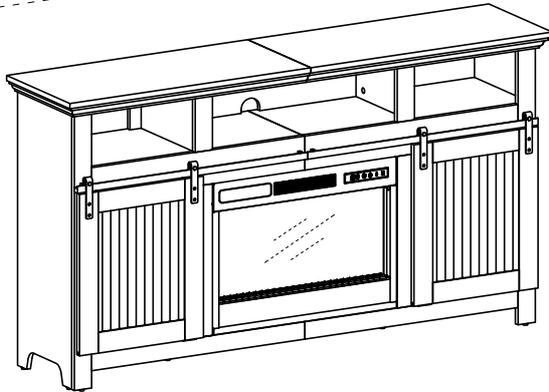

Know more about Bestier from



CUSTOMER SUPPORT

CONTACT US BY:
PHONE: 888-666-1086
EMAIL: Service@bestier.net

Thanks for choosing Bestier!
Feel free to contact us if you need any help.
Please kindly share your shopping experience
with us on the platform if you are satisfied with it.

HELPFUL HINTS

⚠️ BEFORE YOU START

- Inspect product packaging to ensure the appearance is good.
- Read the assembly instruction carefully and follow it step by step.
- To avoid any scratching, putting a soft blanket on the floor is suggested.
- Identify, sort and count all the parts with tags.
- Find out installation position according to the drawing and install it in correct steps.



OTHER

- People needed for assembly: 1-2.
- Estimated assembly time: 0.5-1h.


⚠️ CAUTION

- Be cautious when using a power drill or power screwdriver.
- Please be aware to slow down and stop when screw is nearly tight.
- Do Not use any harsh chemicals or abrasive cleaners for this item.
- Push, pull or drag this item carefully.


DETAILS

UNIT: INCH/CM



A

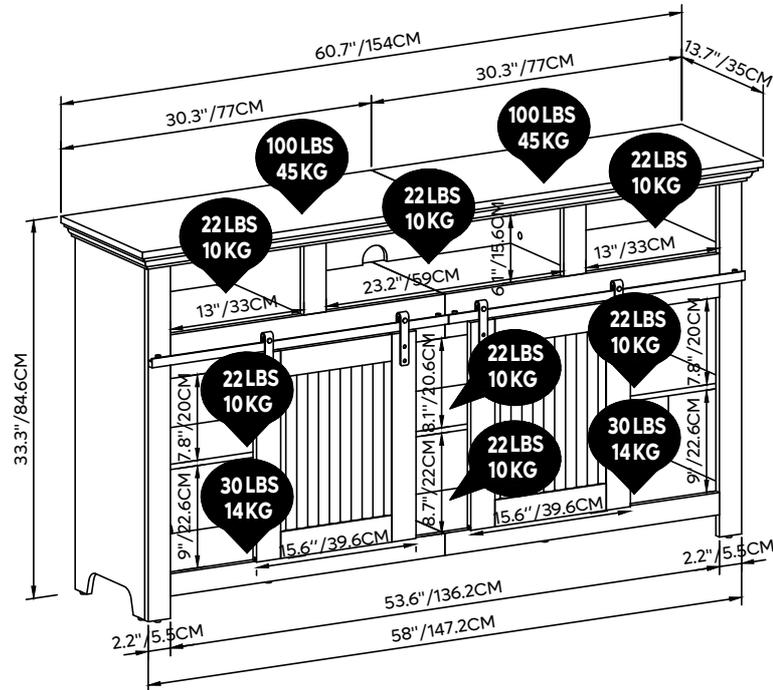

B










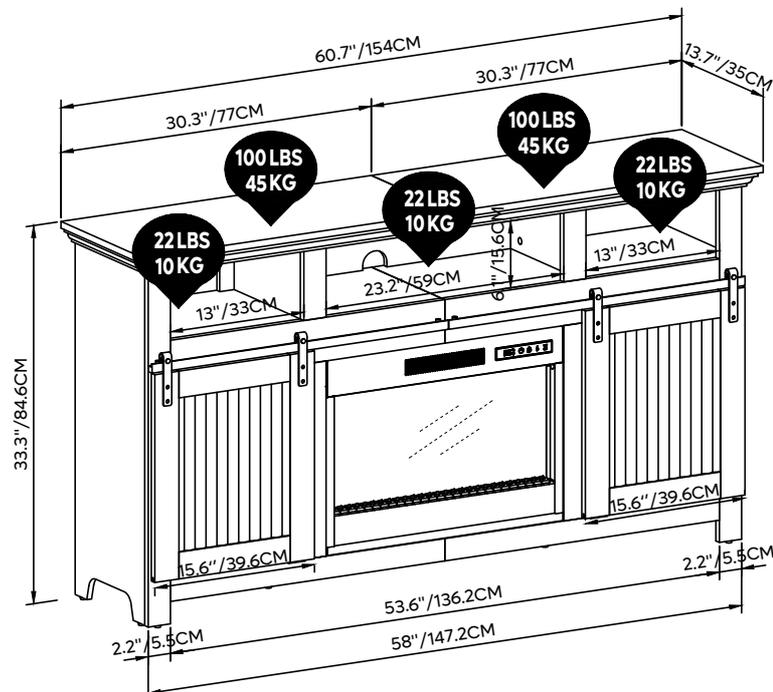


DETAILS






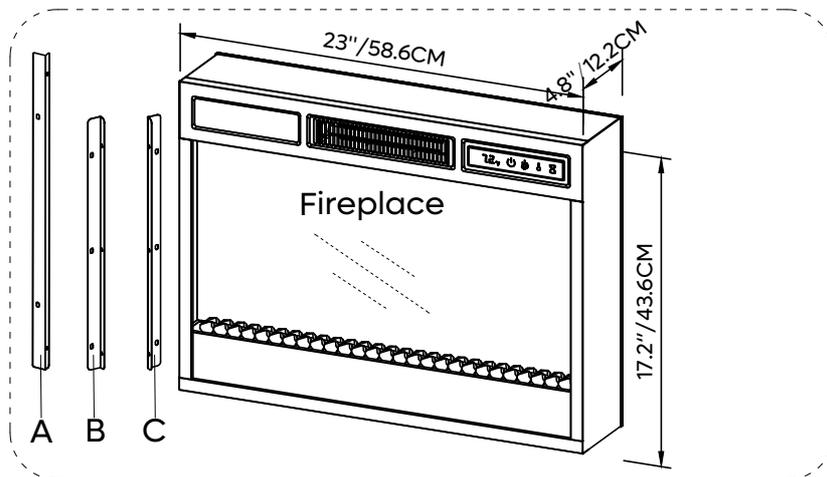
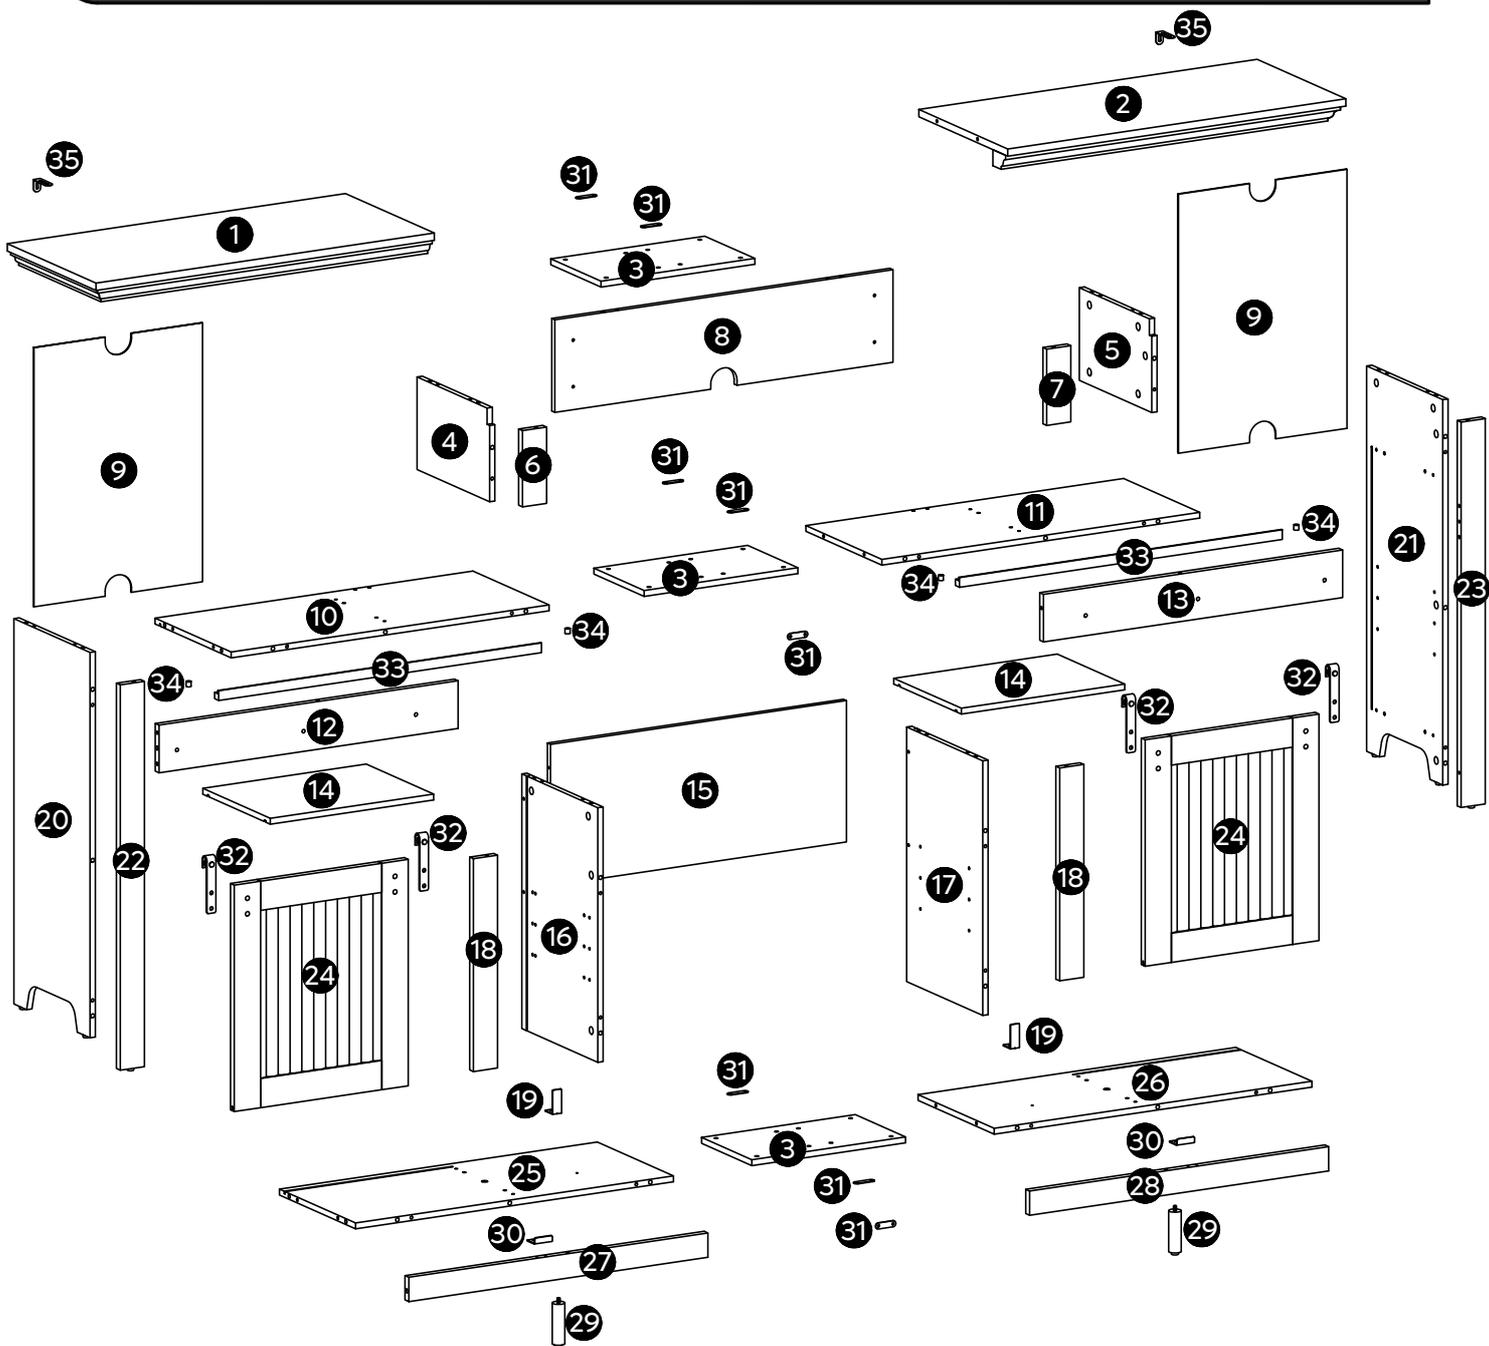


L103515FP











PART LIST

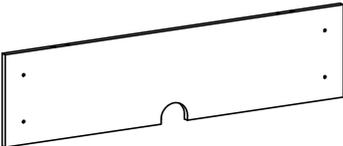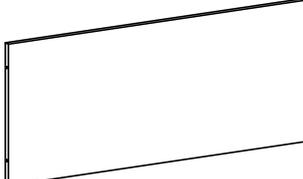1  X1	2  X1	3  X3
4  X1	5  X1	6  X1
7  X1	8  X1	9  X2
10  X1	11  X1	12  X1
13  X1	14  X2	15  X1
16  X1	17  X1	18  X2

PART LIST

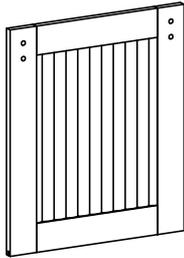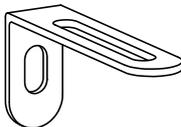
<p>19</p>  <p>X2</p>	<p>20</p>  <p>X1</p>	<p>21</p>  <p>X1</p>
<p>22</p>  <p>X1</p>	<p>23</p>  <p>X1</p>	<p>24</p>  <p>X2</p>
<p>25</p>  <p>X1</p>	<p>26</p>  <p>X1</p>	<p>27</p>  <p>X1</p>
<p>28</p>  <p>X1</p>	<p>29</p>  <p>X2</p>	<p>30</p>  <p>X2</p>
<p>31</p>  <p>X8</p>	<p>32</p>  <p>X4</p>	<p>33</p>  <p>X2</p>
<p>34</p>  <p>X4</p>	<p>35</p>  <p>X2</p>	

ACCESSORY LIST

A	ST6x33mm	54+2	
B	Ø15mm	54+2	
C	Ø6x30mm	72+4	
D	M6x15mm	8+1	
E	M6x20mm	24+2	
F	M6x25mm	6+1	
G	ST5x38mm	14+2	
H	Ø5x19mm	8+1	
I		8+1	
J	ST3x17mm	8+1	
K	ST3x12mm	20+2	
L	ST4x12mm	12+2	
M	M4x20mm	4	
N	Ø6mm	2	
O	ST4x38mm	2	
M3	M3	1	
M4	M4	1	
		1	

Important



Insert Dowels **ABOUT 2/3** into the Edges of the panels. **IF NECESSARY** tap Dowels Lightly with a rubber mallet.

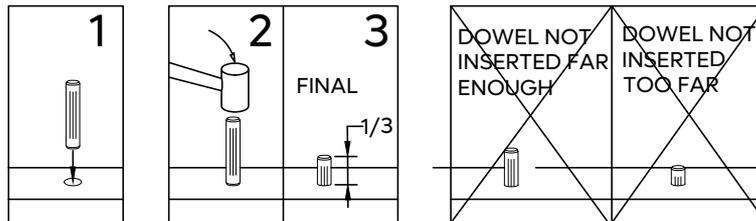

Cam Lock/Dowel Placement Supplement

<p>1</p> <p>CORRECT</p> <p>When inserting the Cam Lock, make sure that the Open End of the Cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw Hole.</p>	<p>2</p> <p>INCORRECT</p> <p>The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.</p>	<p>3</p> <p>To tighten, turn the Cam Lock CLOCKWISE until the arrow signs point AWAY from the connected Panel.</p> <p>※NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.</p>
--	--	---


1

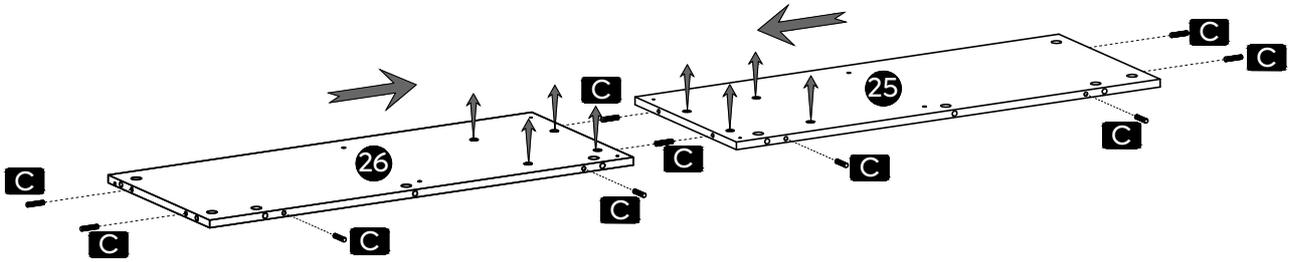


x10

C Ø6x30mm

2

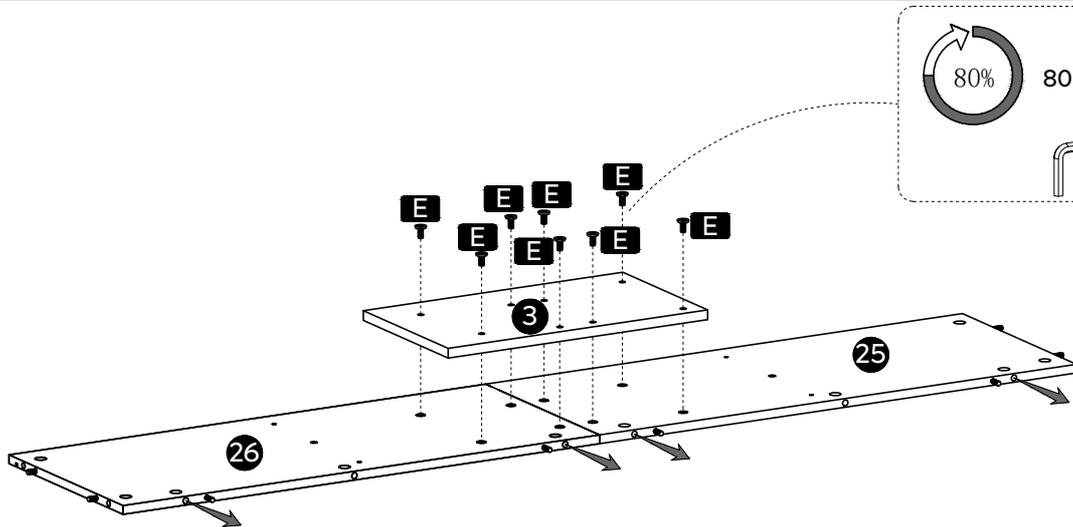

80% tighten





x8

E M6x20mm




M4

3


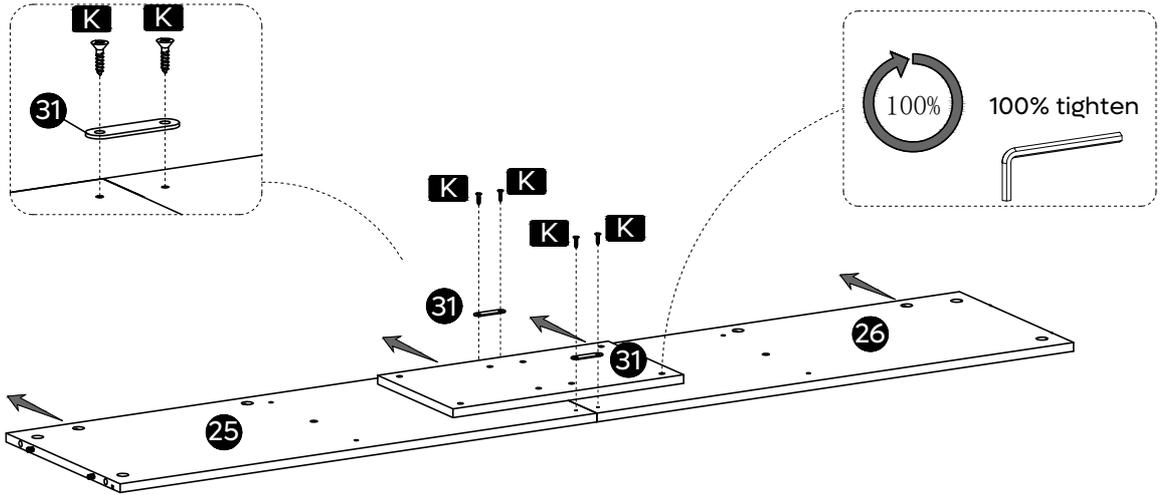


x 4




ST3x12mm


4

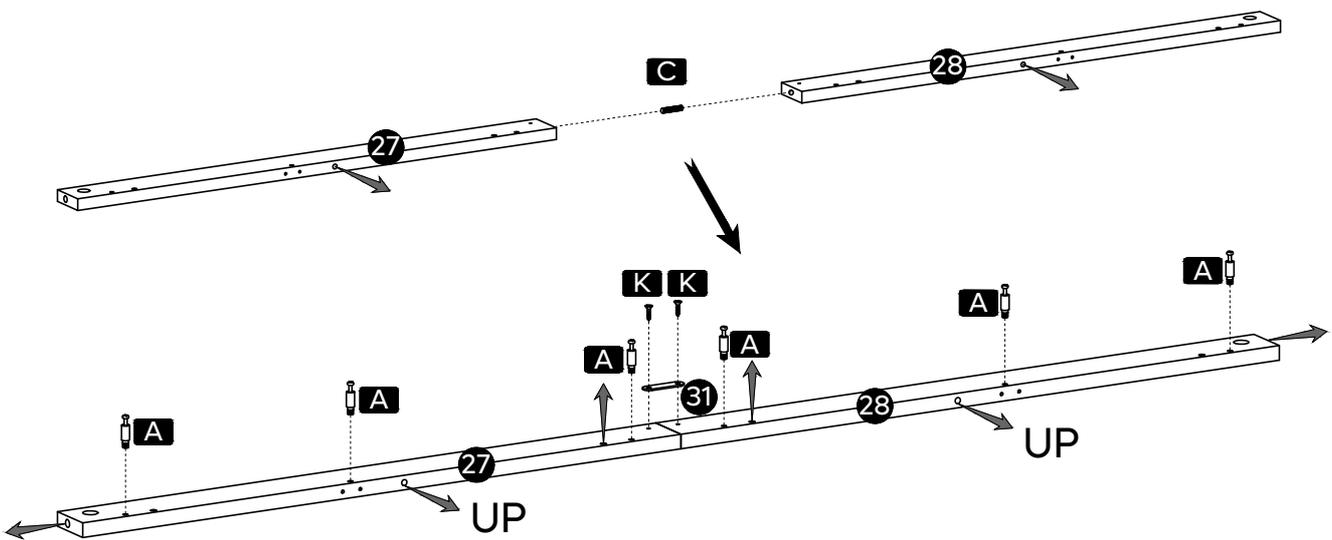


x 6



x 2



x 1




A ST6x33mm


K ST3x12mm

C Ø6x30mm

5


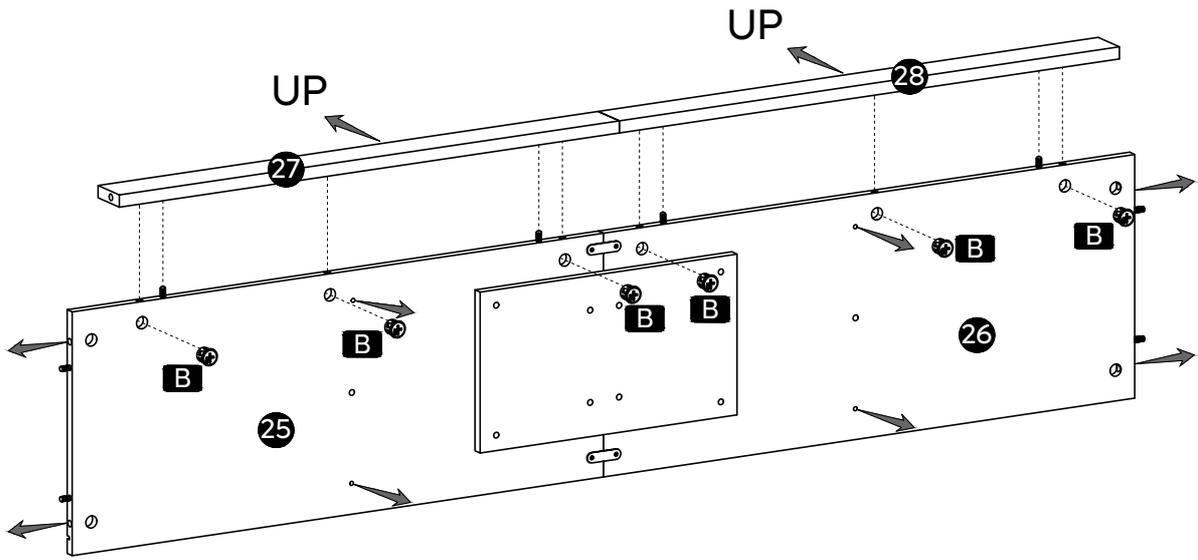


x 6



B Ø15mm



6

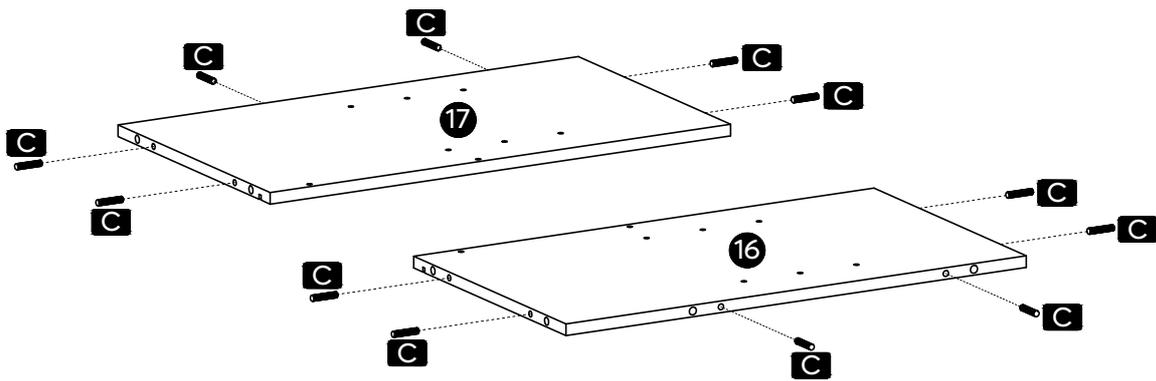

x12

C Ø6x30mm


7

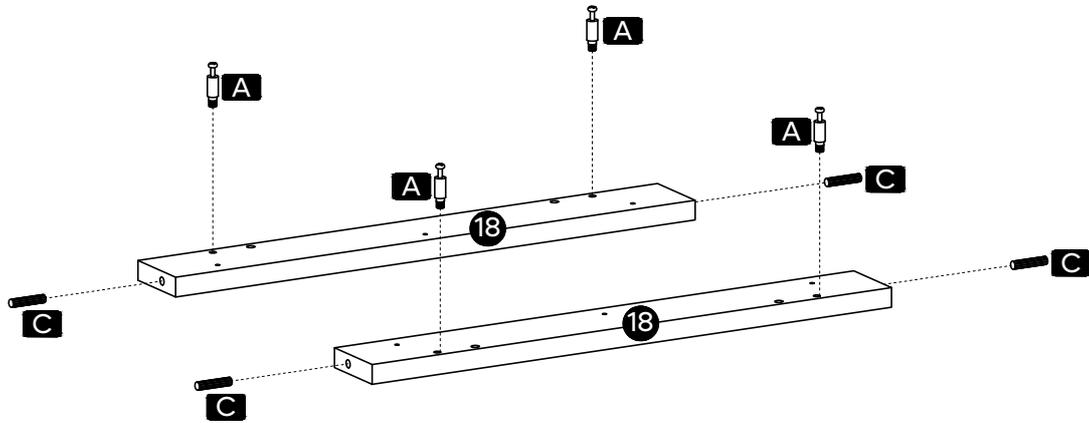


A ST6x33mm




C Ø6x30mm



8

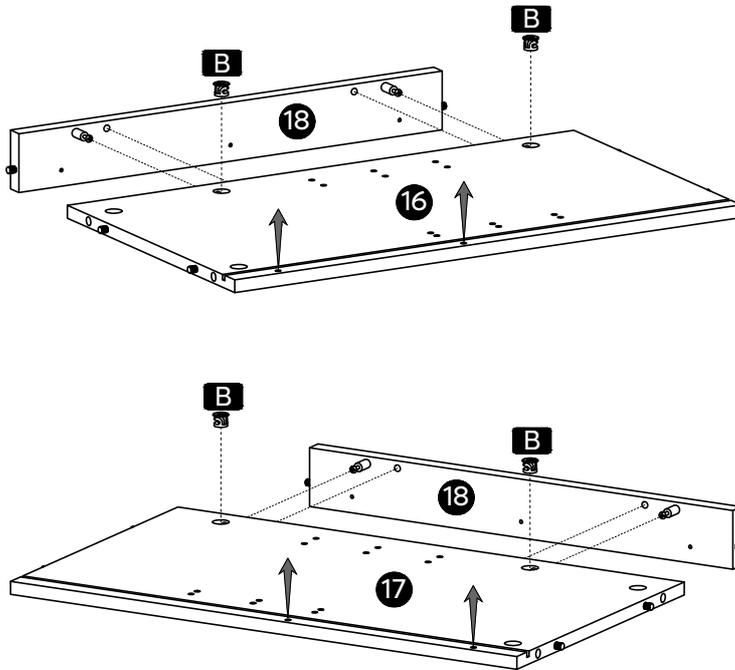


B Ø15mm





L103515FP

9


※ Two persons are needed : one person for holding; Then another person move the bottom ,And tighten the screw "G".

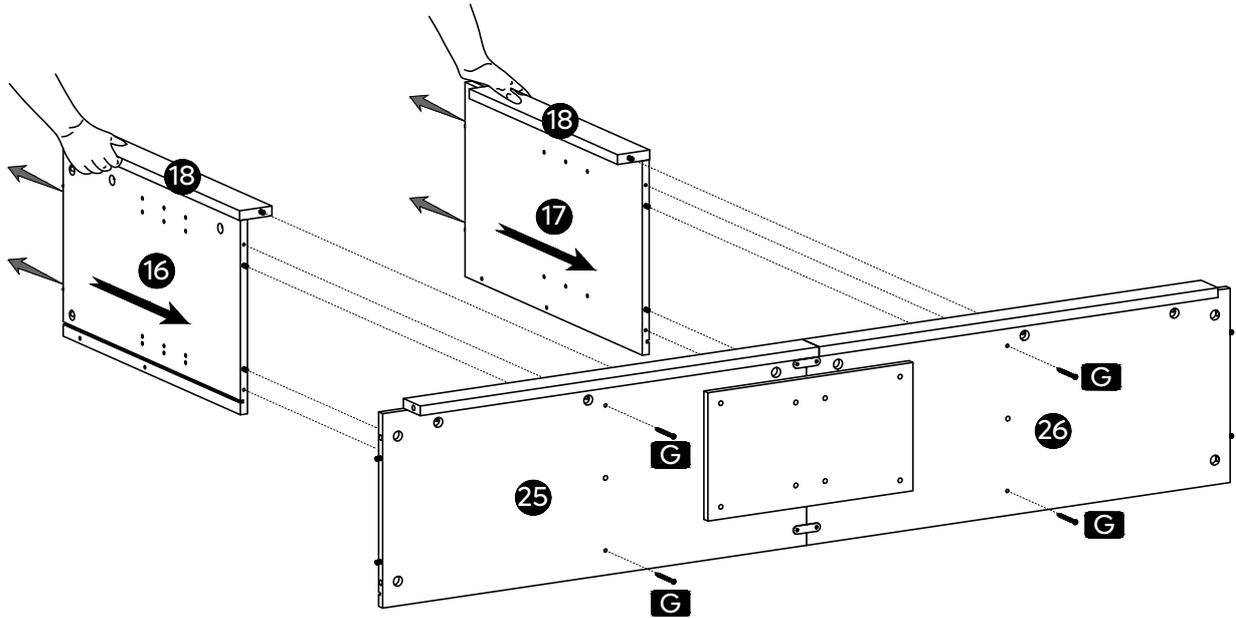

10

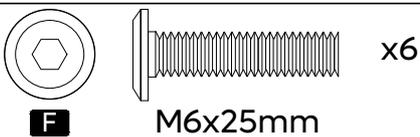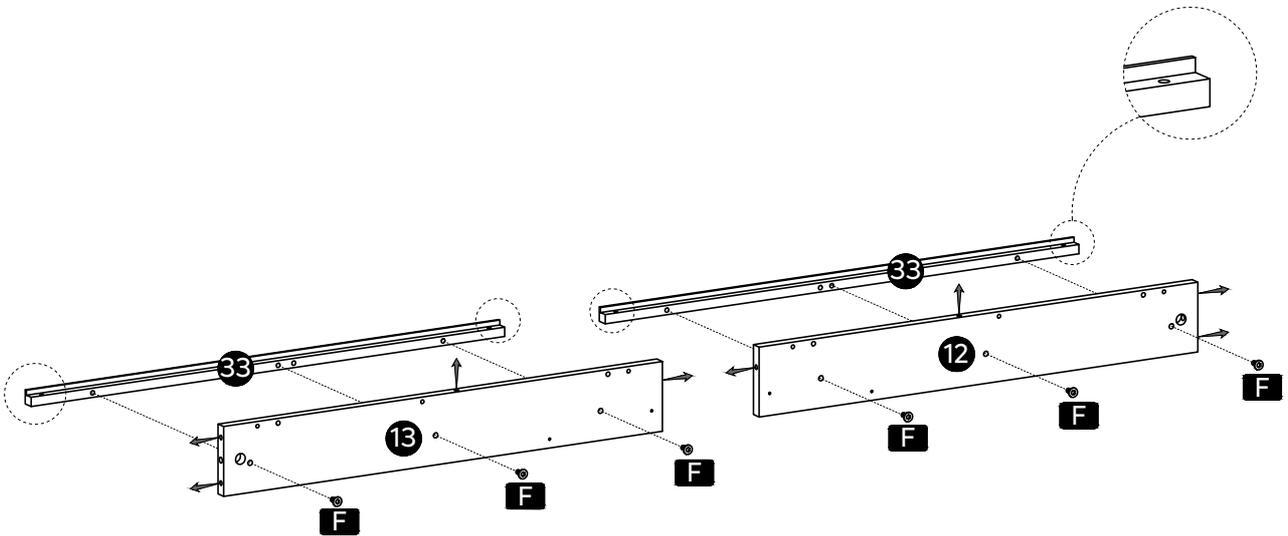

11

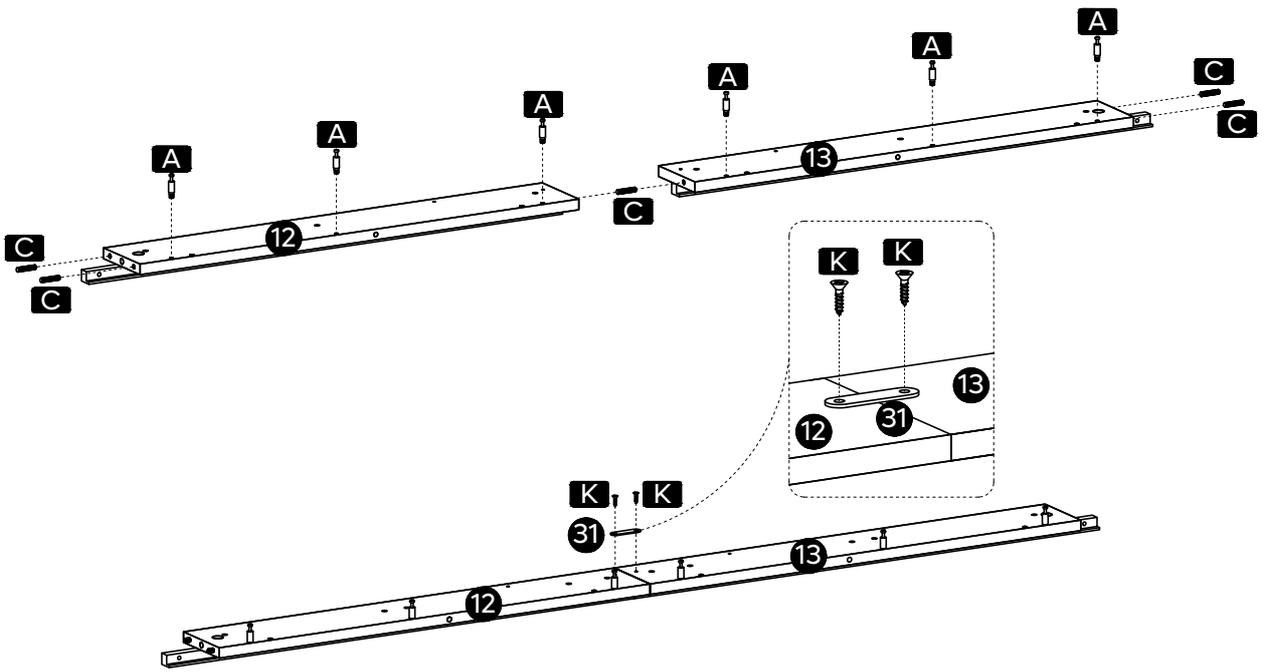


x 6



x 5



x 2





A ST6x33mm


C Ø6x30mm

K ST3x12mm


12

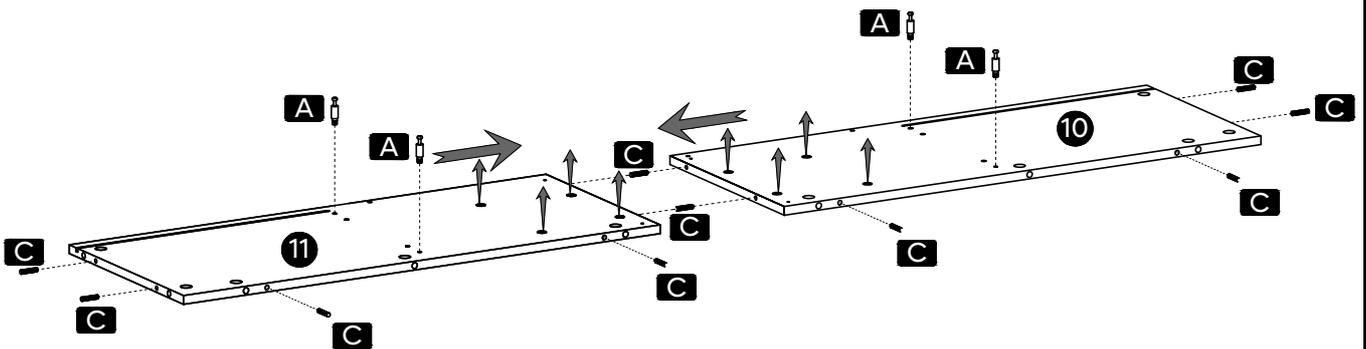

x 4






x 10



A ST6x33mm

C Ø6x30mm

13

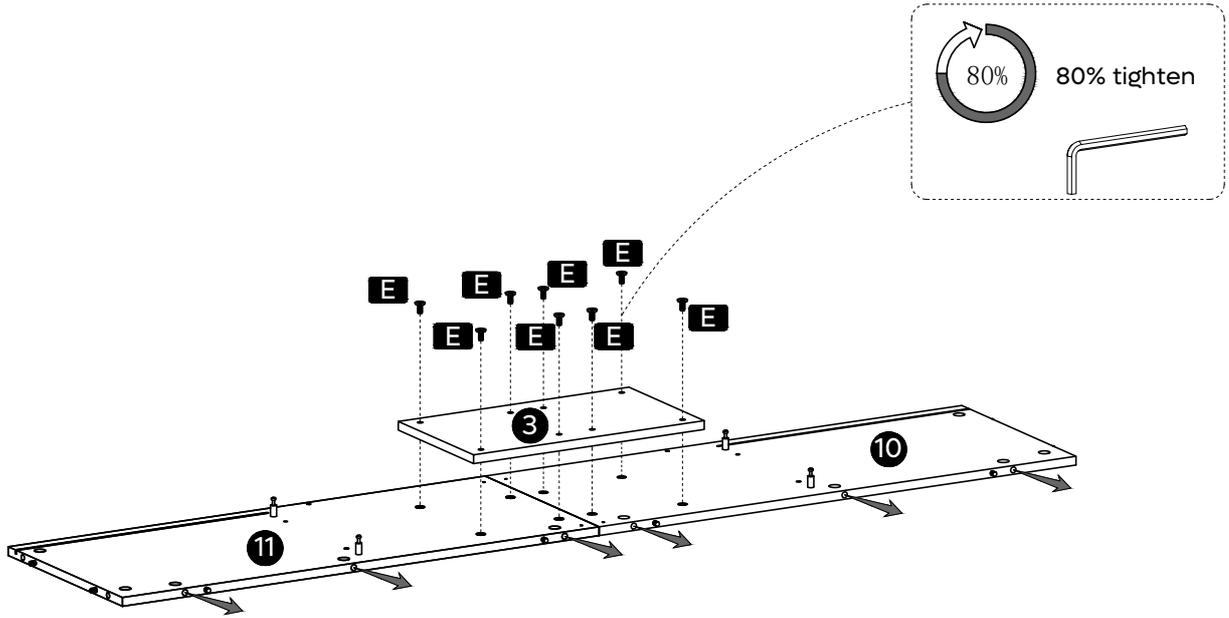

x8



E

M6x20mm



M4


14

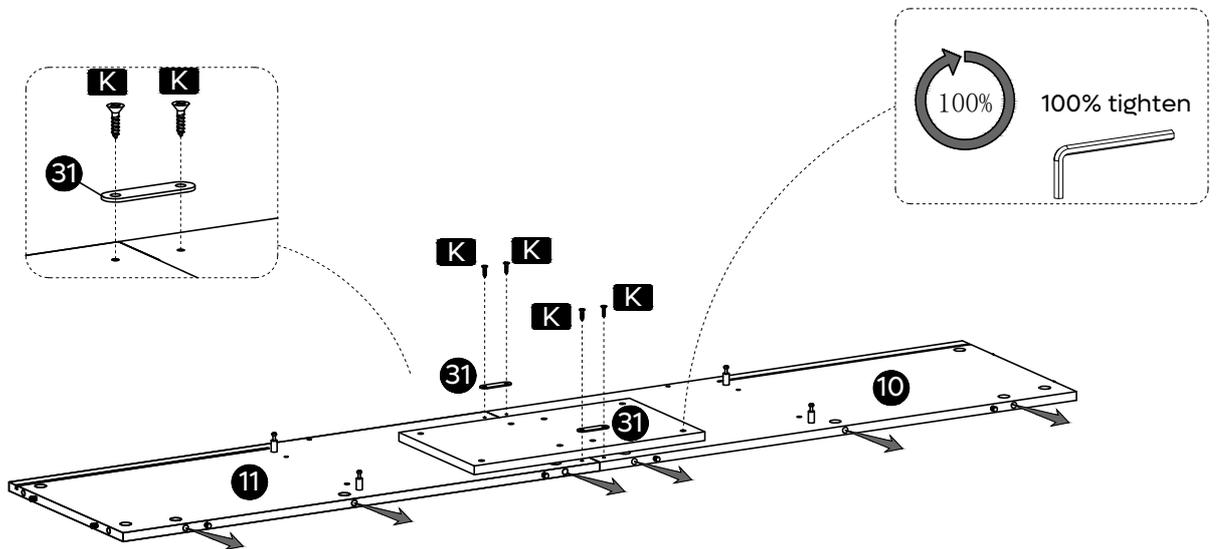


x 4

K

ST3x12mm




15

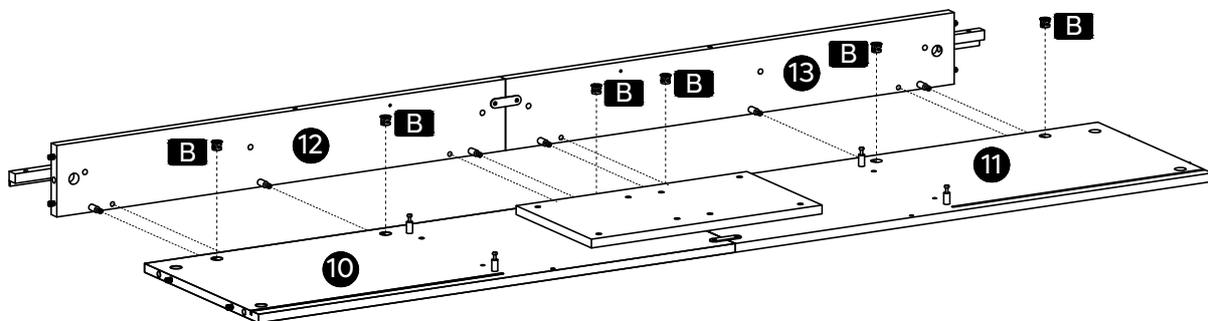


x 6

B Ø15mm




16

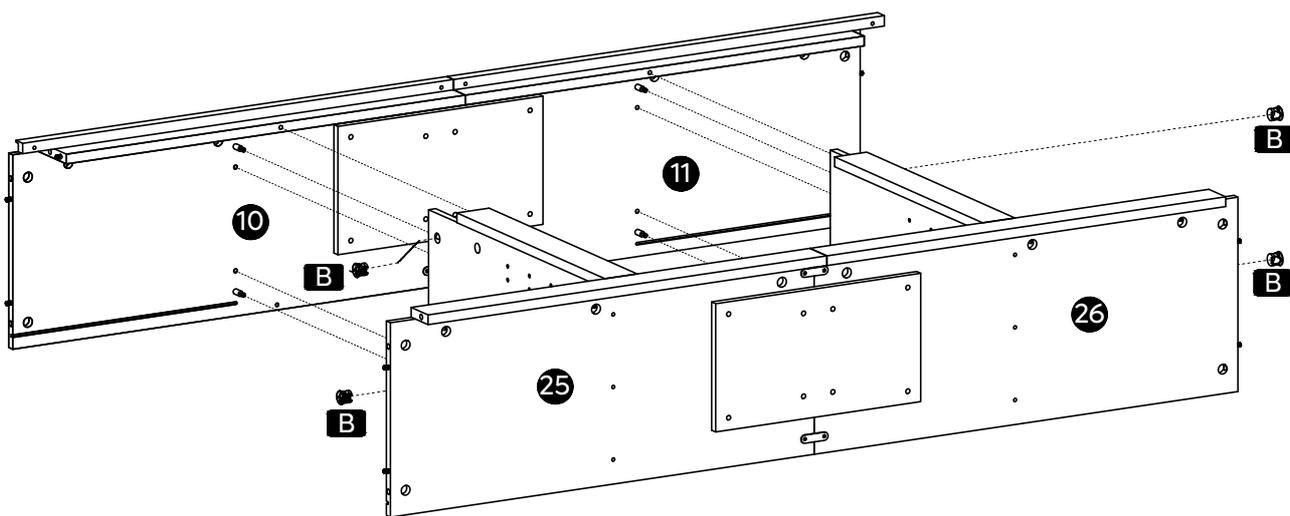


x 4

B Ø15mm




17

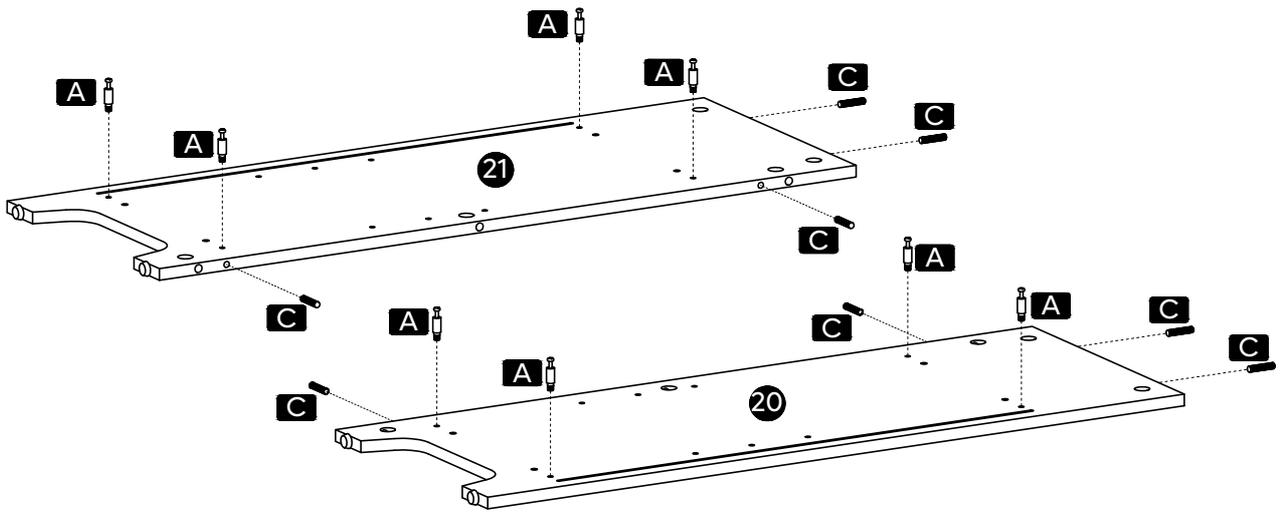

x 8





x 8



A ST6x33mm

C Ø6x30mm


18

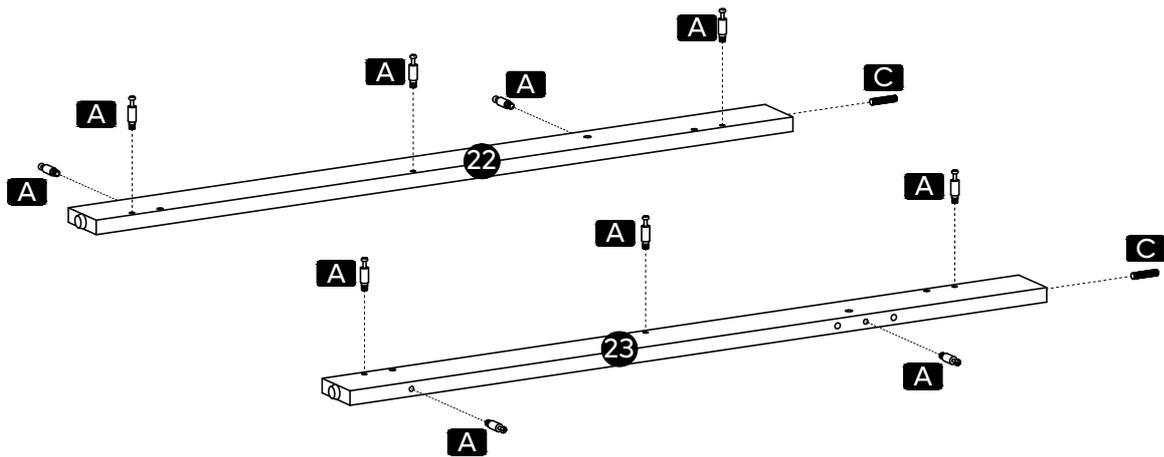

x 10




x 2




A ST6x33mm

C Ø6x30mm

19

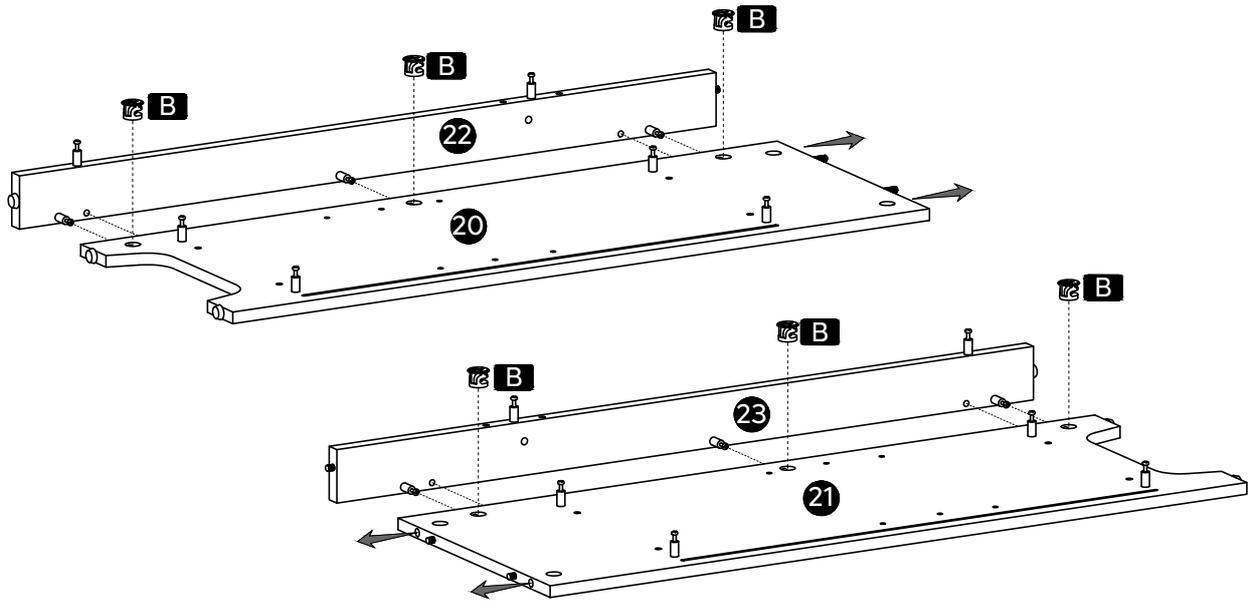


x 6





B Ø15mm




20

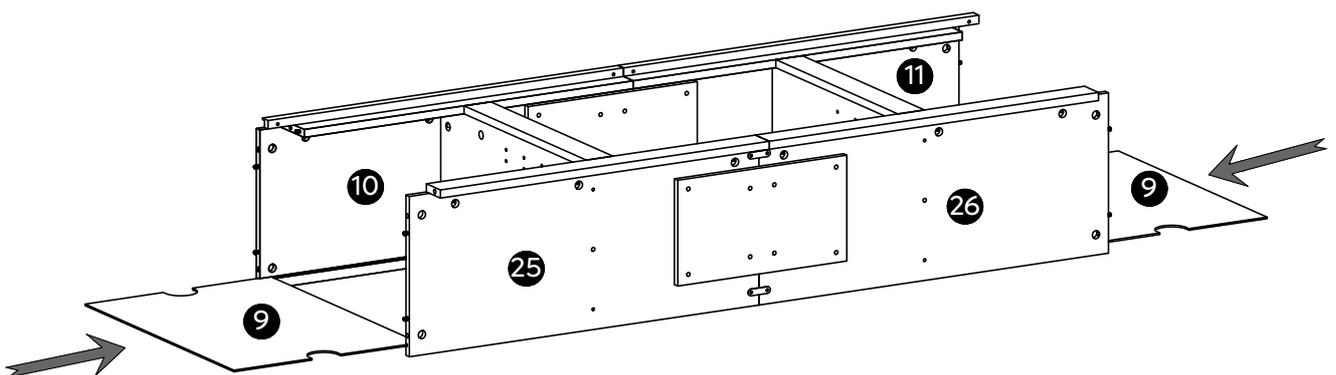


21

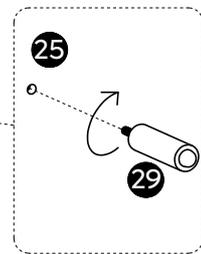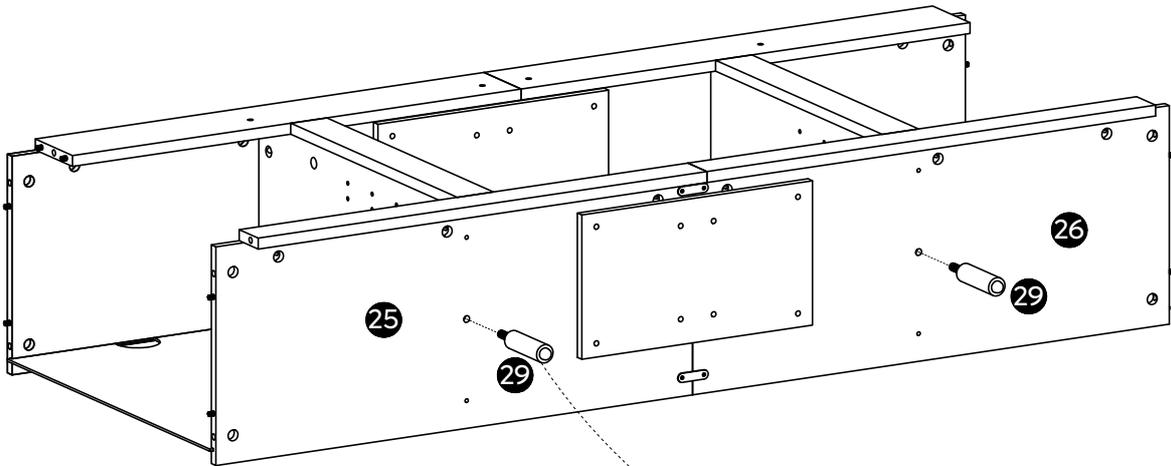

22

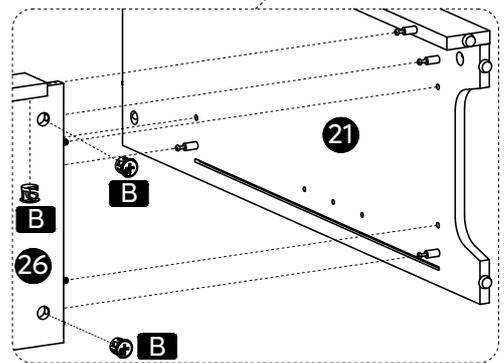
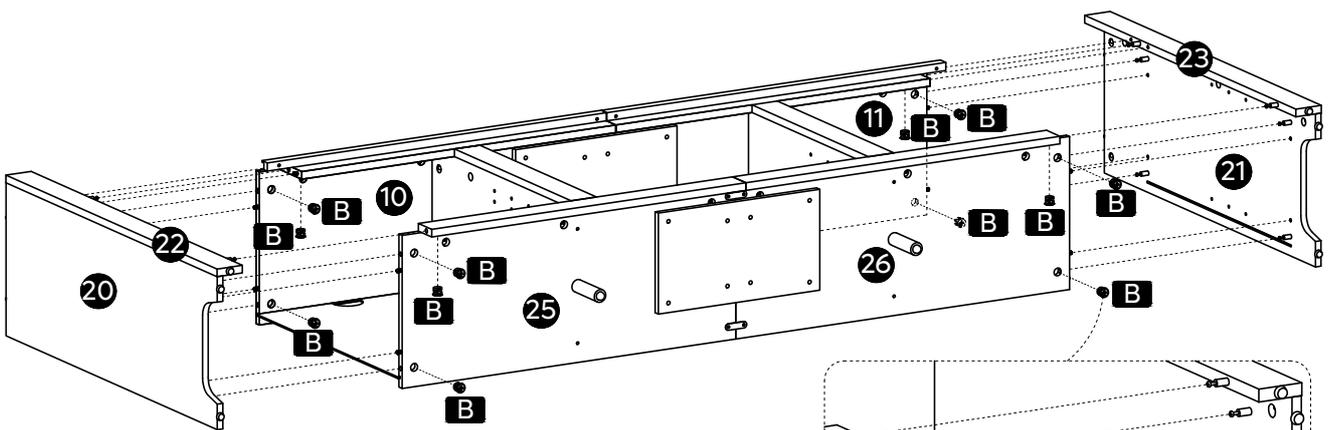


x 12



B Ø15mm



23

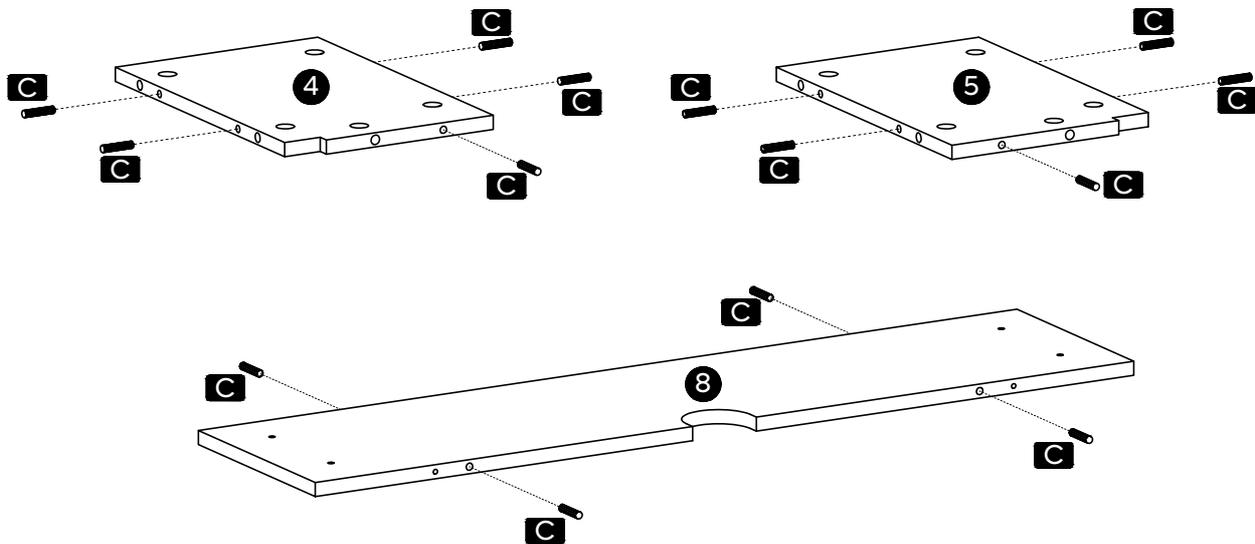

x14

C Ø6x30mm

24

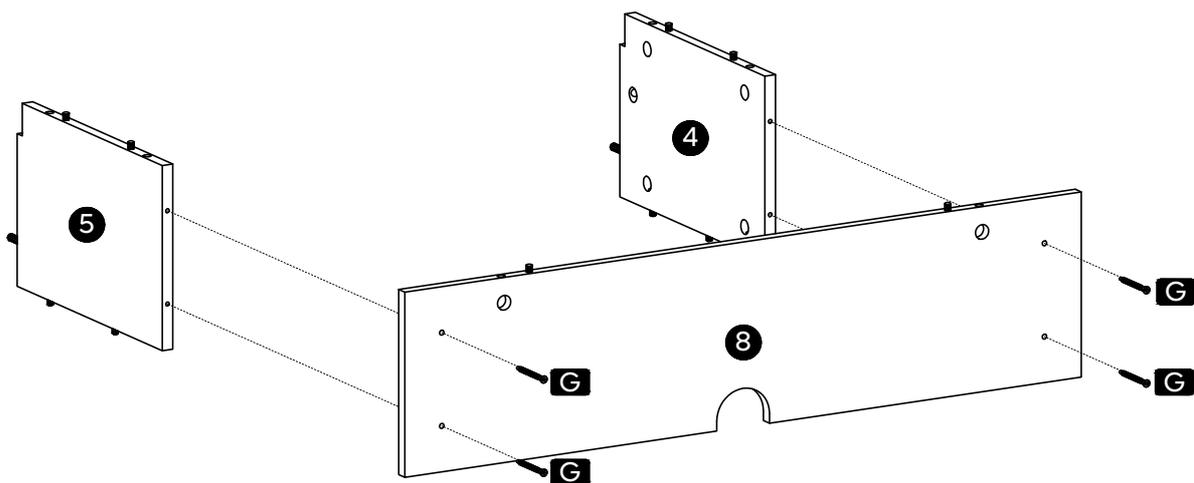



x4

G ST5x38mm



M3


25

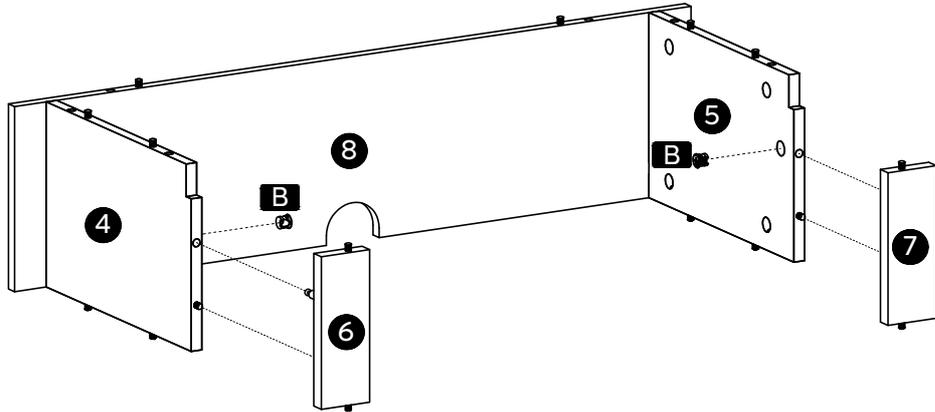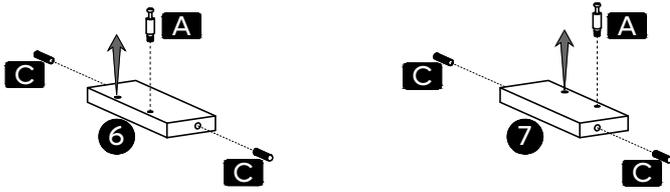


A ST6x33mm





B Ø15mm




C Ø6x30mm




26

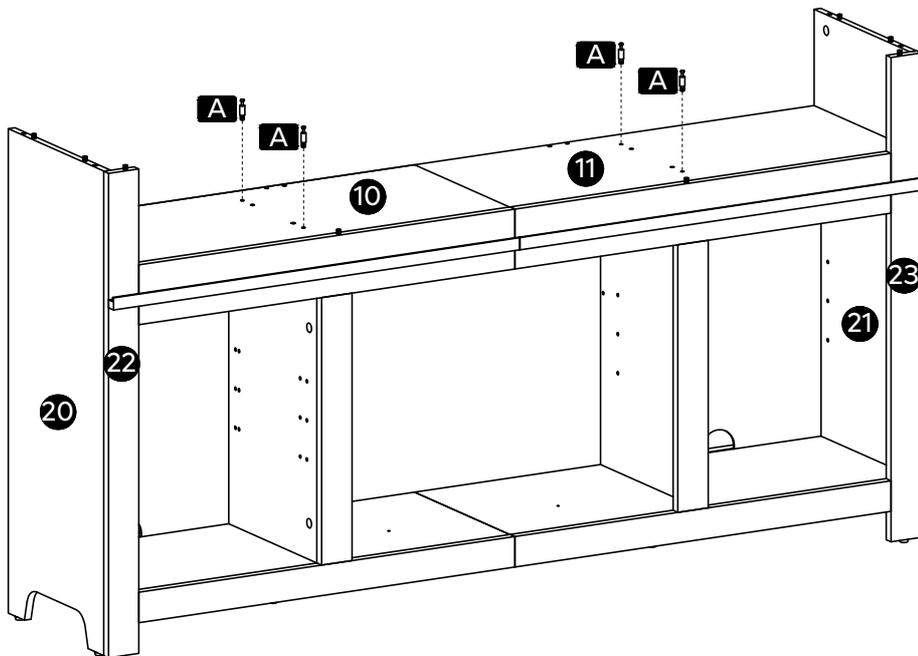

A ST6x33mm




27


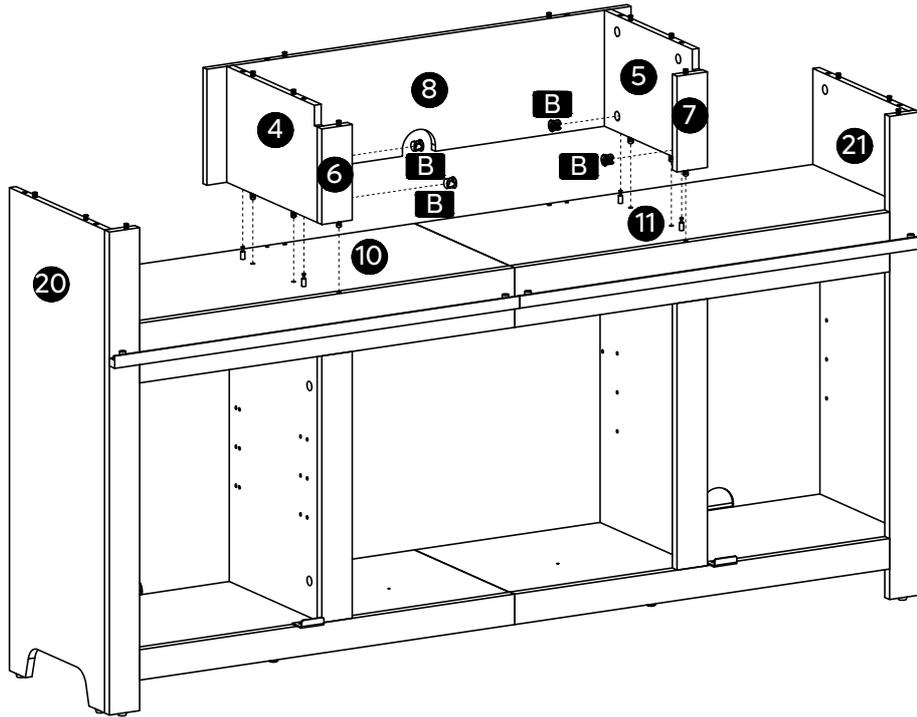


x 4

B Ø15mm



28

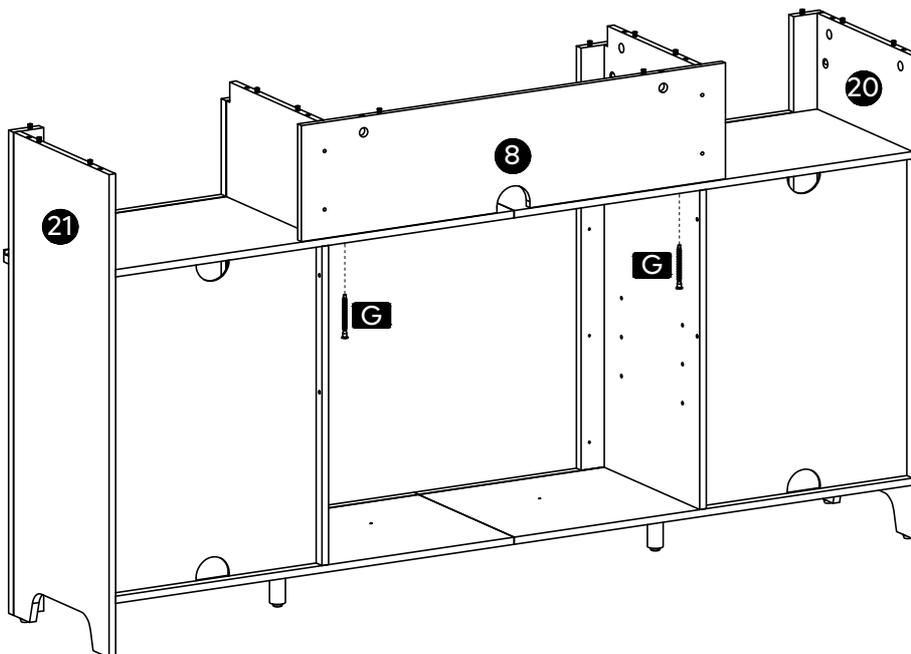

x2

G ST5x38mm





M3

L103515FP

21

29

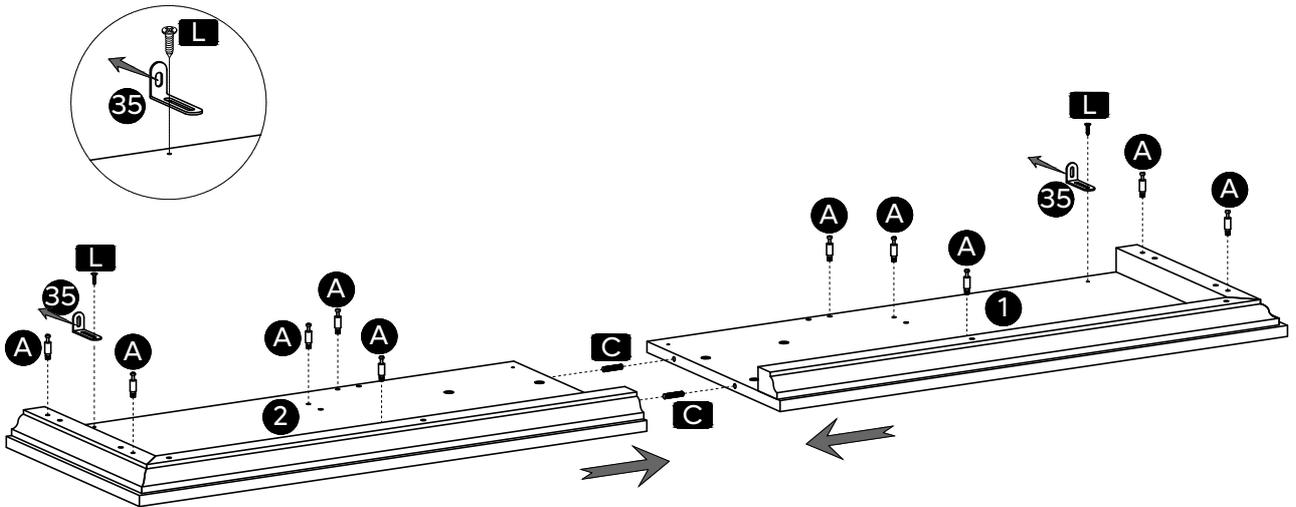

A ST6x33mm




C Ø6x30mm




L ST4x12mm



35 ST4x12mm




30

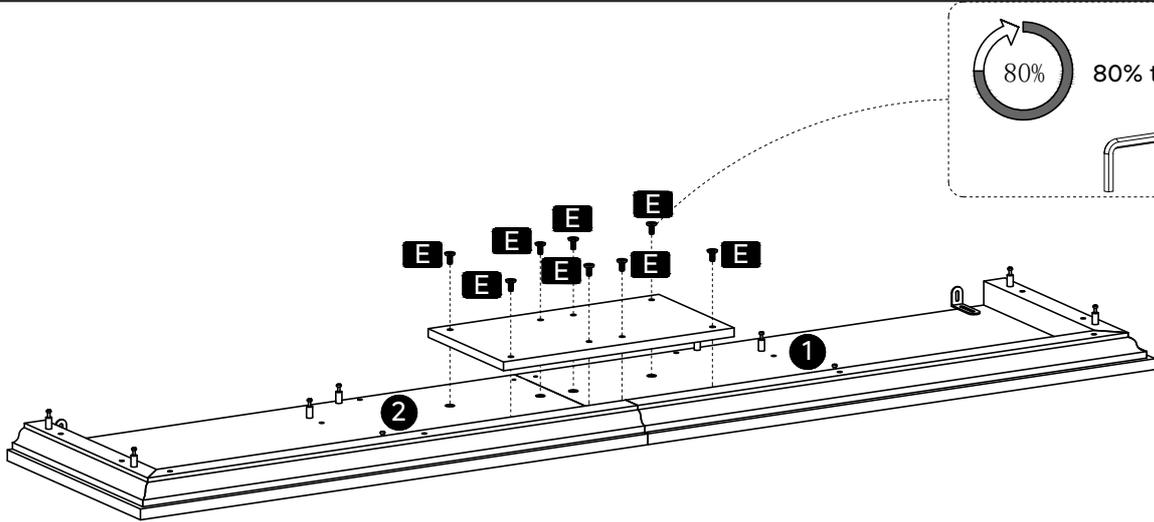

80% tighten



E M6x20mm




x8




M4

31

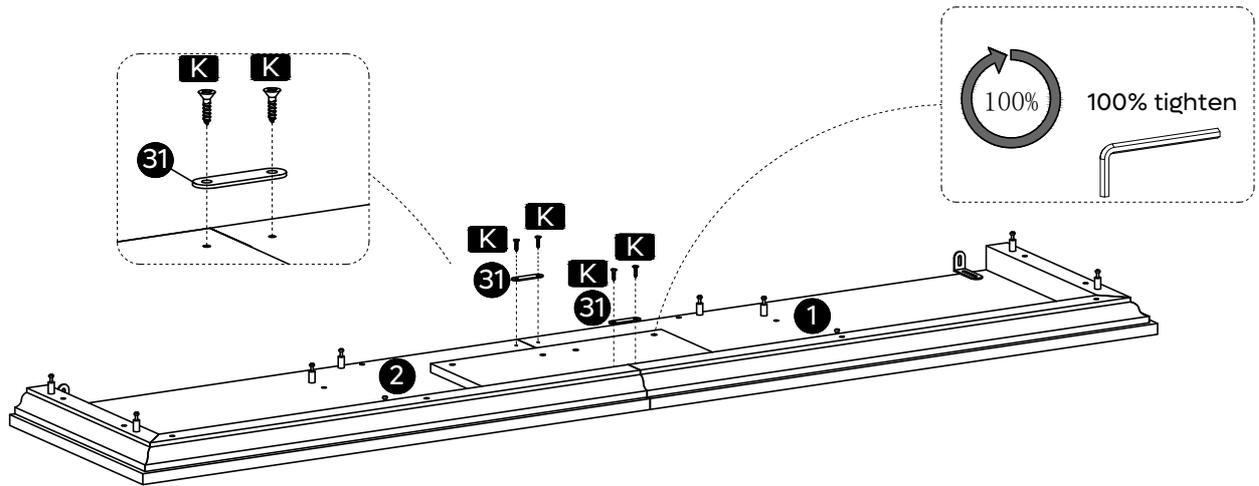



x 4




K ST3x12mm

32

※ Two persons are needed.

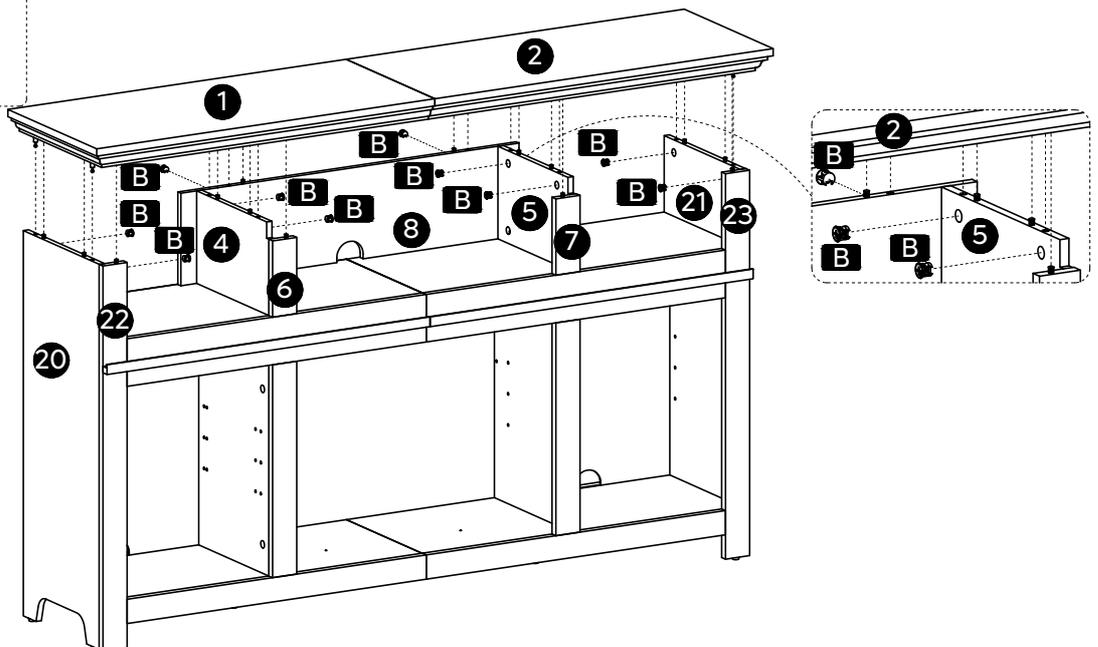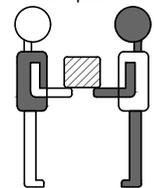

x 10




B Ø15mm

L103515FP


Style A: Step 1-32&33-42

(A)

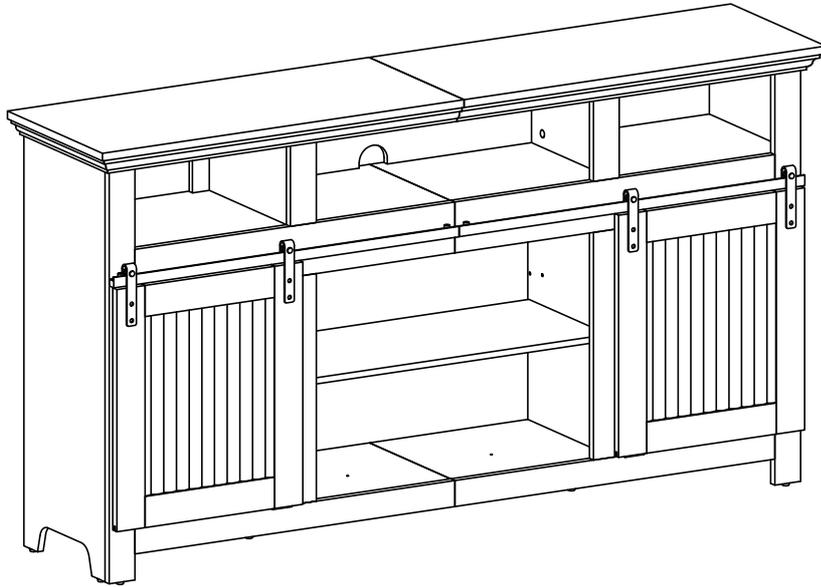



Style B: Step 1-32&43-56

(B)

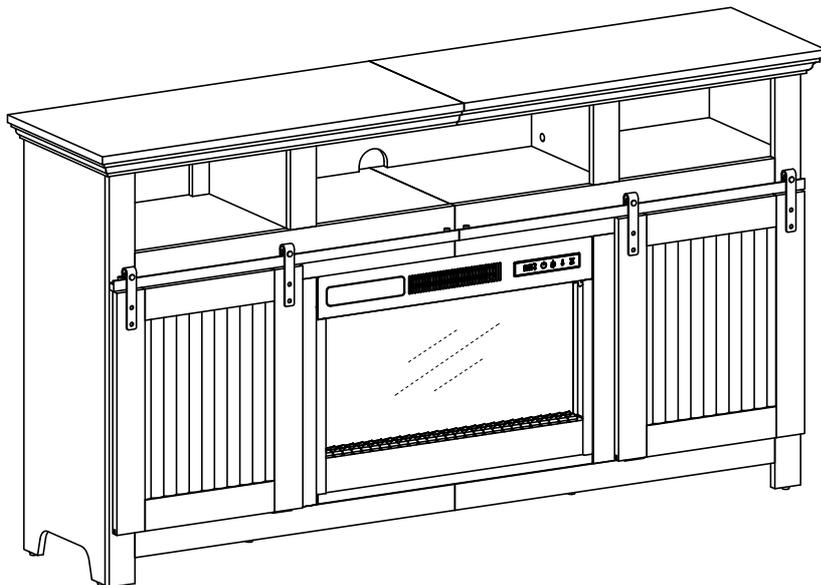

33

A

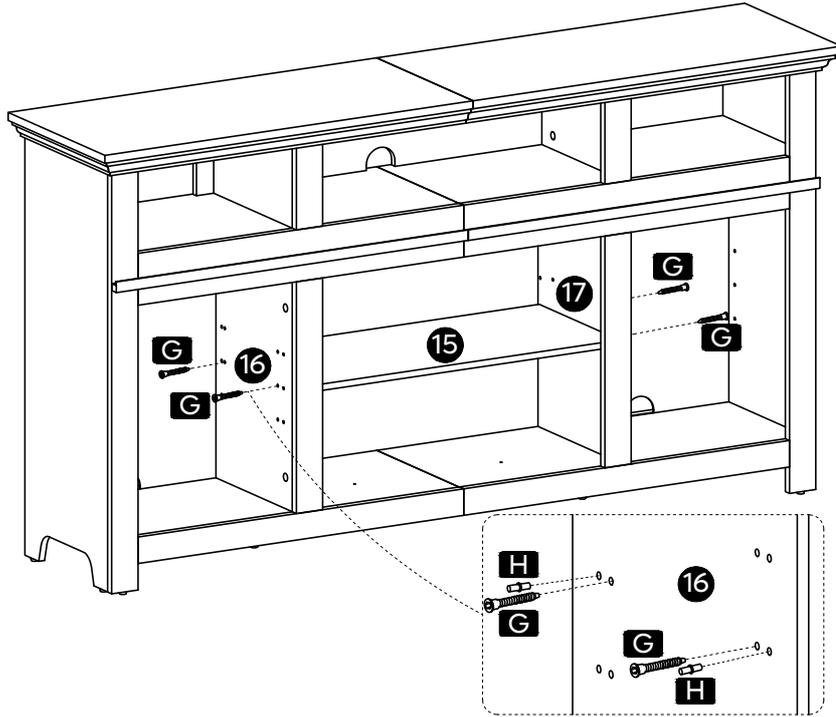

x4





ST5x38mm



M3

34

A

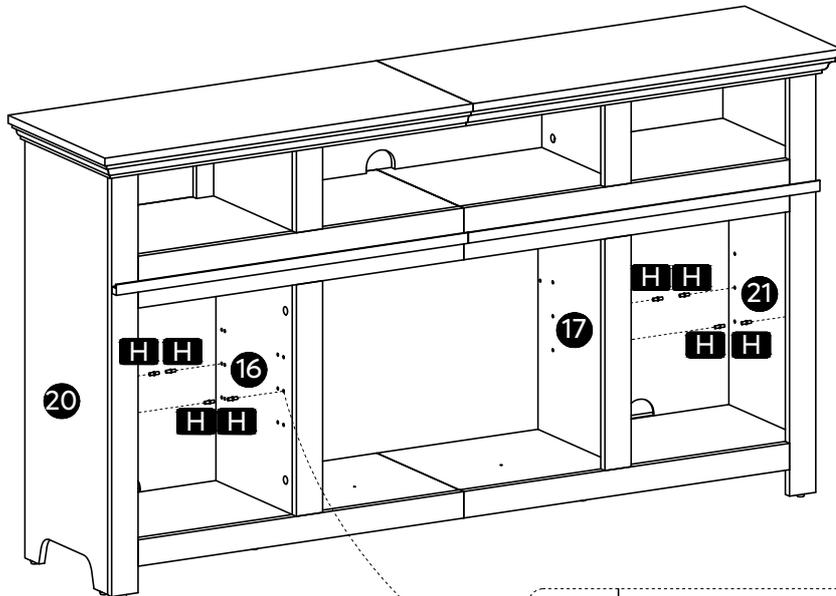

x 8




Ø5x19mm

L103515FP

35



A

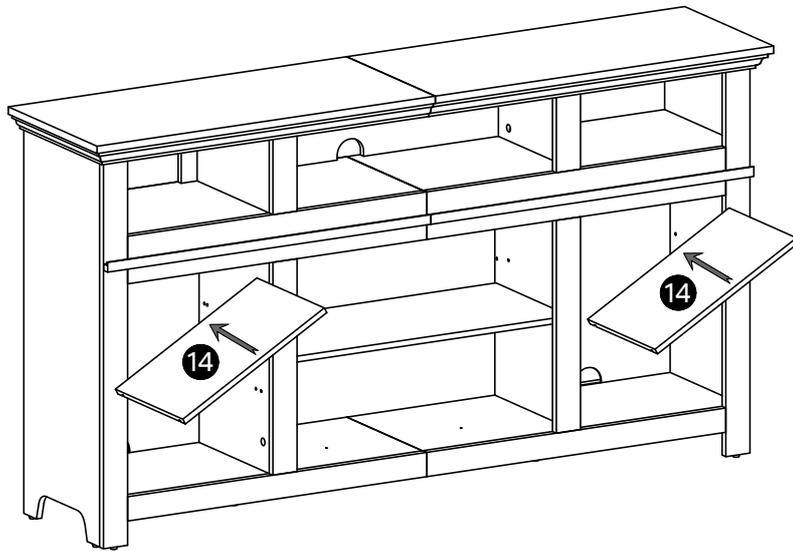

36




A

x 2

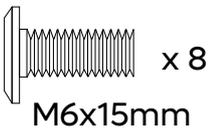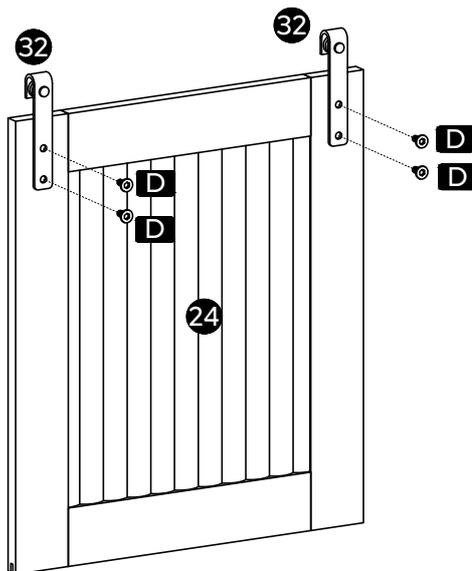


37

A

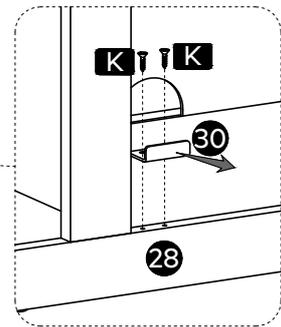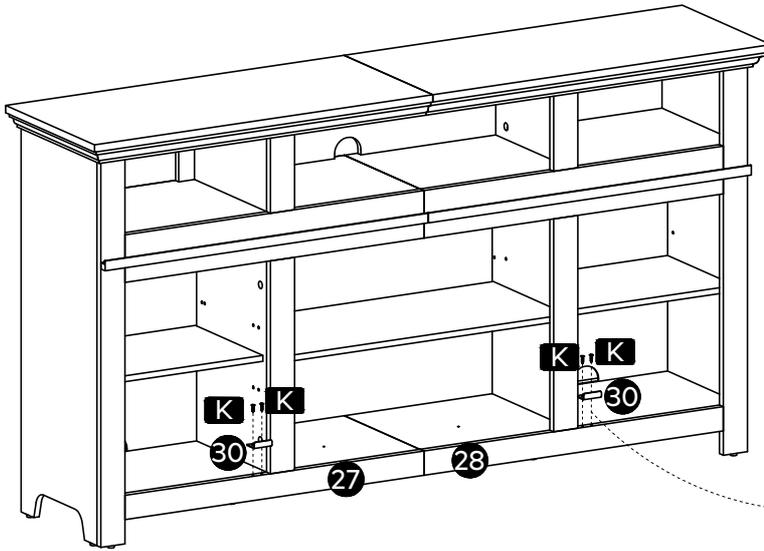





x 4



ST3x12mm

38

A

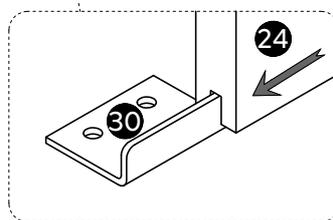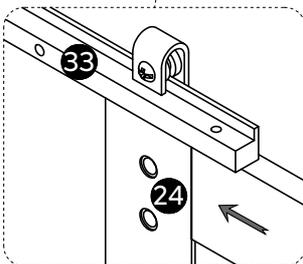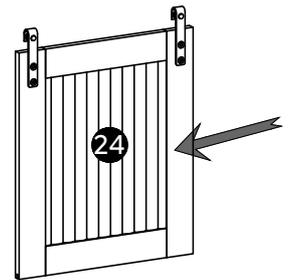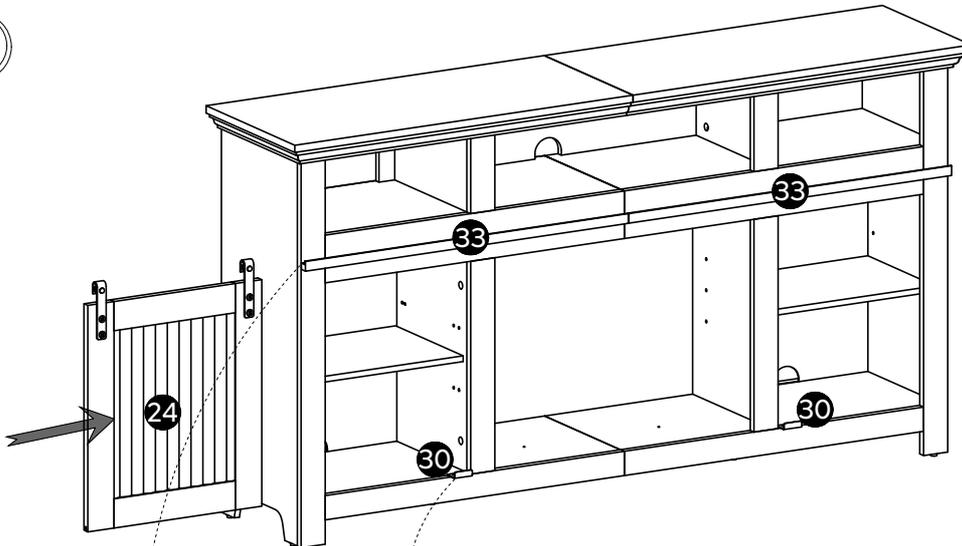


L103515FP


27

39

A

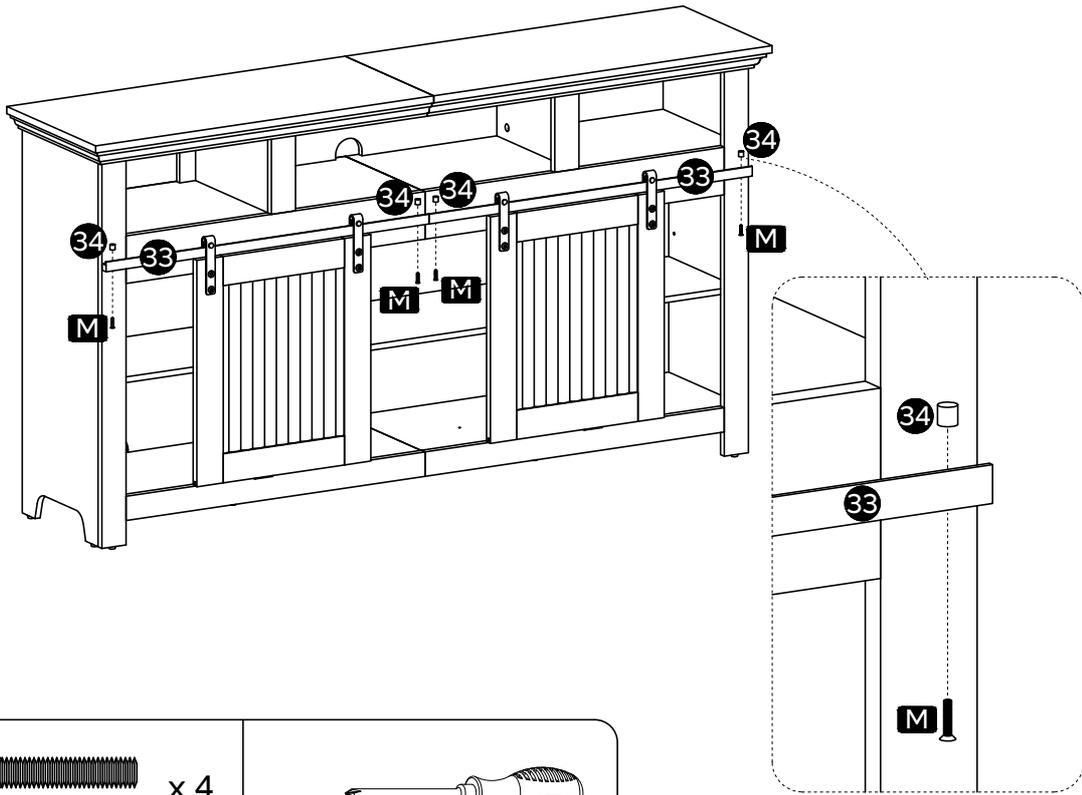

x 4





M

M4x20mm

40


A

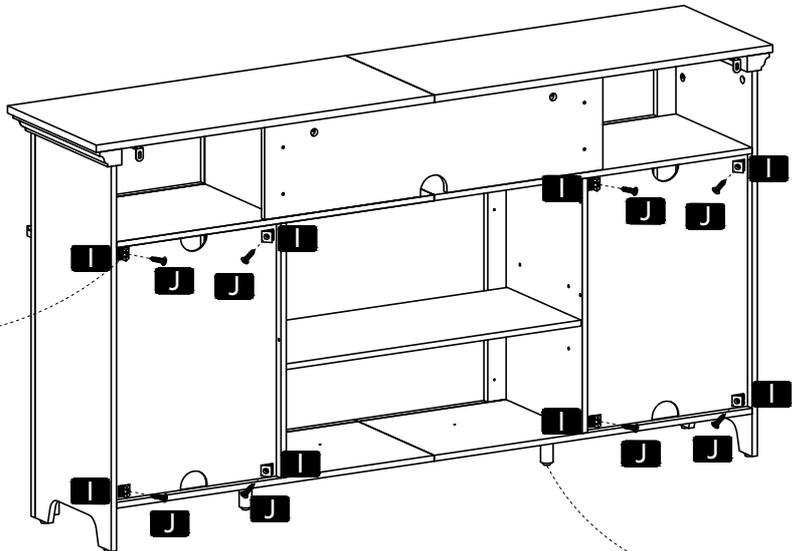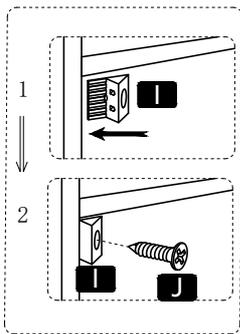

x 8




x 8



I

J

ST3x17mm

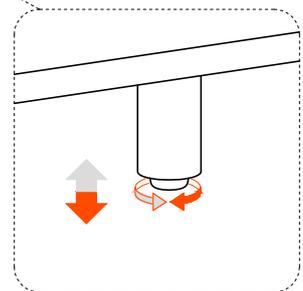


WALL SAFETY STRAP INSTALLATION

Ask for assistance to position the assembled unit at the desired location against a wall. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach two tipping restraints to the unit and the wall. As shown in the illustration.




※NOTE: Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

A

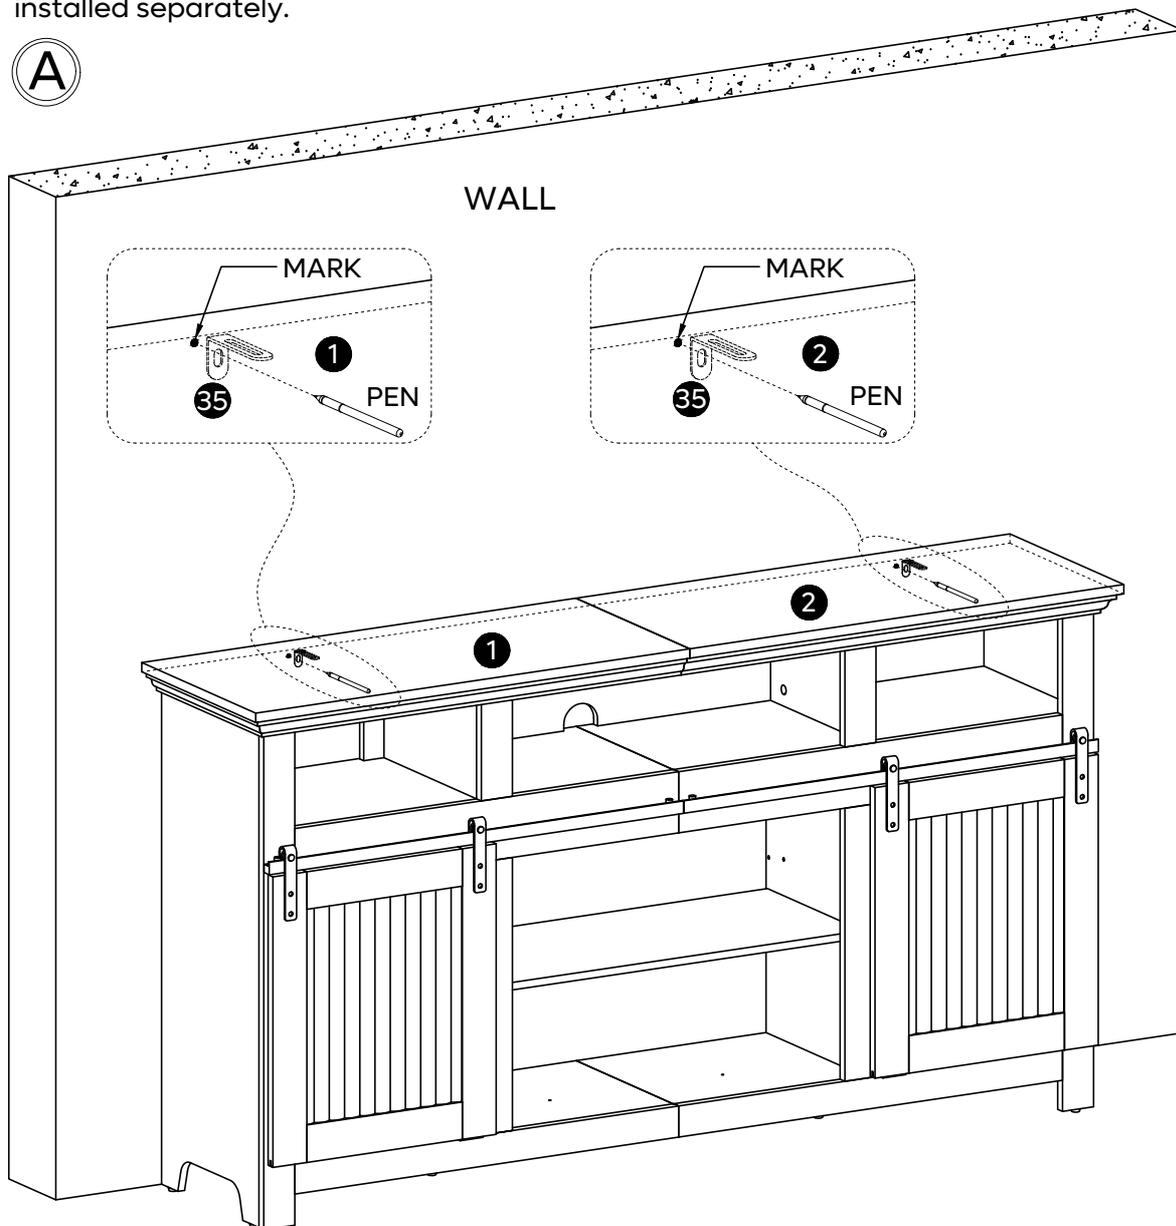




Tools required:Phillips screwdriver,power Drill,3/8" Drill Bit and Rubber Mallet

(A)

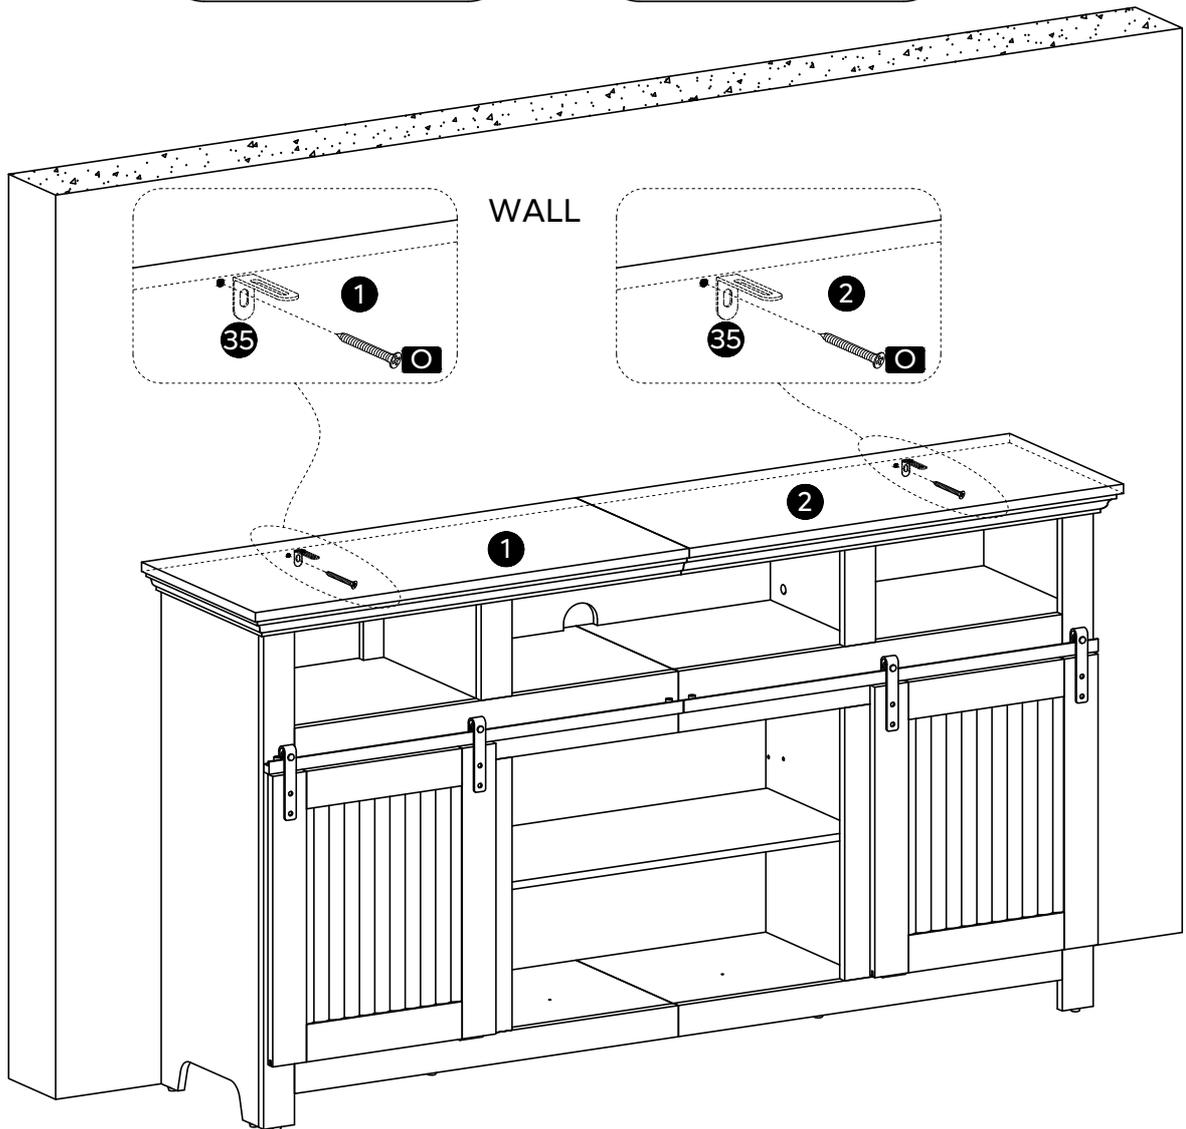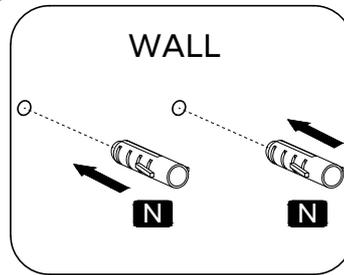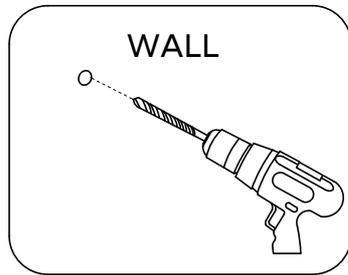

※ **Please fasten this item to wall for protection and safety.**




1. Drill 2 holes in the wall and insert "N" into holes.
- ※ You may need to use rubber mallet for tapping "N".
2. Use "O" to attach "N" with "35".

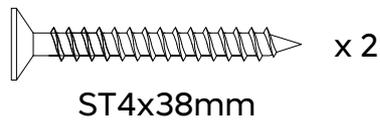

43


B

※ If you chose fireplace TV stand , Please continue with the following steps.

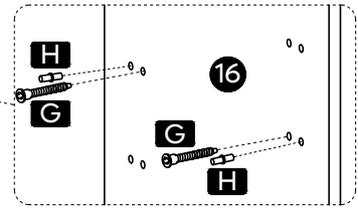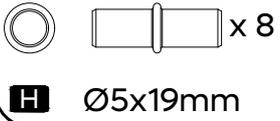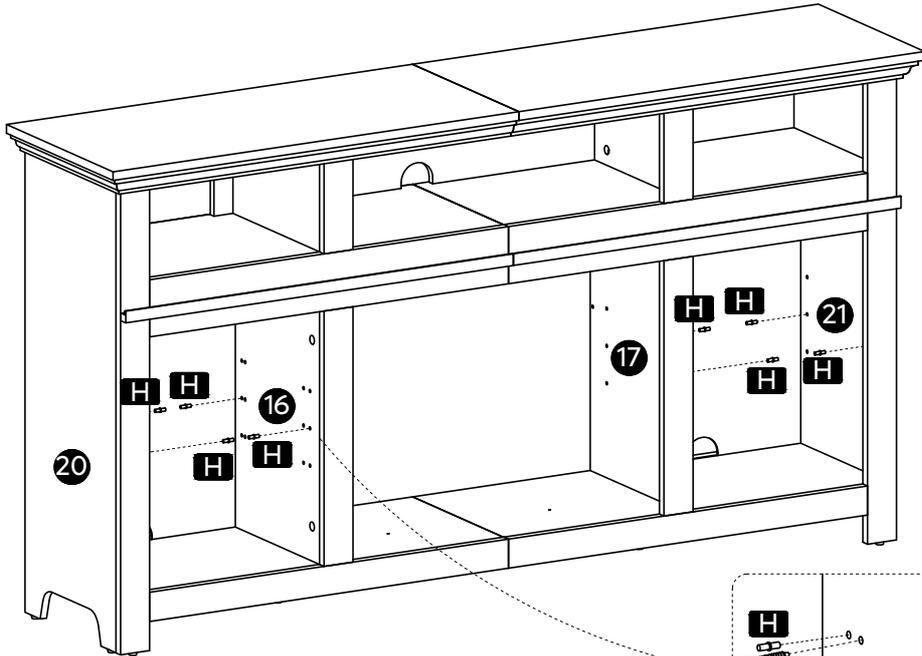

44


B

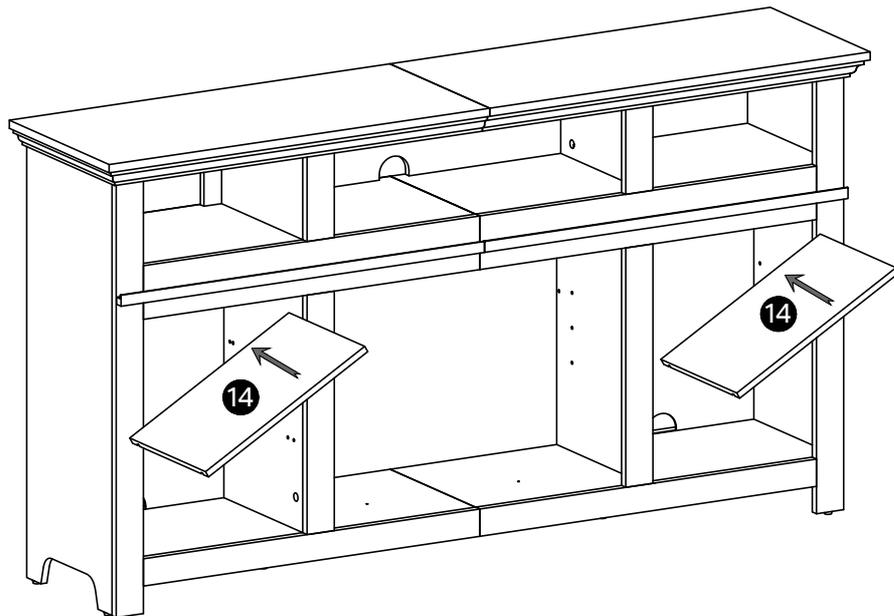

45

B

x 2

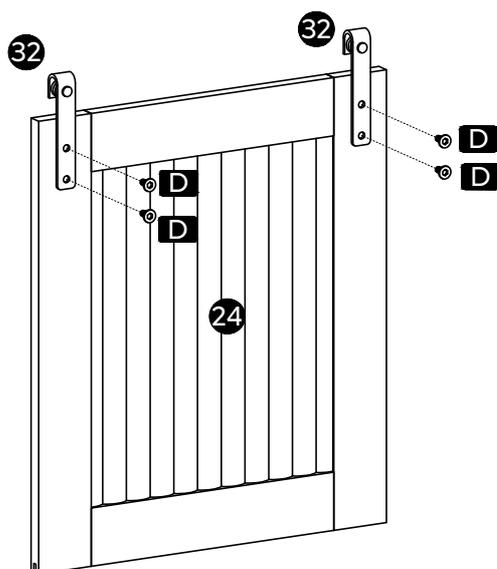

M6x15mm x 8


D



M4


46

B

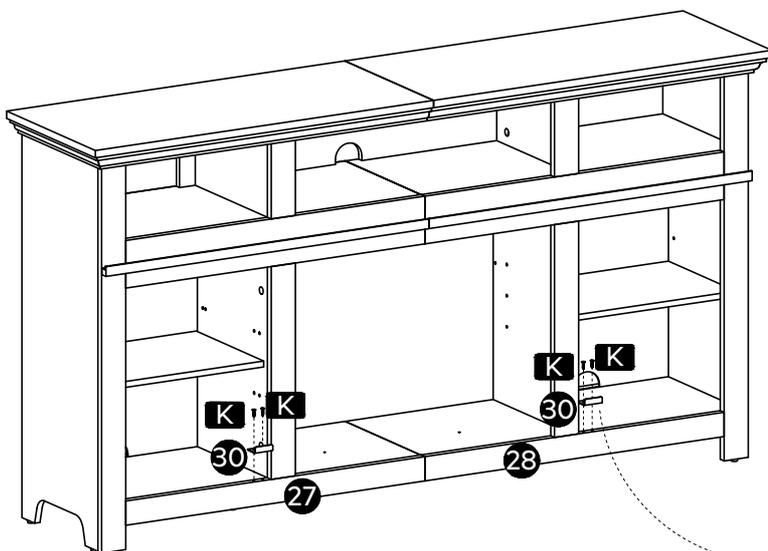

x 4

K ST3x12mm




32

L103515FP


47

(B)

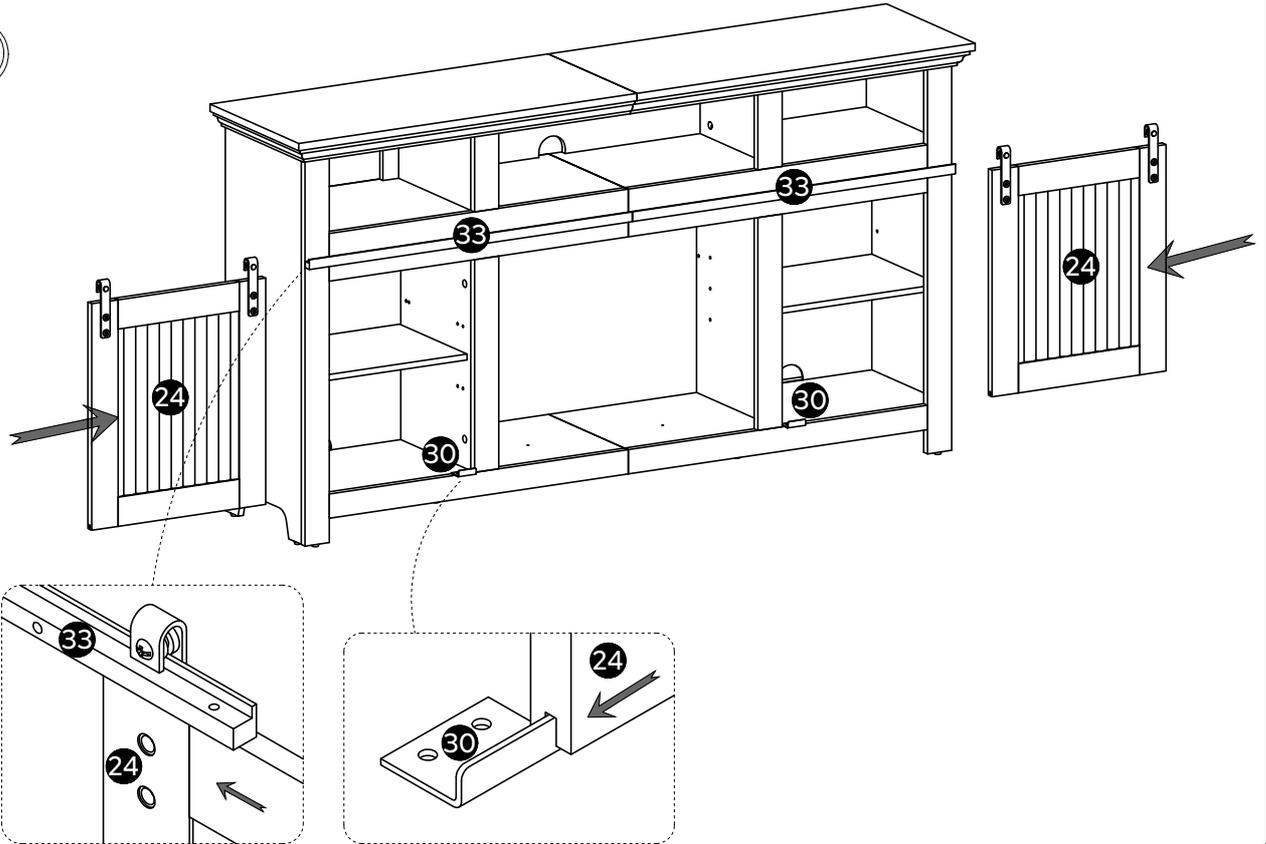


48

(B)

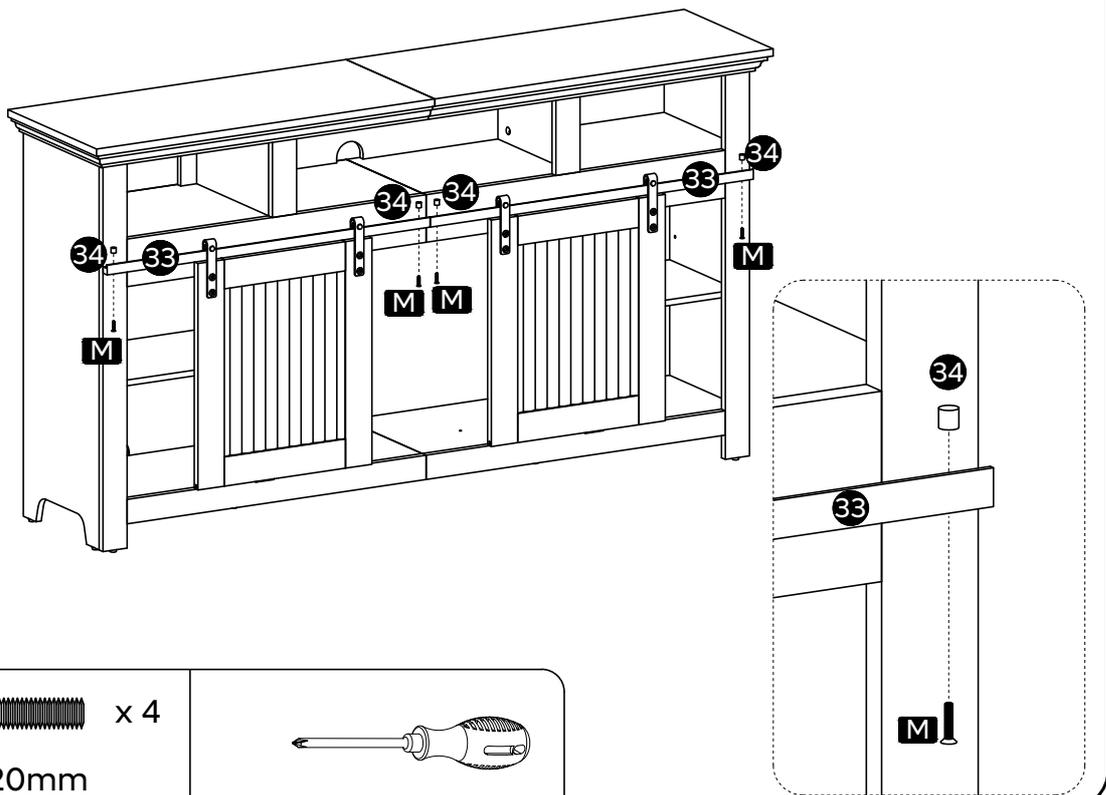

M4x20mm x 4

M



L103515FP

33

49

※please refer to the fireplace assembly installation

AAA batteries
Please purchase
by yourself

package include:

Part	Description	Quantity
V	Remote Control	1
W	Fireplace Insert	1
A	Top Side Trim	1
B	Left Side Trim	1
C	Right Side Trim	1
AA	TM4x6mm	9+1

50

Back view


Fireplace

※Put the fireplace into the TV stand


51

(B)


Back view

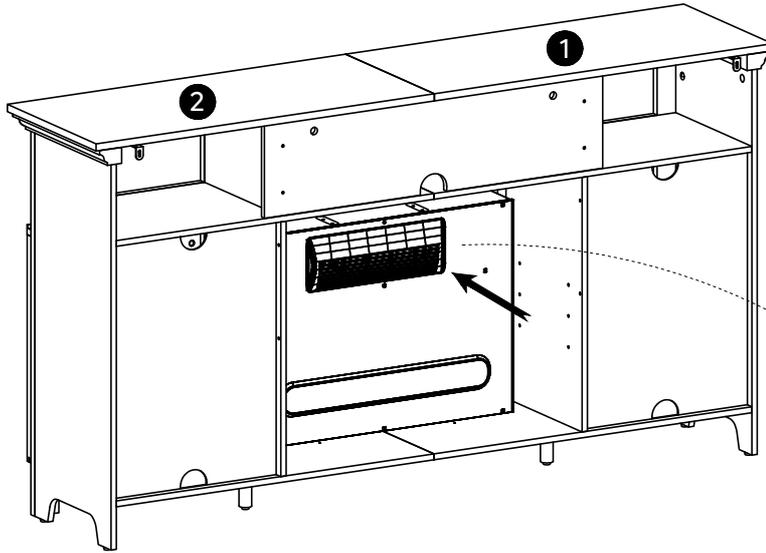

Use Screwdriver to tighten the round head screw "L".

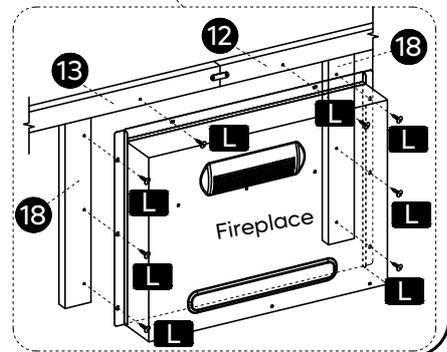

x 8






L ST4x12mm

52

(B)

Back view

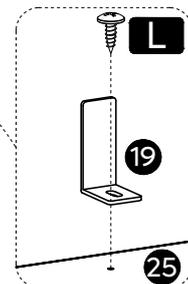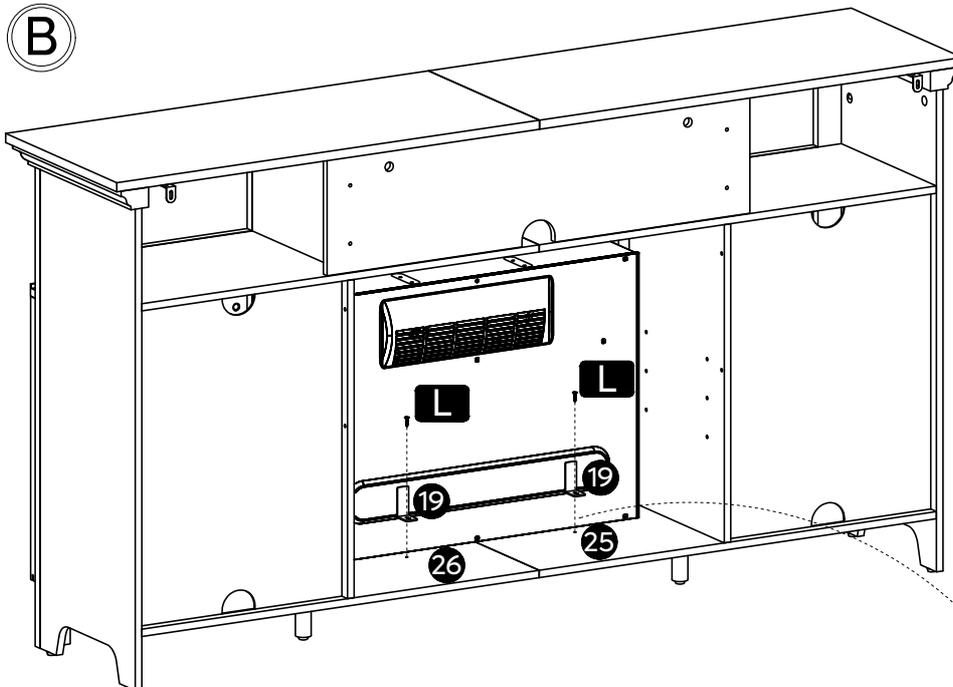

x 2




L ST4x12mm

L103515FP

53

(B)






Back view

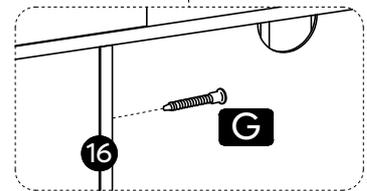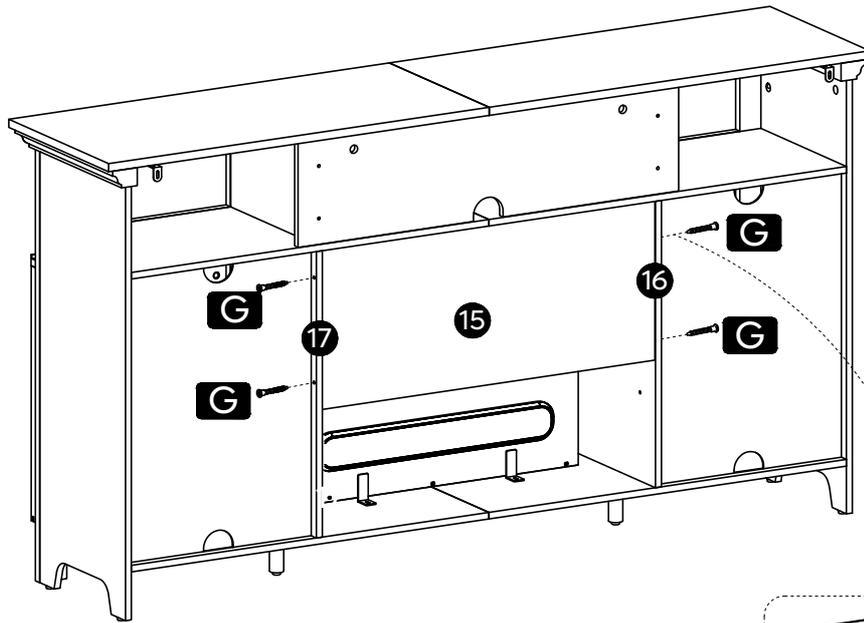

54

(B)


Back view

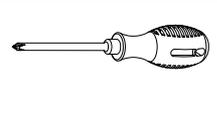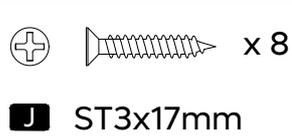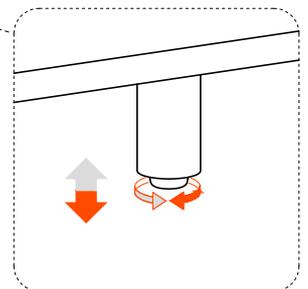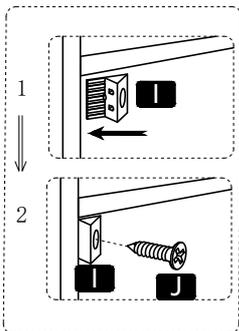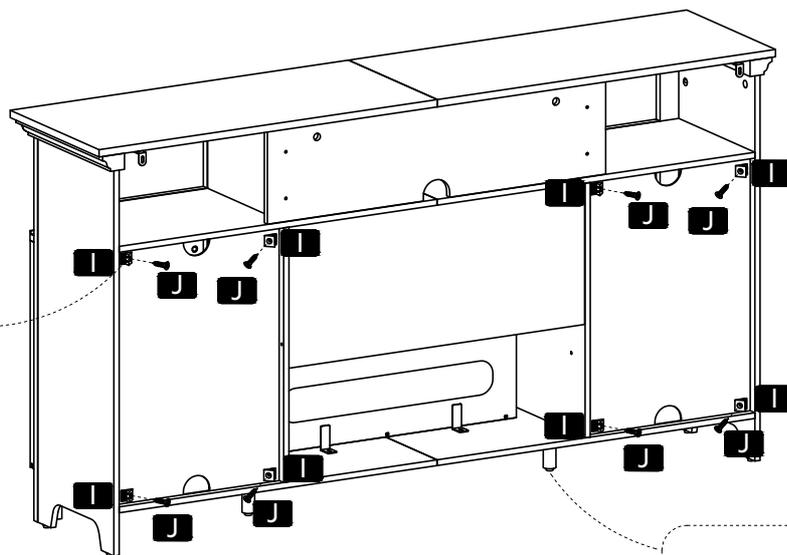

WALL SAFETY STRAP INSTALLATION




Ask for assistance to position the assembled unit at the desired location against a wall. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach two tipping restraints to the unit and the wall. As shown in the illustration.

※NOTE: Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

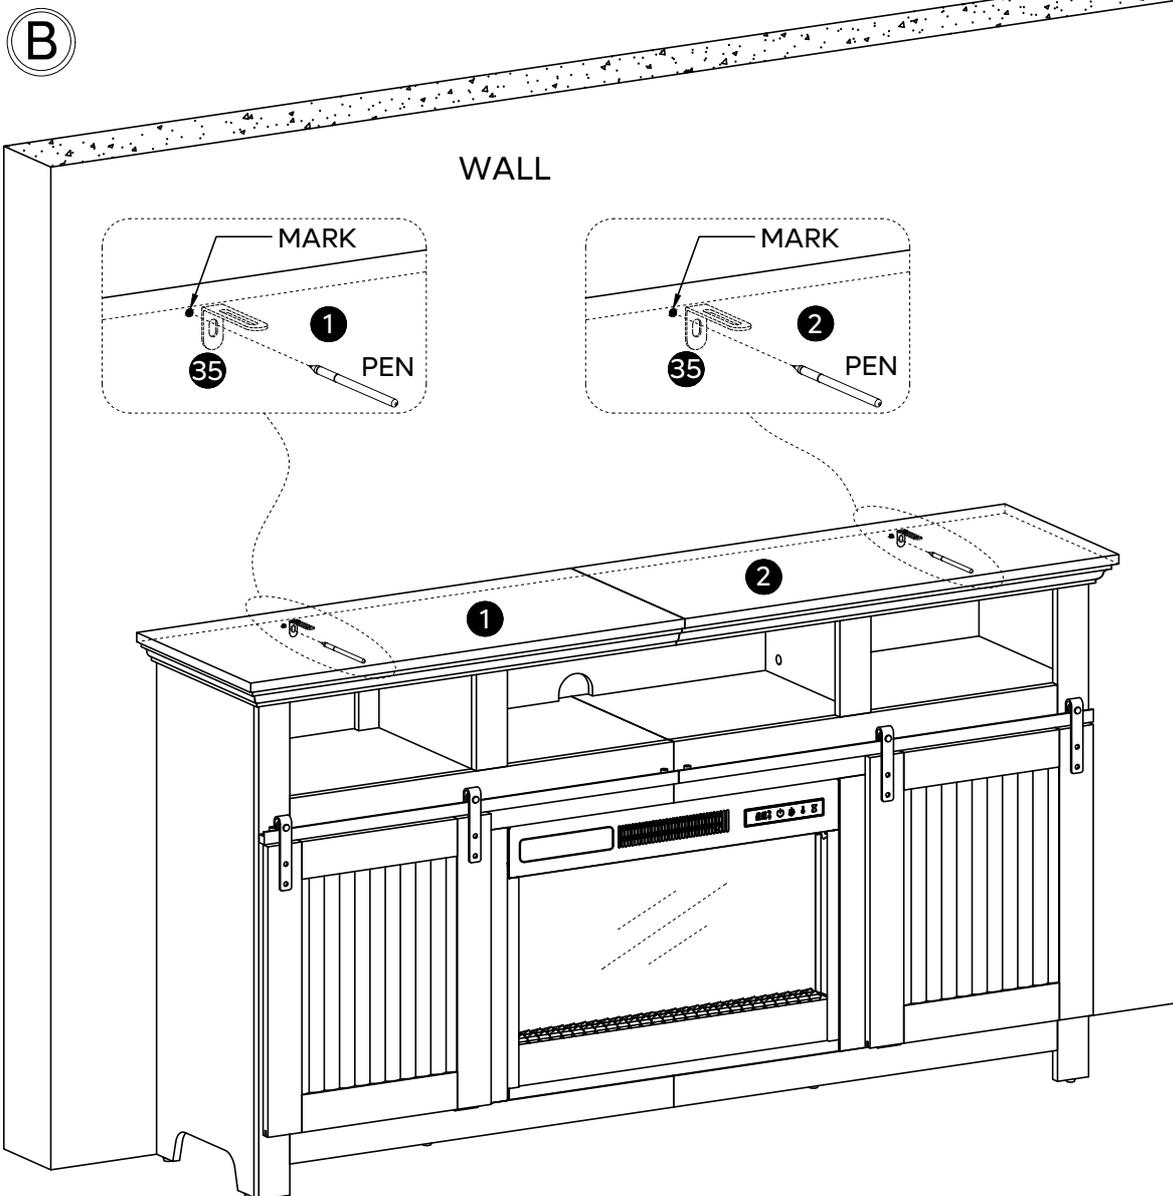

Tools required:Phillips screwdriver,power Drill,3/8" Drill Bit and Rubber Mallet

(B)

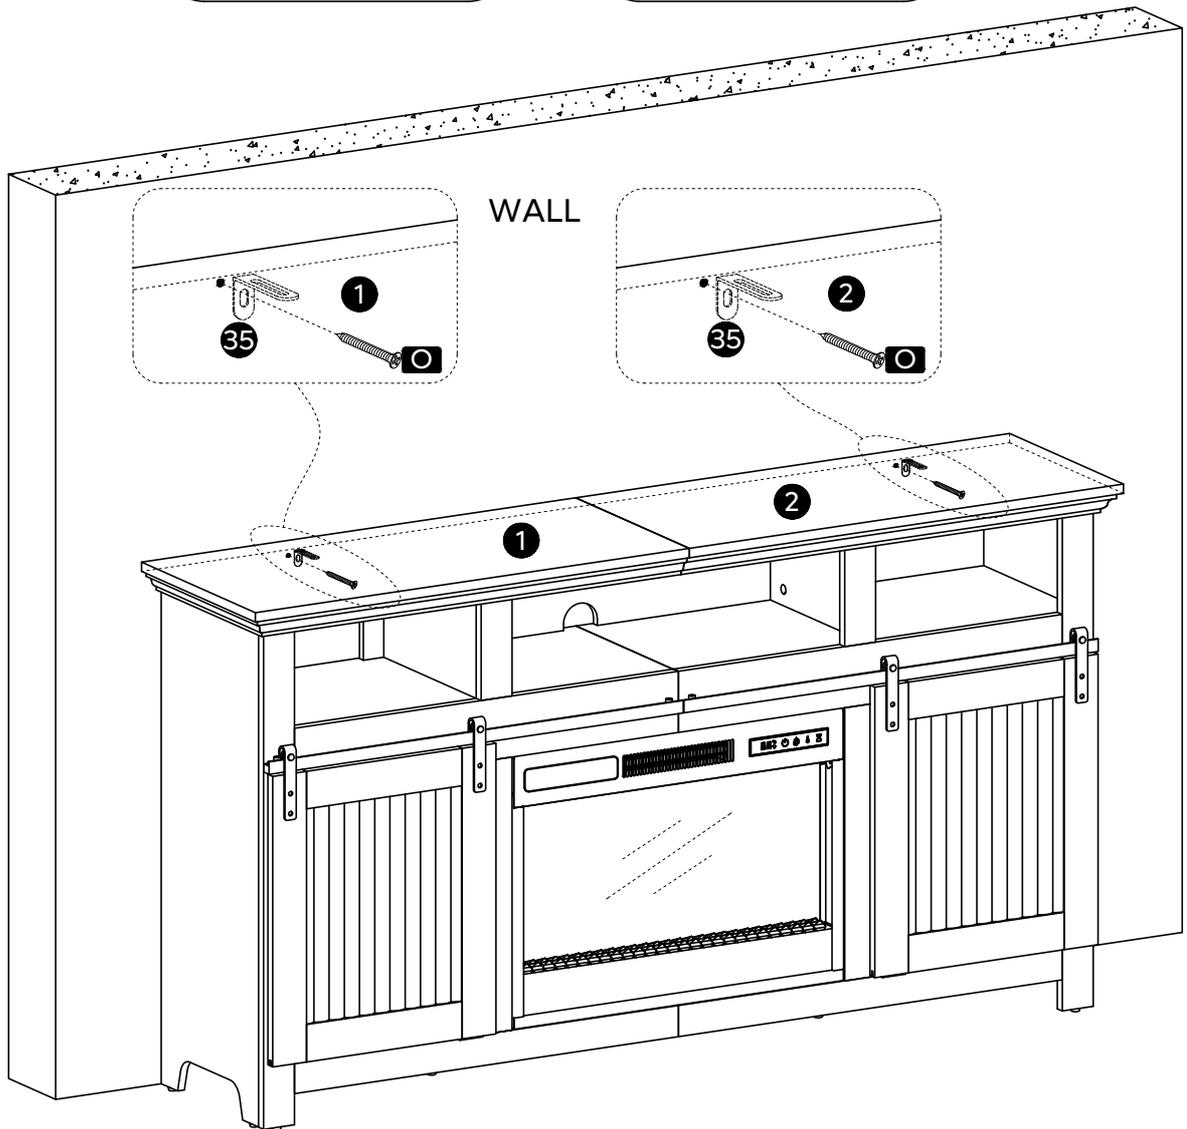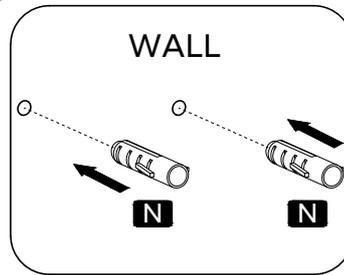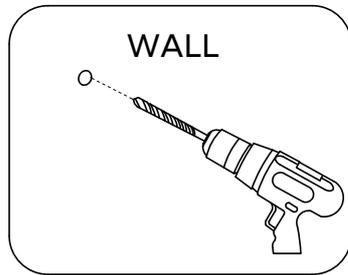

※ **Please fasten this item to wall for protection and safety.**

1. Drill 2 holes in the wall and insert "N" into holes.
- ※ You may need to use rubber mallet for tapping "N".
2. Use "O" to attach "N" with "35".

