



Hyundai Sonata 2020-Up

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- Designed specifically for Pioneer modular 6.8" radios like the DMH-C2550NEX and DMH-C2500NEX.
- †† Refer to the radio manufacturer for current models
- Painted to match factory with a gloss black face, bright silver trim, and matte black back plate.

Note – Pioneer extension cable required for installation. Sold separately.

KIT COMPONENTS

- A) Front panel • B) Back panel • C) Brackets • D) Silver trim • E) #8 x 3/8" Phillips screws (7) • F) Panel clips (4)

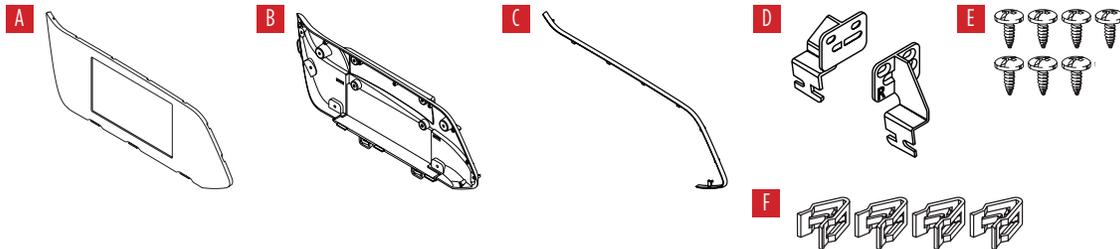


TABLE OF CONTENTS

Dash Disassembly	2
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: Visit metraonline.com for audio/video and steering wheel control interface options.
Antenna Adapter: 40-K110


TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver


Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.

DASH DISASSEMBLY


1. Unclip the trim behind the radio and remove (2) Phillips screws exposed. (Figures A,B)
2. Open the passenger door, then remove the trim panel from the side of the dashboard. Remove (1) Phillips screw exposed. (Figure C)
3. Unclip and remove the trim directly below the radio. (Figure D)

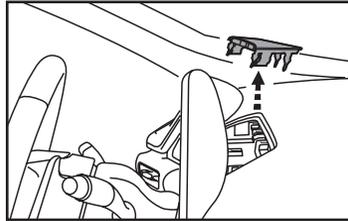

(Figure A)

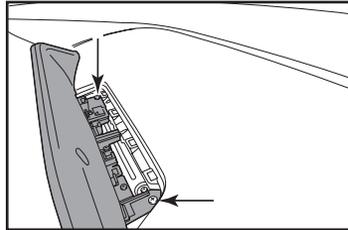


(Figure B)

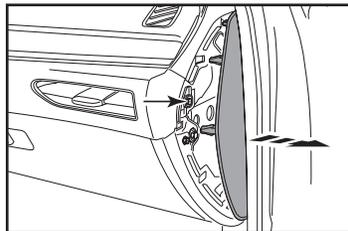


(Figure C)

4. Remove (2) Phillips screws securing the a/c vent panel, then unclip, unplug, and remove. (Figure E)
5. Remove (3) screws securing the radio. Unclip and slide the radio out, then unplug and remove. (Figure F)


Continue to Kit Preparation

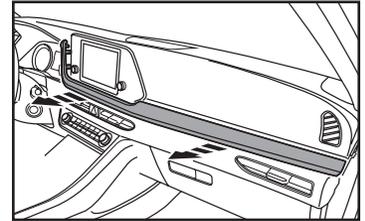

(Figure D)

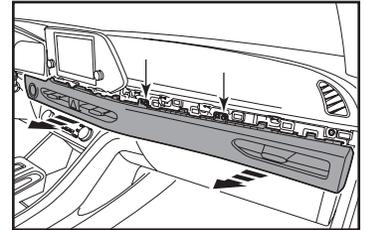

(Figure E)

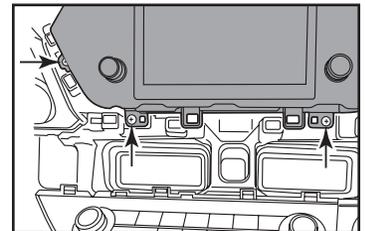


(Figure F)

KIT ASSEMBLY


Pioneer Modular DDIN radio provision

Note: For steps 1 and 2, reference the installation manual provided with the radio for which hardware to use. The display screen and radio chassis use two different types of screws.

1. Secure the **brackets** to the radio chassis using (4) screws supplied with the radio. (Figure A)
2. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or Axxess.
3. Slide the radio assembly into to the dash, then secure using the factory screws. (**NOTE** – route screen cable to be connected later)
4. Connect Pioneer extension cable to the radio display screen.

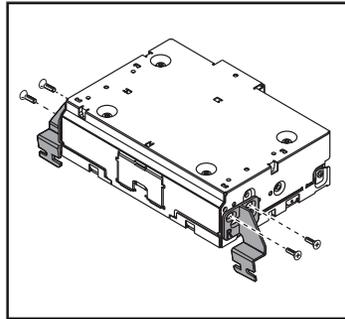


(Figure A)

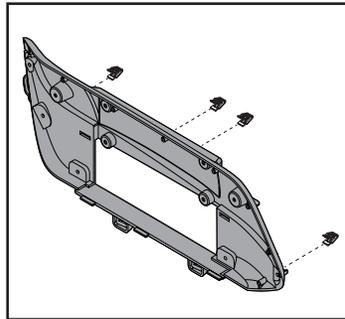


(Figure B)

5. Attach the (4) panel clips to the **back panel** (Figure B)
6. Secure the radio screen display to the **back panel** using (4) of the screws supplied with the radio. (Figure C)
7. Place the **silver trim** betwixt the **back panel** and the **front panel**. Assemble together using (7) of the included #8 x 3/8" screws. (Figure D)
8. Connect the radio display to the radio chassis, clip the assembly into the dash, and secure with the factory hardware.
9. Reassemble the dash in reverse order of disassembly to complete the installation.

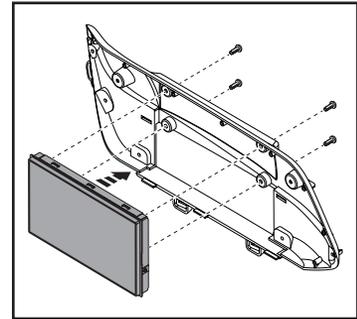

(Figure C)

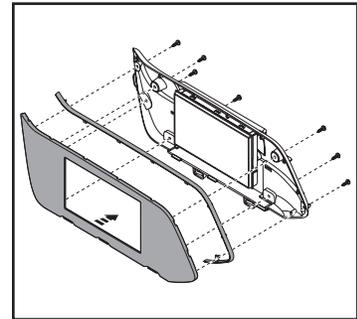

(Figure D)



107-HY1

INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians