


Item # : AF32ANDCV

Assembly Instructions

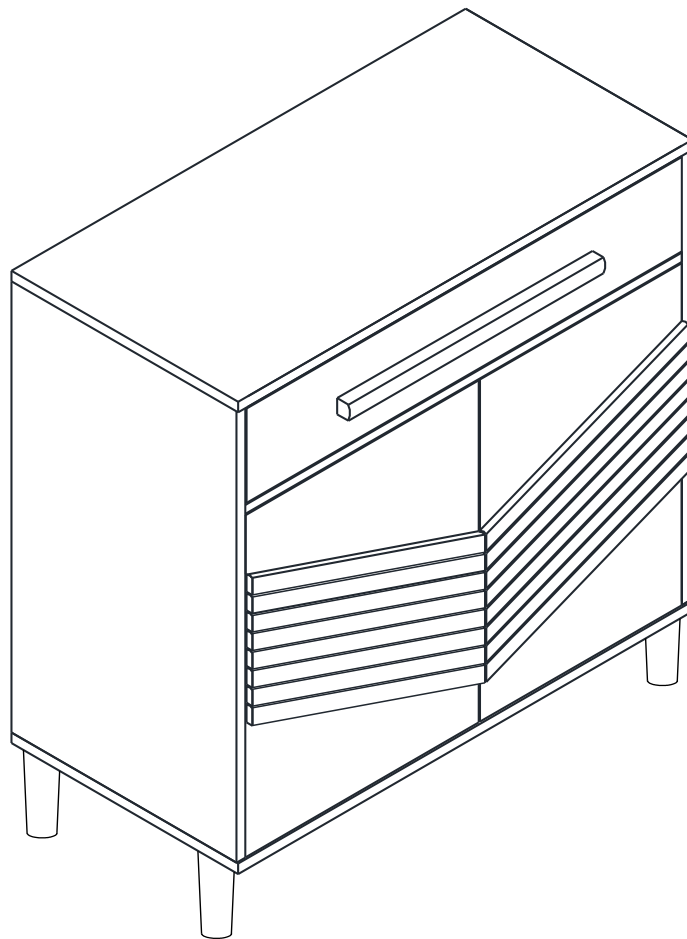


Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkerredson.com


Revised 07/2020

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.

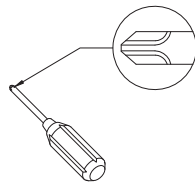

- VI. Power tools should not be used to assemble this product.


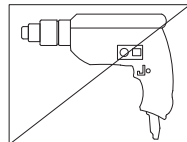


VII. Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.

- I. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
- II. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood)
- III. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.

Parts List

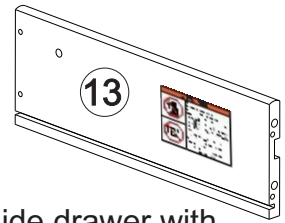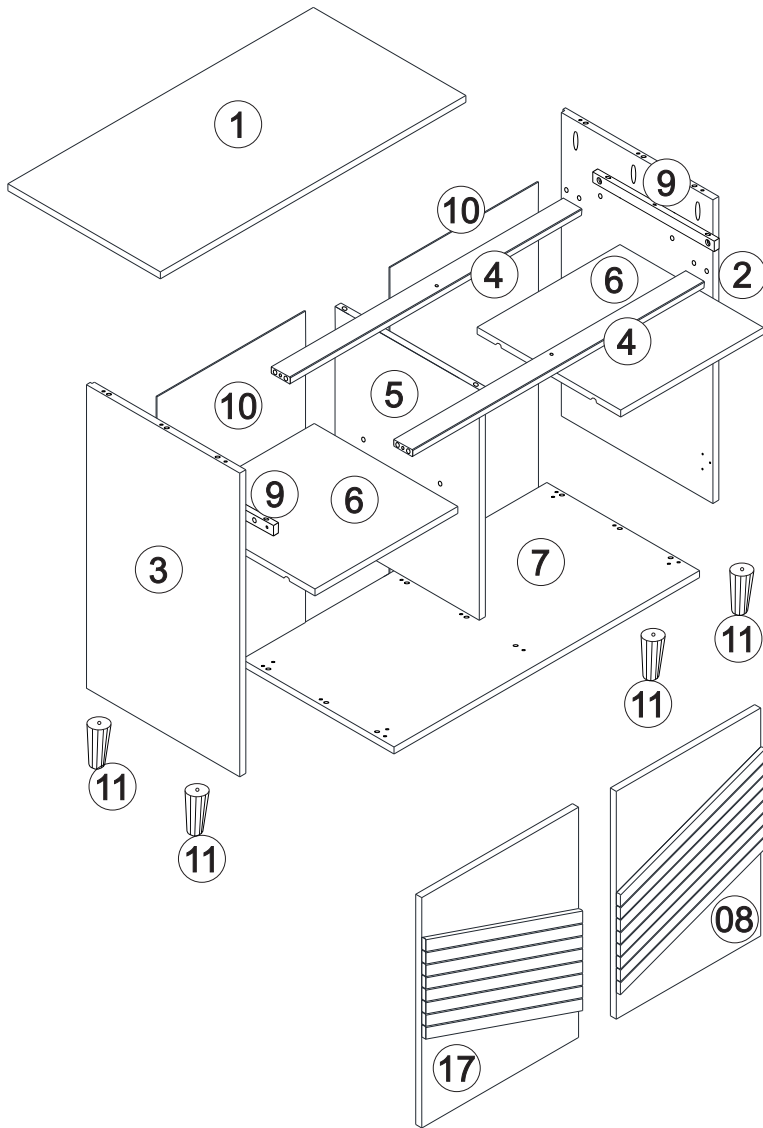


The side drawer with WARNING LABEL, should be mouted in highest drawer.

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.






This is a permanent label. Do not remove!

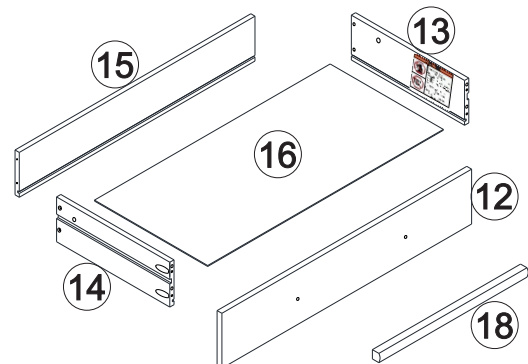


Part#	Description	Qty
1	Top panel	01 pcs
2	Right side panel	01 pcs
3	Left side panel	01 pcs
4	Crossbeam	02 pcs
5	Partition	01 pcs
6	Shelf	02 pcs
7	Base	01 pcs
8	Right door	01 pcs
9	Drawer runner	02 pcs


Part#	Description	Qty
10	Back panel	02 pcs
11	Foot	04 pcs
12	Front drawer	01 pcs
13	Right side drawer	01 pcs
14	Left side drawer	01 pcs
15	Back croosbeam	01 pcs
16	Foot crossbeam	01 pcs
17	Left door	01 pcs
18	Puller	01 pcs

Hardware List

A		Ø8*30mm	Wooden dowel	33 pcs
B		Ø8*20mm	Wooden dowel	04 pcs
C		Ø3,0*16mm	Screw	28 pcs
D		Ø4,0*30mm	Screw	21 pcs
E		Ø7,5*12mm	Shelf Support	08 pcs
F			Allen key	01 pcs
G		Ø10*10	Nail	34 pcs
H		Ø4*40mm	Knob	11 pcs
I			Hinge	04 pcs
J	 Ø3,0*16mm		Magnetic Handle	02 pcs
K			Wall anchor	01 pc
L			Washer	02 pc
M			Ø6mm	01 pc
N		Ø7*50mm	Screw	04 pcs
O		Ø3,5*25mm	Screw	05 pcs
P				04 pcs

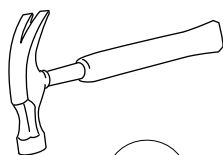


Hammer recommended for assembly
(not included)

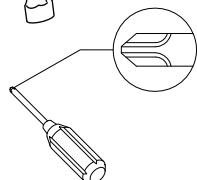

Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*



Step 1

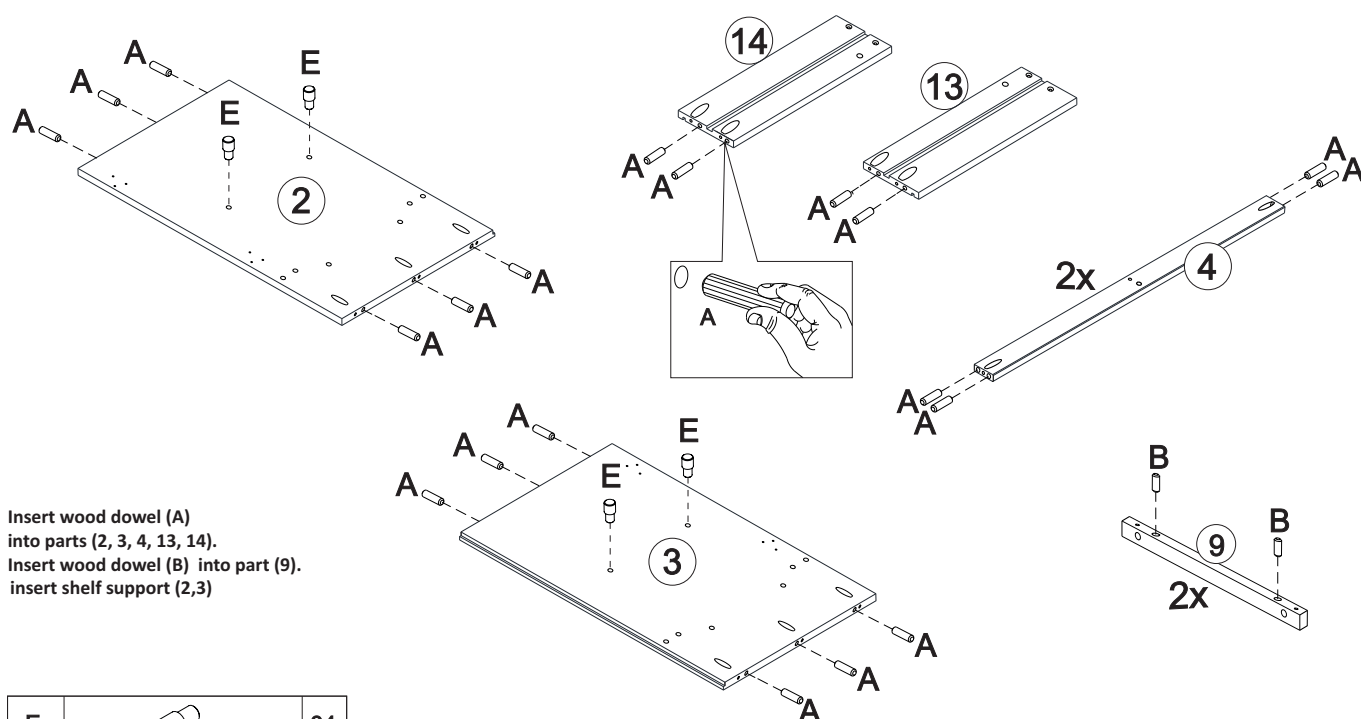



Insert wood dowel (A)
into parts (2, 3, 4, 13, 14).
Insert wood dowel (B) into part (9).
insert shelf support (2,3)

E		04
A	 Ø8*30mm	24
B	 Ø8*20mm	04

Step 2

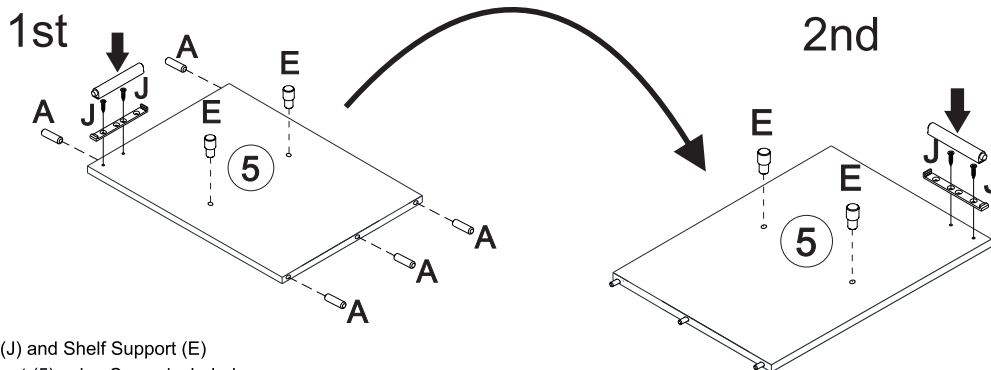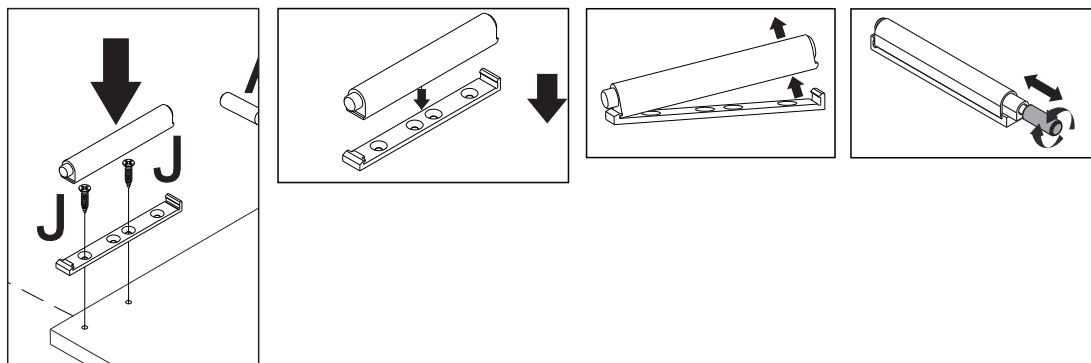


First:
Attach Magnetic Handle (J) and Shelf Support (E)
in the pre-drilled side of part (5) using Screw included.
Insert wood dowel (A)

E		04
J	 Ø3.0*16mm	02
A	 Ø8*30mm	05

Second:
Attach Magnetic Handle (J) and Shelf Support (E)
in the pre-drilled side of part (5) using Screw included.


Step 3

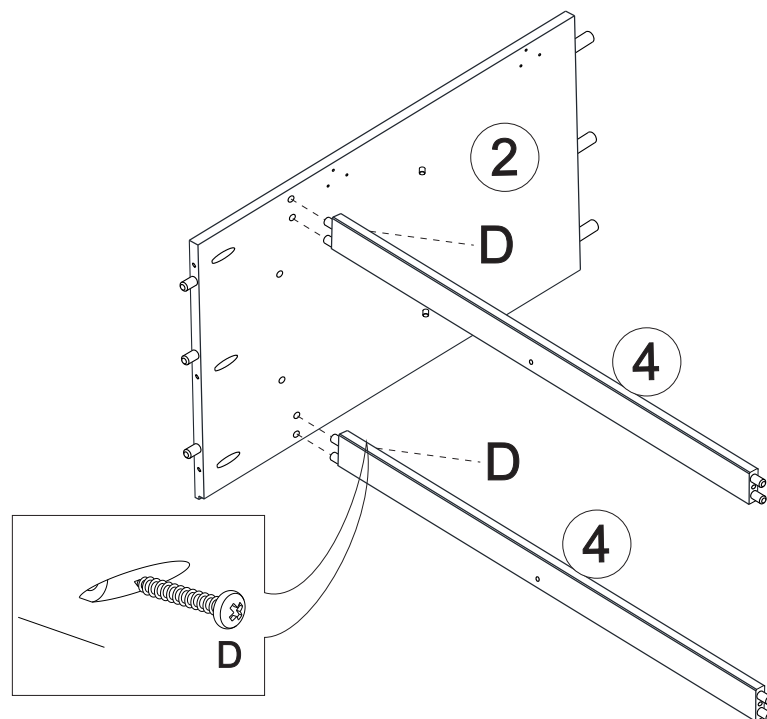


Secure front cross beam (4)
to panels (2) using screw (D)




Step 4

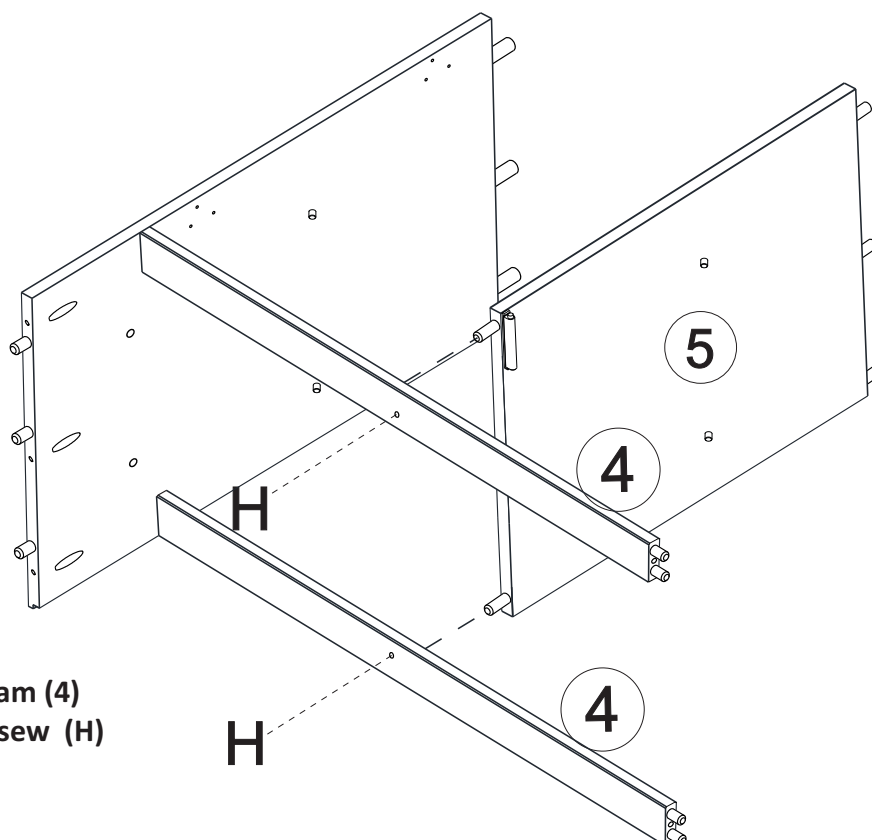


Secure front cross beam (4)
to partition (5) using screw (H)




Step 5

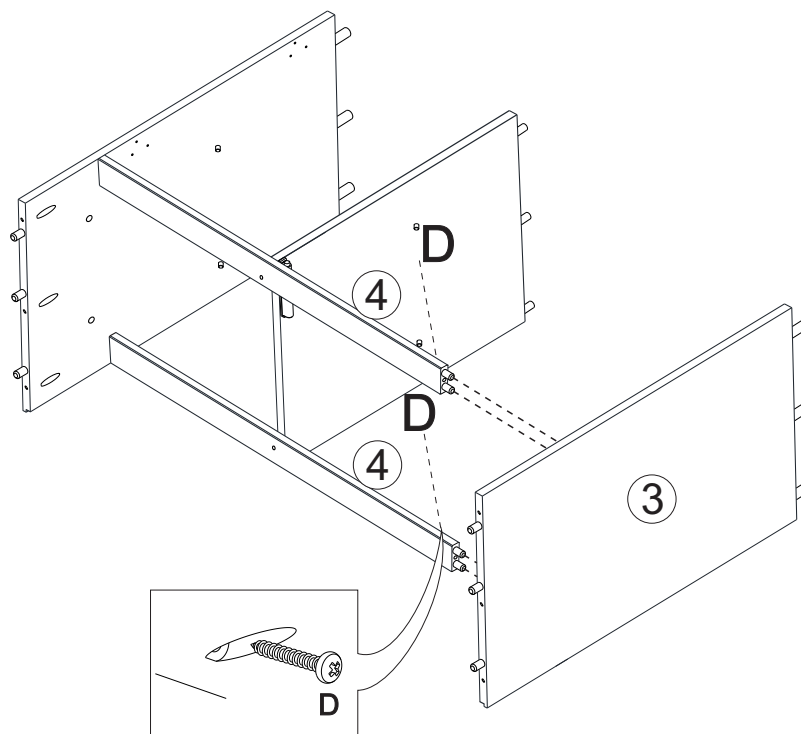


Secure front left side panel (3)
to crossbeam (4) using screw (D)




Step 6

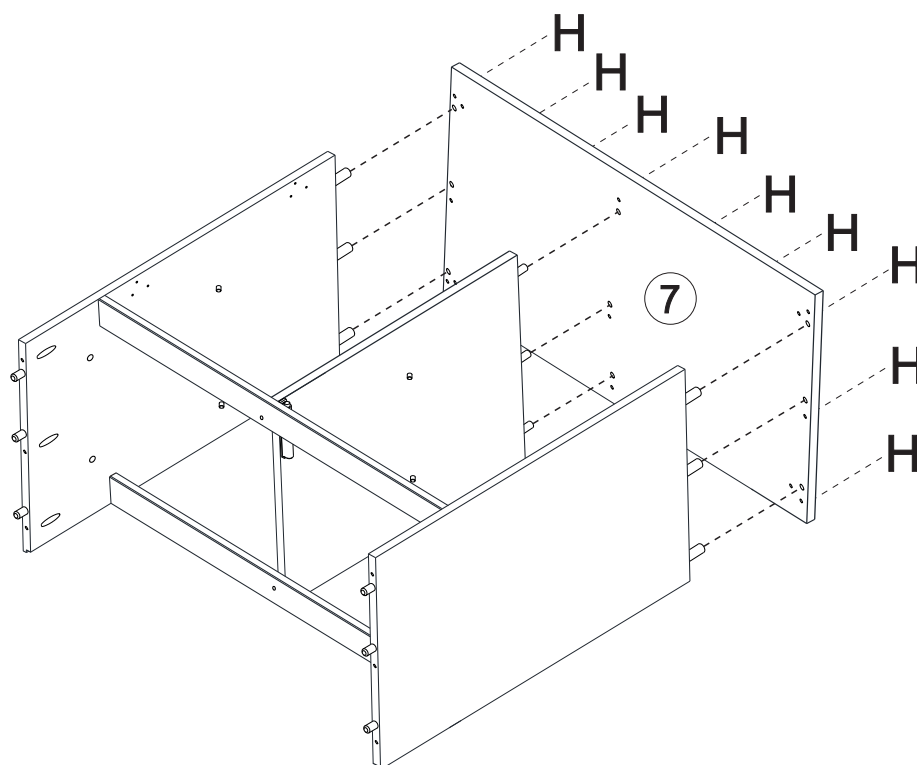



Secure base (7)
to right side panel, left side panel, partition (3,4,5) using screw (H)




Step 7

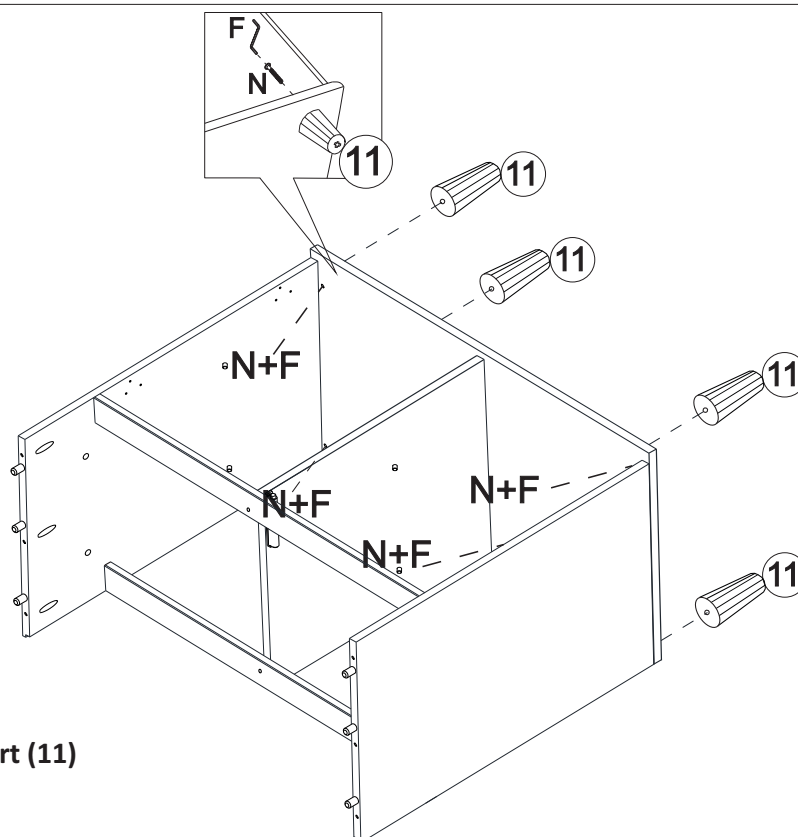

Use screw (N) to attach part (11) and key (F).

N		04
F		01


Step 8

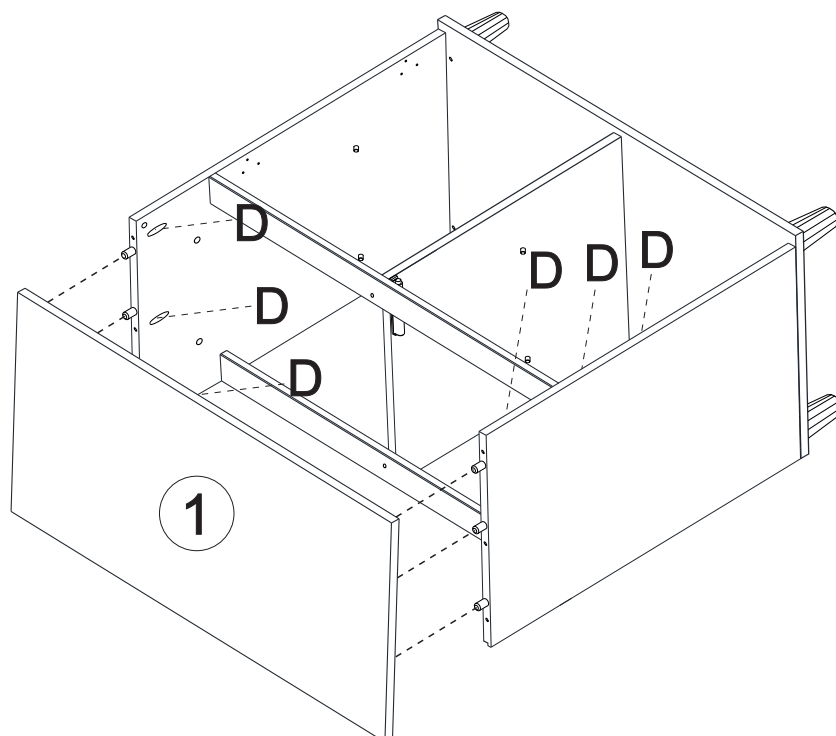

Secure top panel (1) using screw (D)

D		06
---	---	----


Step 9

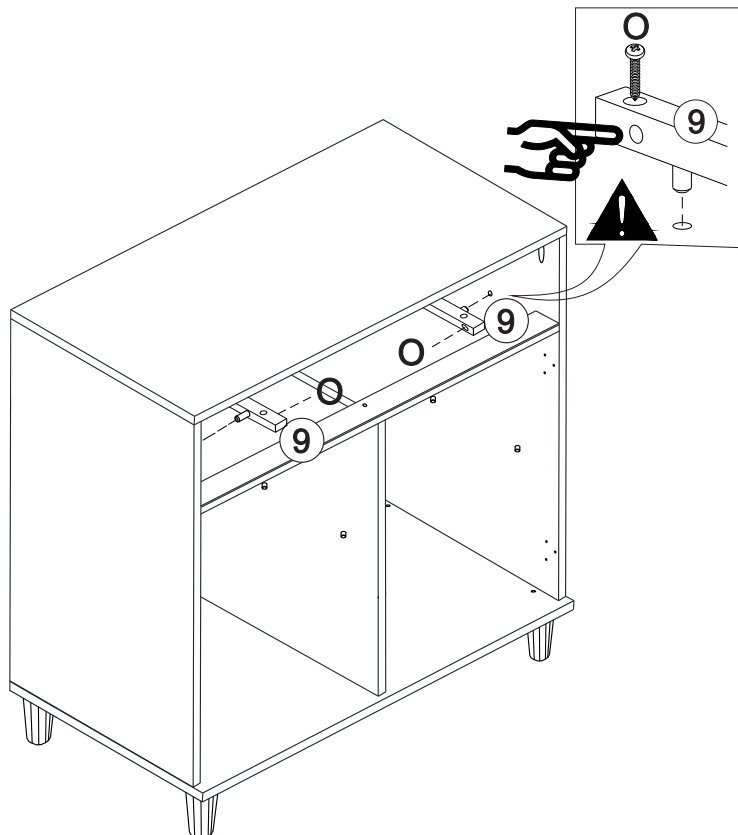


Use screw (O) to attach parts (2,3) to part (9)

O		04
Ø3,5*25mm		


Step 10

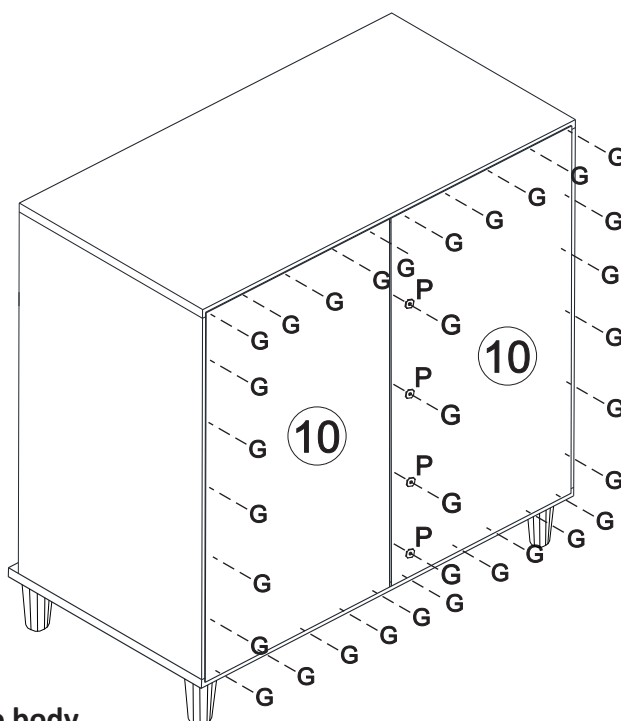

Secure back panel (10) to body with nails (G) and hardware (P)

P		04
G		34


Step 11

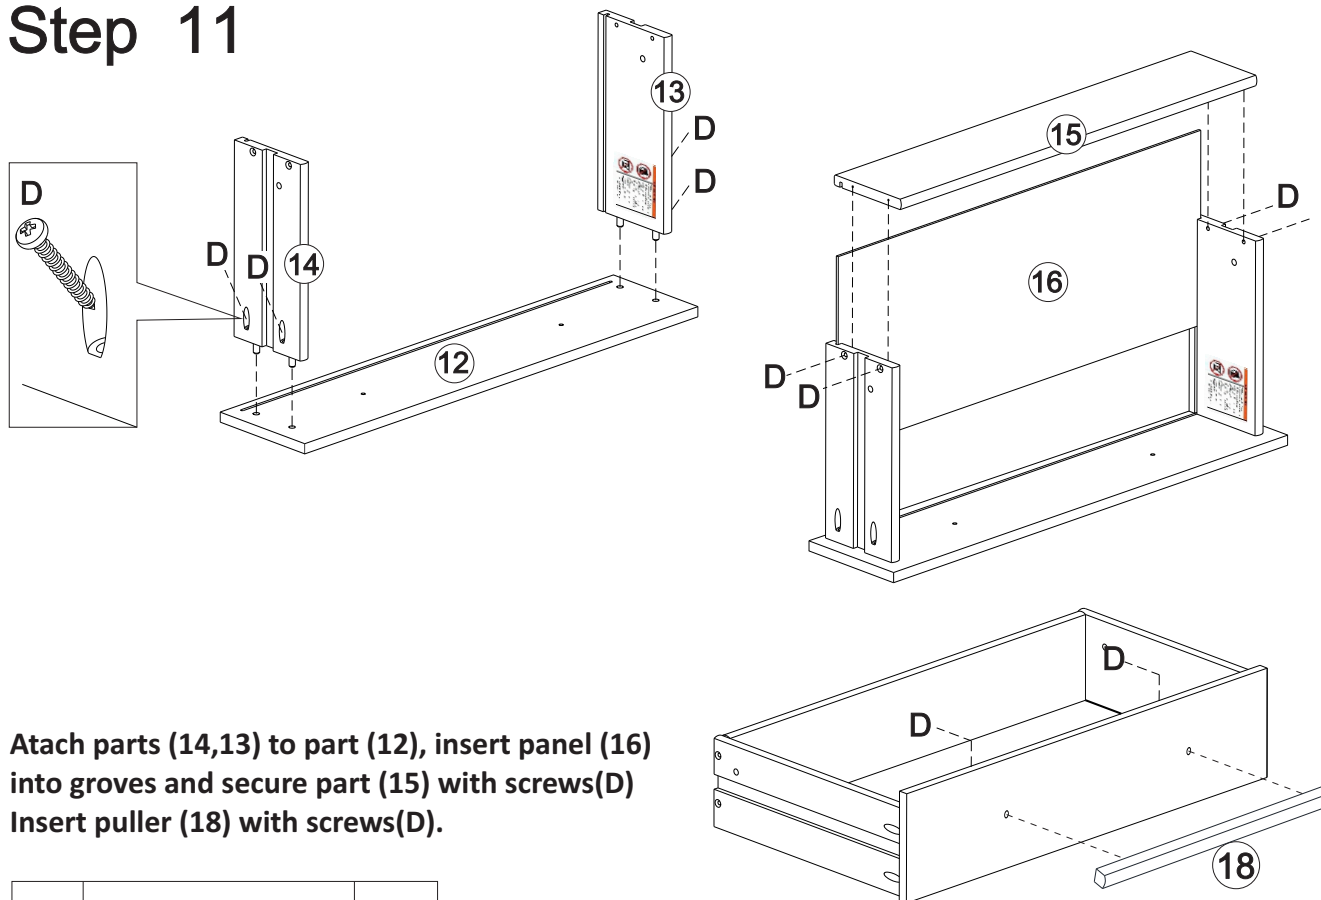


D		10
---	--	----

Ø4,0*30mm

Step 12

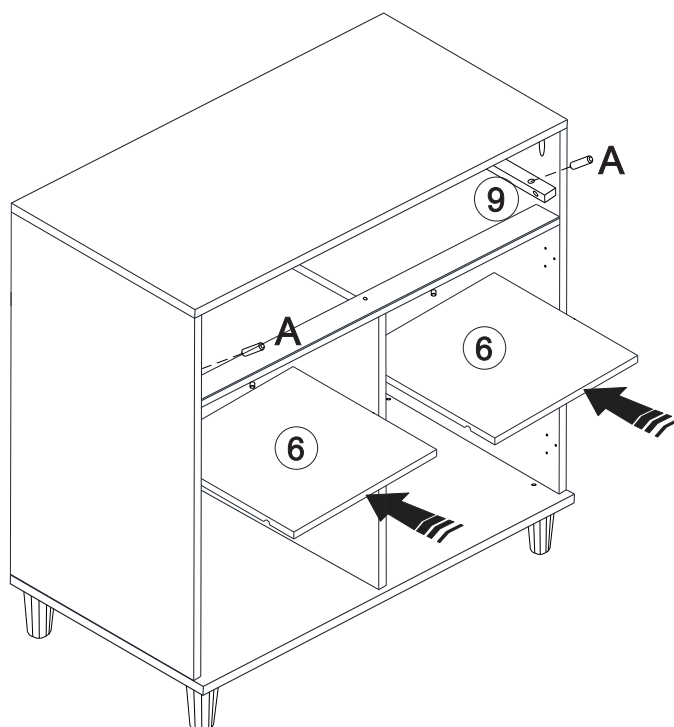


Insert wood dowel (A)
drawer runner (8)

A		02
---	---	----

Ø8*30mm


Step 13

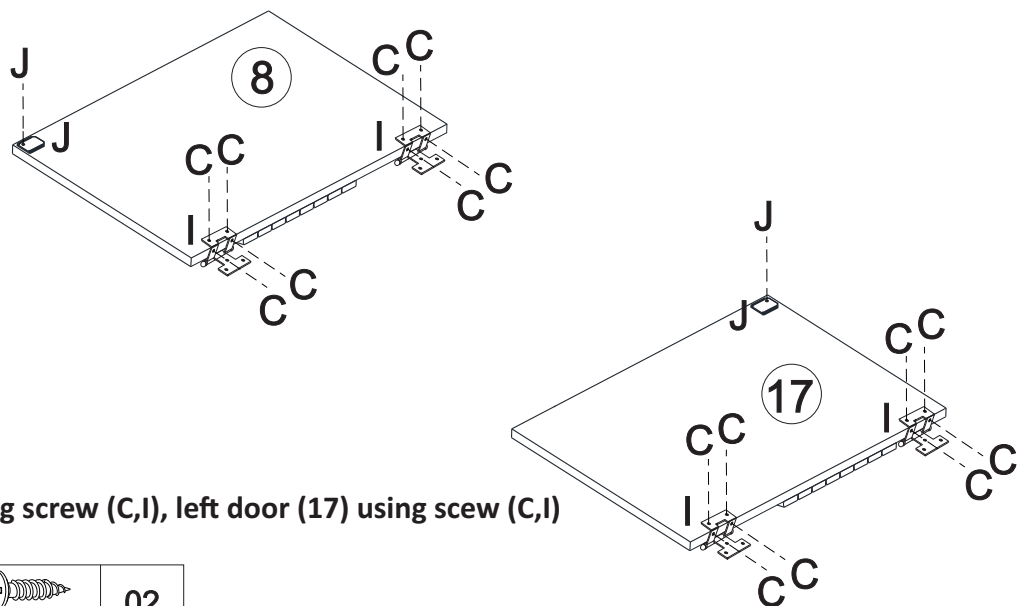

Right door (8) using screw (C,I), left door (17) using screw (C,I)

J			02
C			16
I			04


Step 14

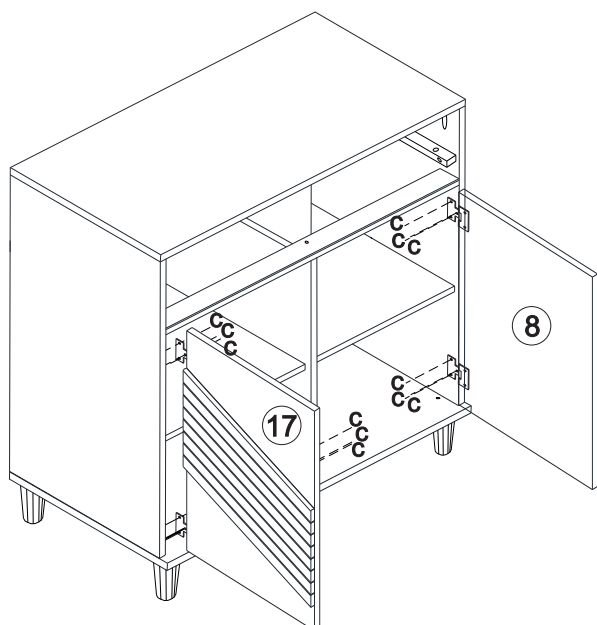


Right door (8) using screw (C),
right side panel (17) using screw (C)
left side panel

C		12
---	---	----

Step 15

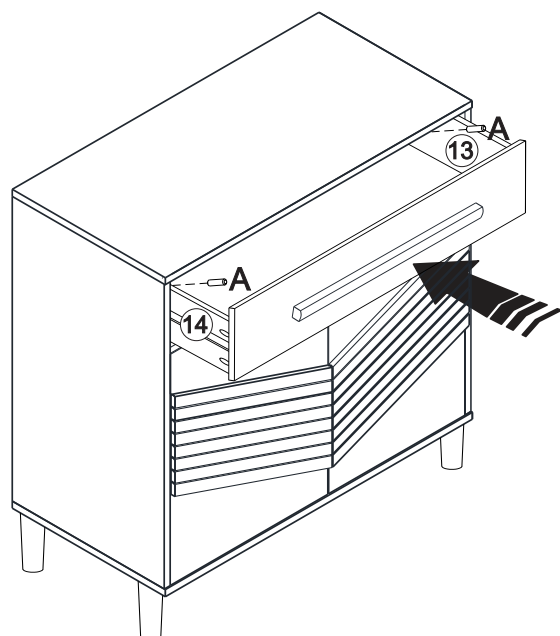

Insert wood dowel (A)
right on left side dower (13,14)





A		02
---	--	----

Step 16

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

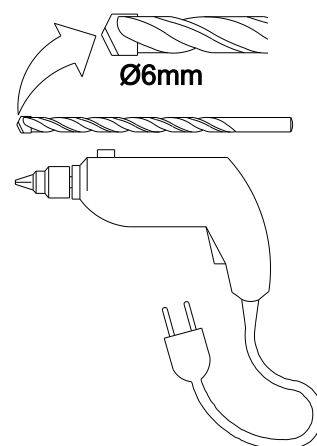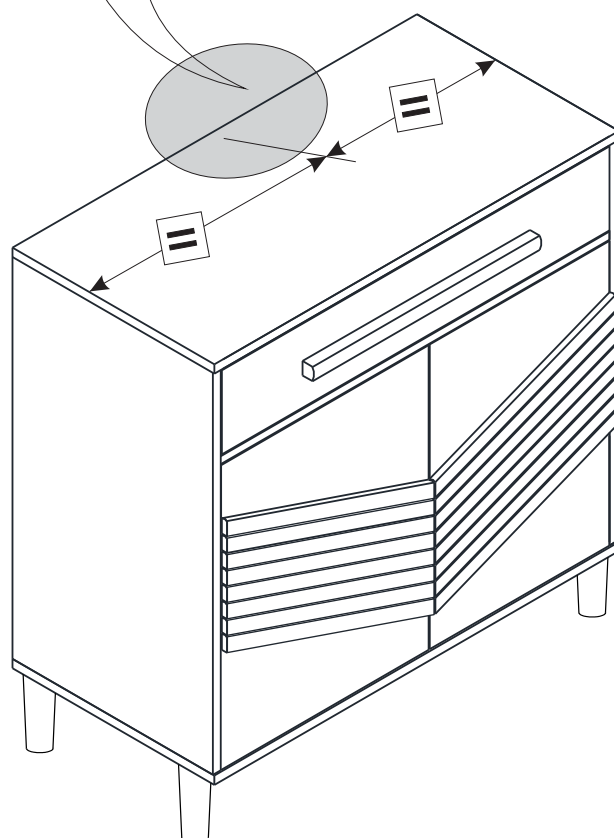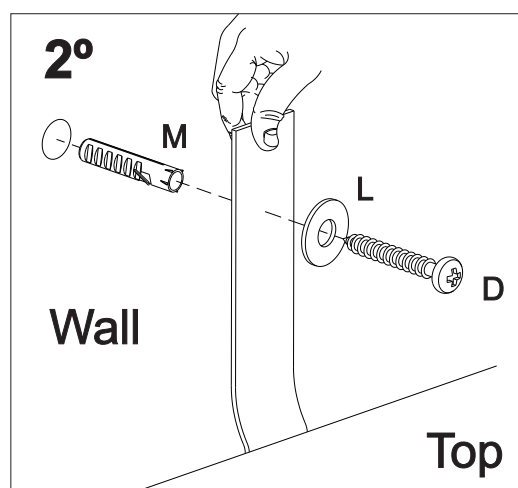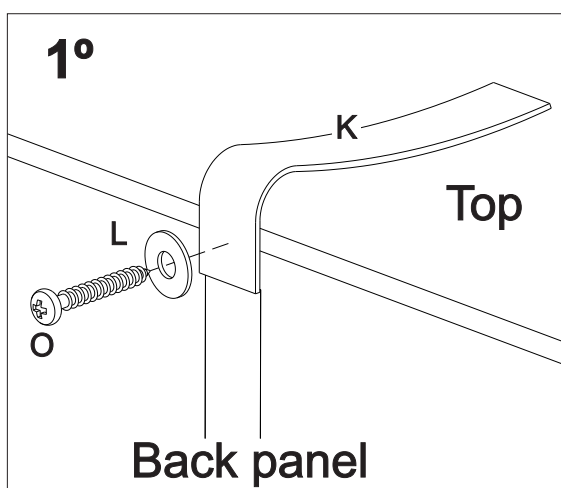

O	 Ø3,5*25mm	01
D	 Ø4,0*30mm	01
K		01
L		02
M		01

Assembly Complete!