

MOUNTING YOUR POPCLIP



Install your PopClip at room temperature.



Decide where you'd like to place your PopClip before installing - you can only mount it once!

Clean your chosen PopClip spot before installation.



Let the cleaned area dry before pressing your PopClip into place. Press firmly for 12 seconds to make sure it sticks.

Wait 24 hours before putting your phone on the PopClip.


24 HOURS



YES!

90°




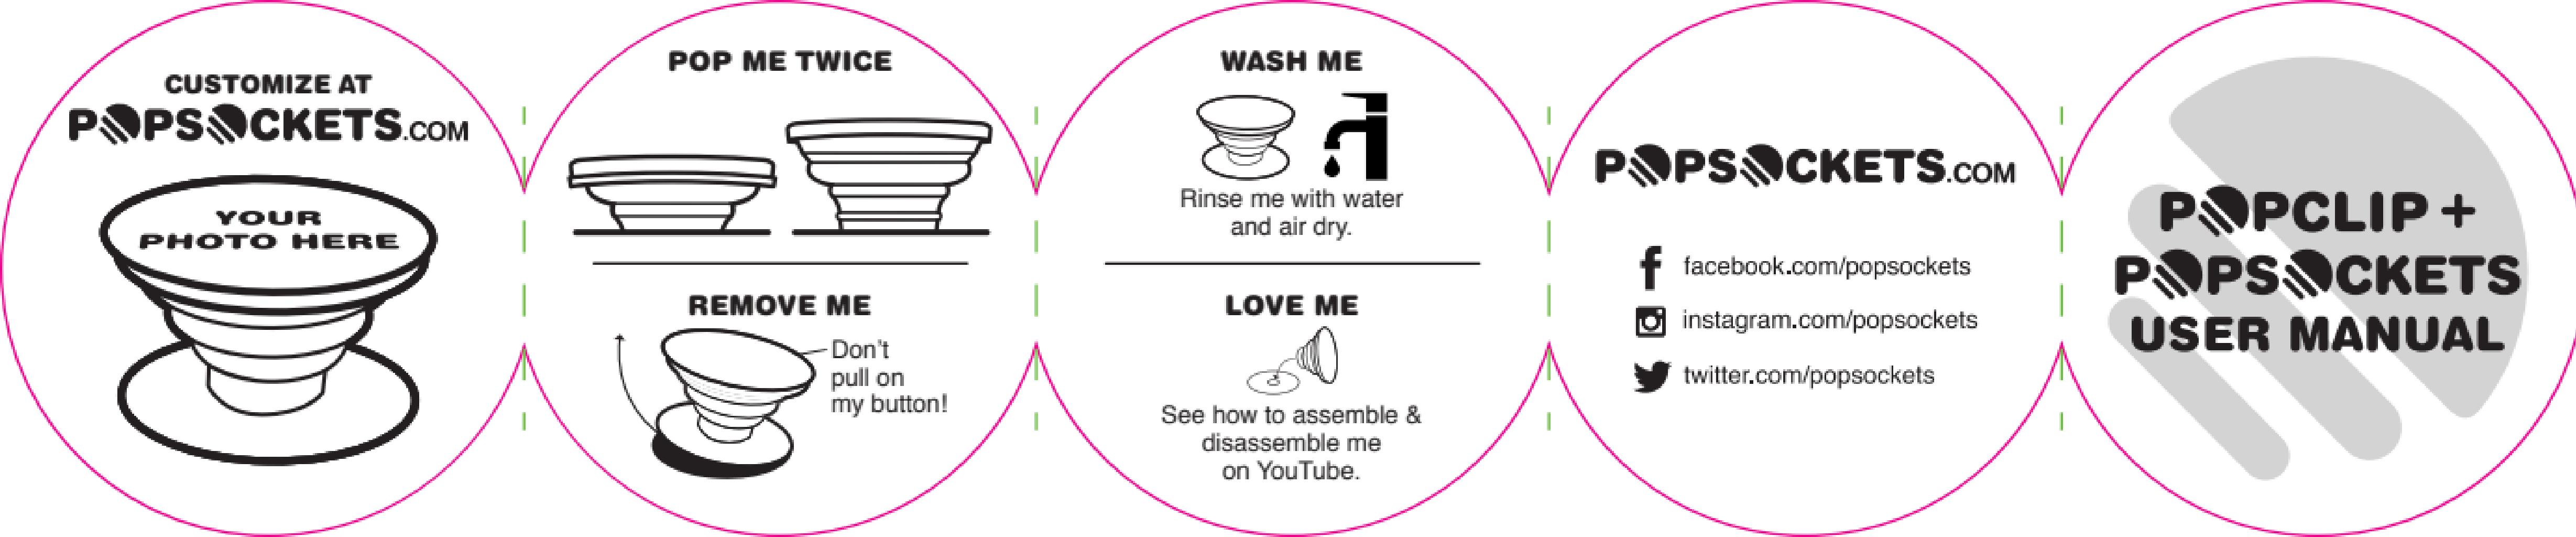

CUSTOMIZE AT
POPSOCKETS.COM



POP ME TWICE

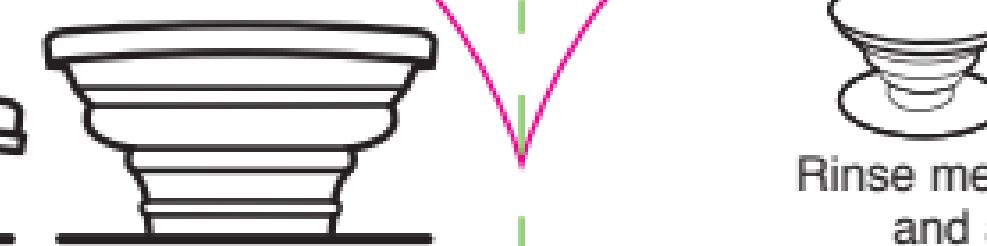

REMOVE ME



WASH ME



Rinse me with water
and air dry.

POPSOCKETS.COM

f facebook.com/popsocket

ig instagram.com/popsocket

tw twitter.com/popsocket

LOVE ME



See how to assemble &
disassemble me
on YouTube.

**POPClip +
POPSOCKETS
USER MANUAL**