



Hyundai Venue 2020-Up

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- ISO DDIN radio provision
- Painted scratch resistant matte black with silver vent trim

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Panel clips (5) • D) Panel clip legs (3) • E) #4 Phillips screws (12)

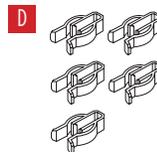
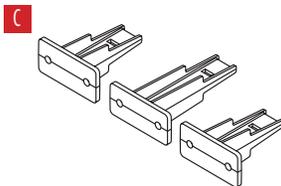
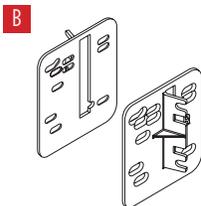
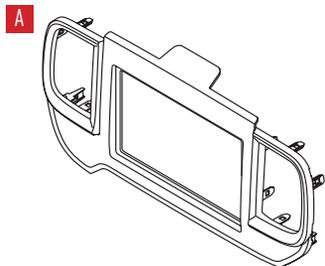


TABLE OF CONTENTS

Dash Disassembly	2
Kit Preparation	2-3
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

See metra-online.com or axxessinterfaces.com for audio and SWC interface options
Antenna Adapter: 40-K111

TOOLS REQUIRED


- Panel removal tool • Socket wrench
- Phillips screwdriver • Cutting tool

Attention! Let the vehicle sit with the key out of the ignition for a few minutes before removing the factory radio. When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.


DASH DISASSEMBLY

1. Unclip and remove the center dash trim panel which includes the a/c vents. This panel is incredibly difficult to remove. Start from the top clips then work down. (Figure A)
2. Remove (4) Phillips screws securing the radio. Slide the radio out, then unplug and remove. (Figure B)
3. Remove (4) Phillips screws securing the factory hazard switch panel to the radio trim panel and (1) Phillips screw per a/c vent then unclip and remove the panel and vents from the factory radio trim panel. (Figure C)


Continue to Kit Preparation

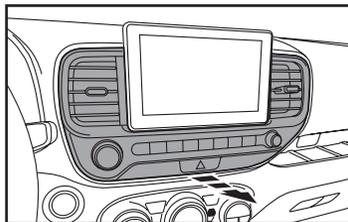

(Figure A)

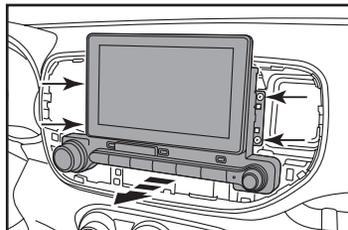

(Figure B)

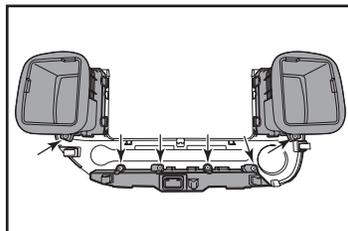


(Figure C)


KIT PREPARATION

1. Cut and remove the area marked in the sub dash and bend metal bracket out of the way to make room for the radio chassis. (Figure A)
2. Secure the factory hazard button panel to the **radio trim panel** using the factory hardware. Screws have also been provided if needed. (Figure B)

Continued on the next page

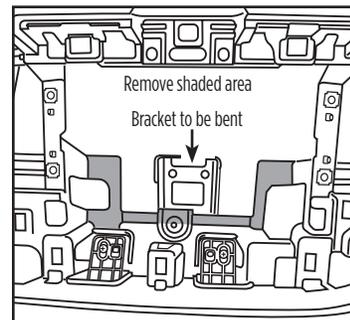

(Figure A)

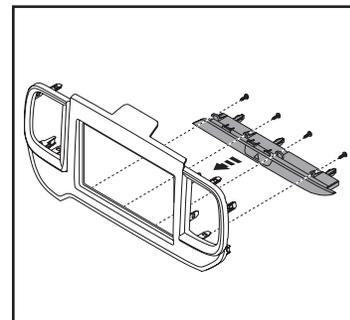


(Figure B)


KIT PREPARATION (CONT.)

3. Secure the factory a/c vents to the **radio trim panel** using the factory hardware. Screws have also been provided if needed. (Figure C)
4. Secure the (3) **panel clip legs** to the radio trim panel with (6) #4 screws provided. (Figure D)
5. Attach the (5) supplied **panel clips** to the **panel clip legs** and **radio trim panel**. (Figure D)

Continue to Kit Assembly

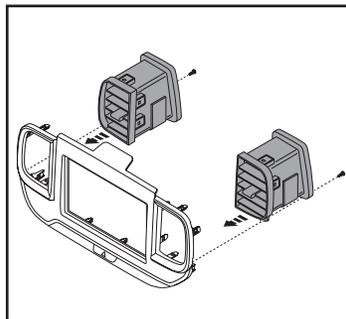


(Figure C)

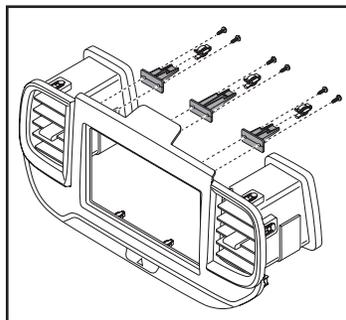

(Figure D)

KIT ASSEMBLY

1. Attach the **radio brackets** to the radio using screws supplied with the radio, and then secure into the dash opening (Figure A).
2. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.
3. Snap the **radio trim panel** over the radio and reassemble the dash in reverse order of disassembly.

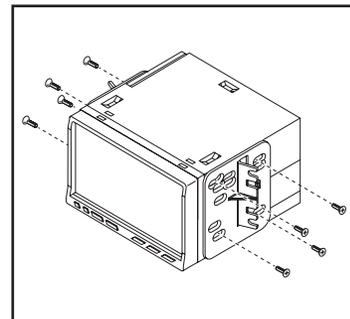

(Figure A)



95-7398
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



® KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**