
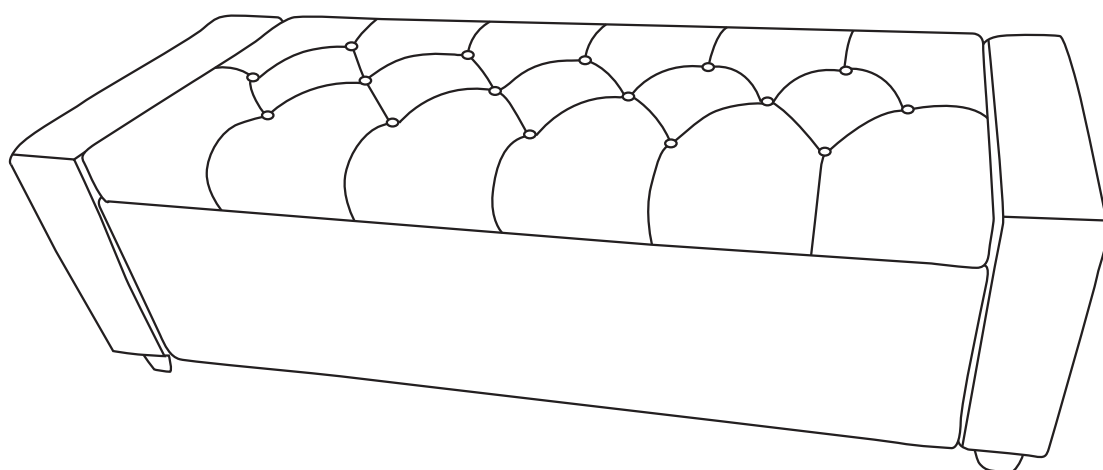

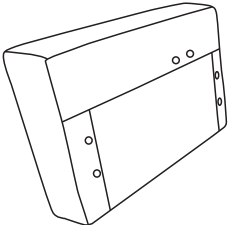
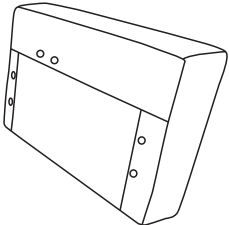
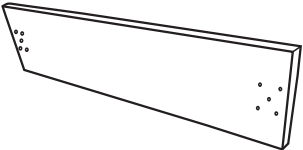
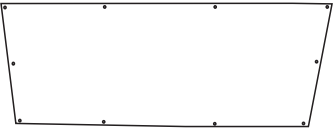
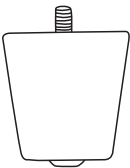
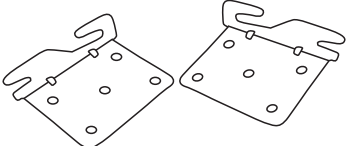
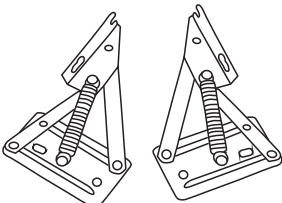

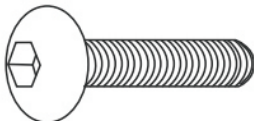
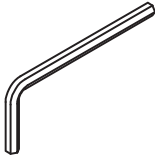


SQ-24123

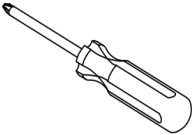


OTTOMAN WITH STORAGE

Parts List(Unit:pcs)


A  1 PC	B  1 PC	C  1 PC
D  2 PCS	E  1 PC	F  4 PCS
G  4 PCS	H  4 PCS	I  2 PCS
J  M6x20mm 20 PCS	K  M6x30mm 16 PCS	L  8 PCS
M  M4x25mm 10 PCS	N  1 PC	O  1 PC

Installation Steps

STEP 1

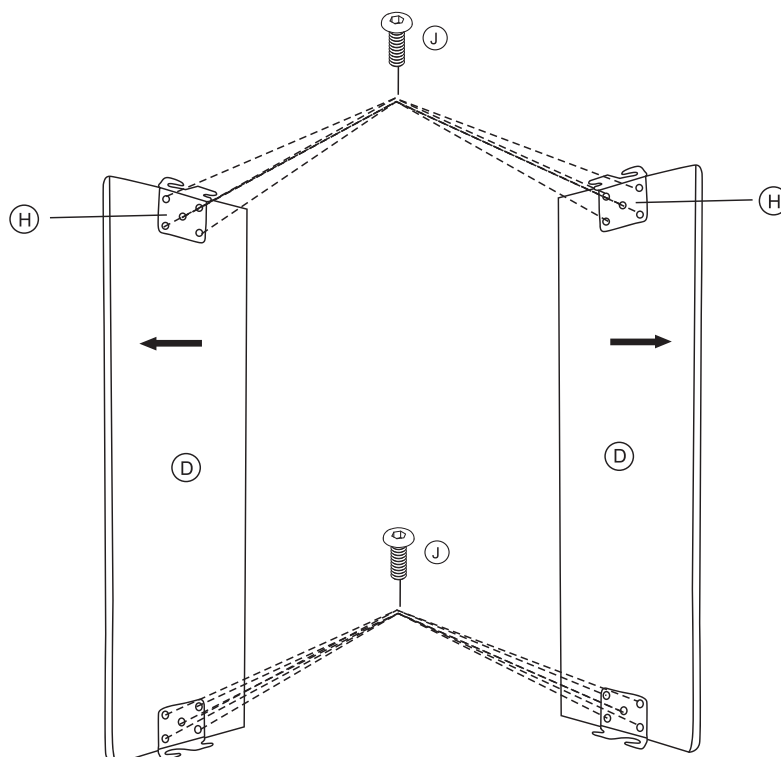


STEP 2

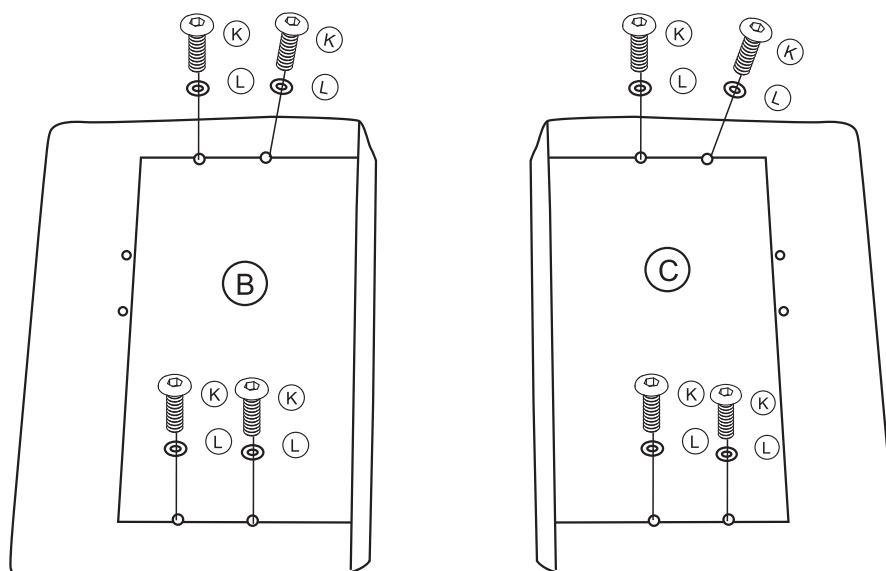



Do not tighten the screws 100% at this step, just 20% is ok

STEP 3

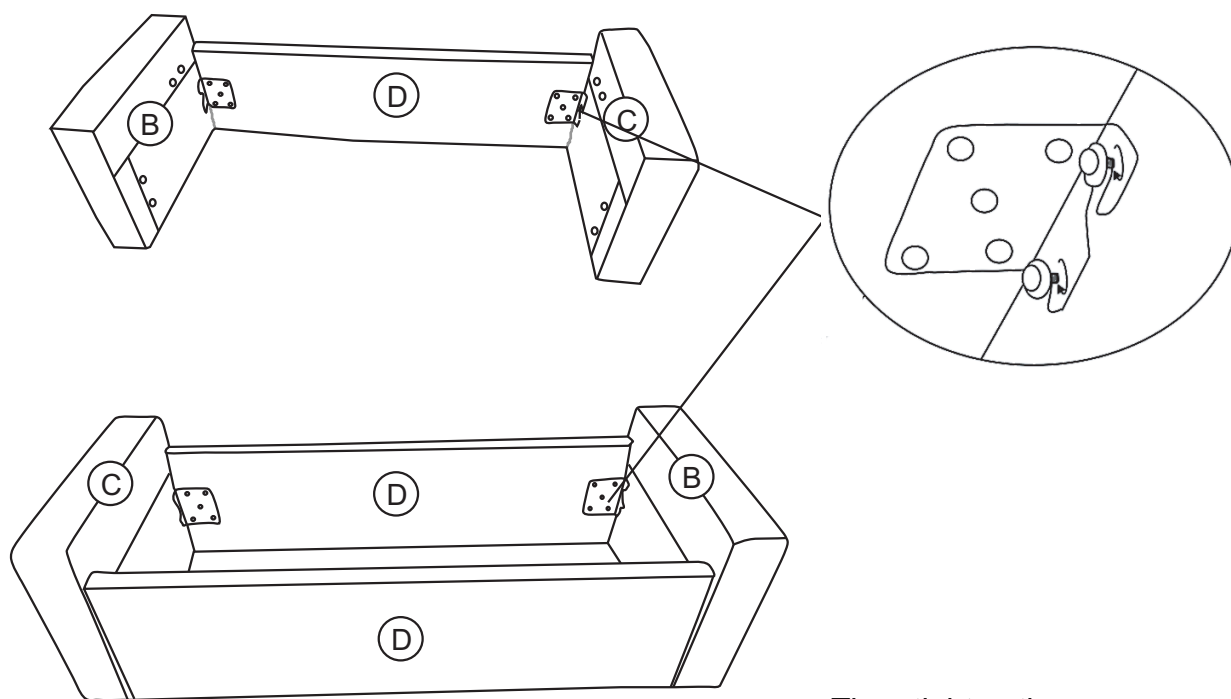


Then tighten the screws


STEP 4

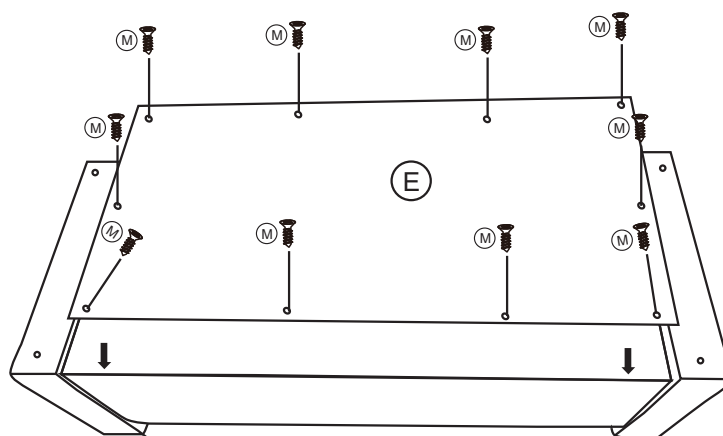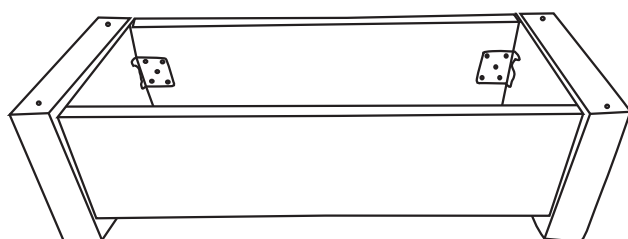


STEP 5

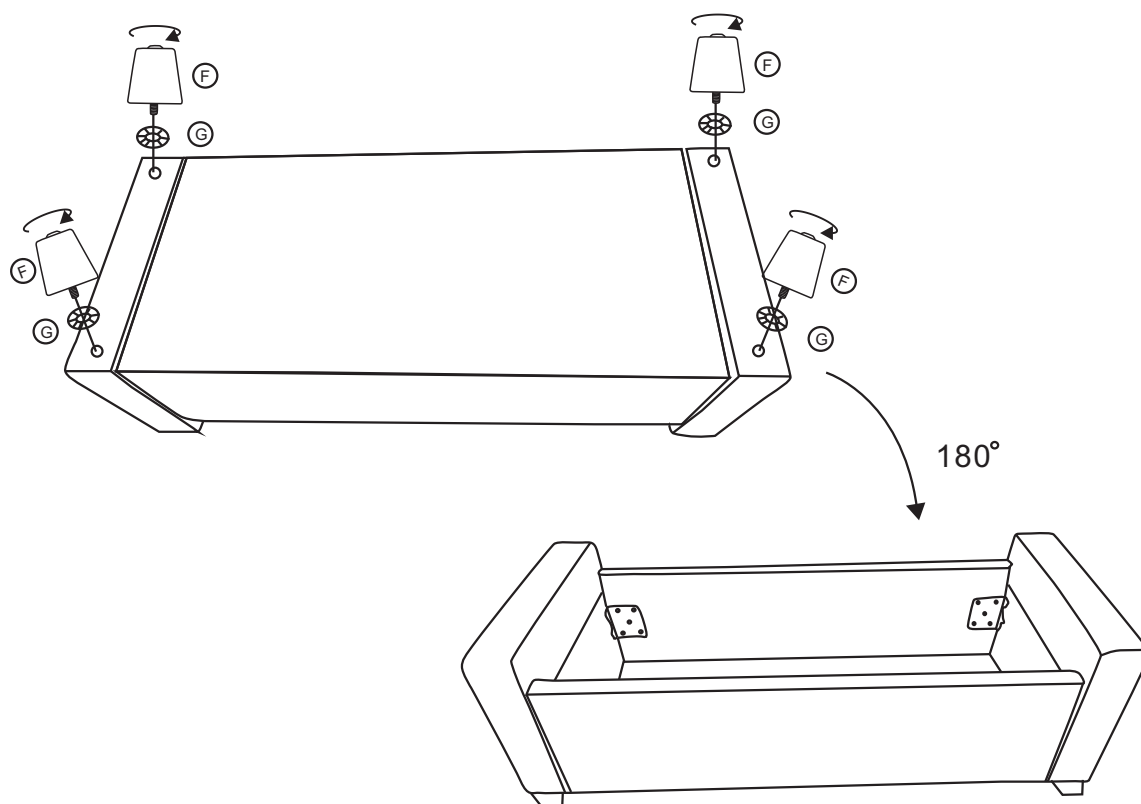

STEP 6

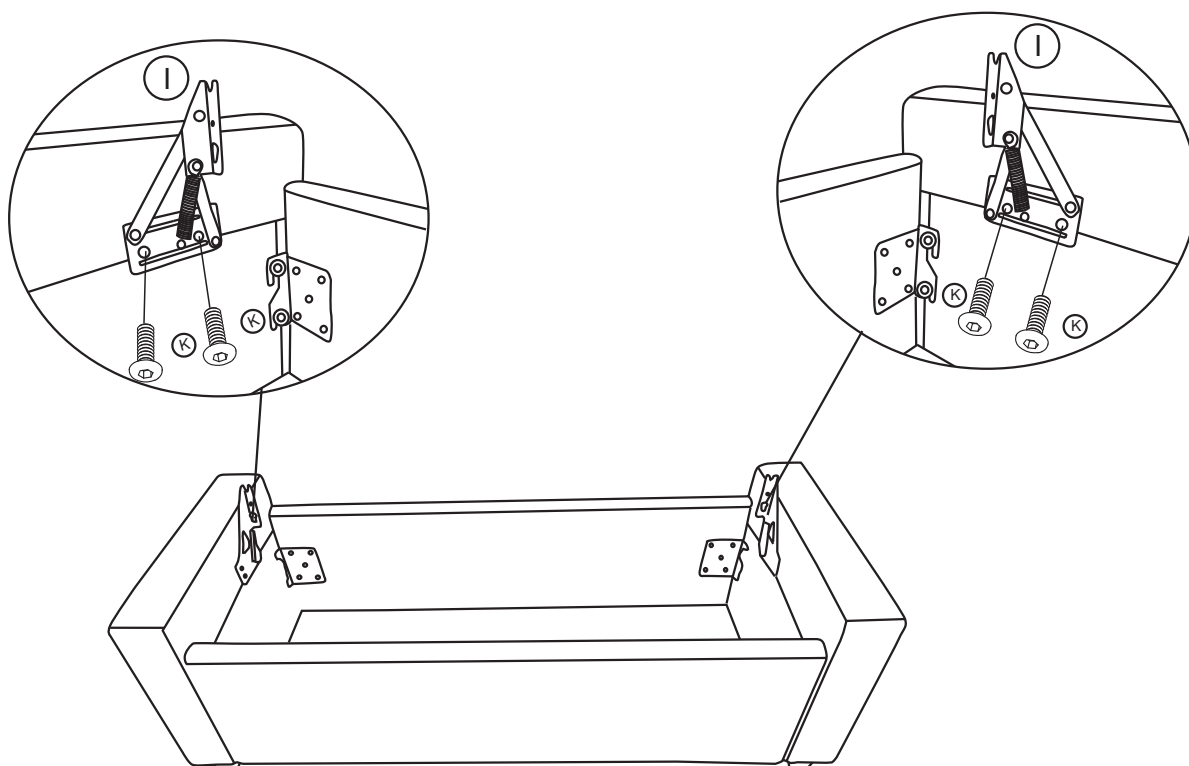

STEP 7

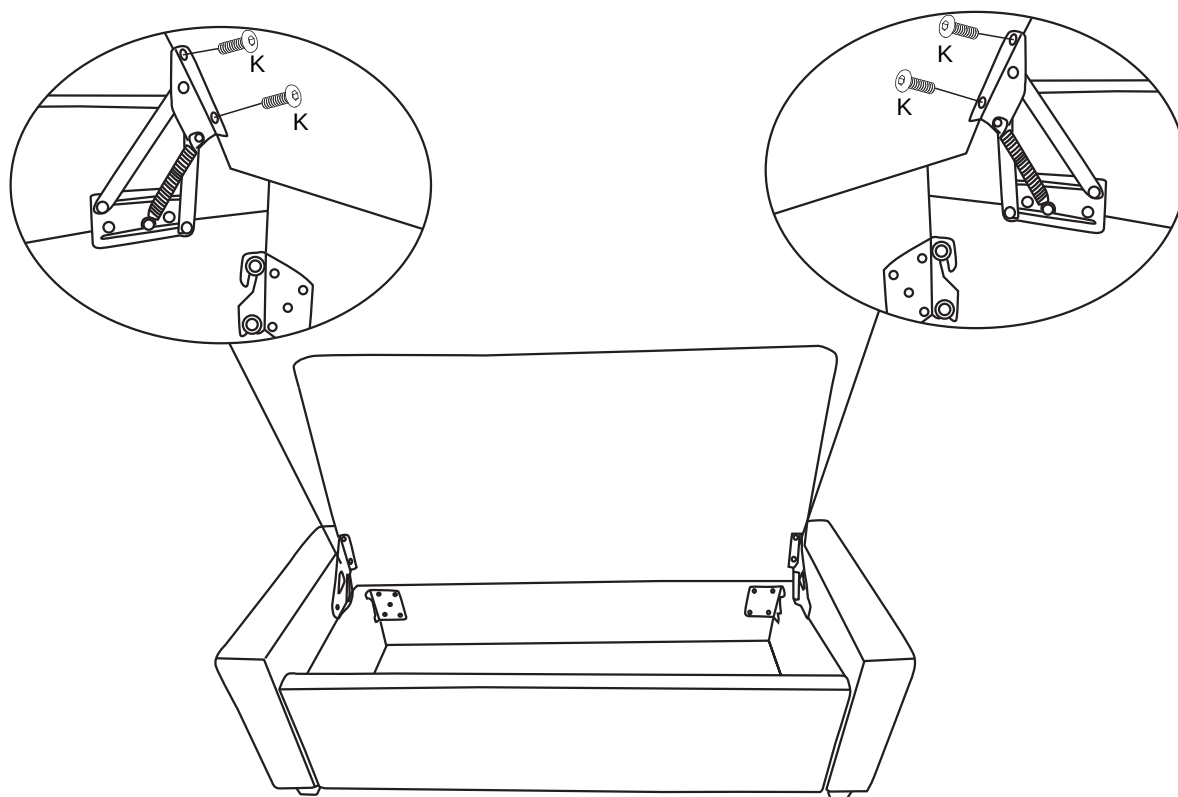

STEP 8

