

LARA DRESSER

ASSEMBLY TIPS









1. Remove hardware from box and sort by size.
2. Please ensure that all hardware and parts are presented prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.




WARNING !

1. Don't attempt to repair or modify part that are broken or defective. Please contact with the store immediately.
2. This product is for home use only and not intended for commercial establishment.




NO	HARDWARE LIST	QTY	NO	HARDWARE LIST	QTY
1	 MINIFIX	6 PCS	5	 WOODEN DOWEL M6 x 30mm	8 PCS
2	 HOUSING	6 PCS	6	 WOODEN DOWEL M6 x 20mm	4 PCS
3	 CSK M4 x 25mm	18 PCS	7	 THMS M4 x 22mm	6 PCS
4	 CSK M4 x 20mm	48 PCS	8	 HANDLE	6 PCS

PART LIST

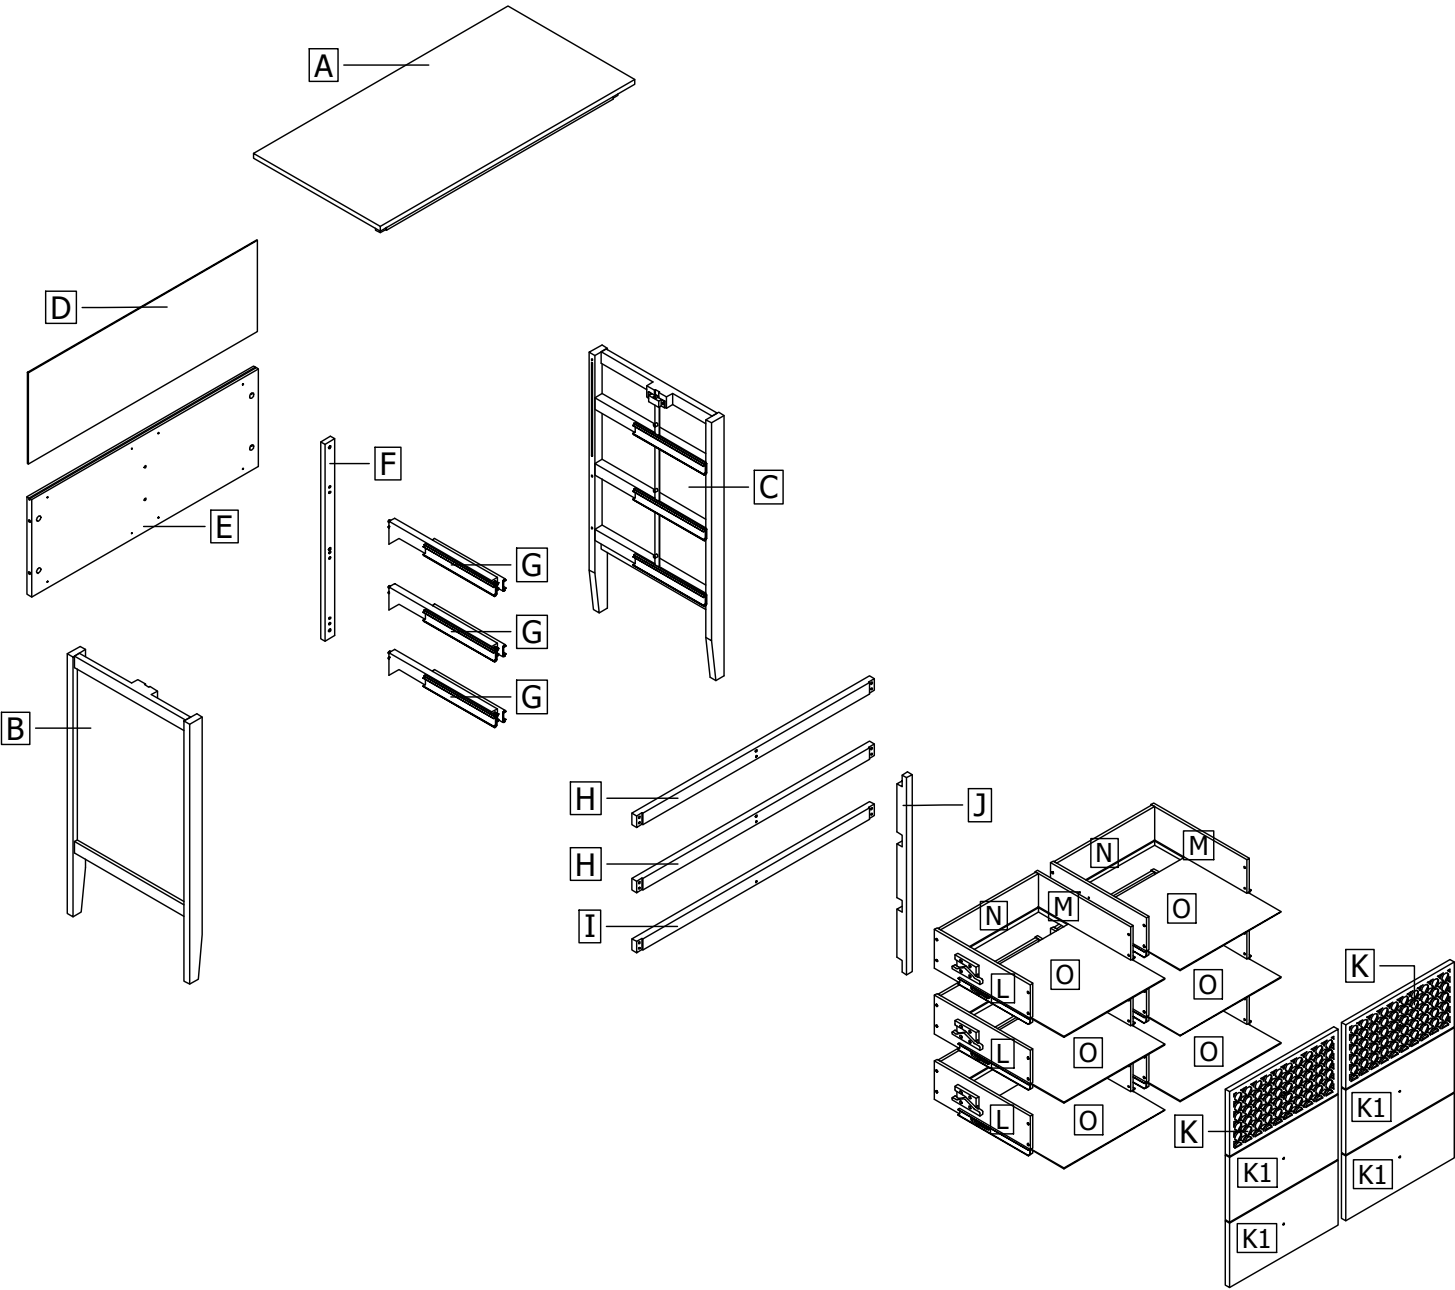


ASSEMBLY INSTRUCTION


STEP 1

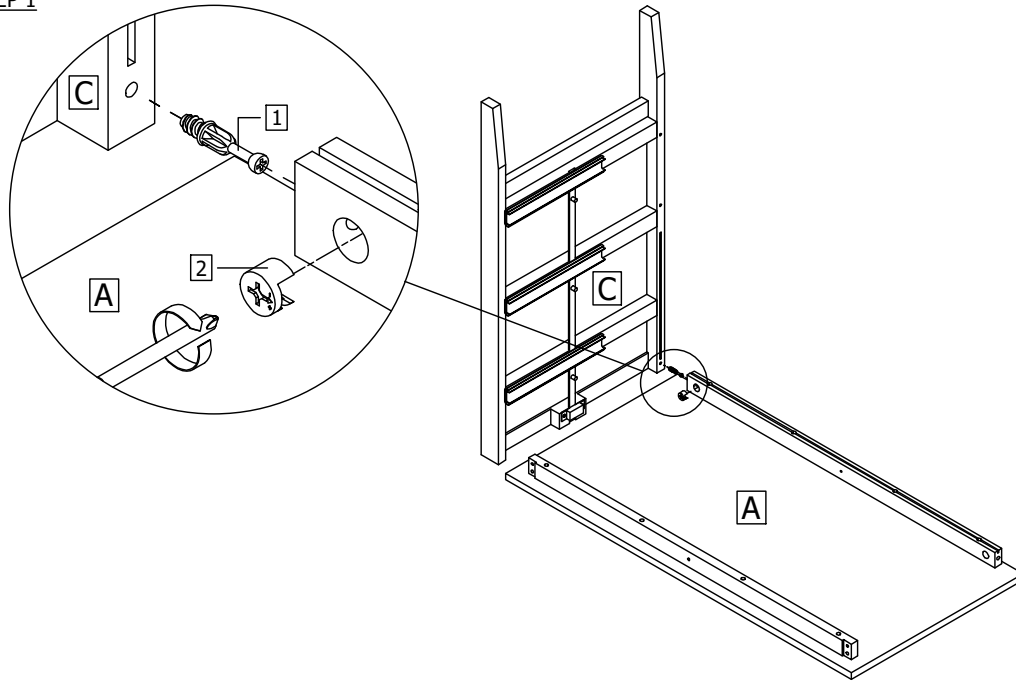


STEP 2

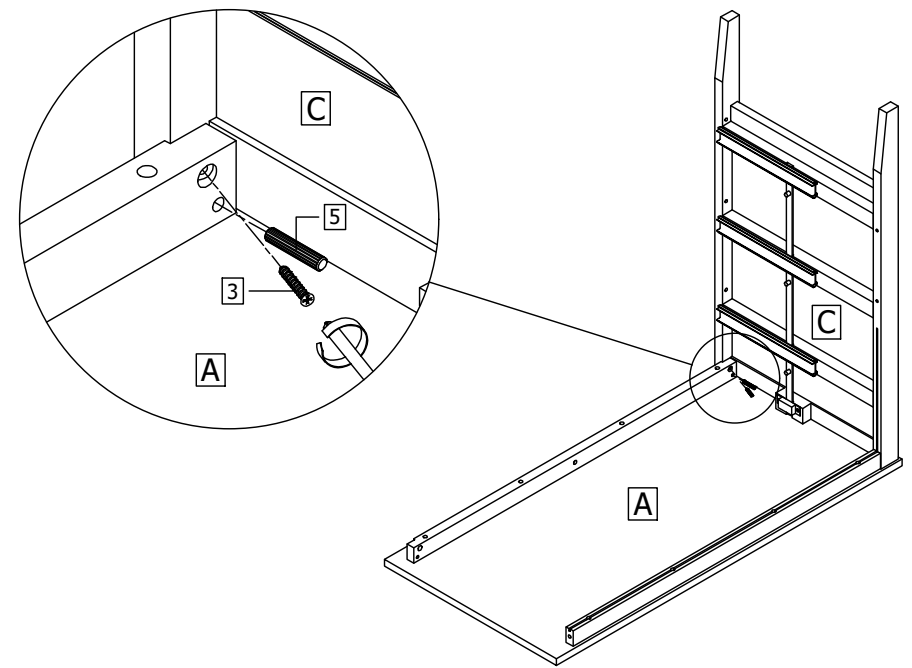

STEP 3

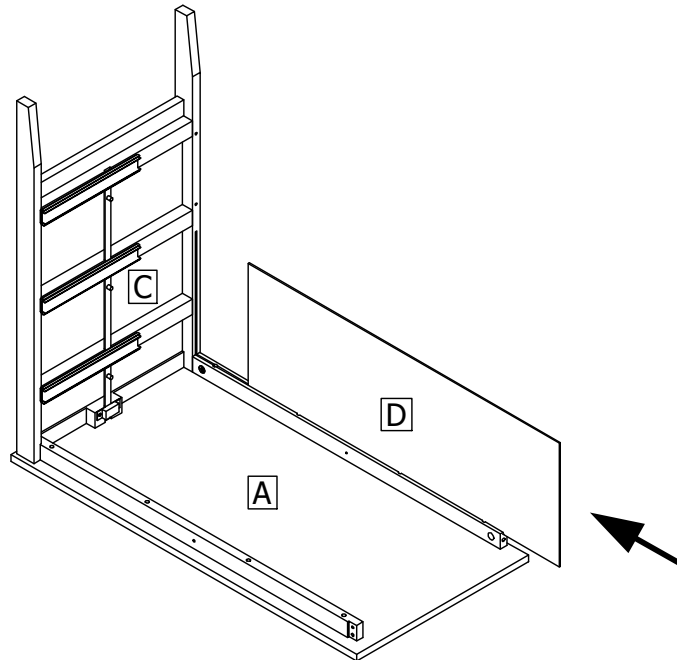


STEP 4

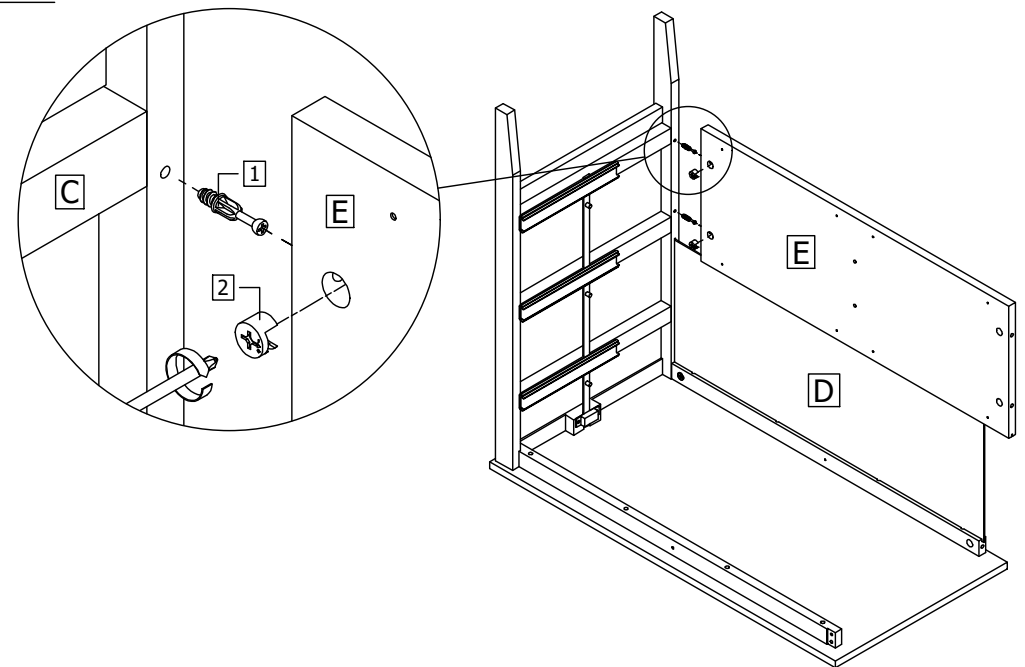


ASSEMBLY INSTRUCTION


STEP 5

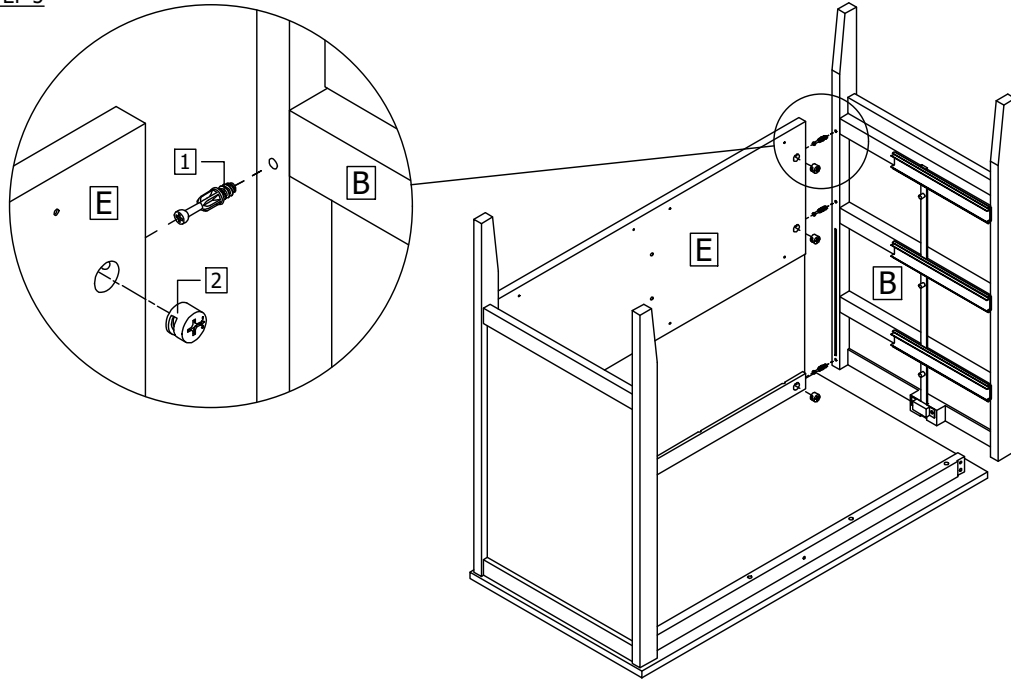


STEP 6

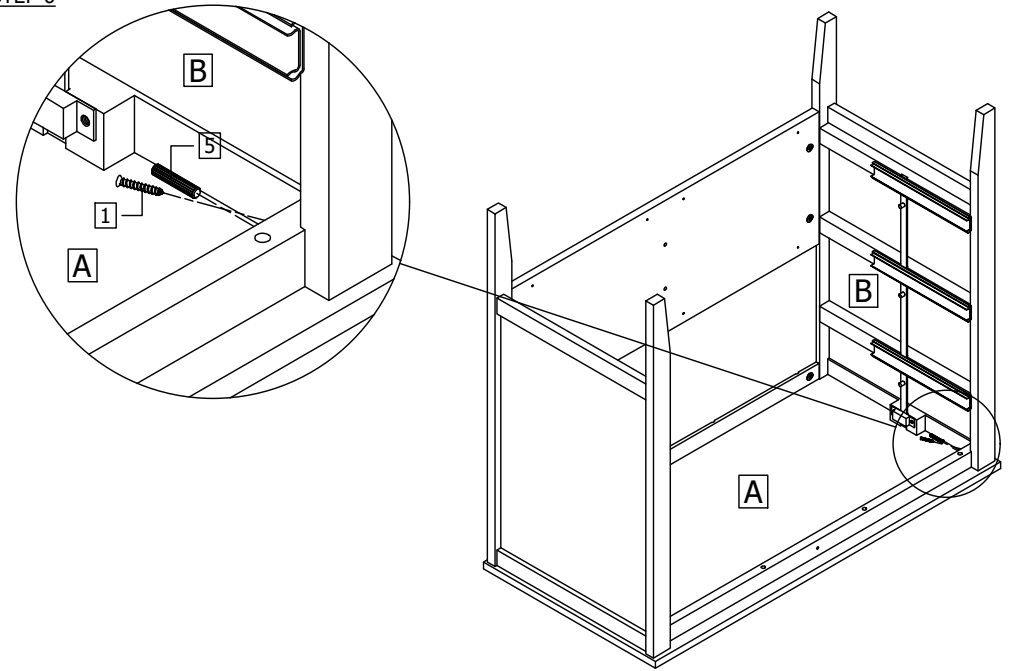

STEP 7

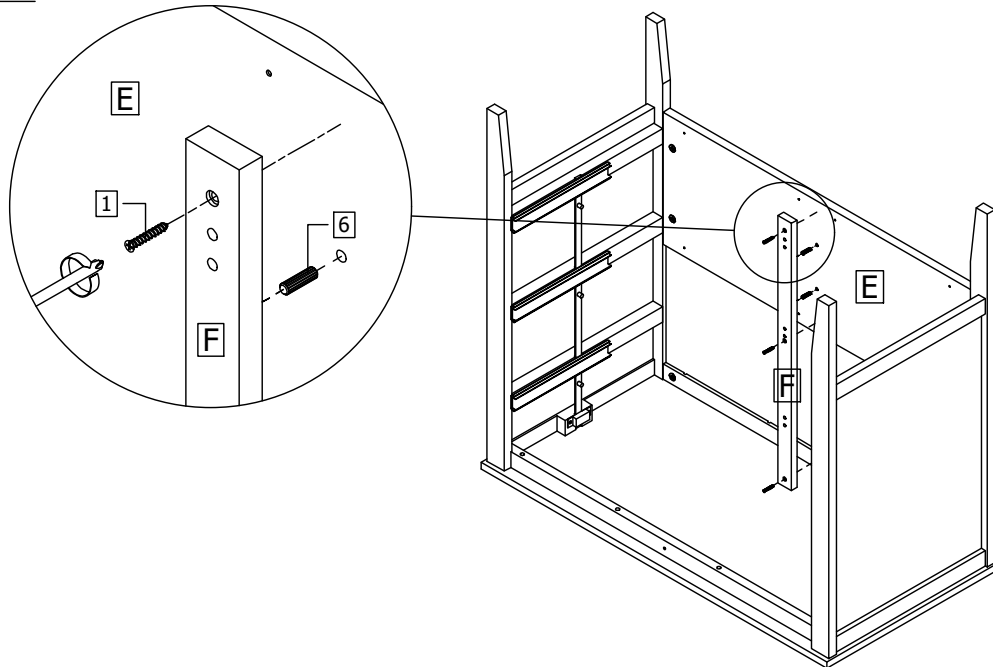


STEP 8

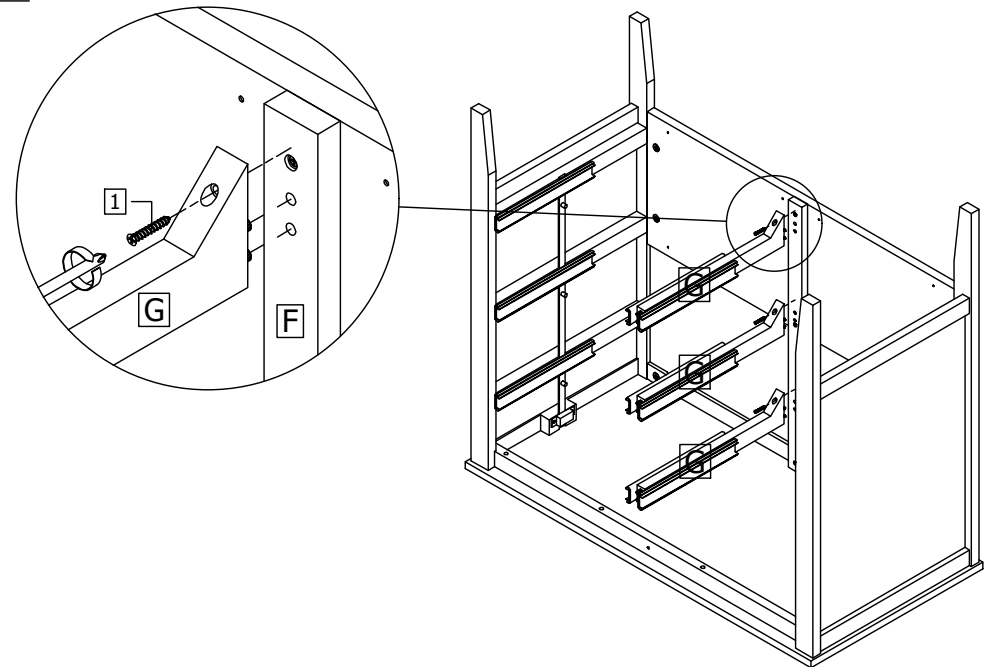


ASSEMBLY INSTRUCTION


STEP 9

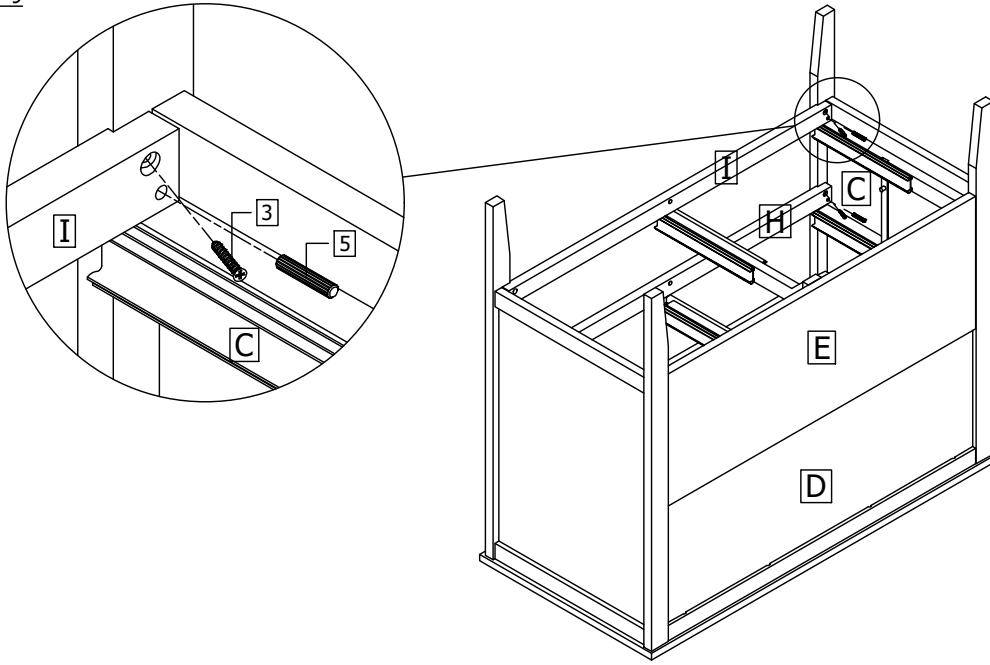

STEP 10

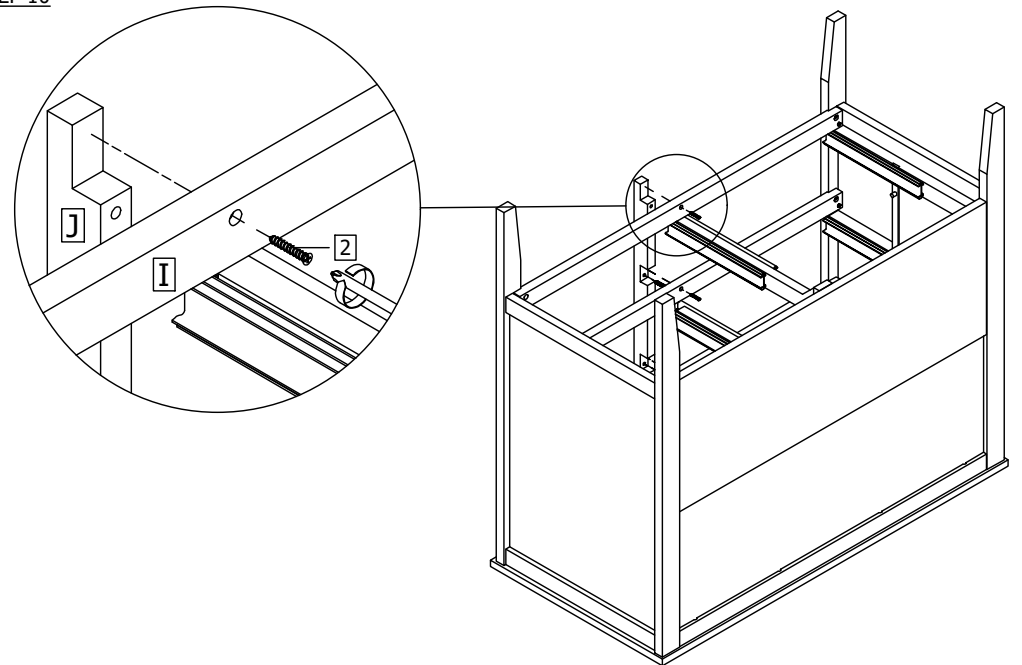


STEP 11 (ASSEMBLY COMPLETE)

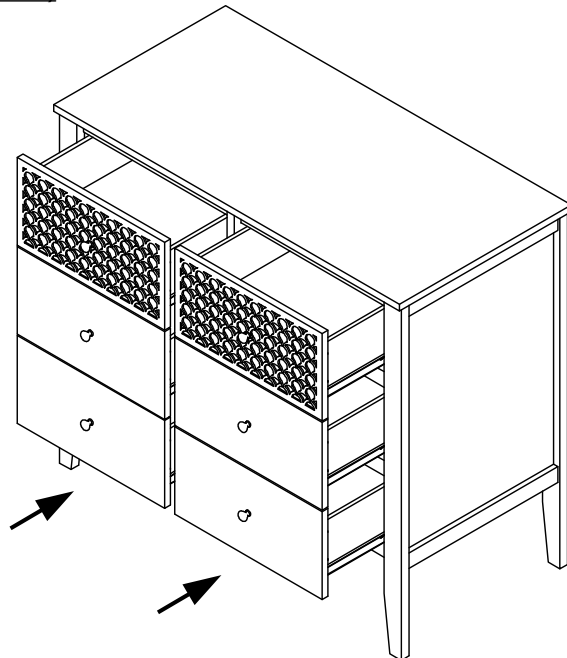

ASSEMBLY INSTRUCTION


STEP 11(A)

(2 SET - 1 LEFT & 1 RIGHT LOCK)

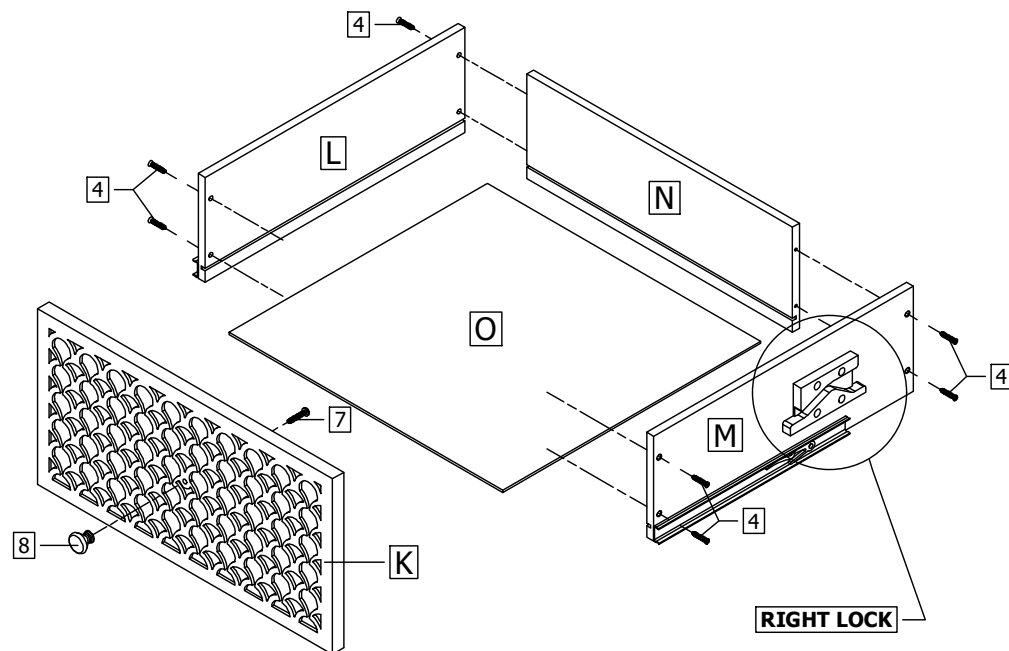


STEP 11(B)

(4 SET - 2 LEFT & 2 RIGHT LOCK)

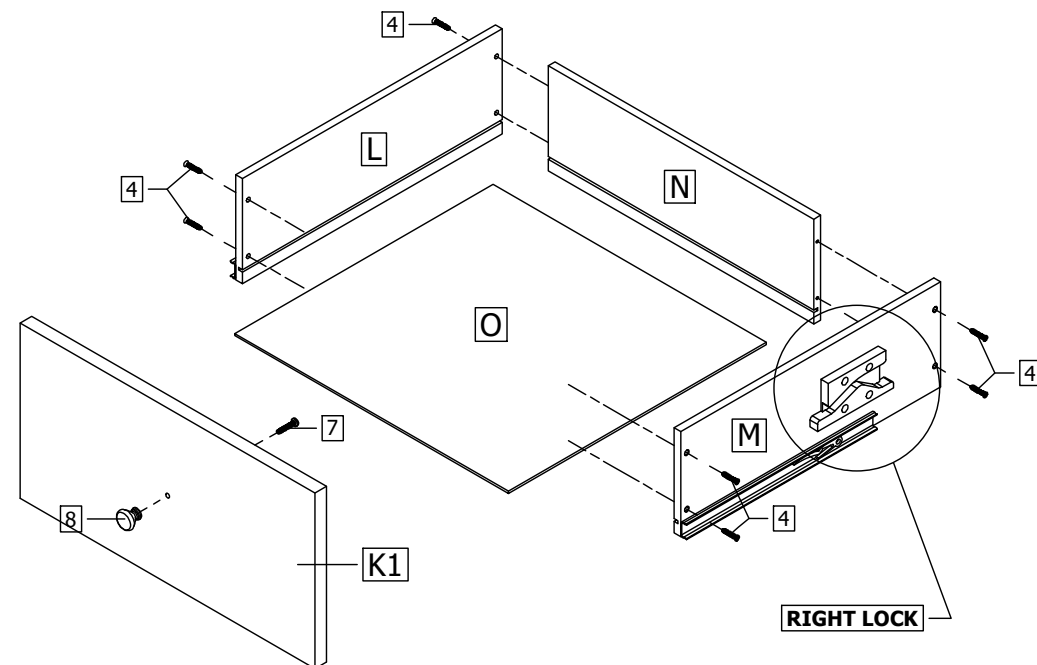

ATTENTION : To prevent tip over, product must be attached to wall using the anti-tipping devices provided as shown below.

- Anti-tipping device packets can be found in first Drawer.

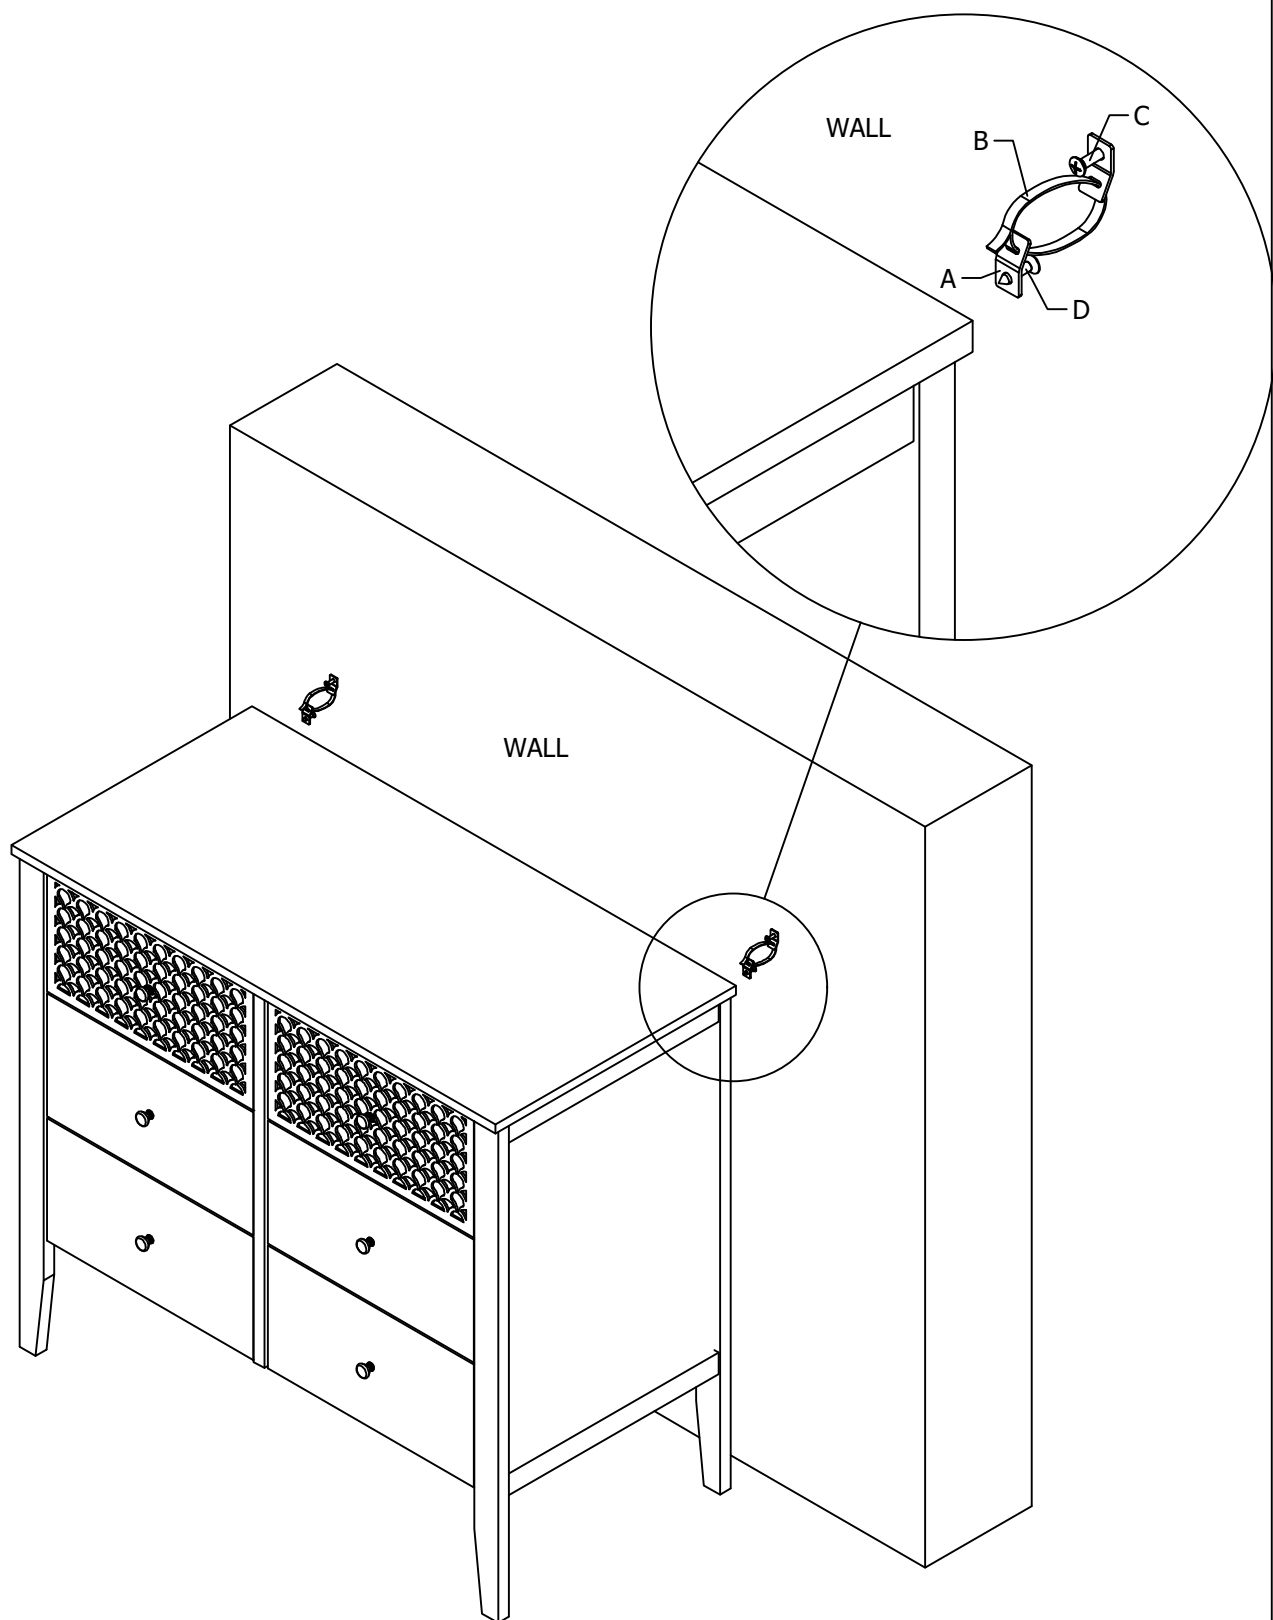

HARDWARE



A
(4 PCS)



B
(2 PCS)



C
(2 PCS)



D
(2 PCS)