



KIT COMPONENTS

- A) Radio trim panel
- B) Radio brackets
- C) Blank panel
- D) Blank panel clip legs (2)
- E) #6 x 3/8" Phillips screws (2)
- F) #8 x 1/4" Phillips screws (4)
- G) Panel clips (2)


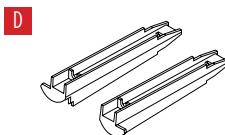
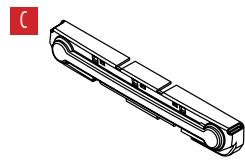
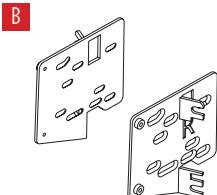
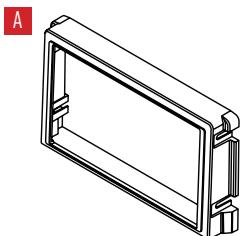


TABLE OF CONTENTS

Dash Disassembly.....	2
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-7304 (w/o 7-inch display radio)
• 70-7306 (with 7-inch display radio)
Antenna Adapter: N/A (w/o 7-inch display radio)
• 40-KII1 (with 7-inch display radio)
Please visit metraonline.com or axcessinterfaces.com for other harness and interface options.


TOOLS REQUIRED

- Panel removal tool
- Phillips screwdriver
- Socket wrench


Attention! with the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.

DASH DISASSEMBLY


1. Open the passenger front door, then unclip and remove the trim panel from the side of dashboard. Remove the (1) Phillips screw securing the silver trim panel. (Figure A)
2. Unclip and remove the silver trim panel that runs along the dashboard from under the radio, and above the glovebox. (Figure B)
3. Open the driver's door, then unclip and remove the trim panel from the side of the dashboard. Remove the (1) Phillips screw securing the silver trim panel. (Figure C)

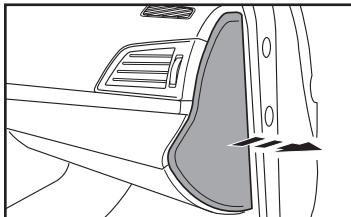

(Figure A)

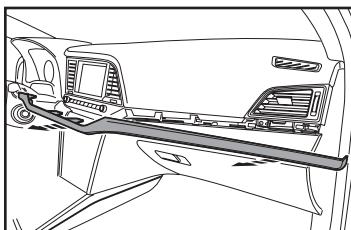


(Figure B)

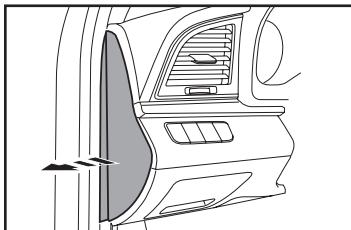


(Figure C)


4. Unclip and remove the silver trim panel from under the driver's side A/C vent. (Figure D)
5. Unclip the trim panel above the steering column, and then unclip and remove the entire panel surrounding the instrument cluster. Note, these two panels are one assembly. (Figure E)
6. Remove the (2) Phillips screws securing the radio trim panel, then unclip and remove the panel. (Figure F)
7. Remove the (4) Phillips screws securing the radio and then remove.

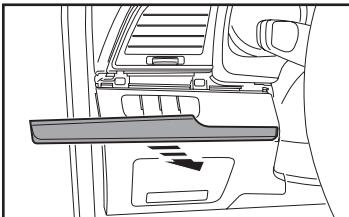

(Figure D)

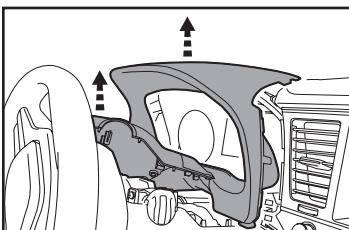


(Figure E)

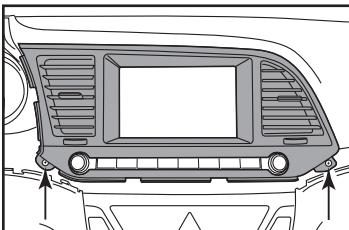


(Figure F)

KIT ASSEMBLY

1. Attach the **radio brackets** to the **radio trim panel** using (4) #8 x 1/4" Phillips screws supplied. (Figure A)
2. Slide the radio into the completed assembly, and then secure it to the assembly using screws supplied with the radio. (Figure B)
3. Attach the **blank panel clip legs** to the **blank panel** using (2) #6 X 3/8" Phillips screws supplied. (Figure C)
4. Attach the **panel clips** to the **panel legs**. (Figure D)

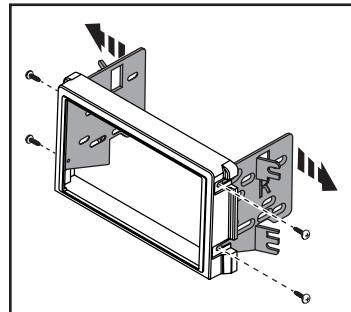


(Figure A)

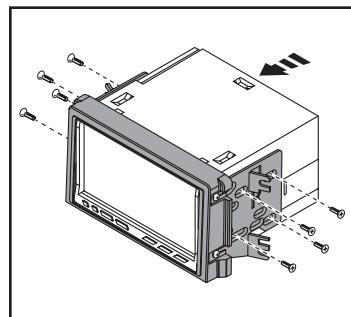


(Figure B)


5. Snap the **blank panel** into the factory trim panel. (Figure E)
6. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Re-connect the negative battery terminal and test the radio for proper operation.
7. Reassemble the dash in reverse order of disassembly.

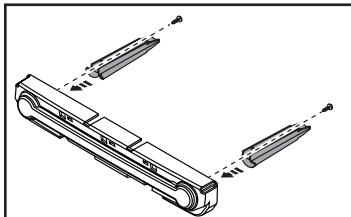

(Figure C)

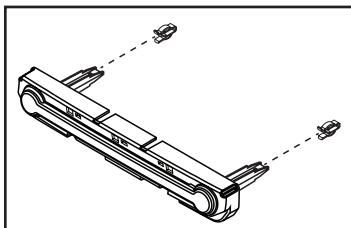

(Figure D)

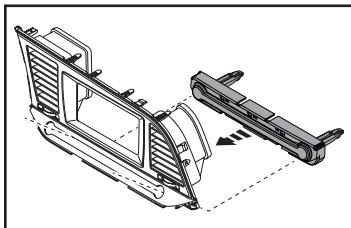

(Figure E)



95-7399B

INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.edu or call 386-672-5771 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**