



1. Prepare

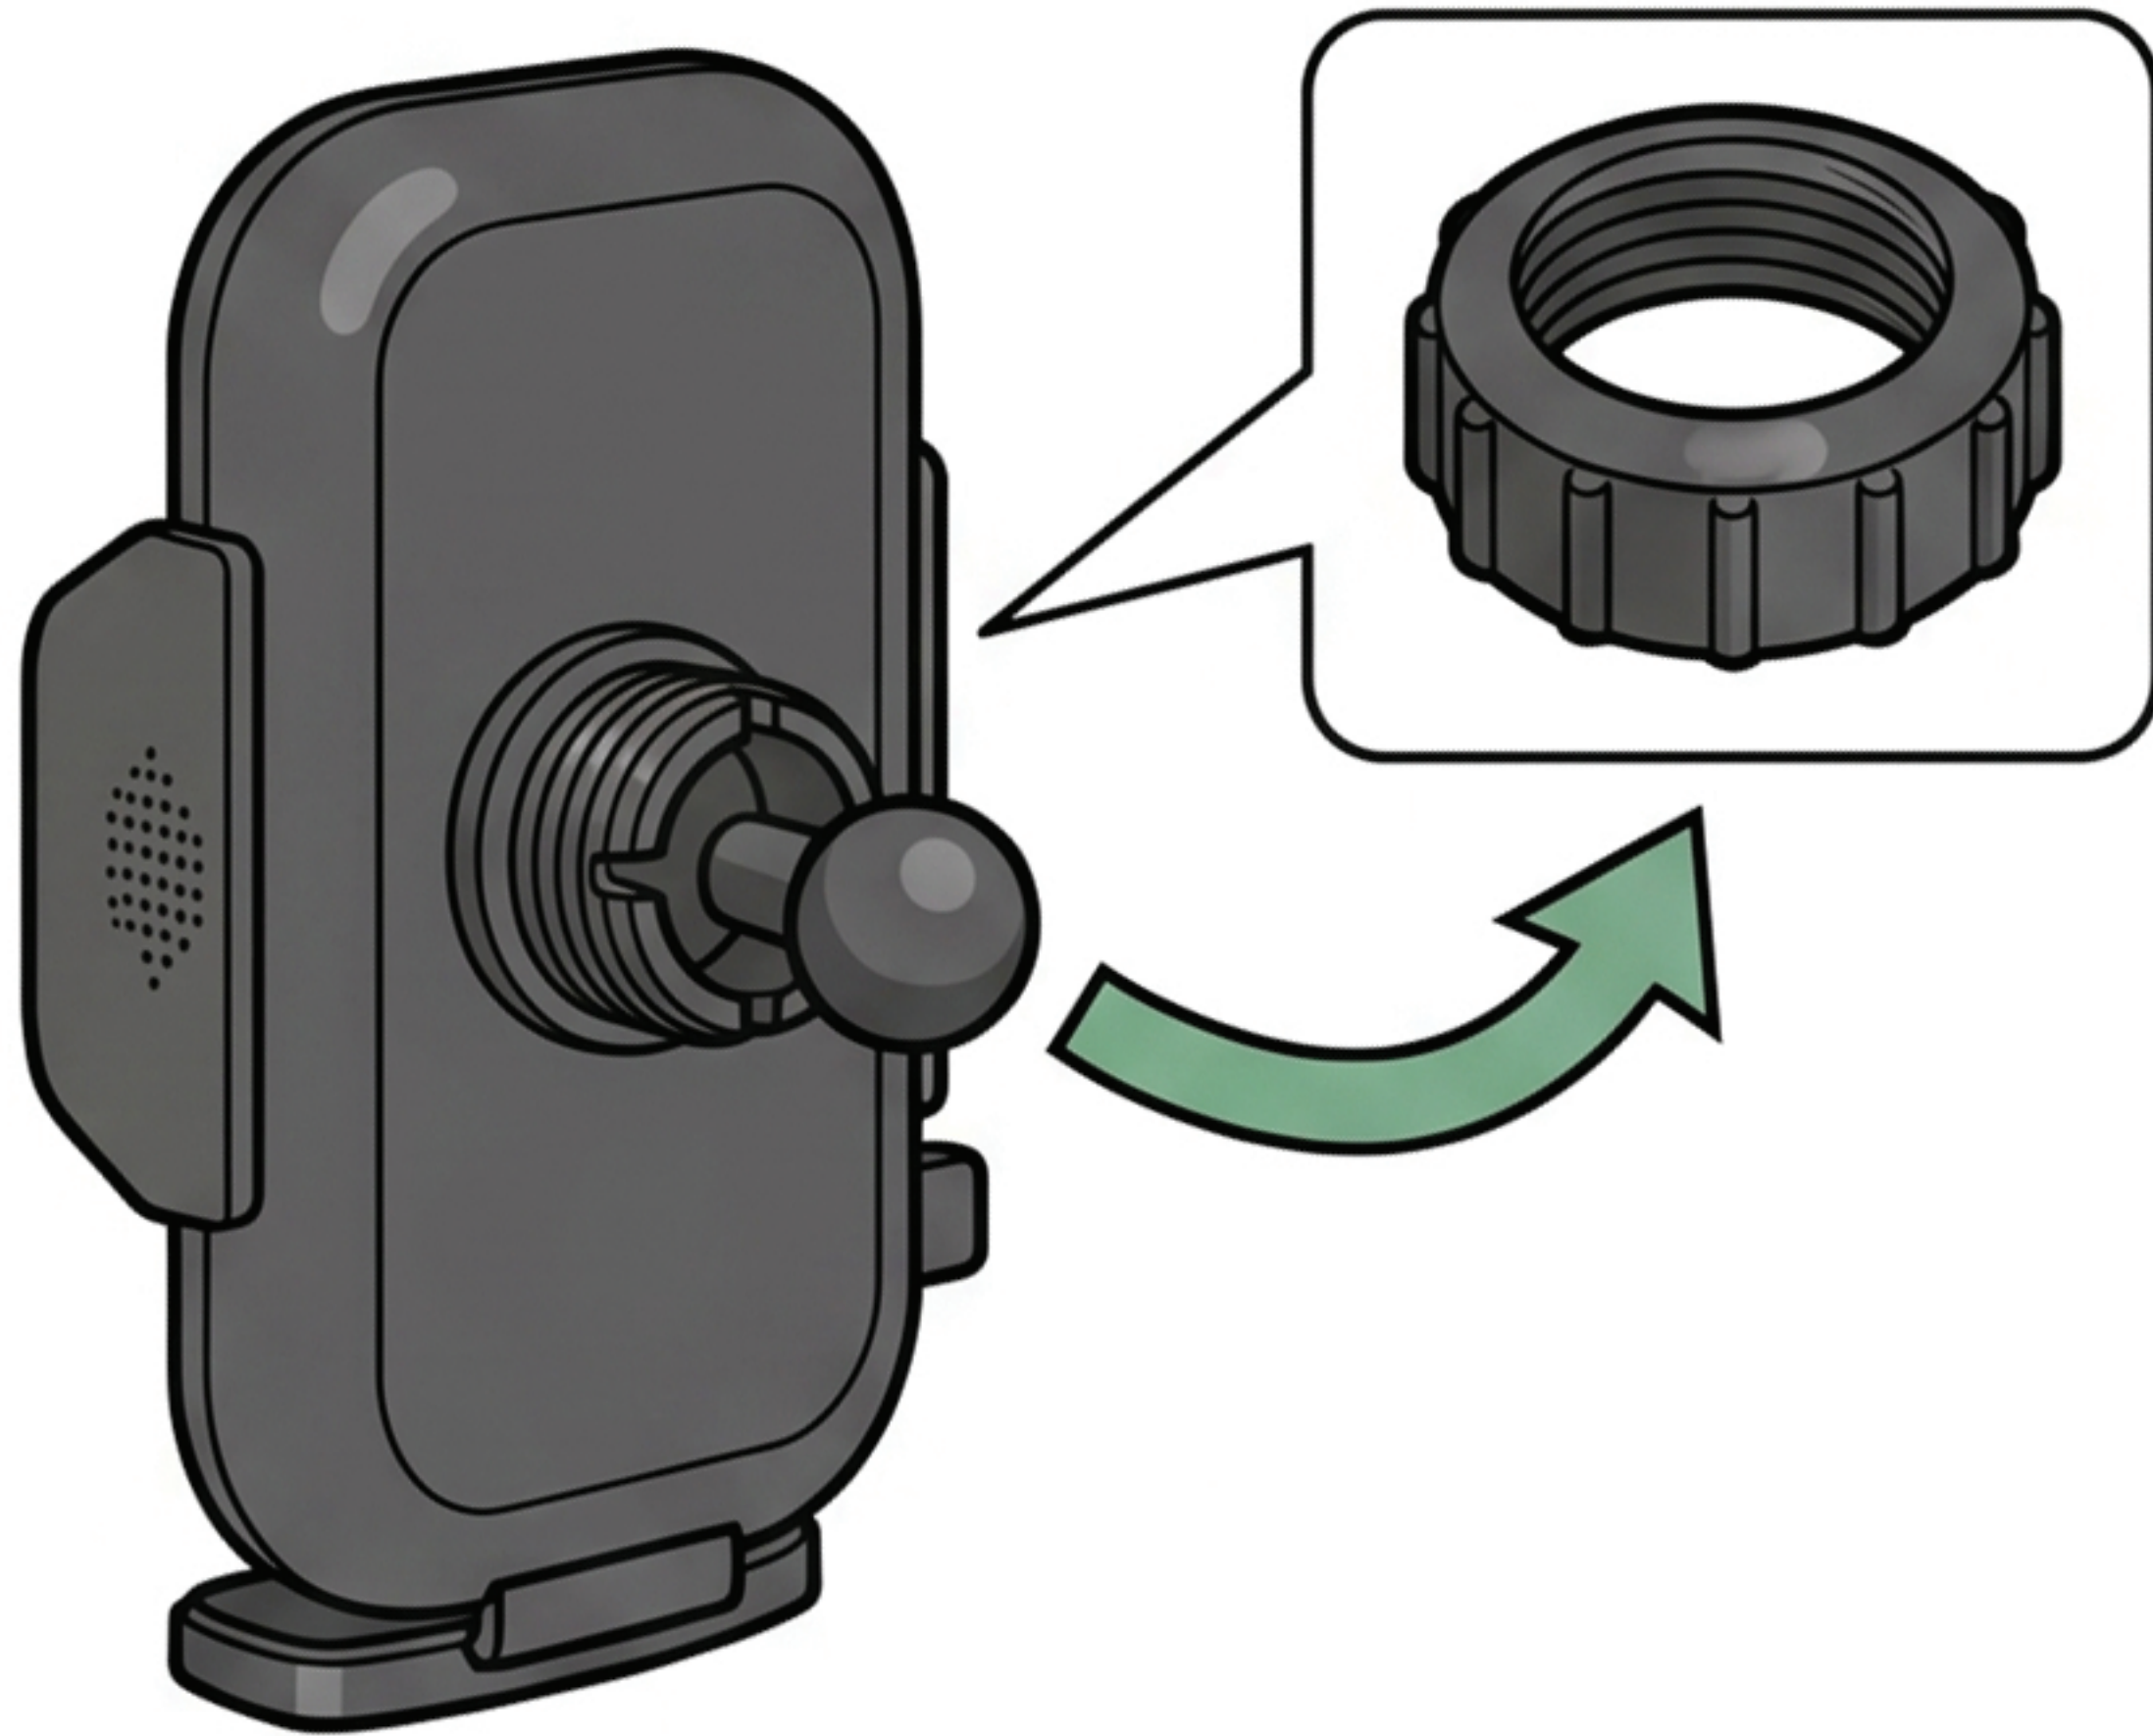


Step 1: Unscrew the locking collar from the mount base.

2. Place Collar

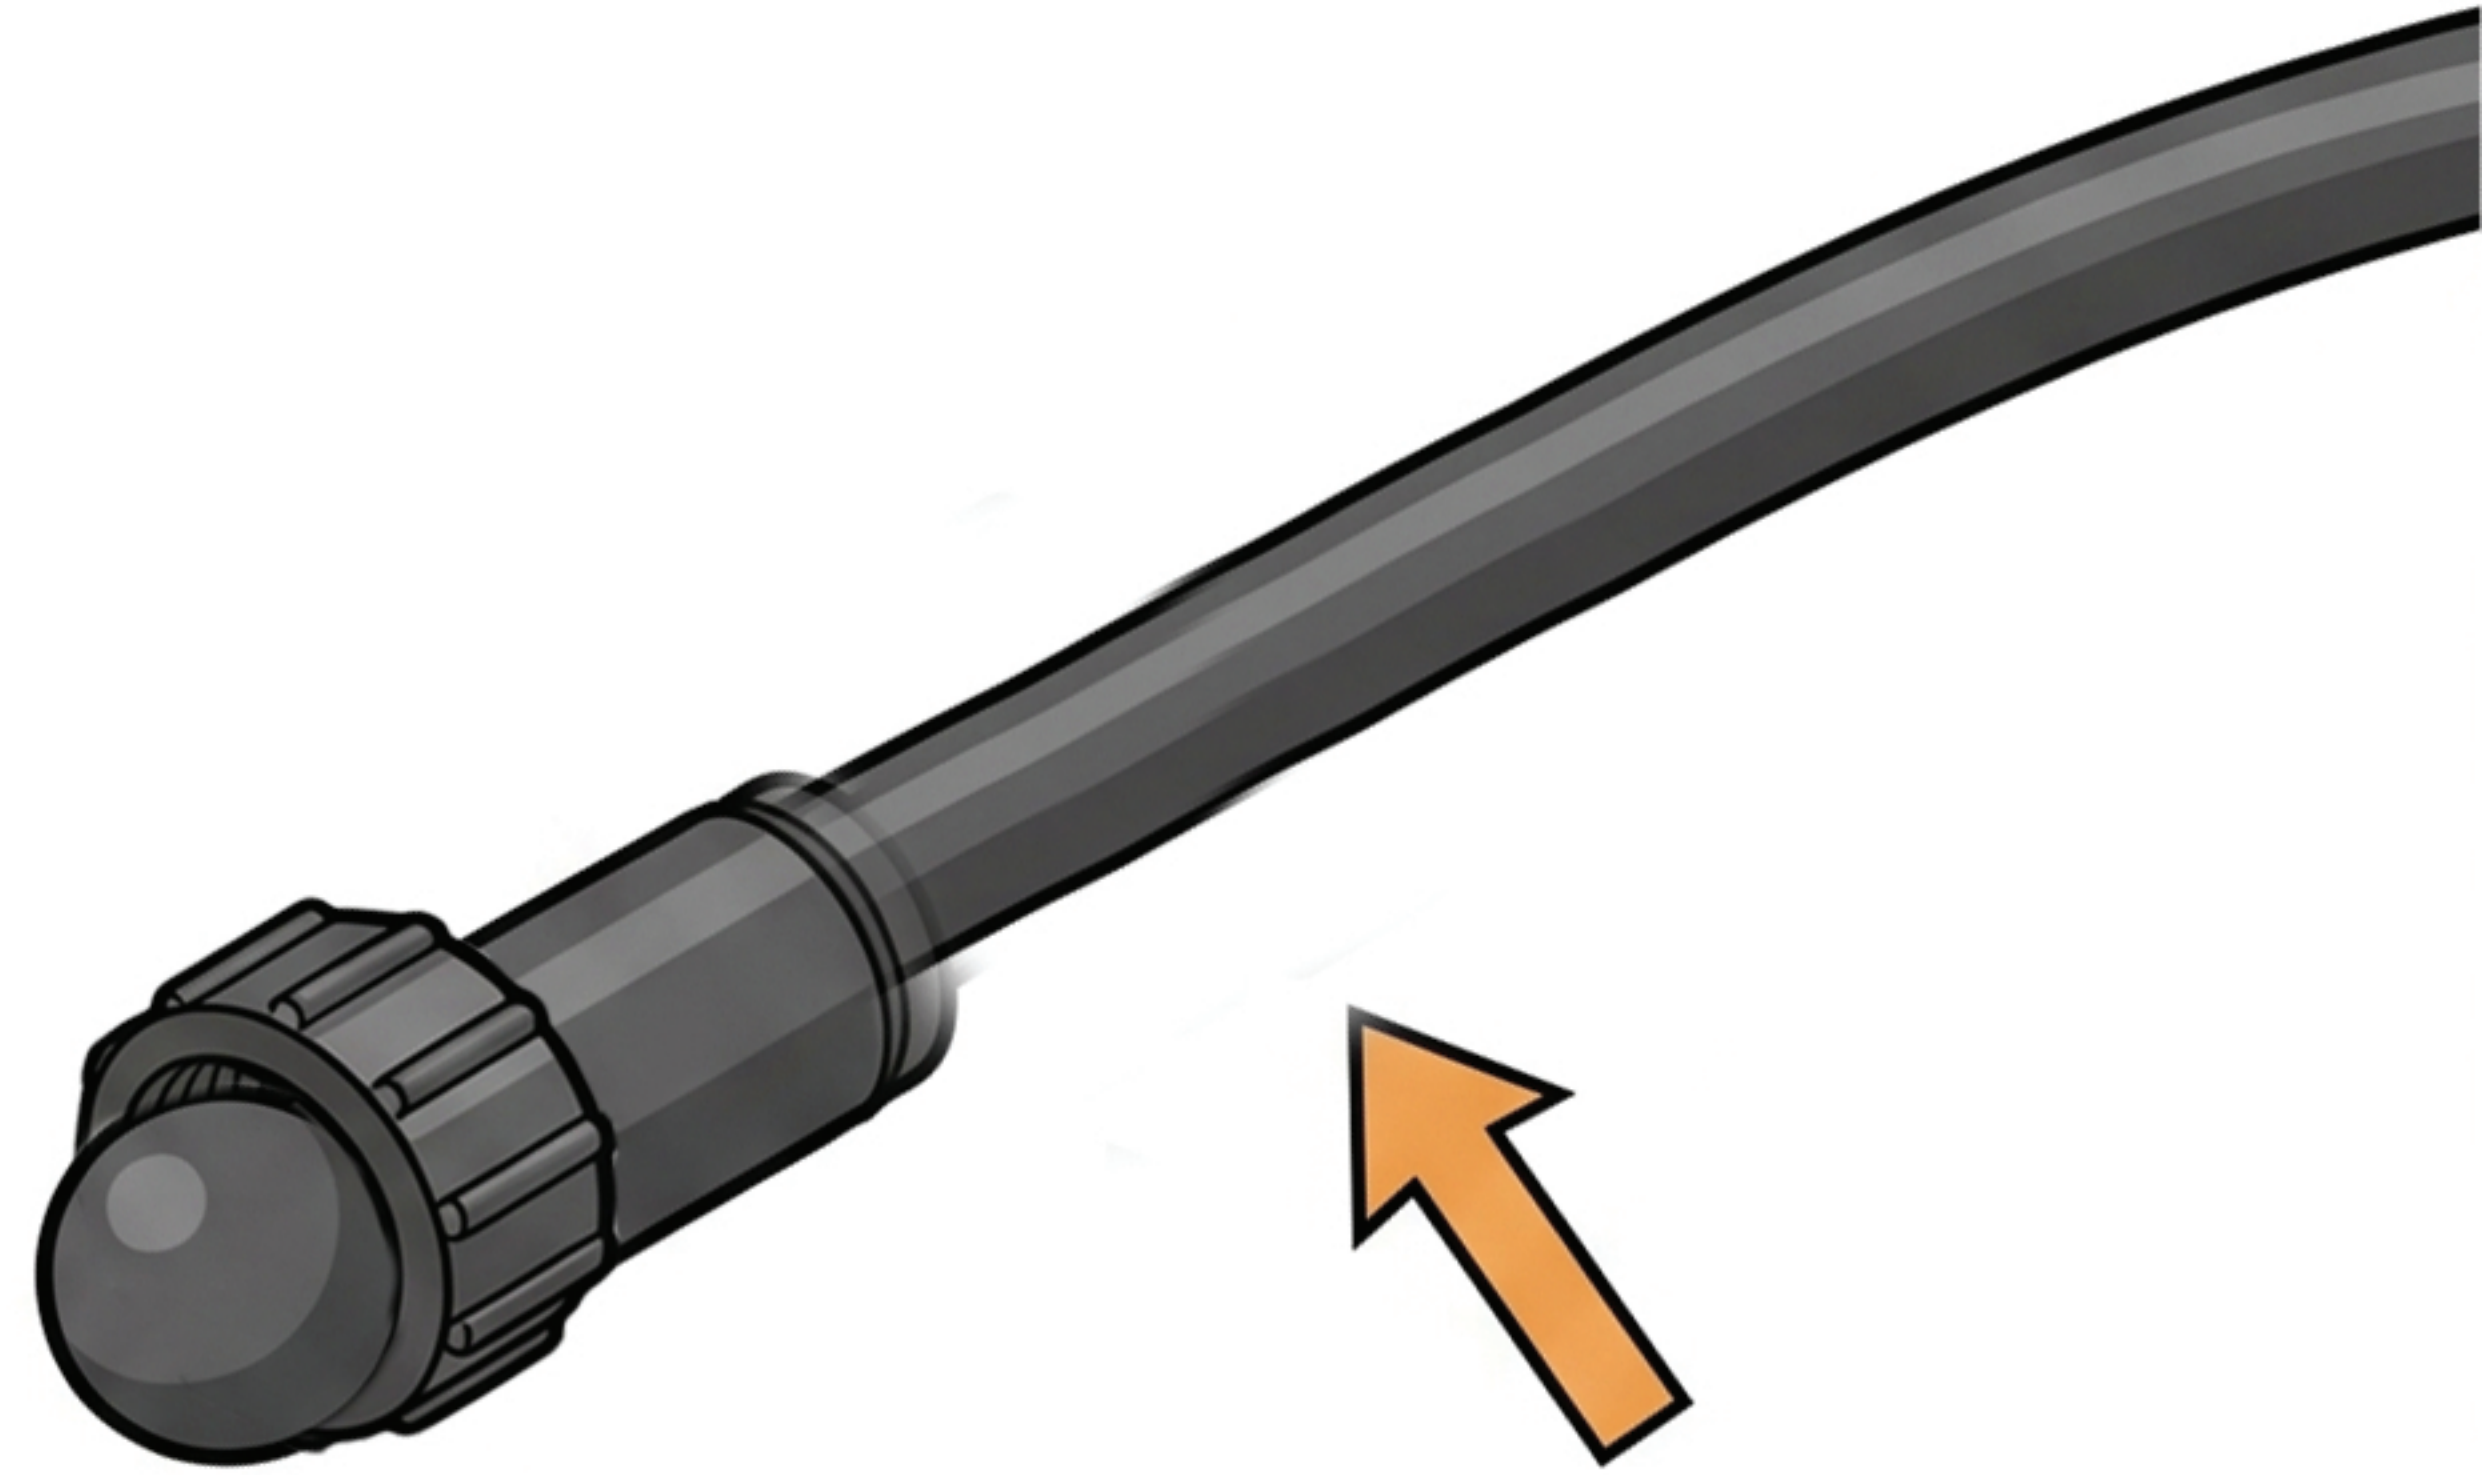


Step 2: Slip the locking collar onto the gooseneck arm, threaded-side first.

3. Insert Ball

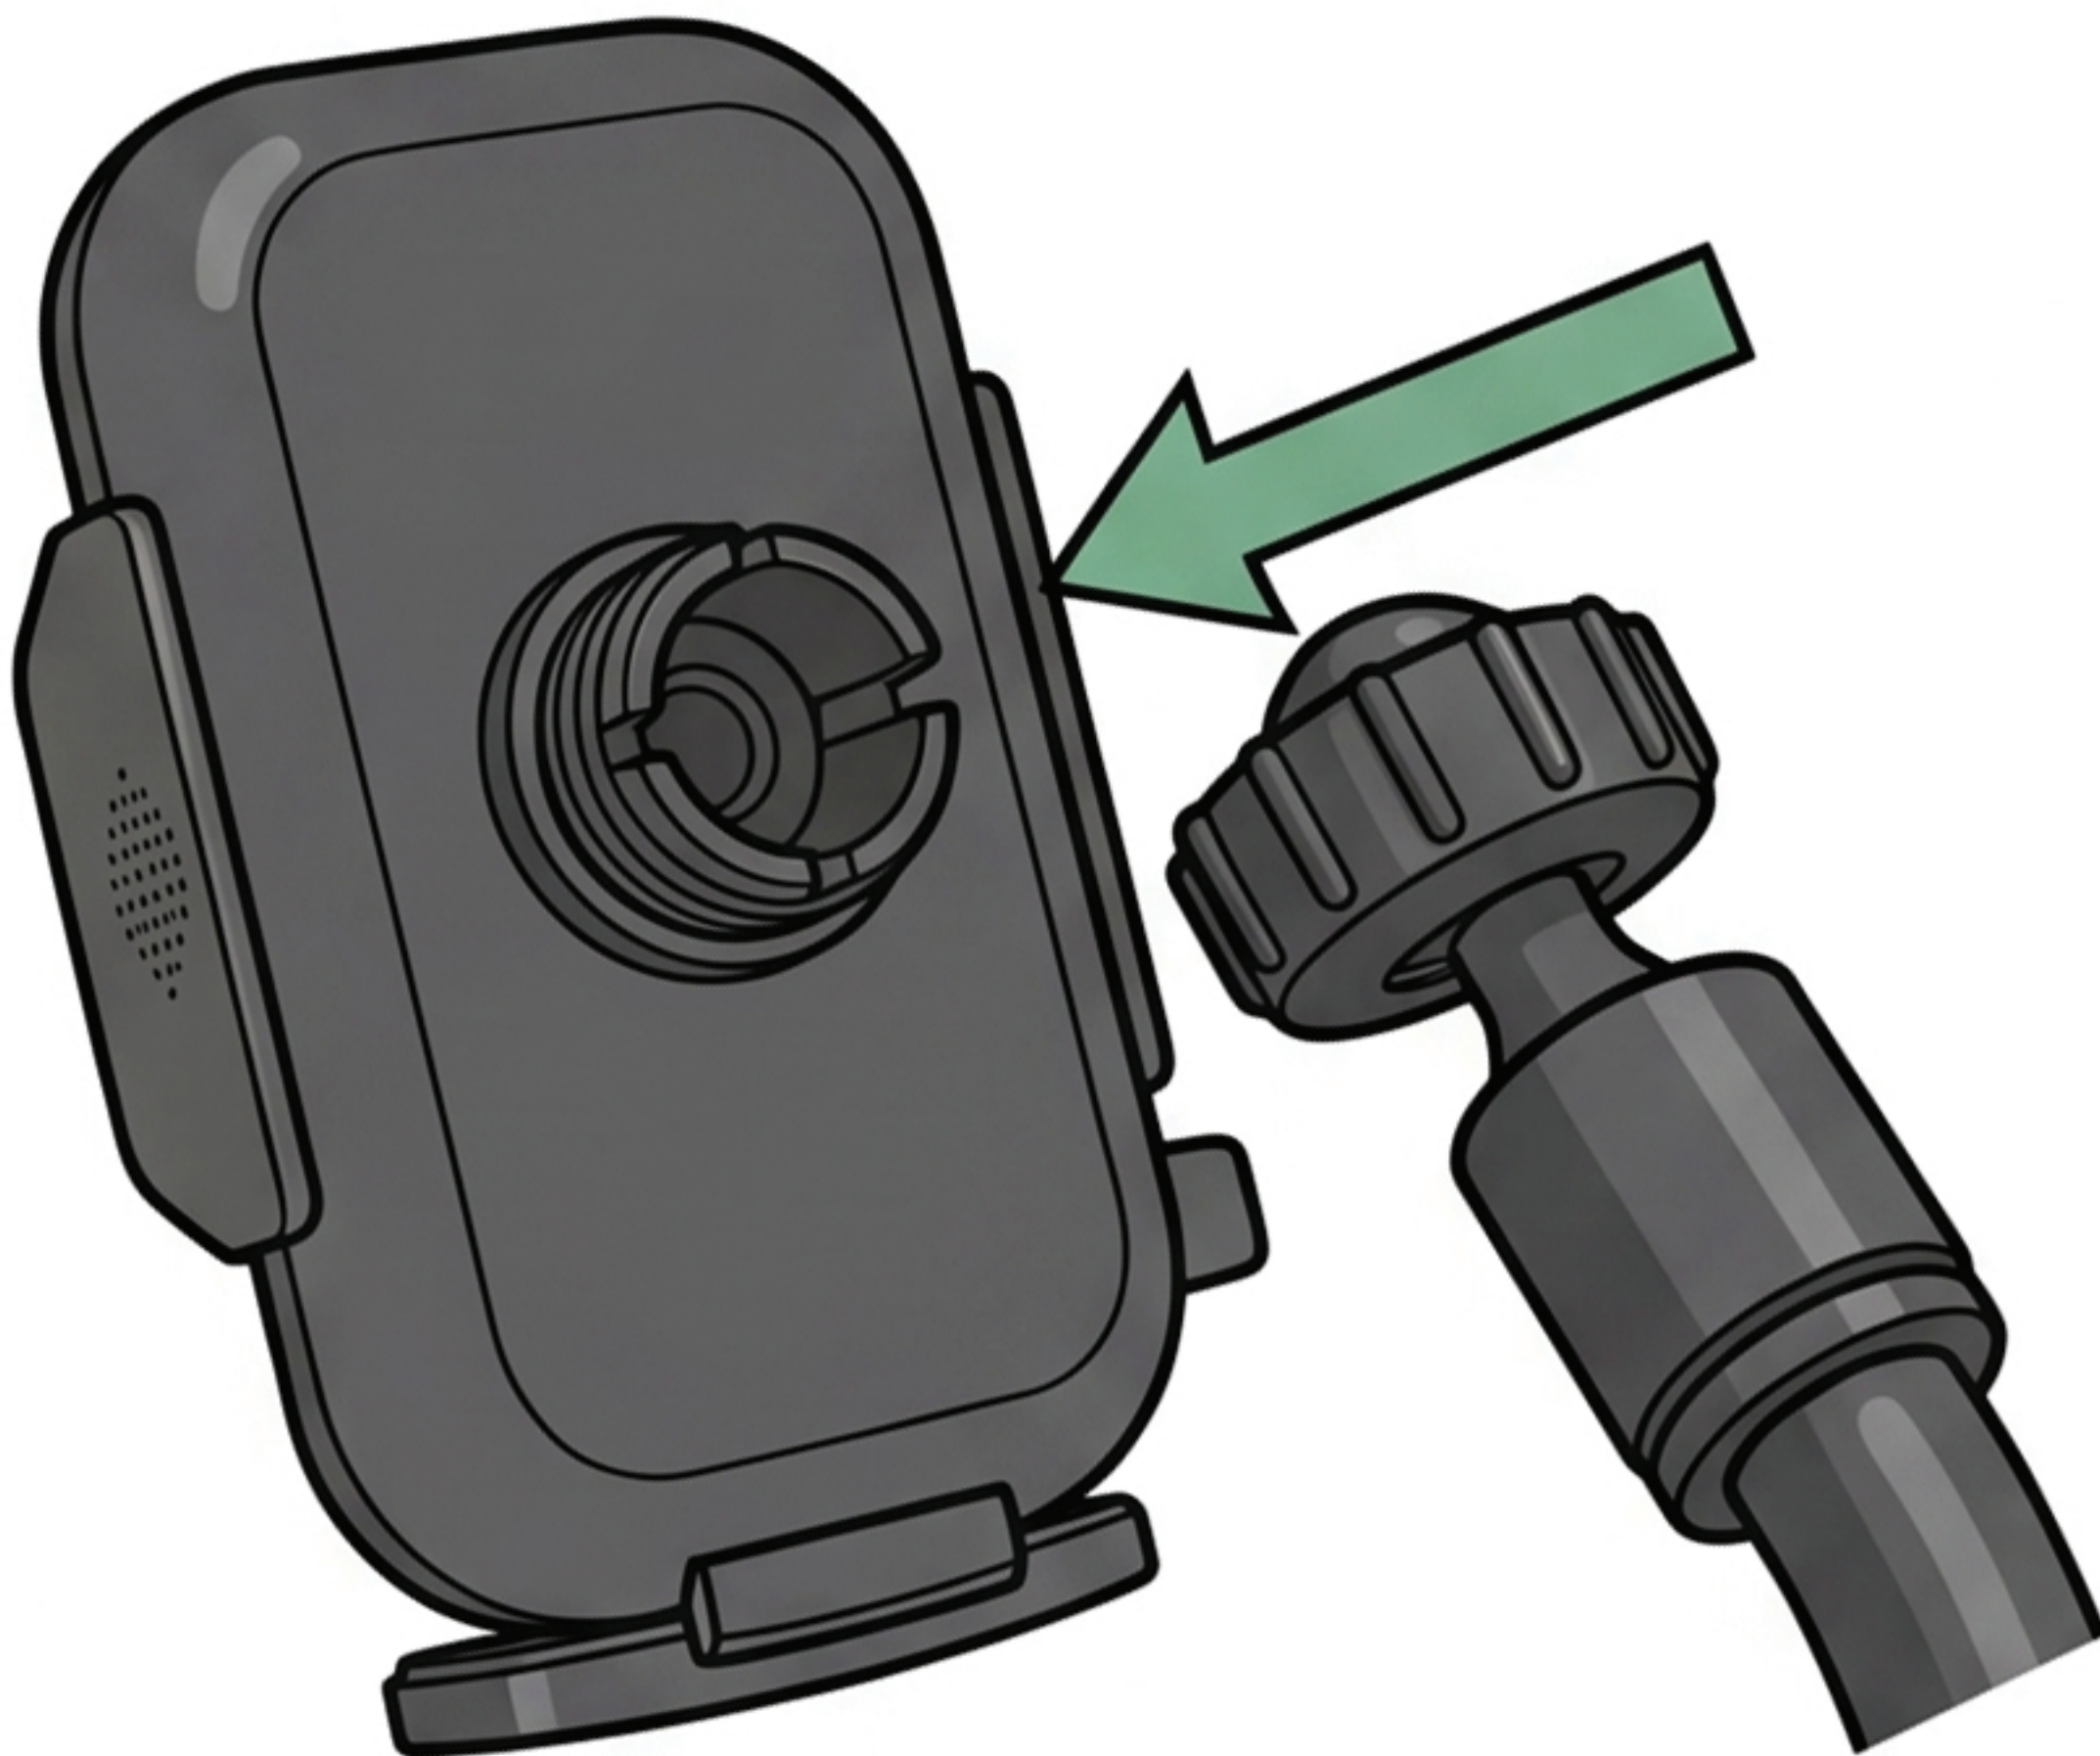

Step 3: Press the gooseneck's ball joint firmly into the cradle's socket.

4. Tighten & Secure

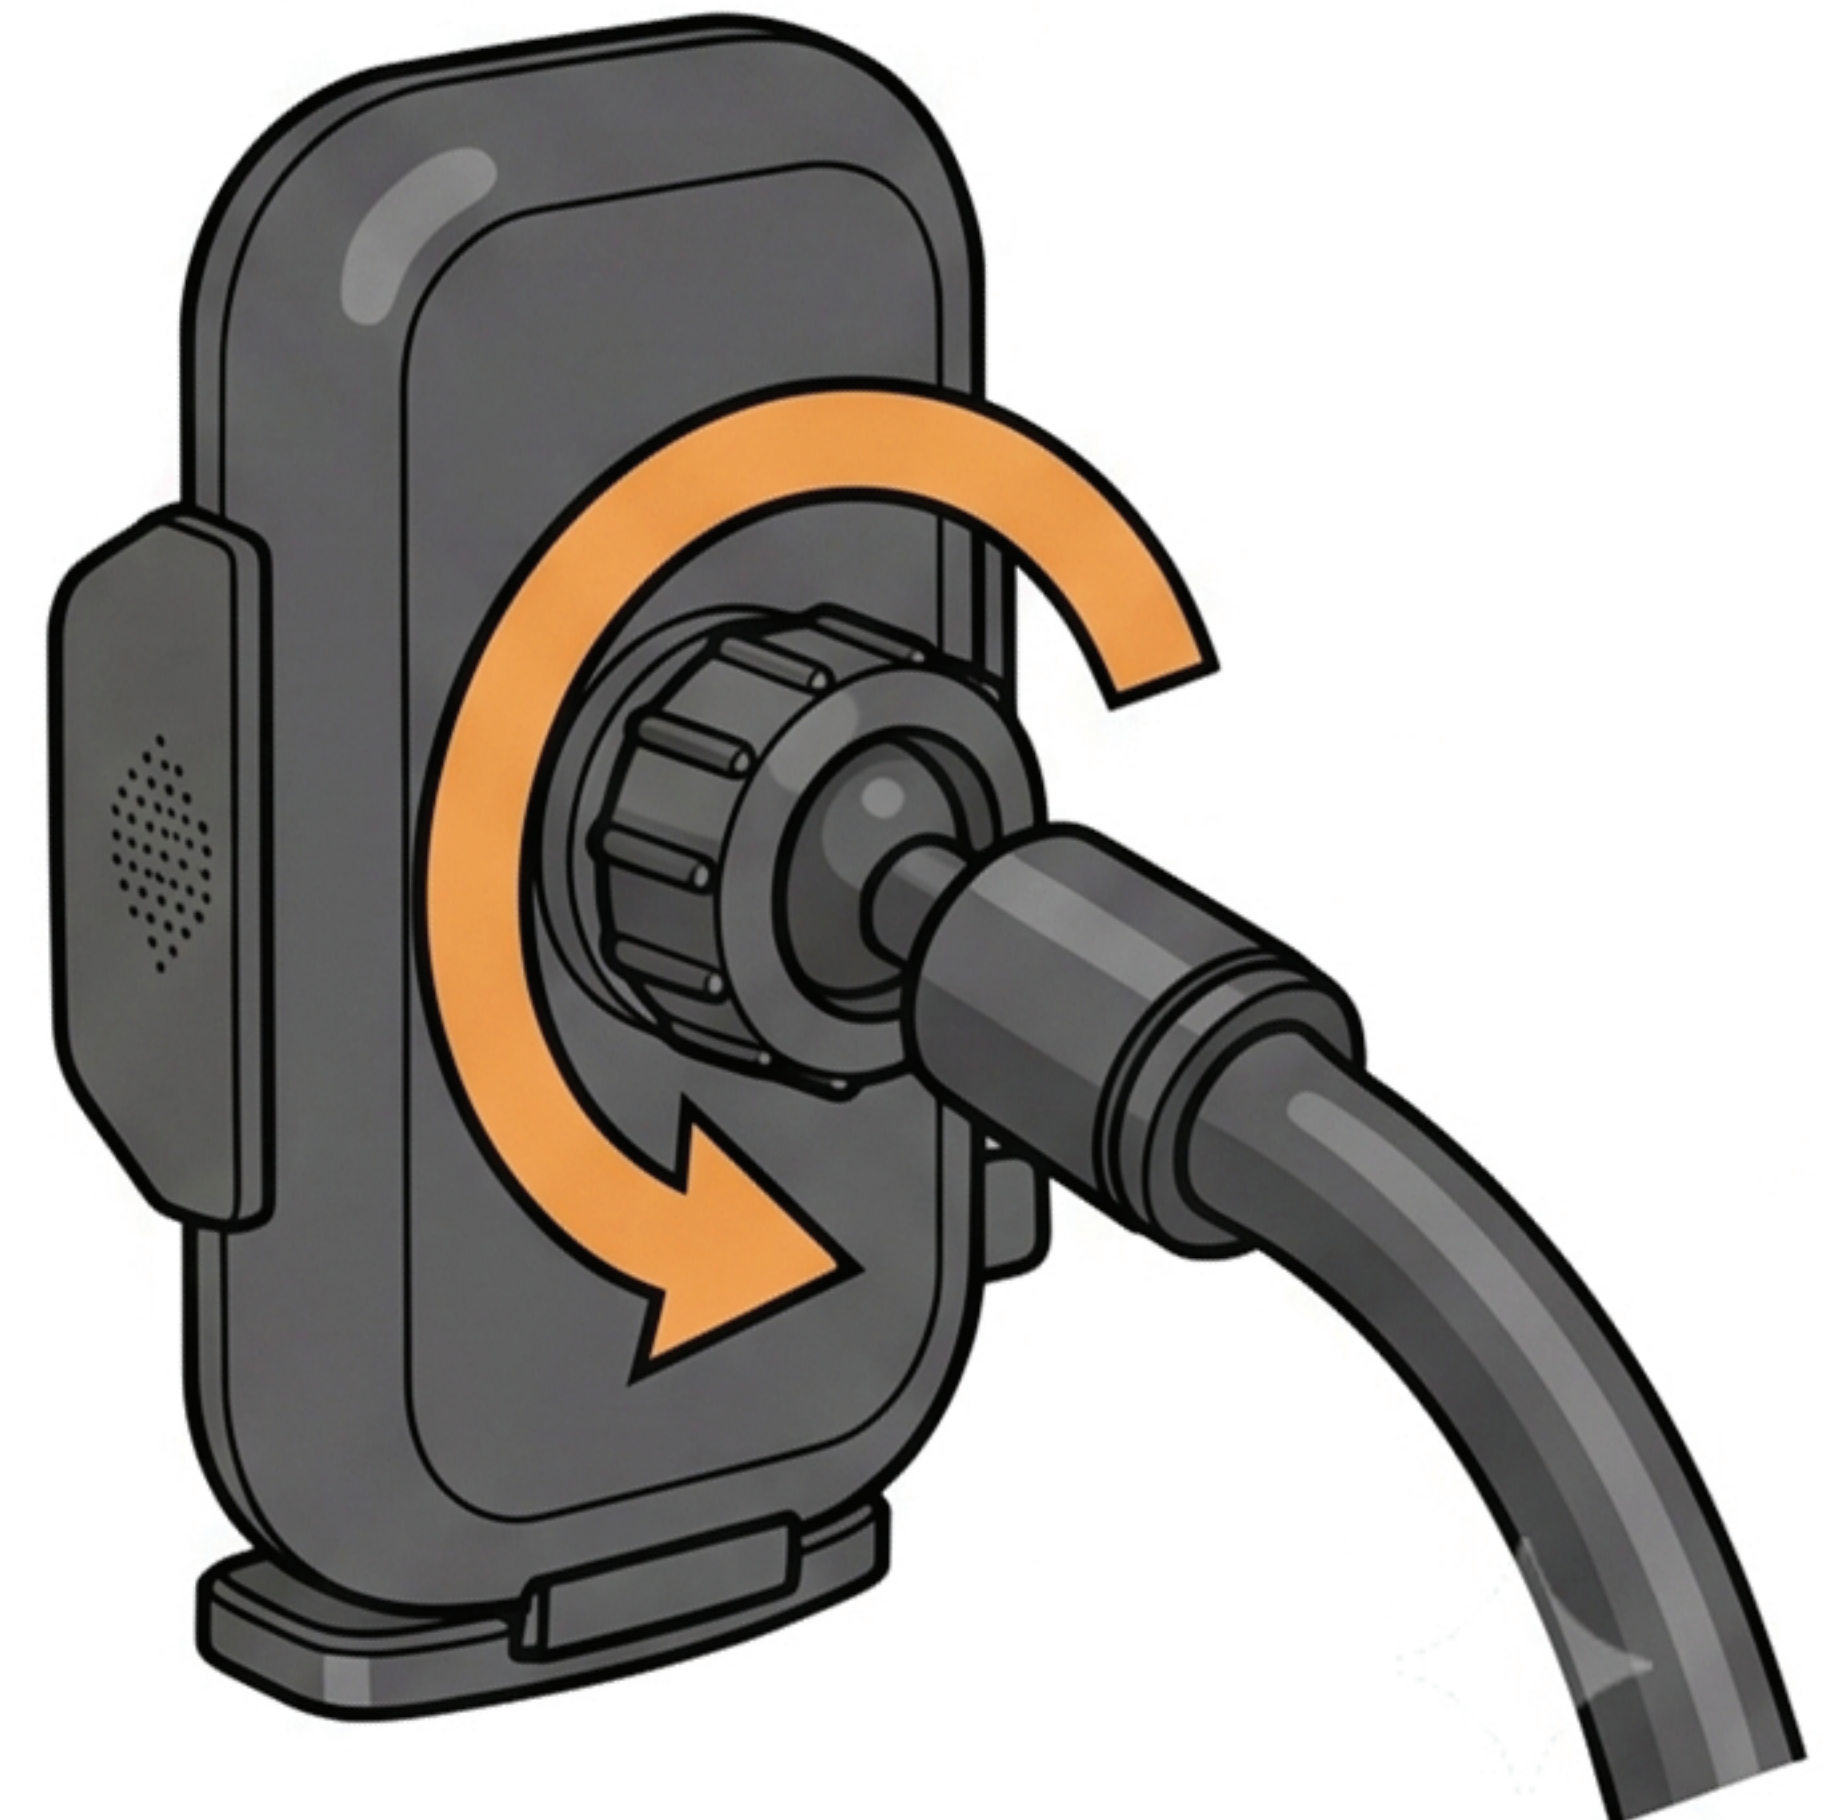

Step 4: Twist the locking collar clockwise to tighten and secure the cradle.