


Item # : BR9DBENDR

Assembly Instructions

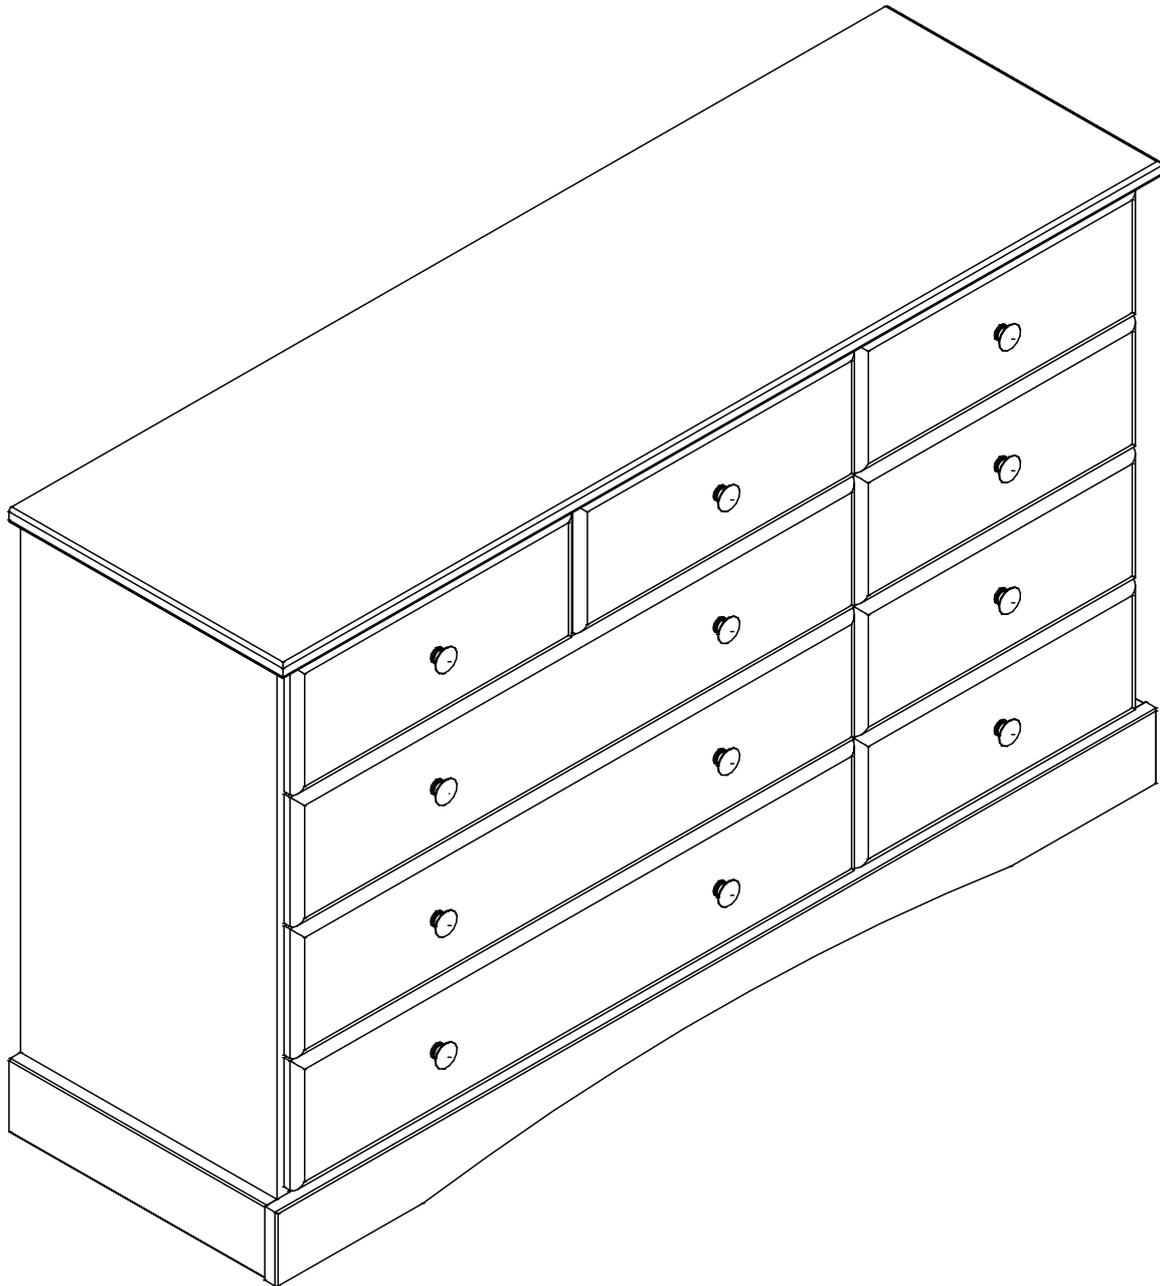


**Walker
Edison**[®]

Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkerredson.com


Revised 01/2021

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.

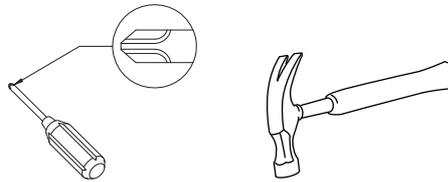

- VI. Power tools should not be used to assemble this product.

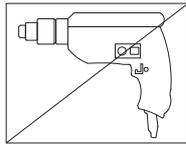

Parts List


The side drawer with WARNING LABEL, should be mouted in highest drawer.

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




This is a permanent label. Do not remove!

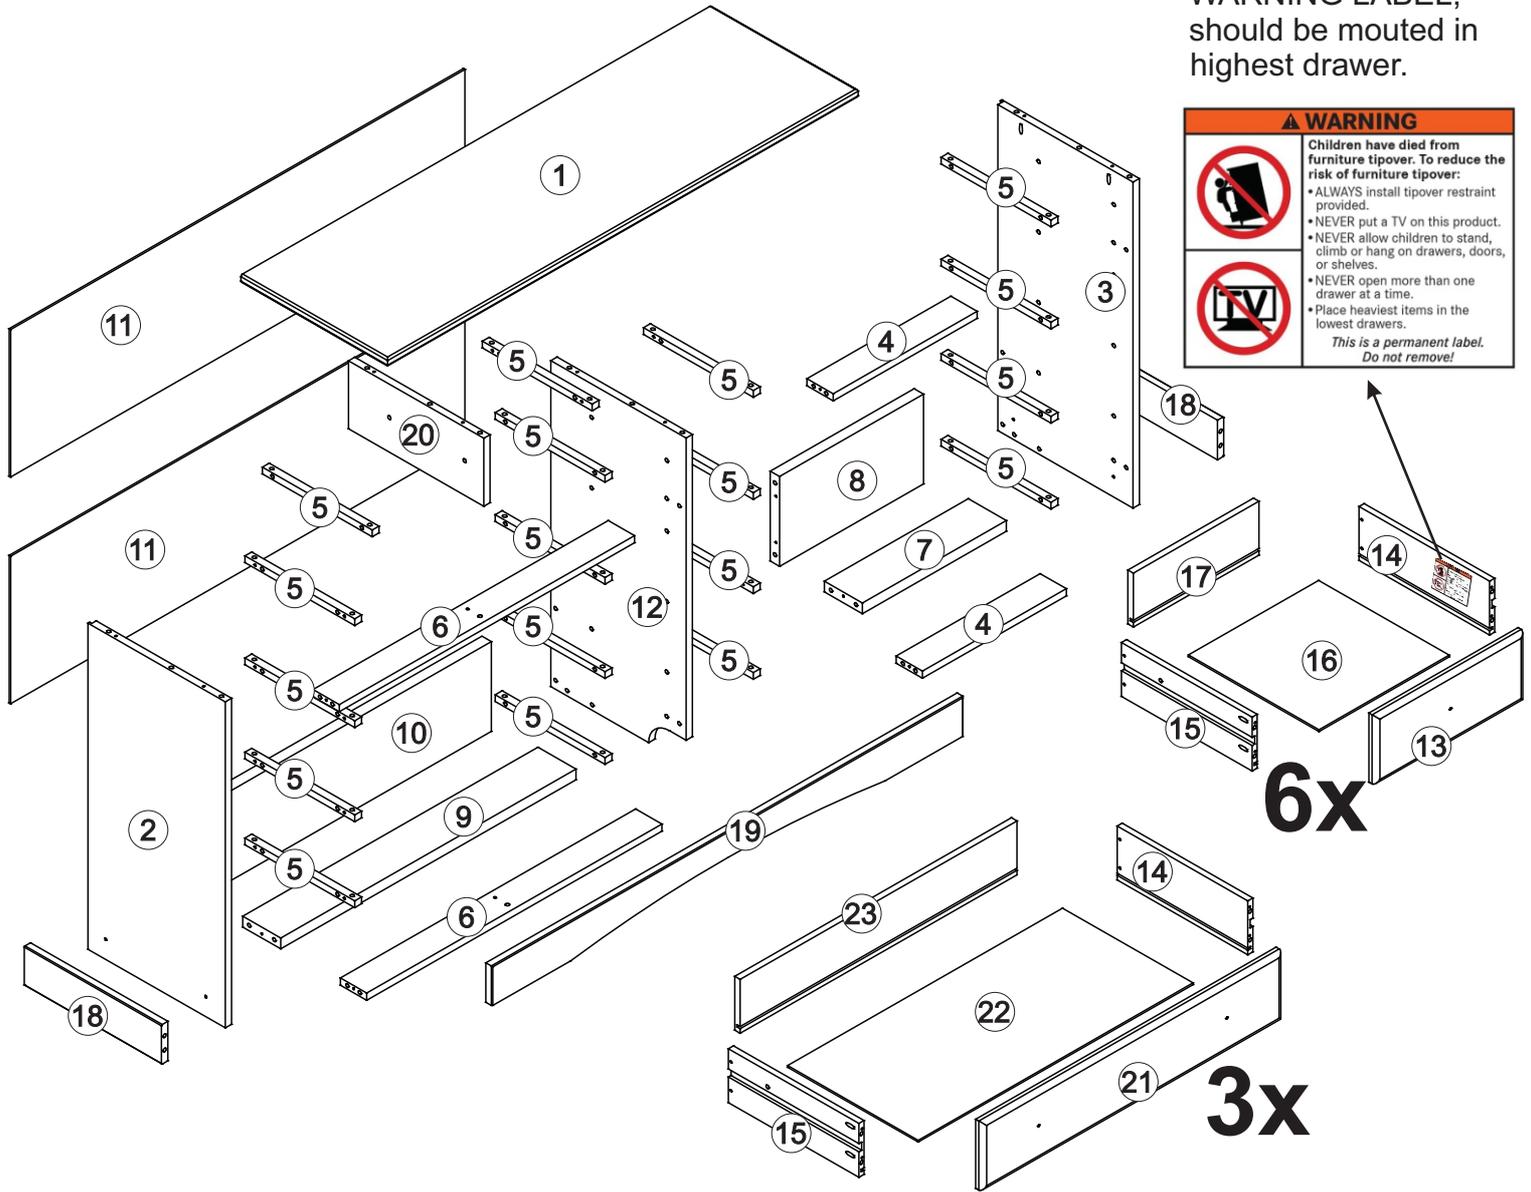


Part#	Description	Qty
1	Top panel	01 pcs
2	Left side panel	01 pcs
3	Right side panel	01 pcs
4	Small Front crossbeam	02 pcs
5	Drawer runner	18 pcs
6	Long Front crossbeam	02 pcs
7	Small Rear crossbeam	01 pcs
8	Small back Panel	01 pcs
9	Long back crossbeam	01 pcs
10	Long back Panel	01 pcs
11	Back Panel	02 pcs
12	Center panel	01 pcs


Part#	Description	Qty
13	Small Front Drawer	06 pcs
14	Drawer Right Side	09 pcs
15	Drawer Left Side	09 pcs
16	Drawer bottom	06 pcs
17	Drawer back	06 pcs
18	Side Foot	02 pcs
19	Front Foot	01 pcs
20	Central runner Support	01 pcs
21	Long Front Drawer	03 pcs
22	Long Drawer bottom	03 pcs
23	Long Drawer back	03 pcs

Hardware List

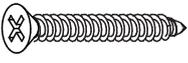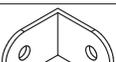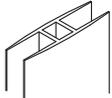A		Ø8*30mm	Wooden dowel	121 pcs
B		Ø3,5*30mm	Screw	102 pcs
C		Ø3,5*14mm	Screw	08 pcs
D		Ø4,0*25mm	Screw	41 pcs
E		Ø8*20mm	Wooden dowel	36 pc
F		Ø10*10	Nail	30 pcs
G			Corner	04 pcs
H			Handle	12 pcs
J		m4*22mm	Screw	12 pcs
K			Washer	02 pcs
L			Wall anchor	01 pc
M		Ø6mm		01 pc
N			Profile H	01 pc

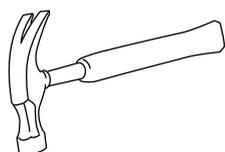


Hammer recommended for assembly
(not included)

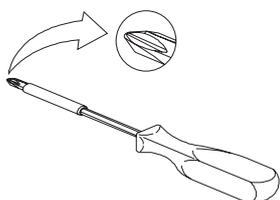


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

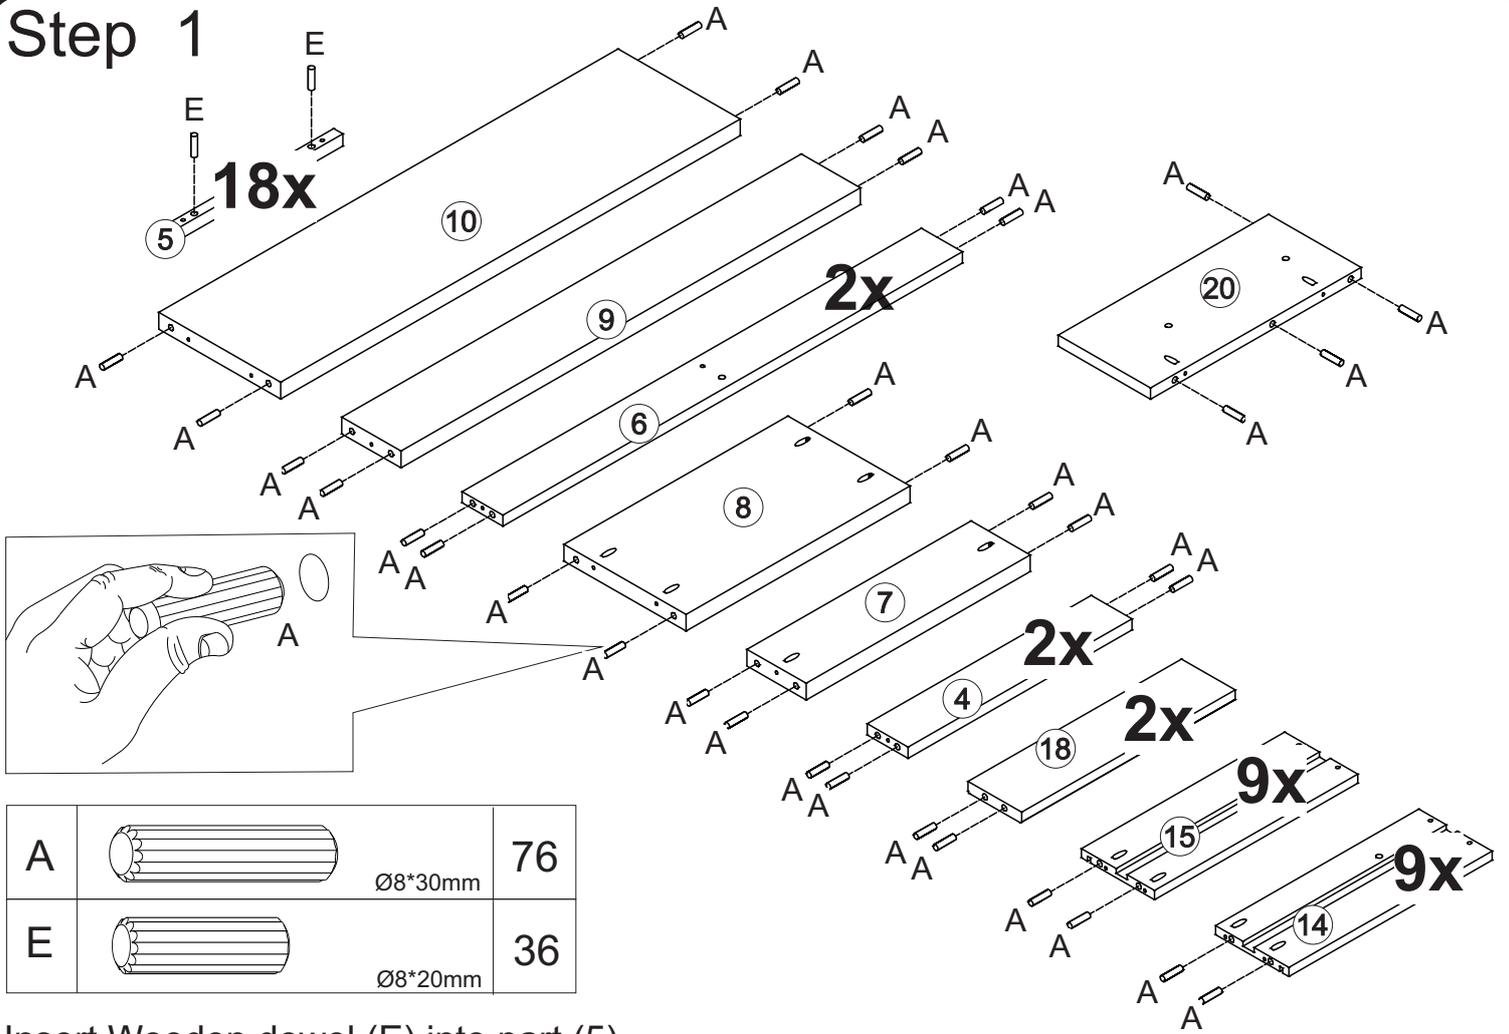


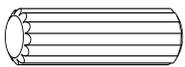
A		Ø8*30mm	76
E		Ø8*20mm	36

Insert Wooden dowel (E) into part (5).

Insert Wooden dowel (A) into part (4), (6), (7), (8), (9), (10), (14), (15), (18) and (20).

Step 2



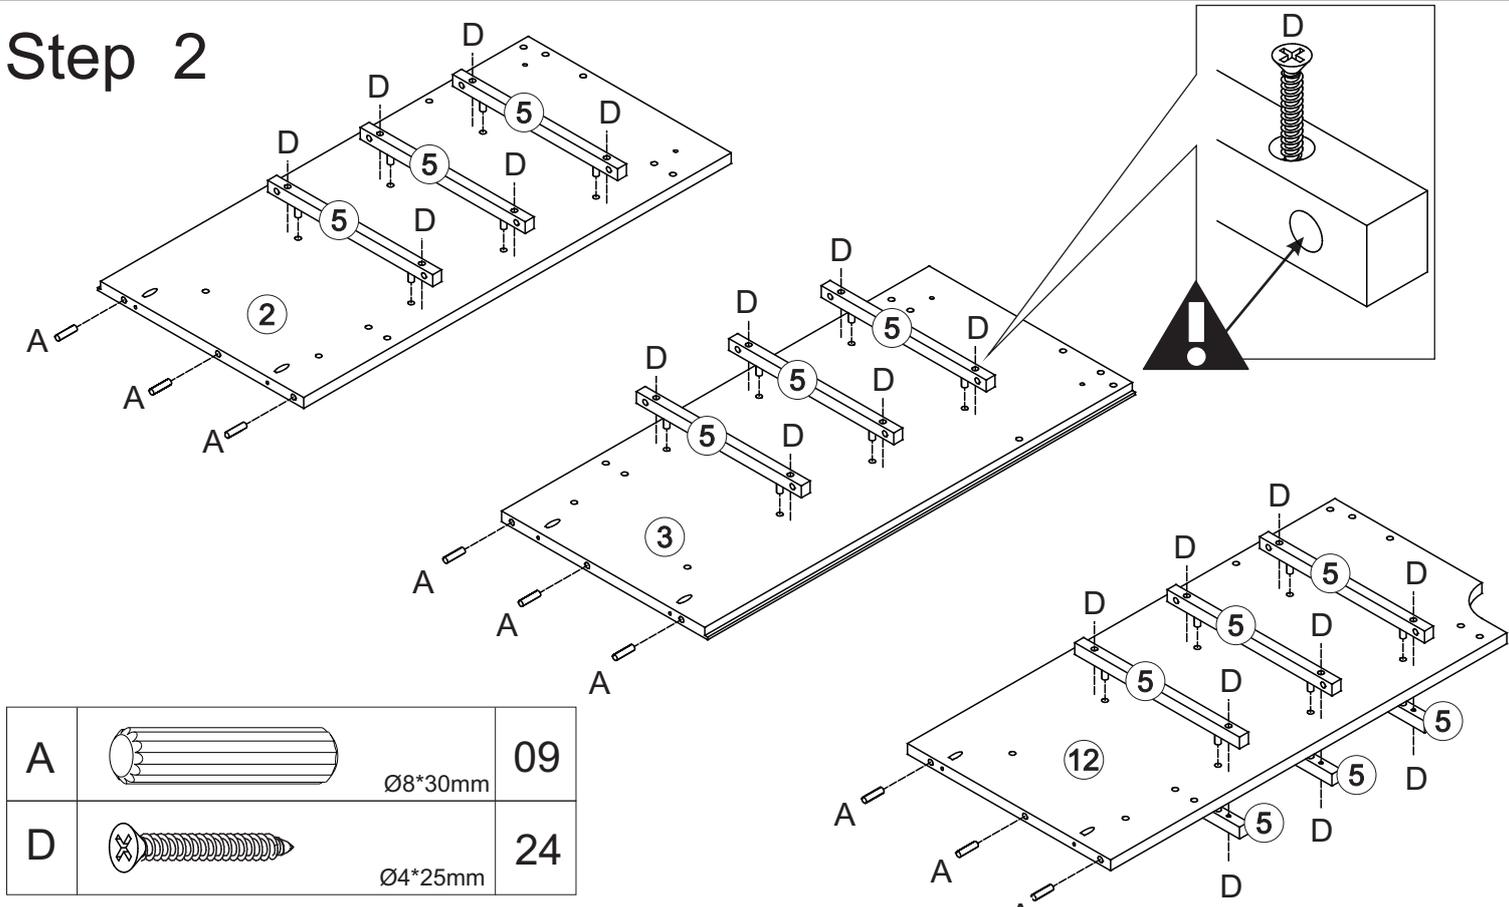


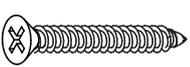A		Ø8*30mm	09
D		Ø4*25mm	24

Insert Wooden dowel (A) into part (2), (3) and (12).




Secure part secure part (5) to part (2), (3) and (12) with screw (D).

Step 3

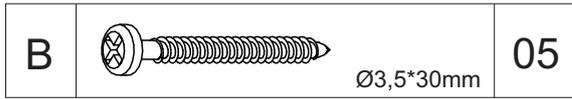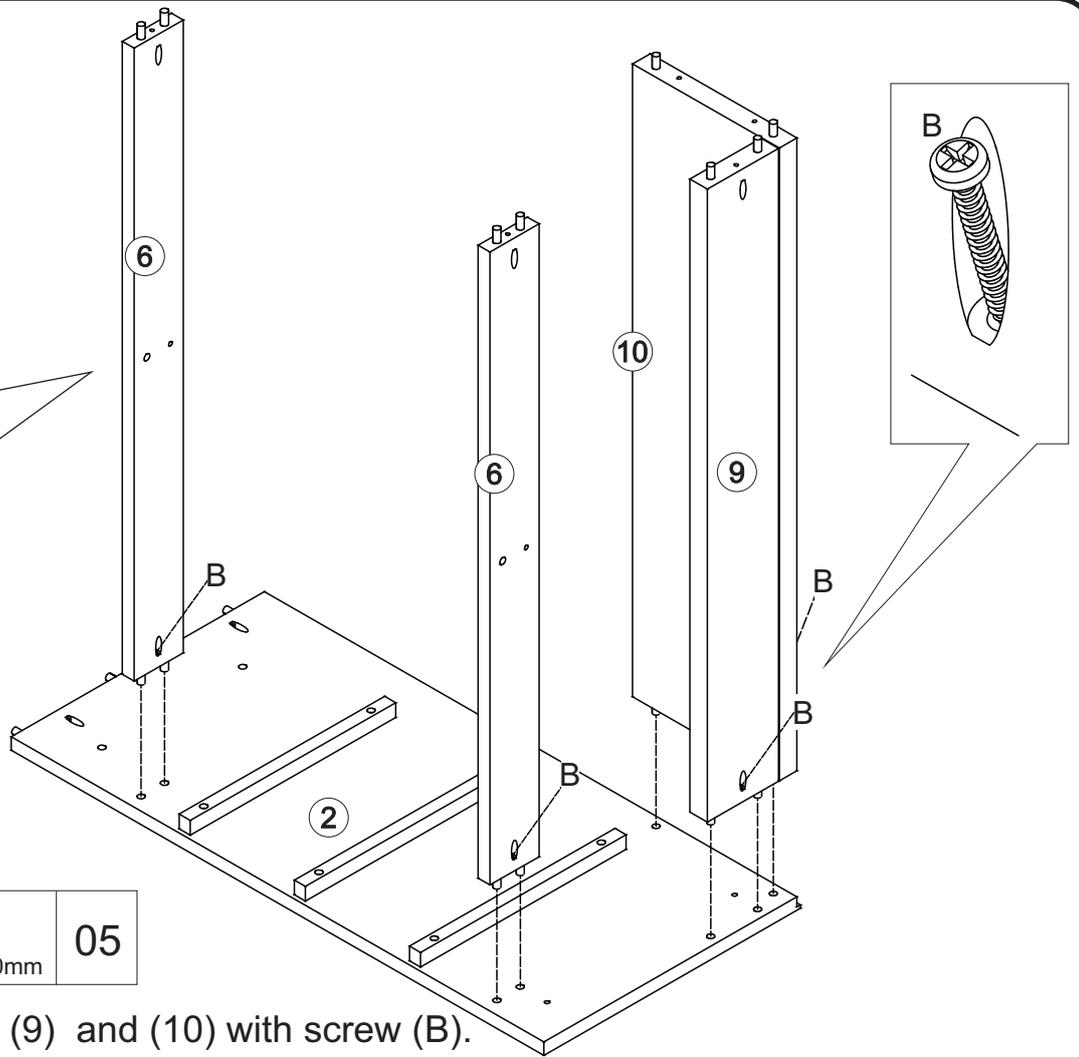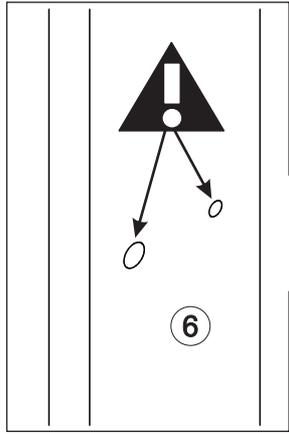



Secure part (2) to part (6), (9) and (10) with screw (B).

Step 4

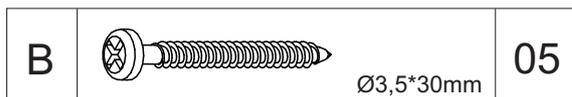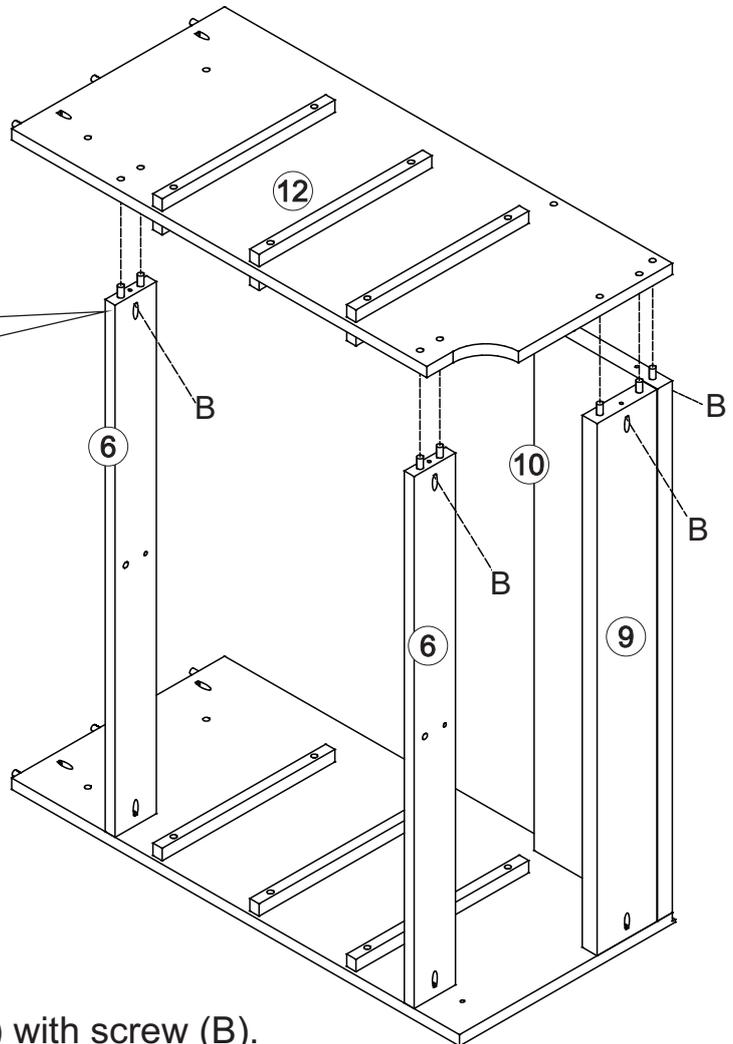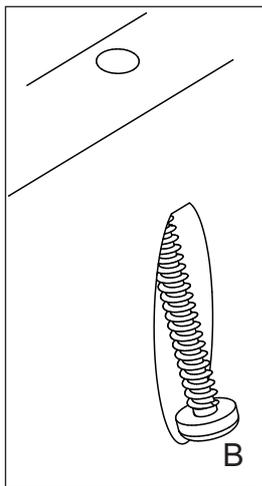



Secure part (12) to part (6), (9) and (10) with screw (B).

Step 5

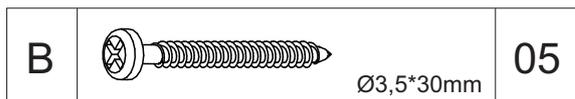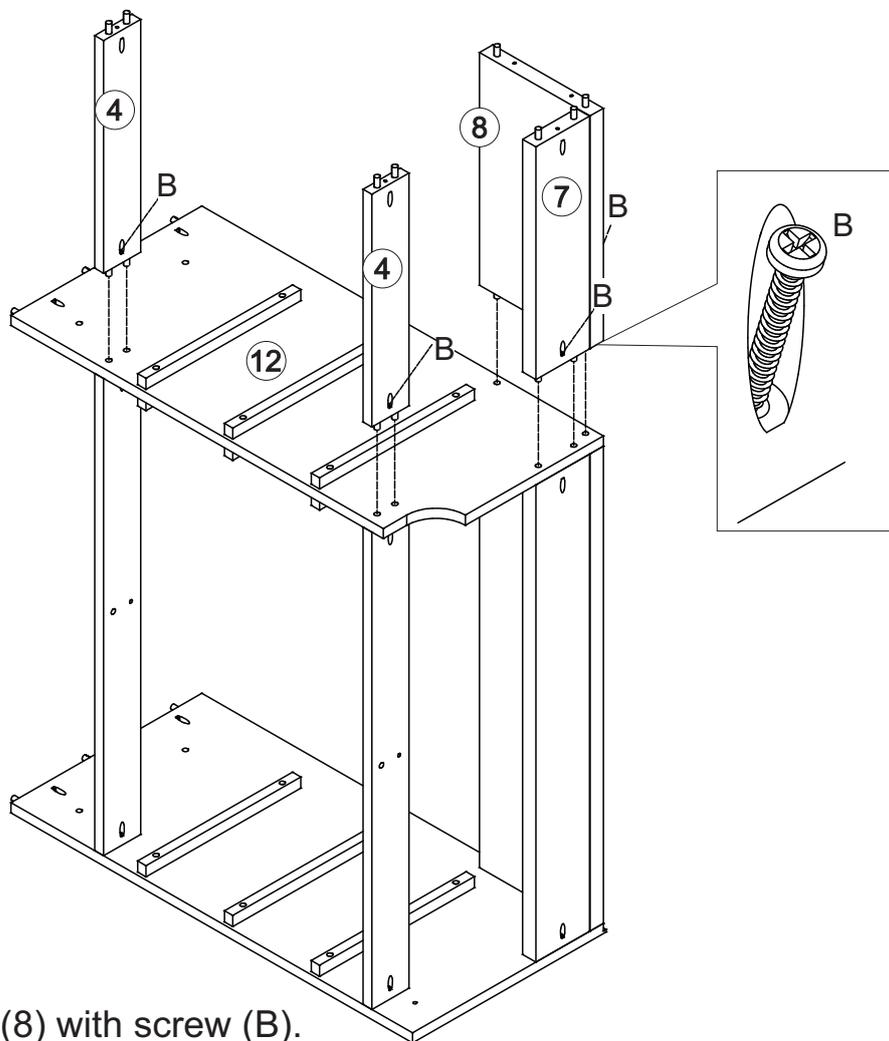


Secure part (12) to part (4), (7) and (8) with screw (B).

Step 6

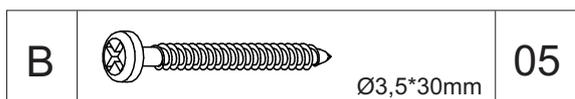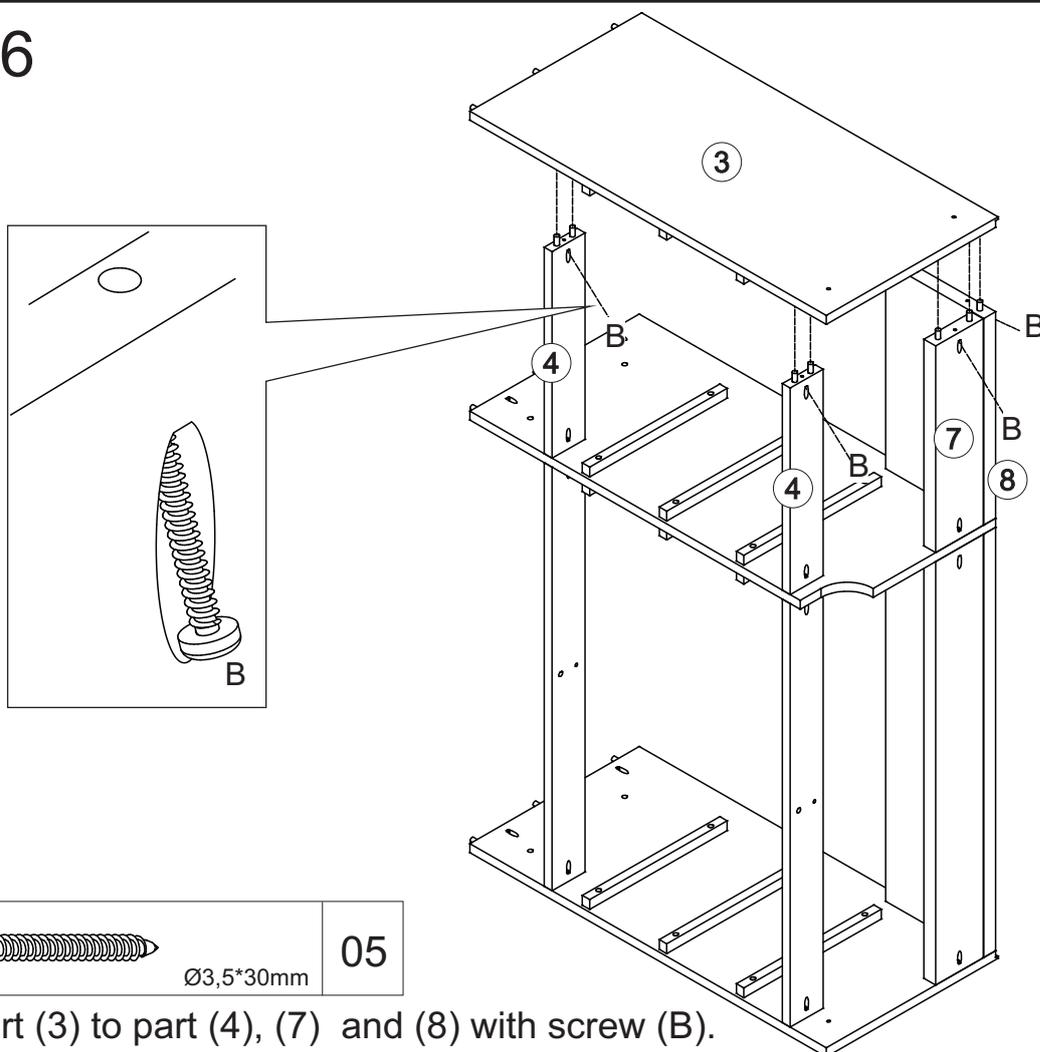

Secure part (3) to part (4), (7) and (8) with screw (B).


Step 7

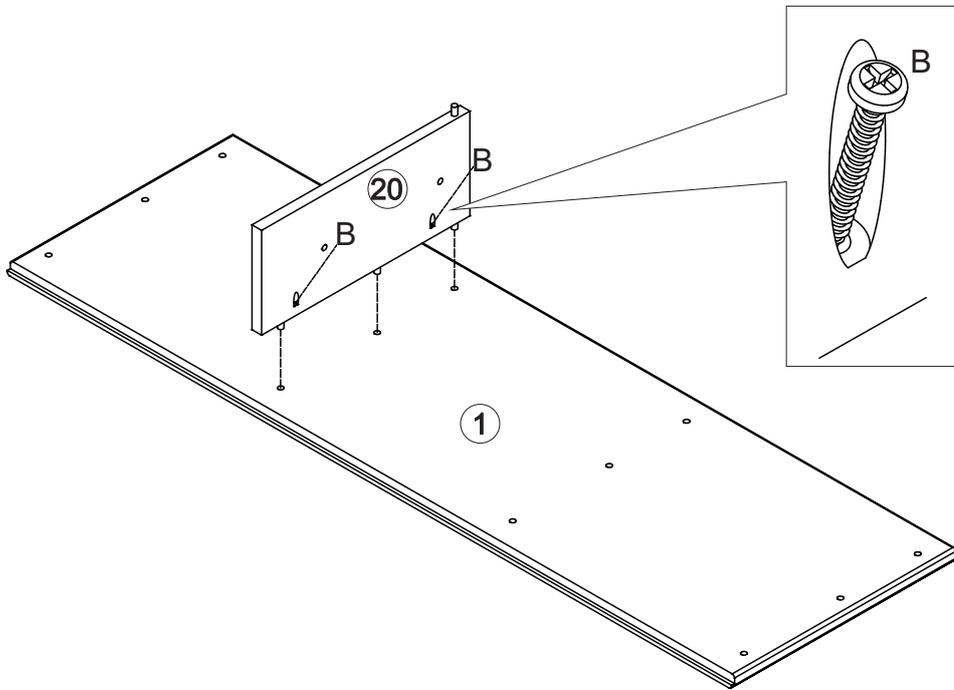

B		Ø3,5*30mm	02
---	---	-----------	----

Secure part (20) to part (1) with screw (B).


Step 8

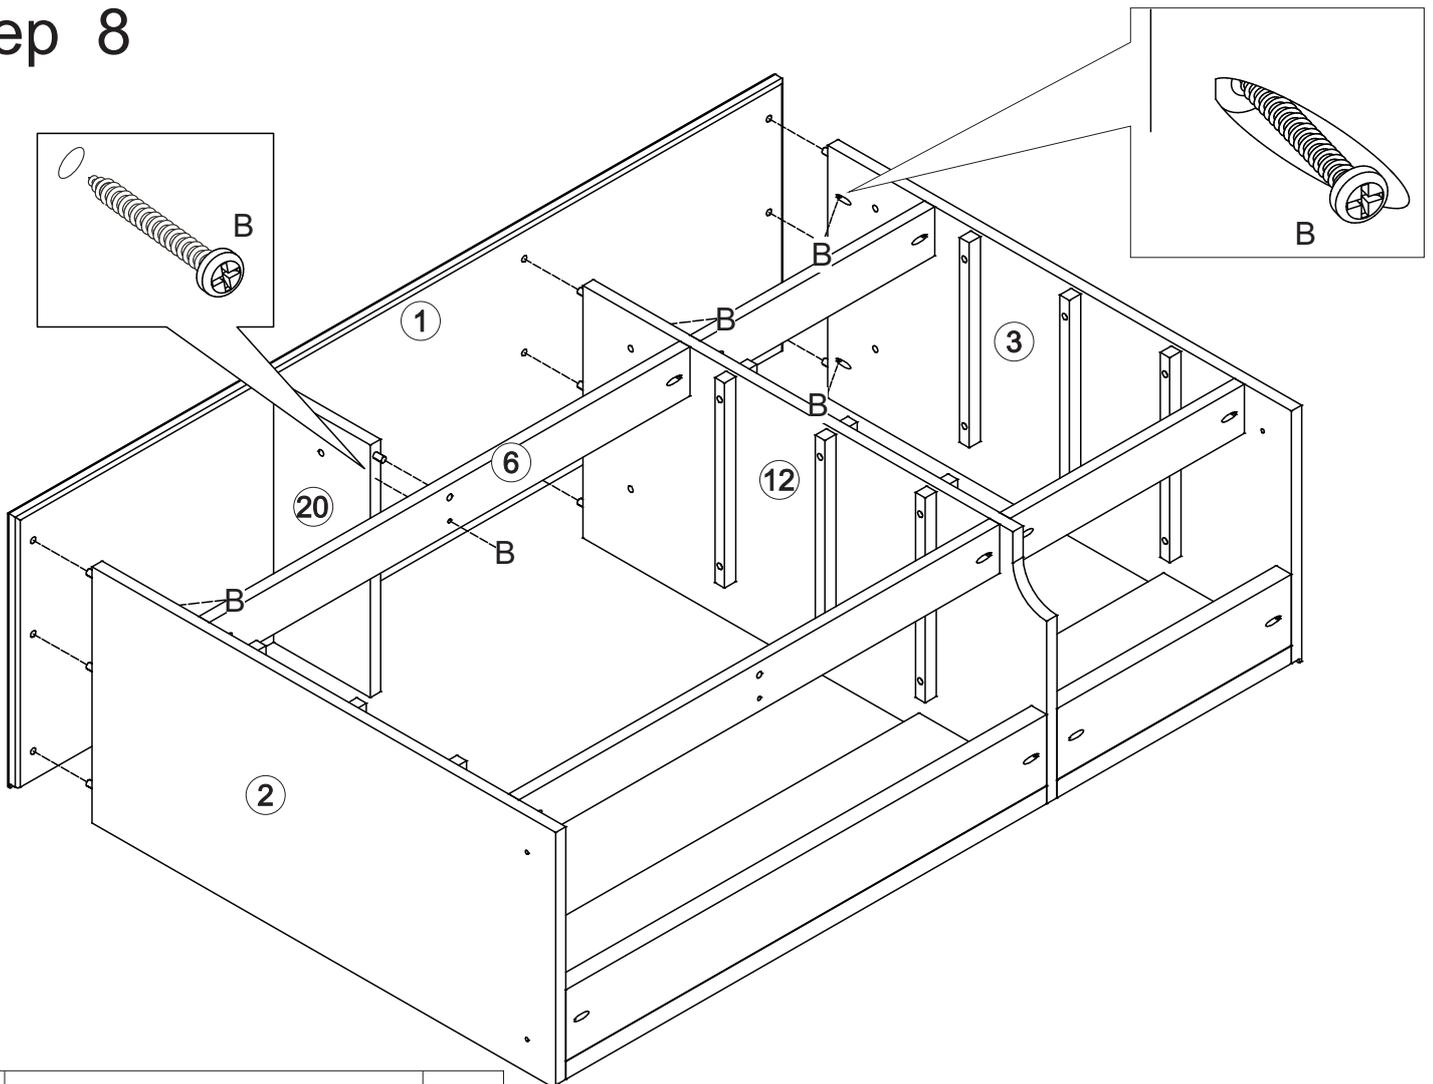

B		Ø3,5*30mm	07
---	---	-----------	----


Secure part (1) to part (2), (3) and (12) with screw (B).
Secure part (20) to part (6) with screw (B).

Step 9

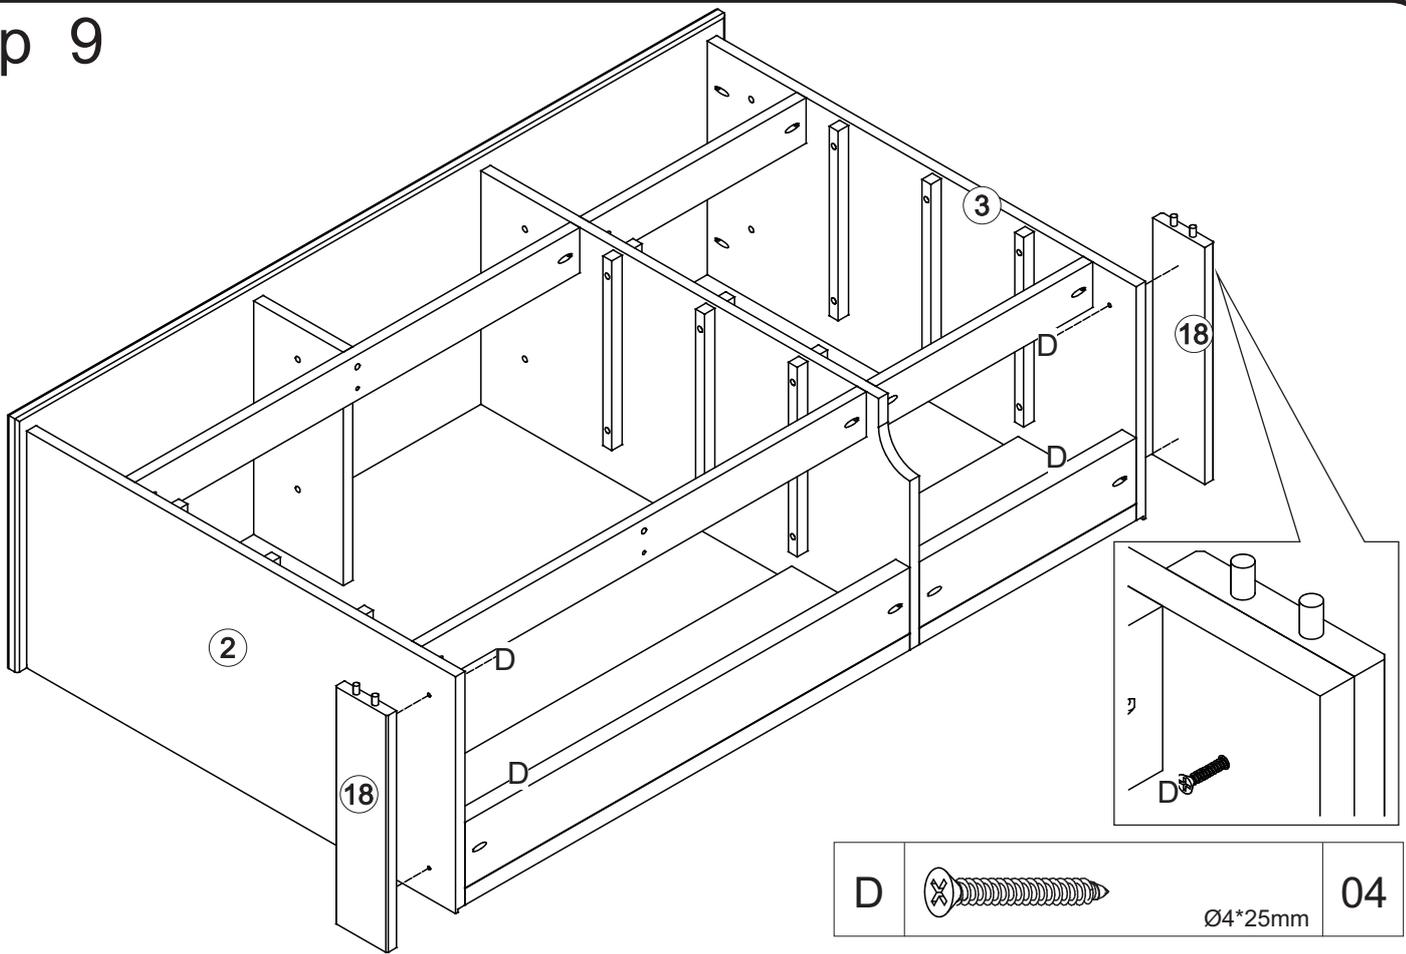



Secure part (18) to part (2) and (03) with screw (D).

Step 10

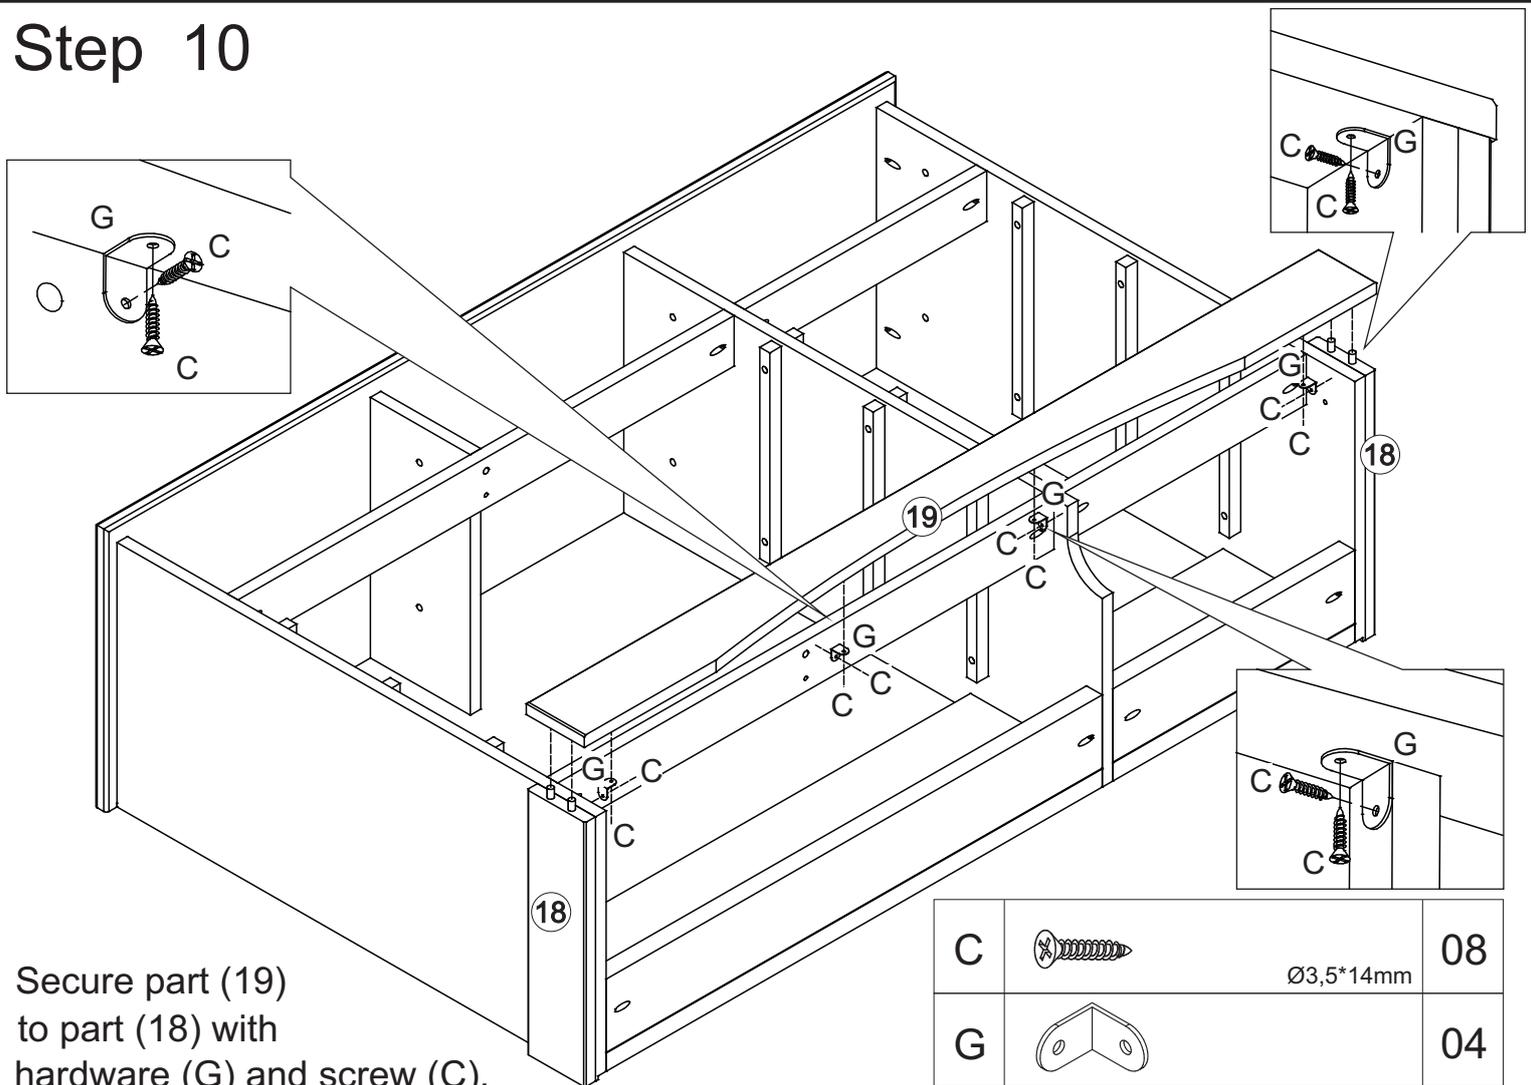



Secure part (19) to part (18) with hardware (G) and screw (C).

Step 11

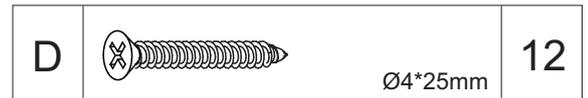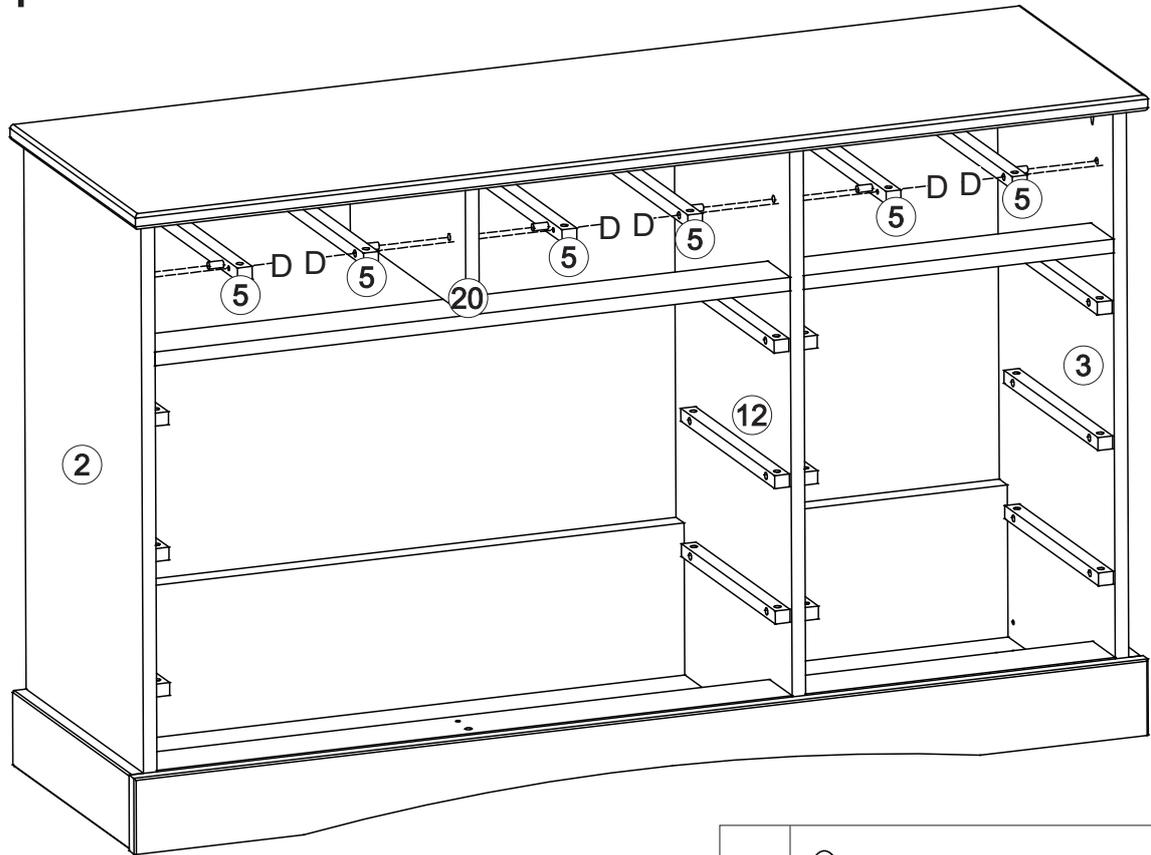





Secure part (5) to part (2), (3), (2) and (12) with screw (D).

Step 12

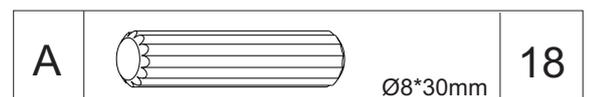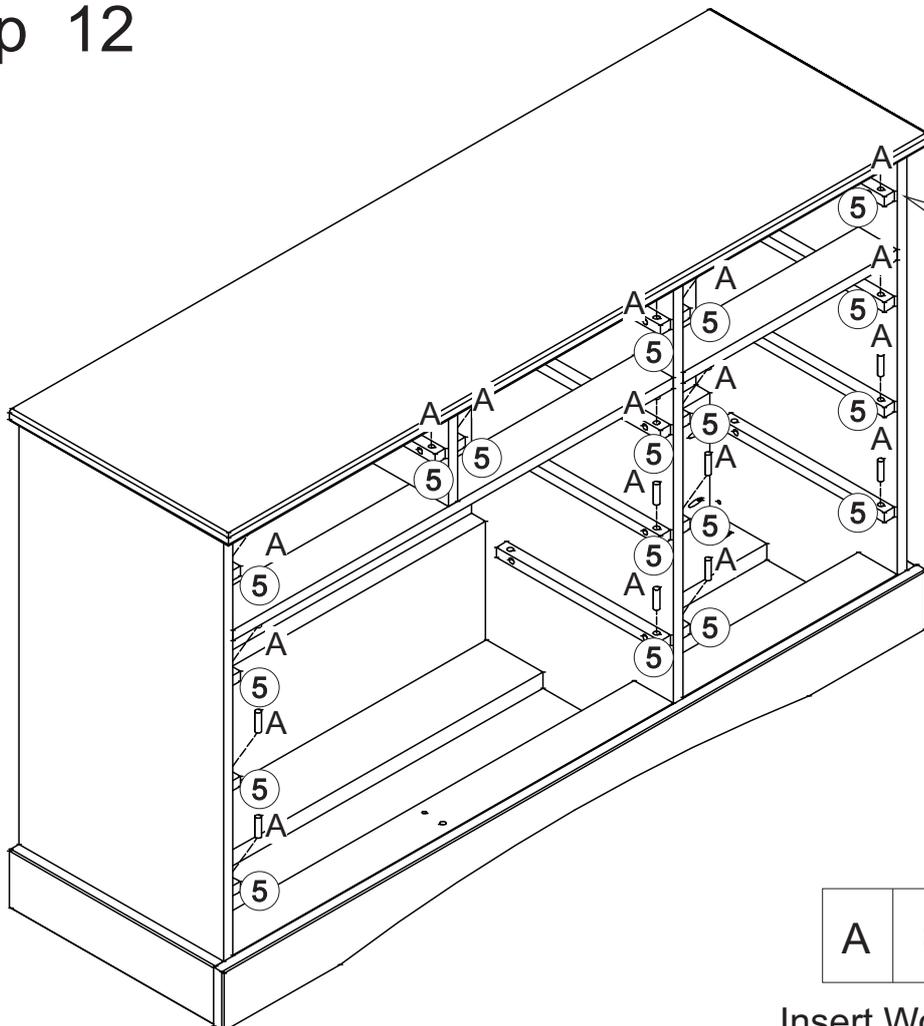

Insert Wooden dowel (A) into part (5).



Step 13

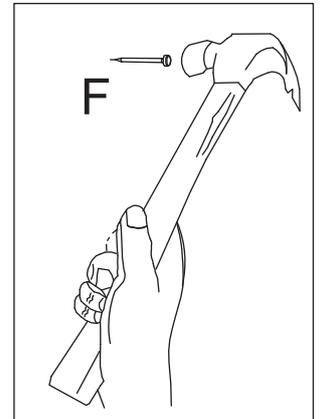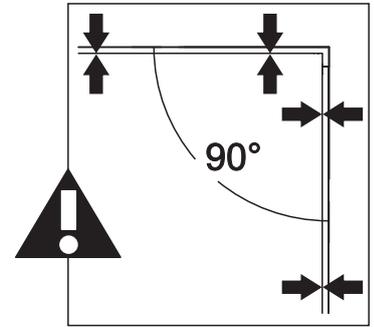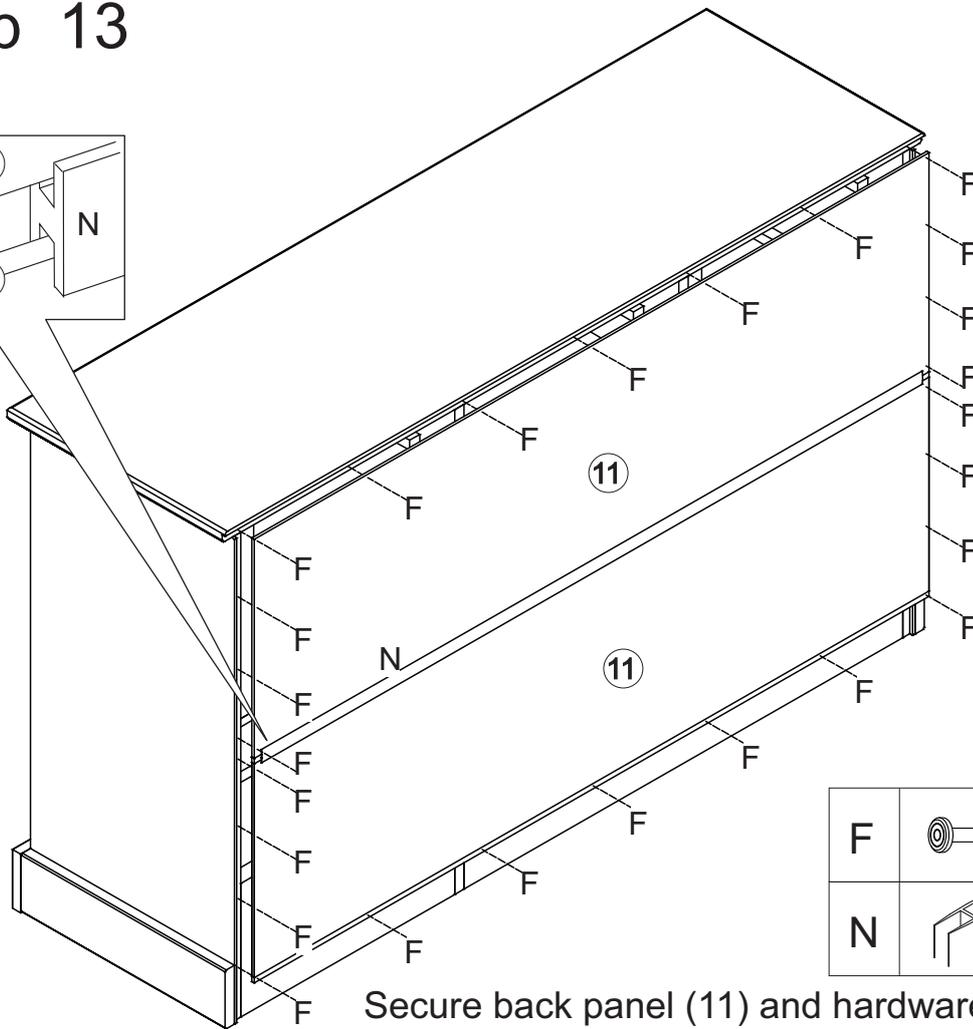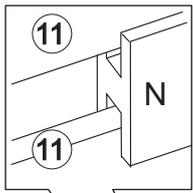

F		Ø10*10mm	30
N			01

Secure back panel (11) and hardware (N) to body with nails (F)

Step 14

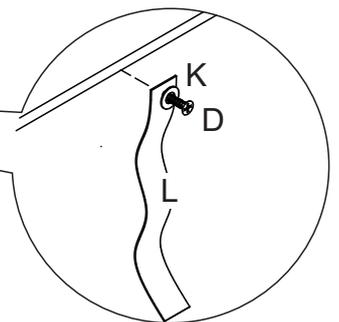
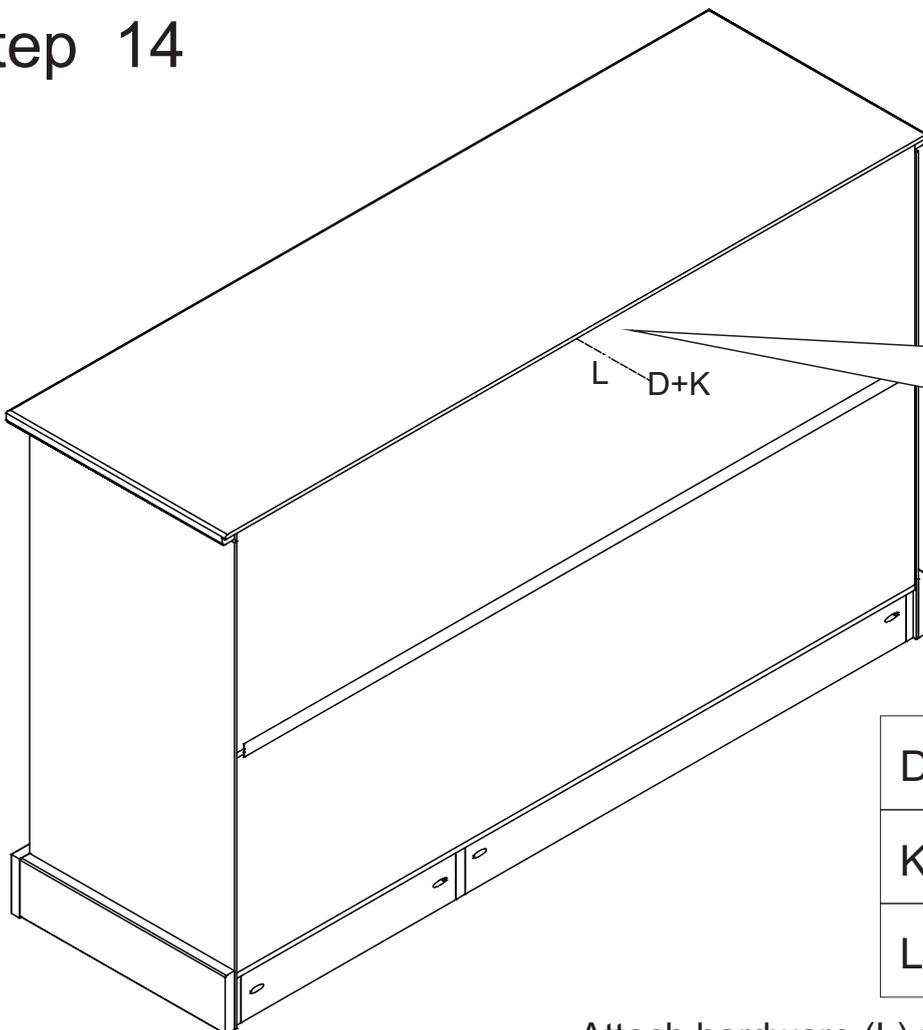


D		Ø4*25mm	01
K			01
L			01

Attach hardware (L) part (1), with screw (D+K).

Step 15

3x

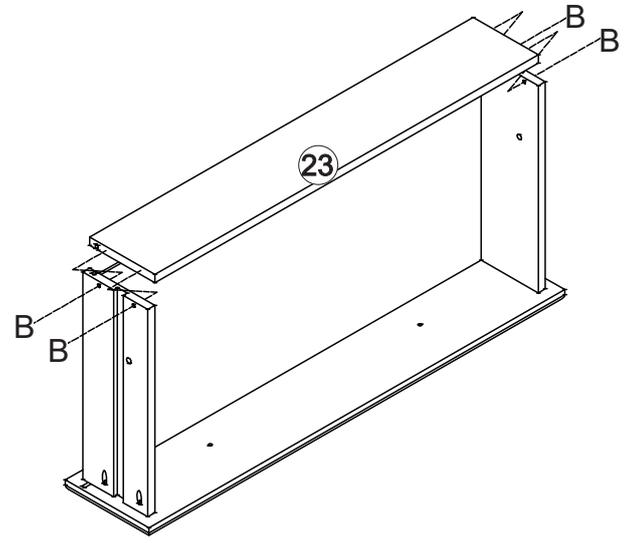
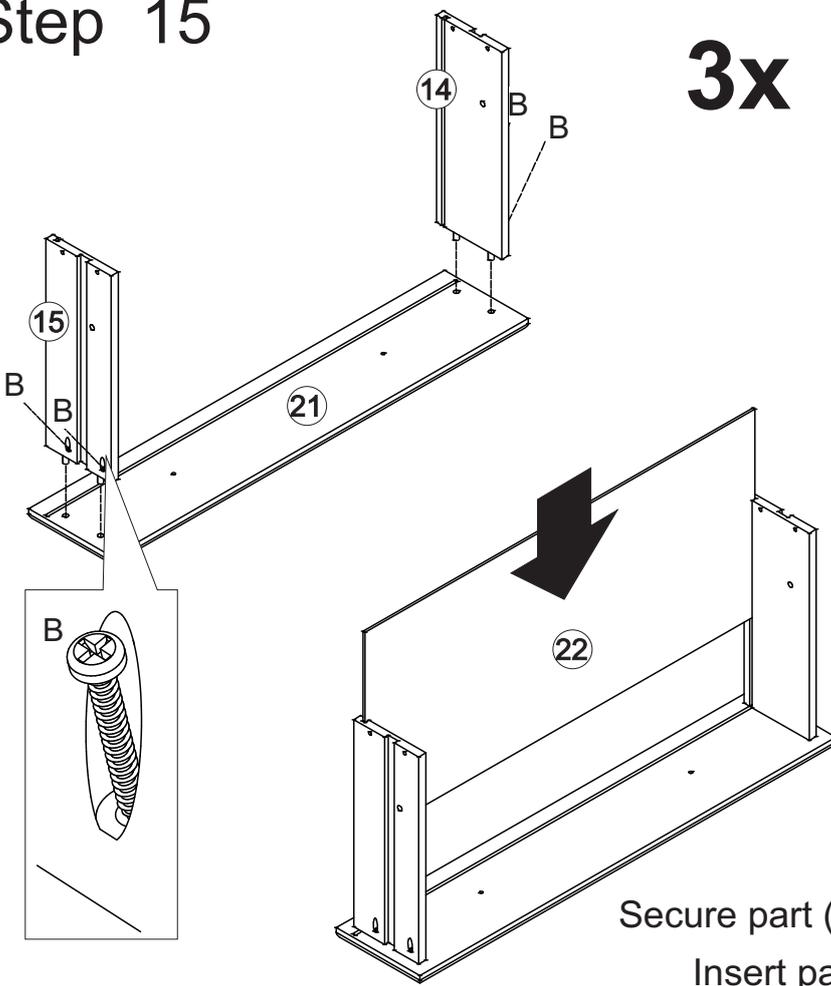


B		Ø3,5*30mm	24
---	---	-----------	----

Secure part (14) and (15) to part (21) with screw (B).
 Insert part (22) between parts (14) and (15)
 Secure part (23) with screw (B).

Step 16

6x

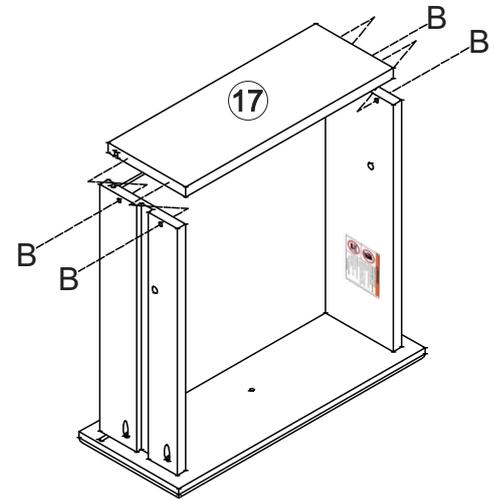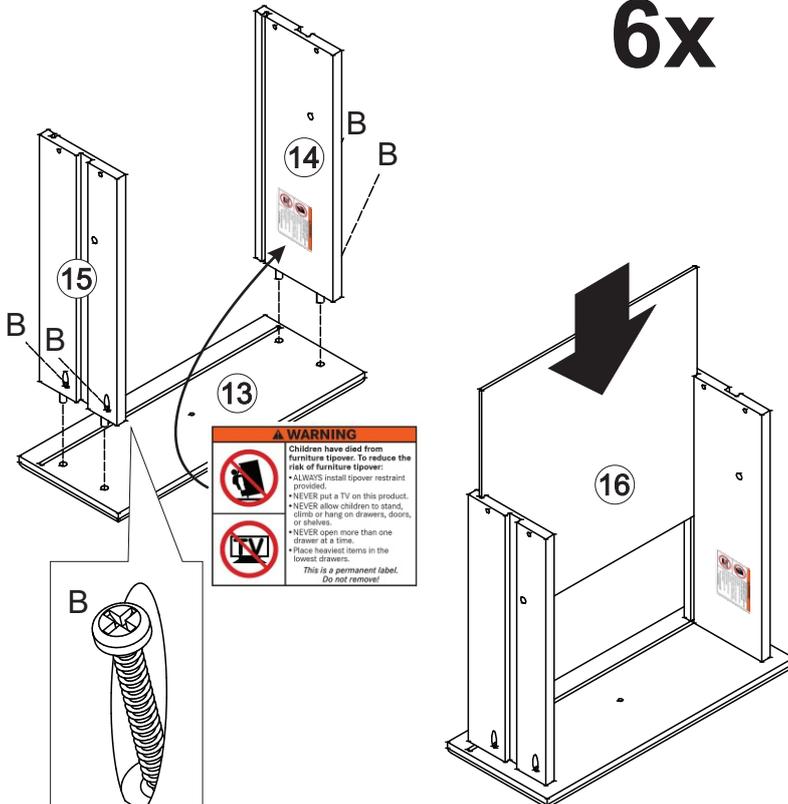

WARNING
 Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label. Do not remove!

B		Ø3,5*30mm	48
---	---	-----------	----

Secure part (14) and (15) to part (13) with screw (B).
 Insert part (16) between parts (14) and (15)
 Secure part (17) with screw (B).

Step 17

6x

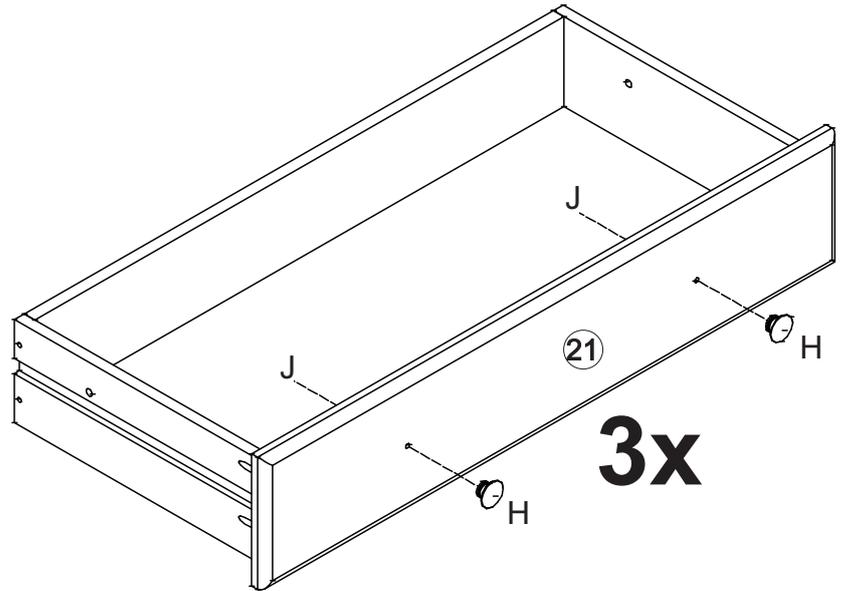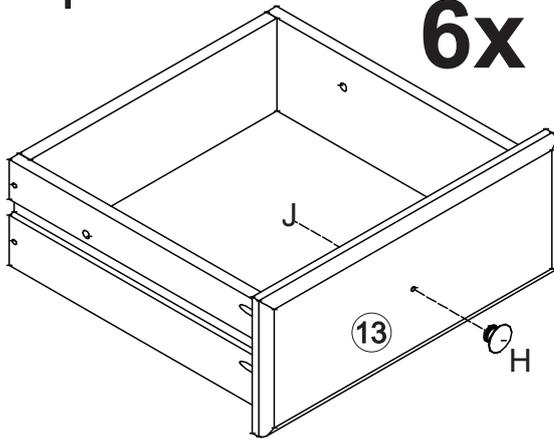

3x


H		12
J	 ØM4*22mm	12

Secure hardware (H) part (13) and (21), with screw (J).

Step 18

Drawer Stop

Insert wood dowel (A) on the inside of all drawers while drawer is inside the unit. Make sure dowel is flush with panel.

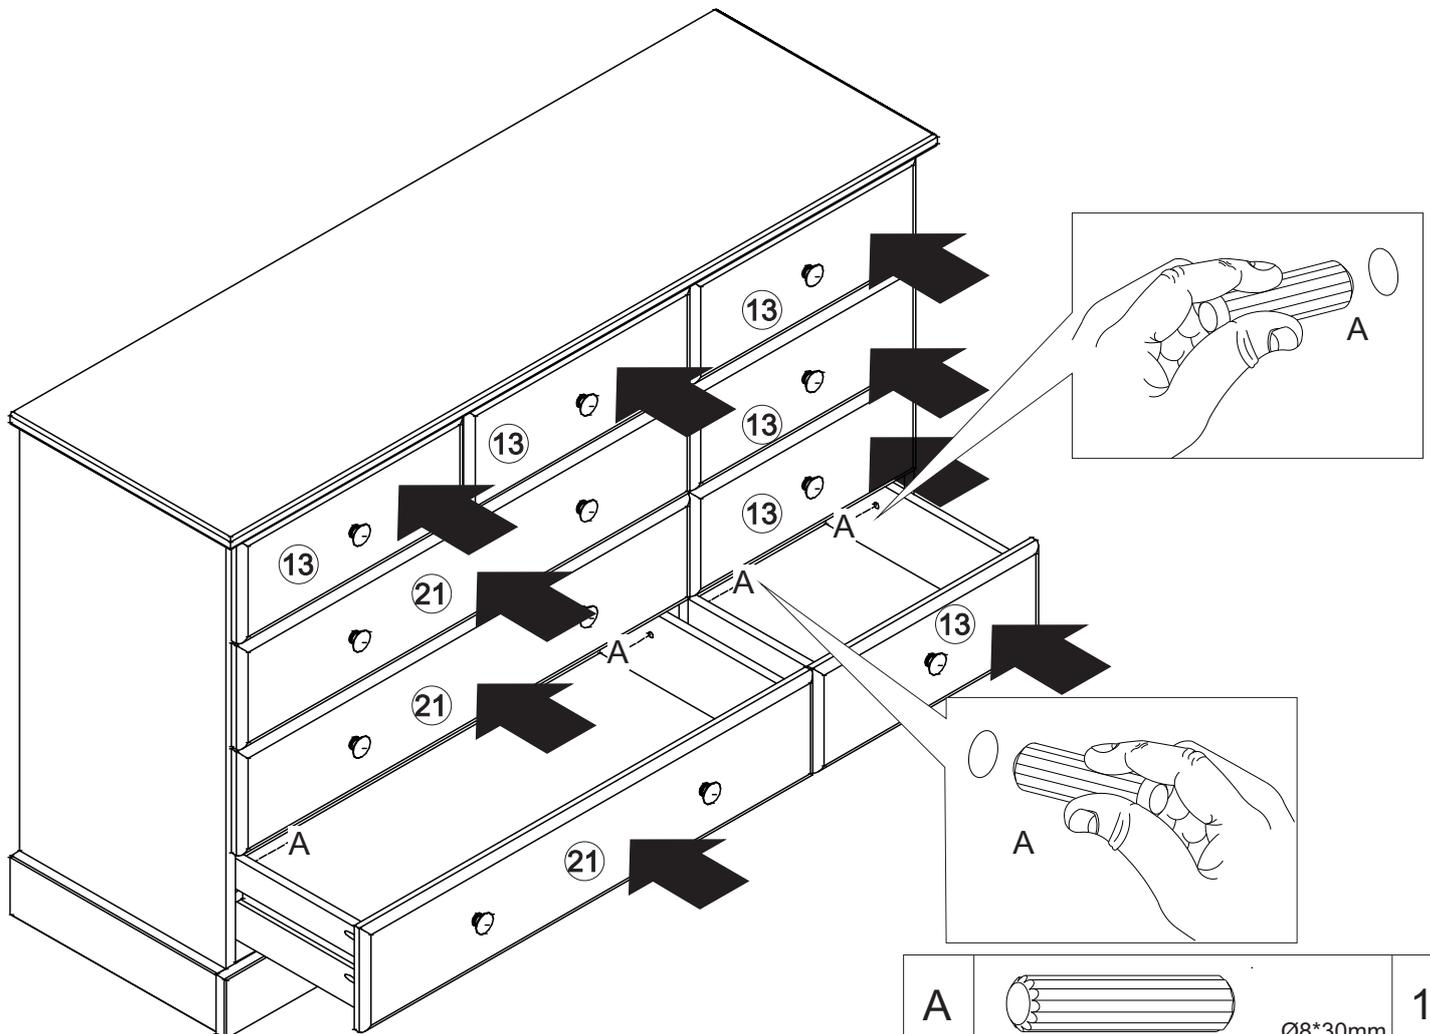




A	 Ø8*30mm	18
---	-------------	----

Step 19

WARNING


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

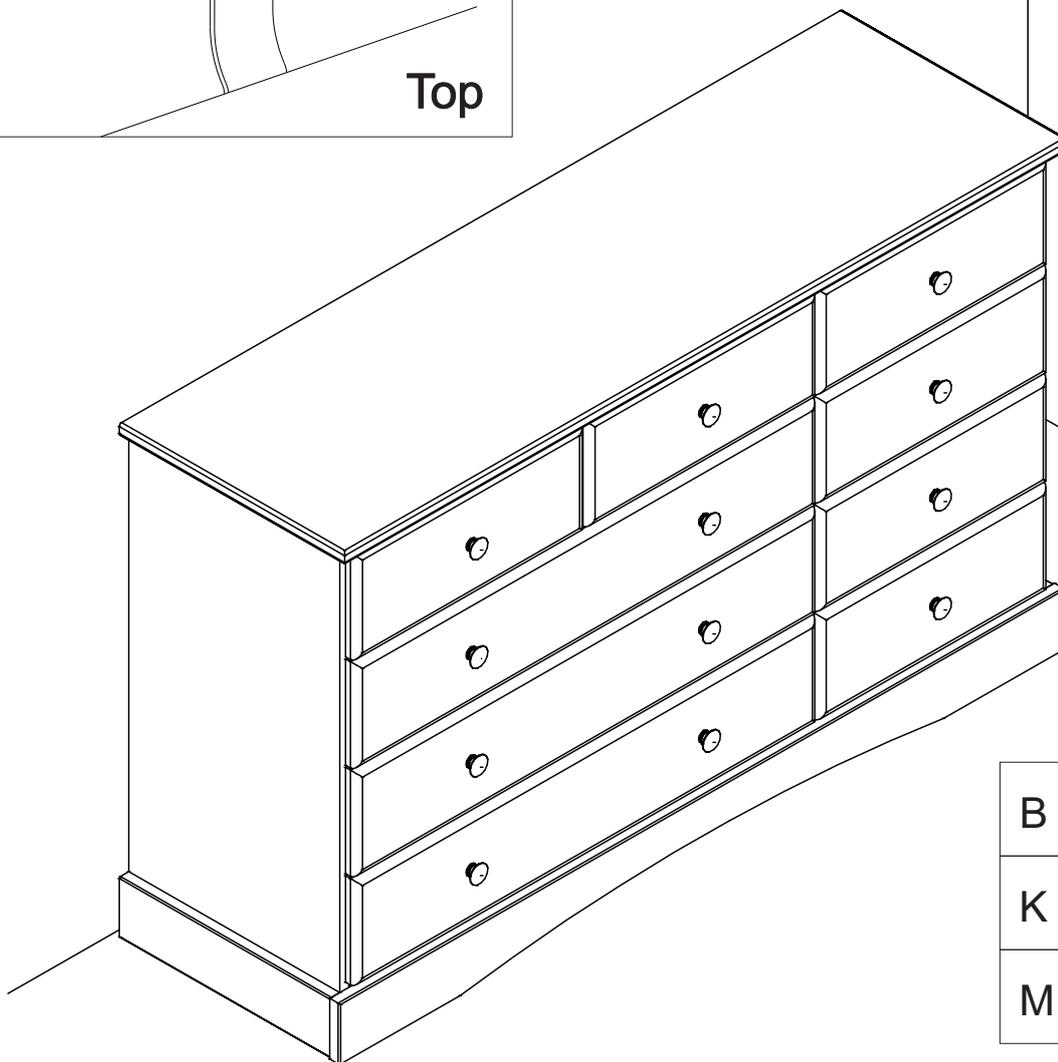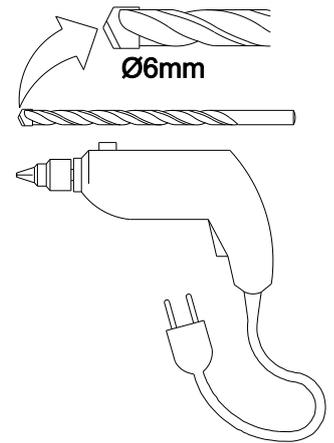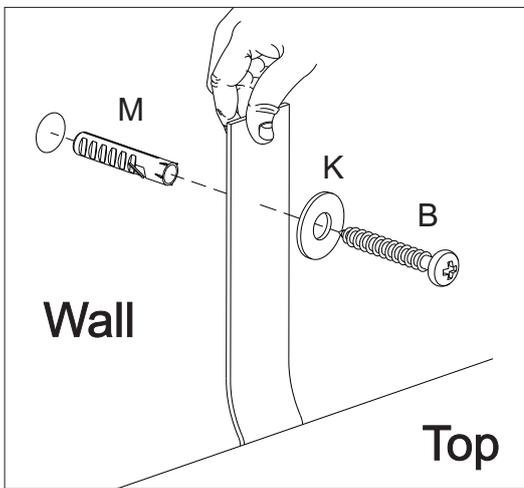

B	 Ø3,5*30mm	01
K		01
M		01

Step 20

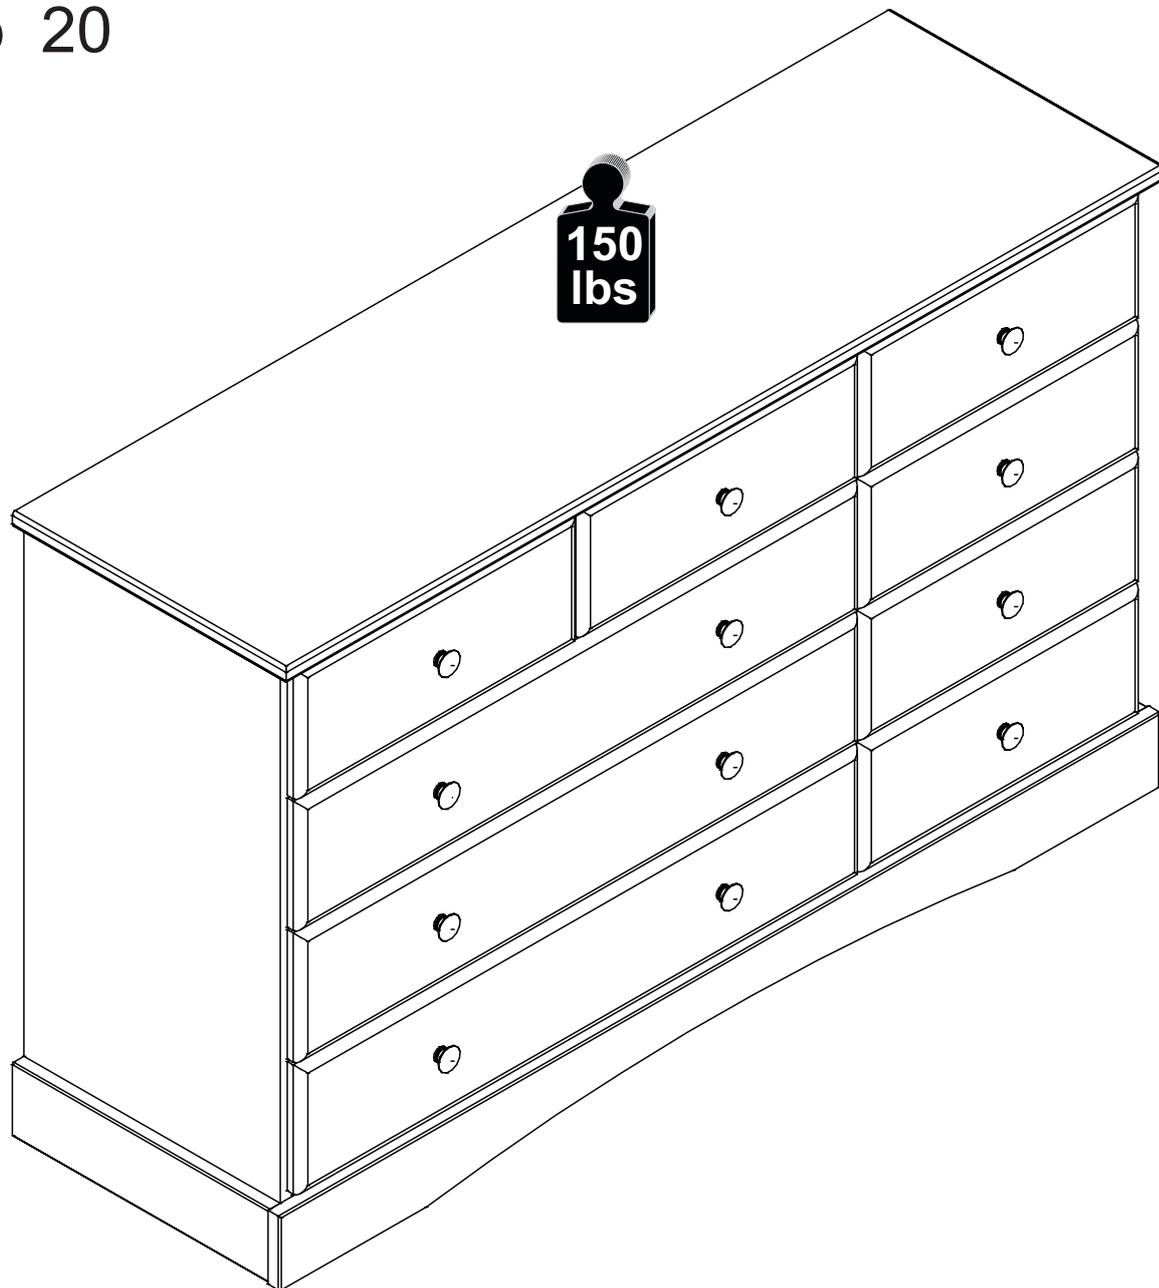

Assembly Complete!

Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.

1. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
2. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood)
3. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.