
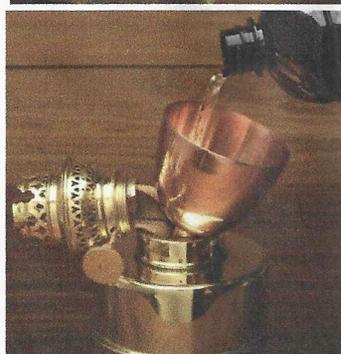
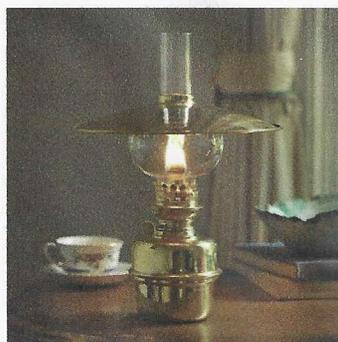


Garrett Wade

78A05.01 + .02 + 78A05.25

Extra Bright Oil Lamp

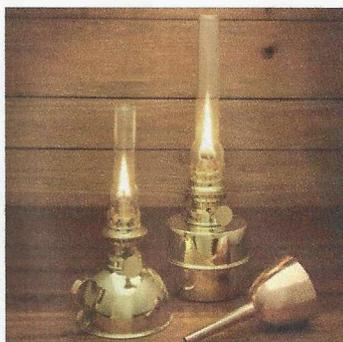

To fill lamp, remove chimney, grasp bottom of oil vessel with your non dominate hand as in photo. With your dominate hand, grasp the wick assembly as in the photo. It unscrews at the bottom of the wick assembly. We find it helpful to use your thumb as in the picture to give you additional leverage (caution) grasp the entire wick assembly and twist counter clockwise. Too much pressure will bend the wick advancing lever. With a funnel fill the tank no more than 3/4 full with good clean Kerosene (K1) or a good quality lamp oil.

Re install wick assembly. Allow wick to soak up fuel (about 15 or 20 min).

Light wick and allow flame to stabilize. Raise wick high enough to create a bright light but not too high that it smokes.

Carefully reinstall chimney. With the Brass Captains Shade lantern, Instructions are the same , just install carefully install the chimney and then the brass shade.

If you need further assistance contact Garrett Wade Customer Service 800-221-2942