


Faux Wood Adirondack Chair

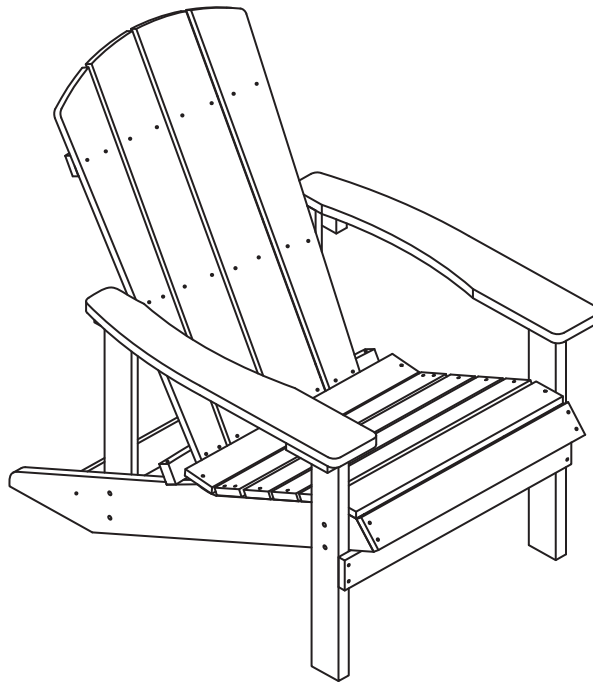

Made in China

Safety Information



DANGER: Please keep children out of the assembly area during assembly.




CAUTION: Use the chairs on flat ground only.



WARNING: Do not stand on the chairs. Do not sit on the armrests.

Pre-Assembly

TOOLS REQUIRED (not included)




Phillips screwdriver

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	Screw (3.5x40)	6
BB	Bolt (M6x60)	2
CC	Bolt (M6x70)	2
DD	Bolt (M6x60)	6
EE	Bolt (M6x45)	4

Pre-Assembly(continued)


PACKAGE CONTENTS

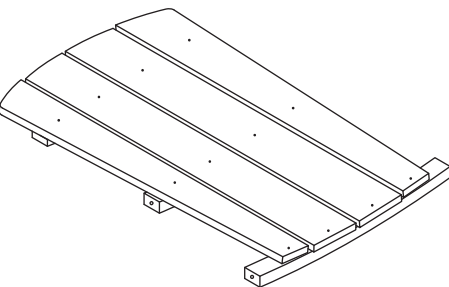


_____ A




_____ F

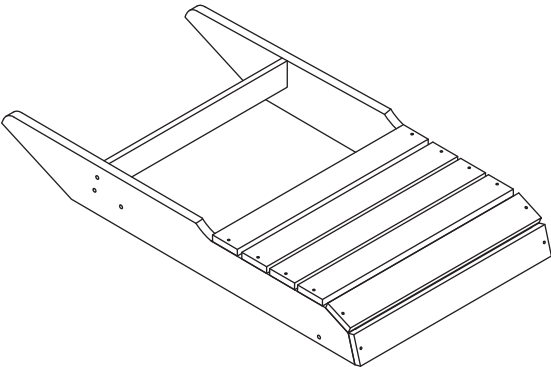


_____ B

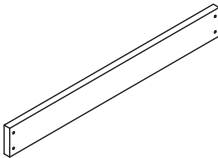


_____ G

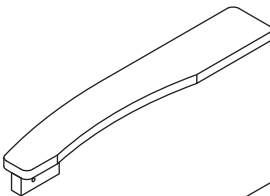

_____ C

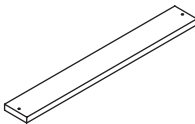

_____ H

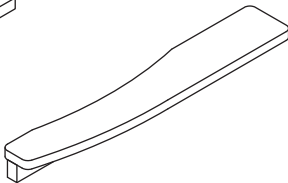

_____ D



_____ E


***Note: DO NOT TIGHTEN ANY BOLTS BEFORE THE UNIT PUT TOGETHER.**

Part	Description	Quantity	Part	Description	Quantity
A	Back	1	F	Front Legs	2
B	Seat	1	G	Front Leg Cross Beam	1
C	Left armrest	1	H	Rear Seat Slat	1
D	Right armrest	1			
E	Vertical Back Support	2			

Assembly


1 Attaching the rear seat slat

- Attach the rear seat slat (H) to the seat (B) with screws (AA).

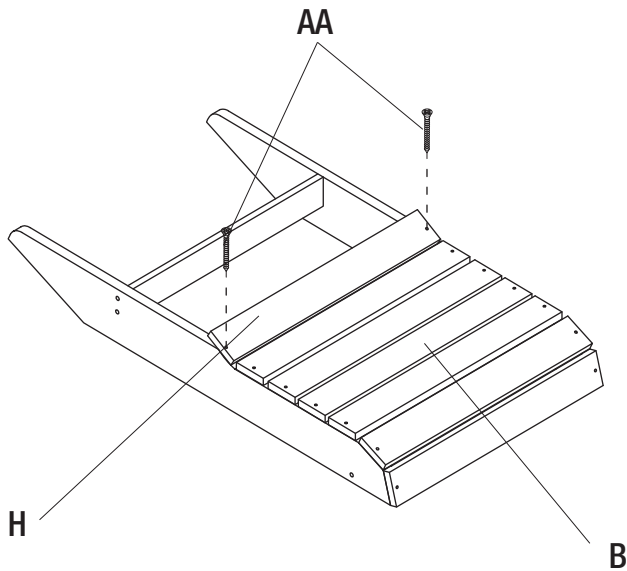


2 Attaching the front legs

- Attach the front legs (F) onto the seat (B) with Bolts (DD).
Attach Vertical Back Support (E) onto the Seat with Bolts (EE).

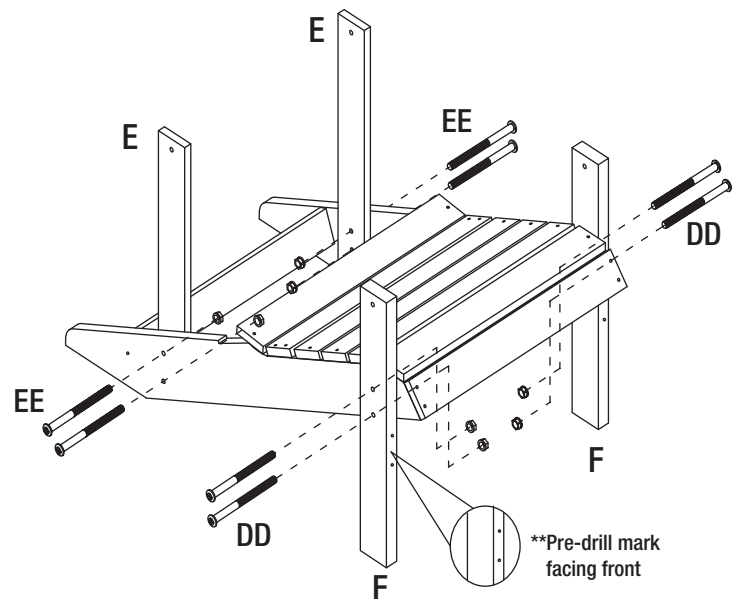

3 Attaching the cross board

- Attach the Cross Beam (G) to the front legs (F) with screws (AA).

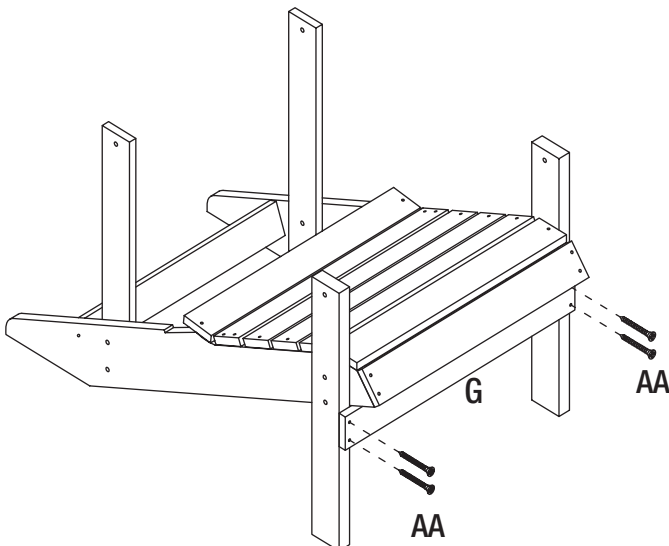

4 Attaching the Hinge

- Attach the Back (A) to the Seat (B) with Bolts (BB).
Attach the Armrest (C & D) to the Front Legs with Bolt (DD).
Attach the Armrest to the Vertical Back Support (E) with Bolt (CC).

