

## Changing the sensor head angle.

Fig.1

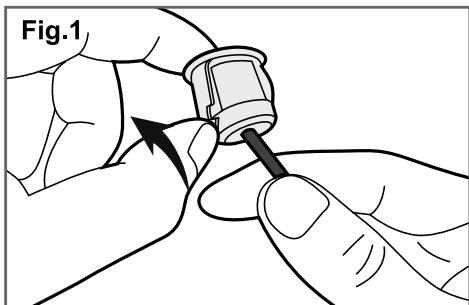


Fig.2

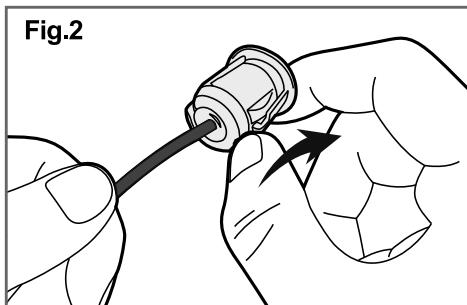


Fig.3

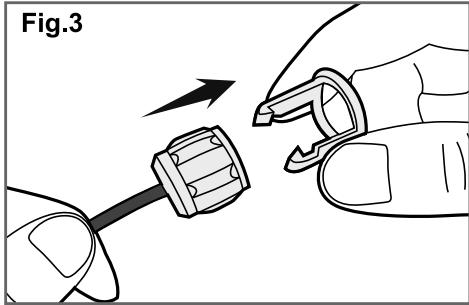


Fig.4

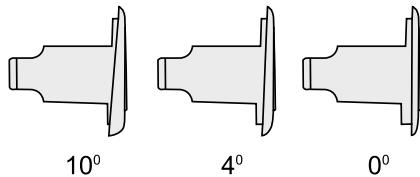


Fig.5

When colour coding the sensor heads it is advisable to paint the heads in two parts to achieve the best finish. When the paint is dry remove excess paint from the silicone then clip back together.

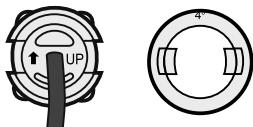


Fig.6


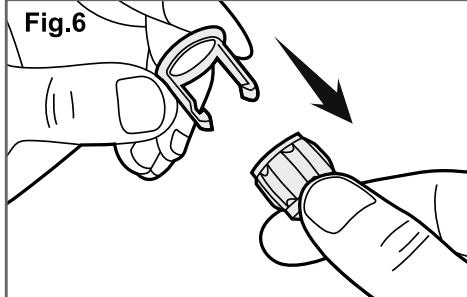


Fig.7 Tips: Make sure the degree marking is on the top of sensor after plug in.



**NOTE:** For sensor colour coding procedure please refer to Fig.5

Hint: If a gap found between bumper and 10° sensor cover after installation, please adjust the angle of the hole shown as below.

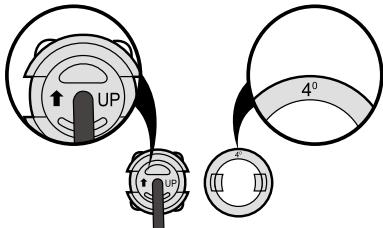