



INSTALLATION INSTRUCTIONS FOR PART 99-7378B

Kia Sportage LX 2017-up (with 5" screen) 99-7378B


KIT FEATURES

- ISO DIN radio provision with pocket
- *Painted scratch resistant matte black*



KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (2) #8 x 3/8" Phillips screws

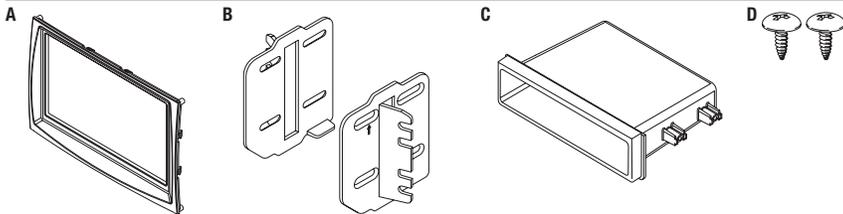

WIRING & ANTENNA CONNECTIONS (sold separately)

- Wire harness: • 70-7304
- Antenna adapter: • 40-K11

Table of Contents

Dash Disassembly	2
Kit Preparation	3
Kit Assembly	3

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.


Dash Disassembly

1. Unclip and slide the top of the center console (including the cup holders) back slightly. (Figure A)
2. Open the passenger door, and then unclip and remove the dashboard trim panel. Remove (1) Phillips screw exposed. (Figure B)
3. Unclip and remove the entire panel that is above the glove box, and below the radio. (Figure C)
4. Remove (2) Phillips screws from the radio/vent panel, and then unclip and remove. (Figure D)
5. Remove (4) Phillips screws securing the radio, and then unplug and remove.


Continue to Kit Preparation

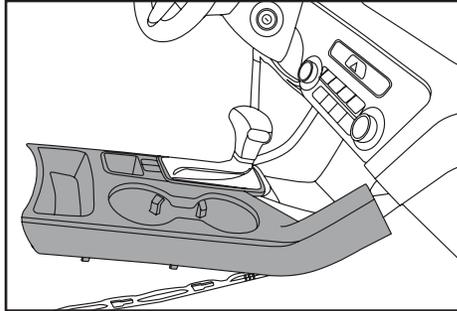


(Figure A)

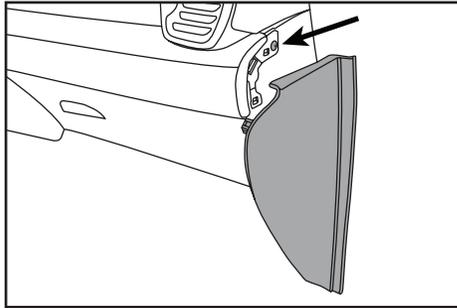

(Figure B)

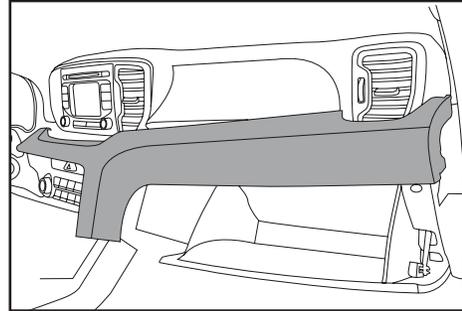

(Figure C)

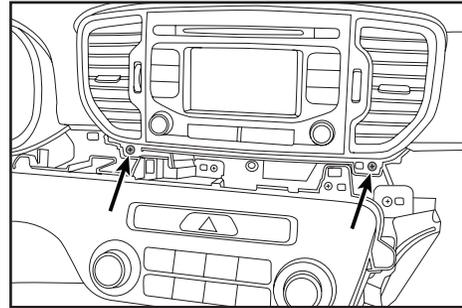


(Figure D)

Kit Preparation

From the factory radio/vent panel:

1. Remove (4) screws securing the inner radio trim panel to the panel, and then unclip and remove. (Figure A)
2. Attach the 99-7378B radio trim panel to the factory radio/vent panel, and then secure using the factory hardware. (Figure A)

Continue to Kit Assembly

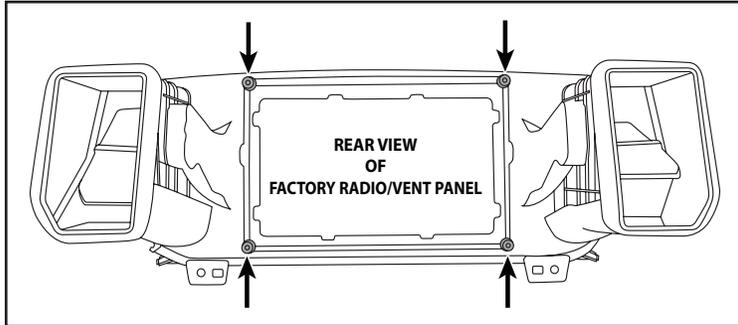


(Figure A)


Kit Assembly

ISO DIN radio provision with pocket

1. Attach the *pocket* to the *radio brackets* using the (2) supplied #8 x 3/8" Phillips screws. (Figure A)
2. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
3. Attach the *radio brackets* to the radio using the screws supplied with the radio. (Figure B)
4. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
5. Secure the completed assembly into the dash using the factory hardware, and then reassemble the dash in reverse order of disassembly.

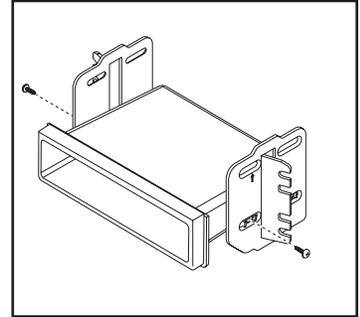

(Figure A)

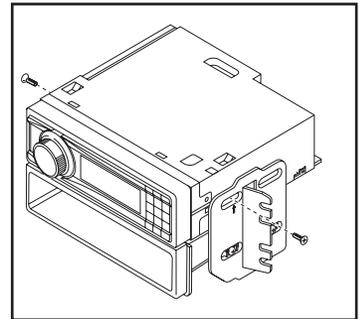

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-7378B



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians

REV. 2/10/2017 INST99-7378B