


ASSEMBLY

RESPAWN 110


PACKAGE CONTENTS

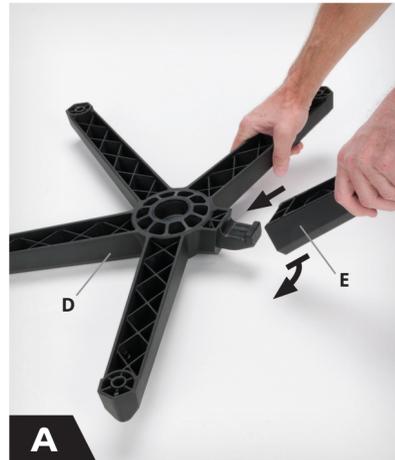

1. Lay out and identify components on a nearby table or flat surface.
2. Turn 4-star base (D) upside down.
3. Install base arm (E) by angling arm over hooked edge and pushing down into 4-star base (D) until seated.




4. Install casters (F) by pushing casters into 5-star base (D) until seated.
5. Turn 5-star base over once all casters are installed.

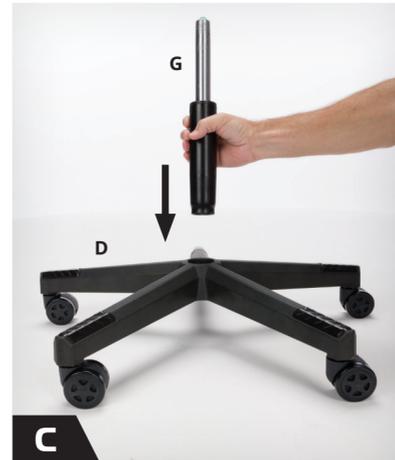

6. Place gas cylinder (G) into center of 5-star base (D). Place 5-star base assembly on the floor.



7. Locate chair back (A) and lay face down. Untuck and pull back fabric at headrest.
8. Place headrest insert (C) into headrest area so attachment bracket aligns with screw holes. The headrest insert and chair back should be flush with each other.
9. Use Allen wrench (R) to attach 2 screws (M).
10. Zip headrest fabric back up.

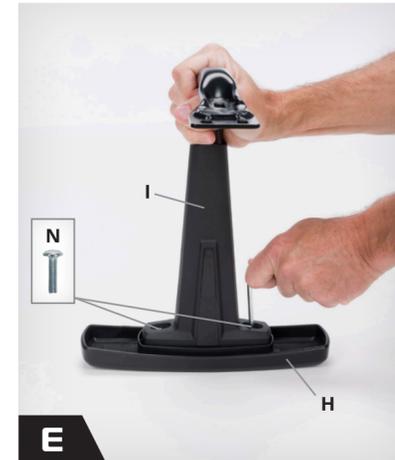

11. Locate armrest bracket (I) and center it over the screw holes on the underside of arm pad (H). Fits universally.
12. Use Allen wrench (R) to attach 2 screws (N).
13. REPEAT steps 11-12 for remaining arm.



14. Place seat bottom (B), upside down, on a flat surface.
15. Attach completed arm bracket to the seat bottom using 3 screws (O) with Allen wrench (R). REPEAT other side.



16. Locate seat mechanism (J) and center it over the screw holes in the seat bottom. Tilt tensioner will be at the top toward the front of the seat.
17. Locate 4 screws (O) for each corner of the seat mechanism (J). Start at the top and work around, tightening the screws thoroughly in all 4 locations with the Allen wrench (R).



18. Take completed seat assembly and place atop the gas cylinder (G) unit from Step C.



19. Locate chair back (A) and place between the seat bottom brackets.
20. Align screw holes on seat bracket with side holes on chair back (A).
21. Use 2 screws (O) to securely attach bracket to chair back using Allen wrench (R). REPEAT other side.



- PRO TIP:** Bracket covers are side specific so identify carefully.
22. Locate lower bracket covers (L1) & (L2) and place over bracket aligning to screw hole. Attach 1 screw (P) with Allen wrench (R). REPEAT other side.
 23. Locate upper bracket covers (K1) & (K2) and place over bracket aligning to screw hole. Attach 1 screw (P) with Allen wrench (R). REPEAT other side.



24. Locate 4 screw cover caps (Q) and place over screw holes on bracket covers located on each side of chair.



25. Last step is to sit in your new chair to fully secure the gas cylinder to the seat assembly and make sure chair is fully functional.

YOU'RE FINISHED, ENJOY!

USAGE INFO

RESPAWN 110

SAFETY INFORMATION



GENERAL CARE AND MAINTENANCE

- Extended exposure to direct sunlight can cause the chair material to crack and color to fade.
- Keep your pets off of the chair. Their claws and teeth may damage the chair material.
- Sweat may become an issue as the moisture and oils can damage the chair material. Follow the cleaning guide and wipe the chair clean every so often.
- Follow care and proper use. Misuse can lead to damage, not just to the chair but to you as well.

ATTENTION

Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed.

WARNING

To ensure proper assembly, follow all steps and use all parts. Failure to follow this warning can result in serious injury to yourself or others.

CONTROLS



CLEANING



Use a lint-free microfiber cloth with a mild soap-and-water solution to clean the chair surfaces.



Gently wipe all areas to remove any surface dust.

VISIT OUR WEBSITE TODAY



SCAN ME!
USING YOUR CAMERA
RESPAWNPRODUCTS.COM

SCAN NOW FOR INSTANT WEBSITE ACCESS:



ASSEMBLY VIDEO



WARRANTY INFORMATION



FUTURE DEALS & GIVEAWAYS!