

thank you



BackPack
adjustable shelf for Mac
owner's guide



twelve south

What's in the box:

- BackPack Shelf
- Metal Clips + Fastening Screws (L & R)
- Lock Washers (2)
- Plastic Fit Inserts (4 sizes - L & R)
- Non-slip Shelf Pad
- Vertical Support Pegs + Fastening Screws (4)

Hang your Backpack on your Mac:

1. Using the included fit guide, determine which Plastic Fit Inserts best fit on the desktop stand of your iMac or Apple Display. For best performance, Plastic Fit Inserts should slip onto the stand leaving no wiggle room or play.

Tip: Insert compatibility numbers are located inside the u-shaped insert.

2. Once you determine the proper Plastic Fit Inserts for your machine, snap both the left (L) & right (R) Inserts into the corresponding left (L) & right (R) Metal Clips. (Figure A)

Tip: Pay close attention, left & right matters.

3. Remove the Fastening Screws and Lock Washers from the Metal Clips and using the slots on the rear support rail, attach the left (L) Metal Clip to the left outside of the Shelf using the Screw and Lock Washer. Do the same with the right (R) Metal Clip. If installed properly, the slots on the Metal Clips should be facing the center of the Shelf (Figure B) and the Fastening Screws and Lock Washers should be inside the Shelf.

Tip: Do not fully tighten Fastening Screws yet.

4. Decide the vertical position of the Backpack on your Mac's desktop stand. Next, slide the Metal Clips together to fit them onto the Stand and tighten the Fastening Screws.

Important. The max weight to place on Backpack is 3.5 lbs (1.6 kg). Please check the device manufacturer's website specs if you're not sure of the weight of your peripheral or device.

Tip: Remember, the rear support rail should point down when installing Backpack on the back of your Mac and face up when mounting on the front of your Mac.

5. To attach the Vertical Support Pegs, remove the Fastening Screws from the Pegs. Position Pegs in the desired locations on Backpack Shelf and secure with Fastening Screws. We recommend placing vertical hard drives, MacBook, Time Capsule, etc. as close to your Mac as possible.

Tip: The Non-slip Shelf Pad works nicely as a guide for lining up the Vertical Support Pegs and more importantly, it prevents metal on metal contact when resting hard drives or a MacBook on Backpack.

Bonus tip: Use multiple Backpacks for the ultimate storage setup. Set one on the back to hold your Hard Drive or MacBook, and one on the front to hold a SuperDrive, iPhone or keys.

6. Thread your USB, power and other cables through the side rails of the Backpack so you can grab your drive, MacBook or other device and go without your cable dropping to the floor.

Compatibility Guide:

21.5-inch iMac (late 2012 - current)

- Use #6 inserts for high install
- Use #1 inserts for low install

27-inch iMac (late 2012 - current)

- Use #1 inserts for high install
- Use #4 inserts for low install

21.5-inch iMac (late 2009 - late 2011)


- Use #3 inserts

27-inch iMac (late 2009 - mid 2011)

- Use #4 inserts

27-inch Thunderbolt Display/LED Cinema Display

- Use #4 inserts

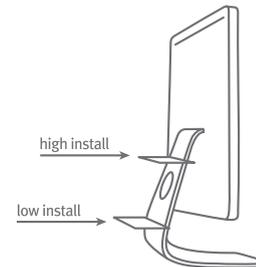

Additional Fit Inserts that offer compatibility for legacy Macs may be available. Please contact support@twelvetosouth.com for more info.

Assembly Guide:

Diagram 1: Snap Plastic Fit Inserts into Metal Clips (Figure A)

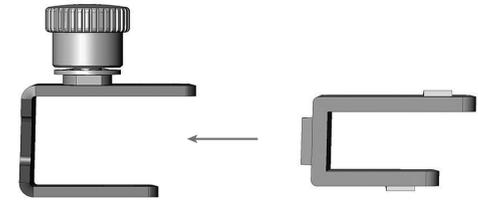


Diagram 2: Adjust width of Metal Clips to set Backpack height. (Figure B)

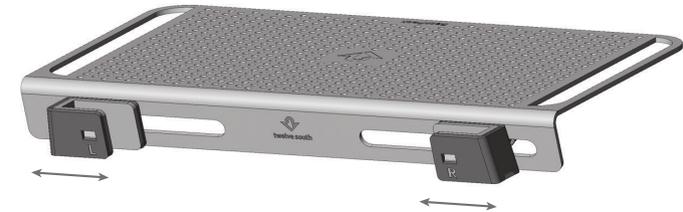


Diagram 3: Attach Vertical Support Pegs as shown to hold vertical peripherals, devices and hard drives securely upright. (Figure C)

