


WI11250

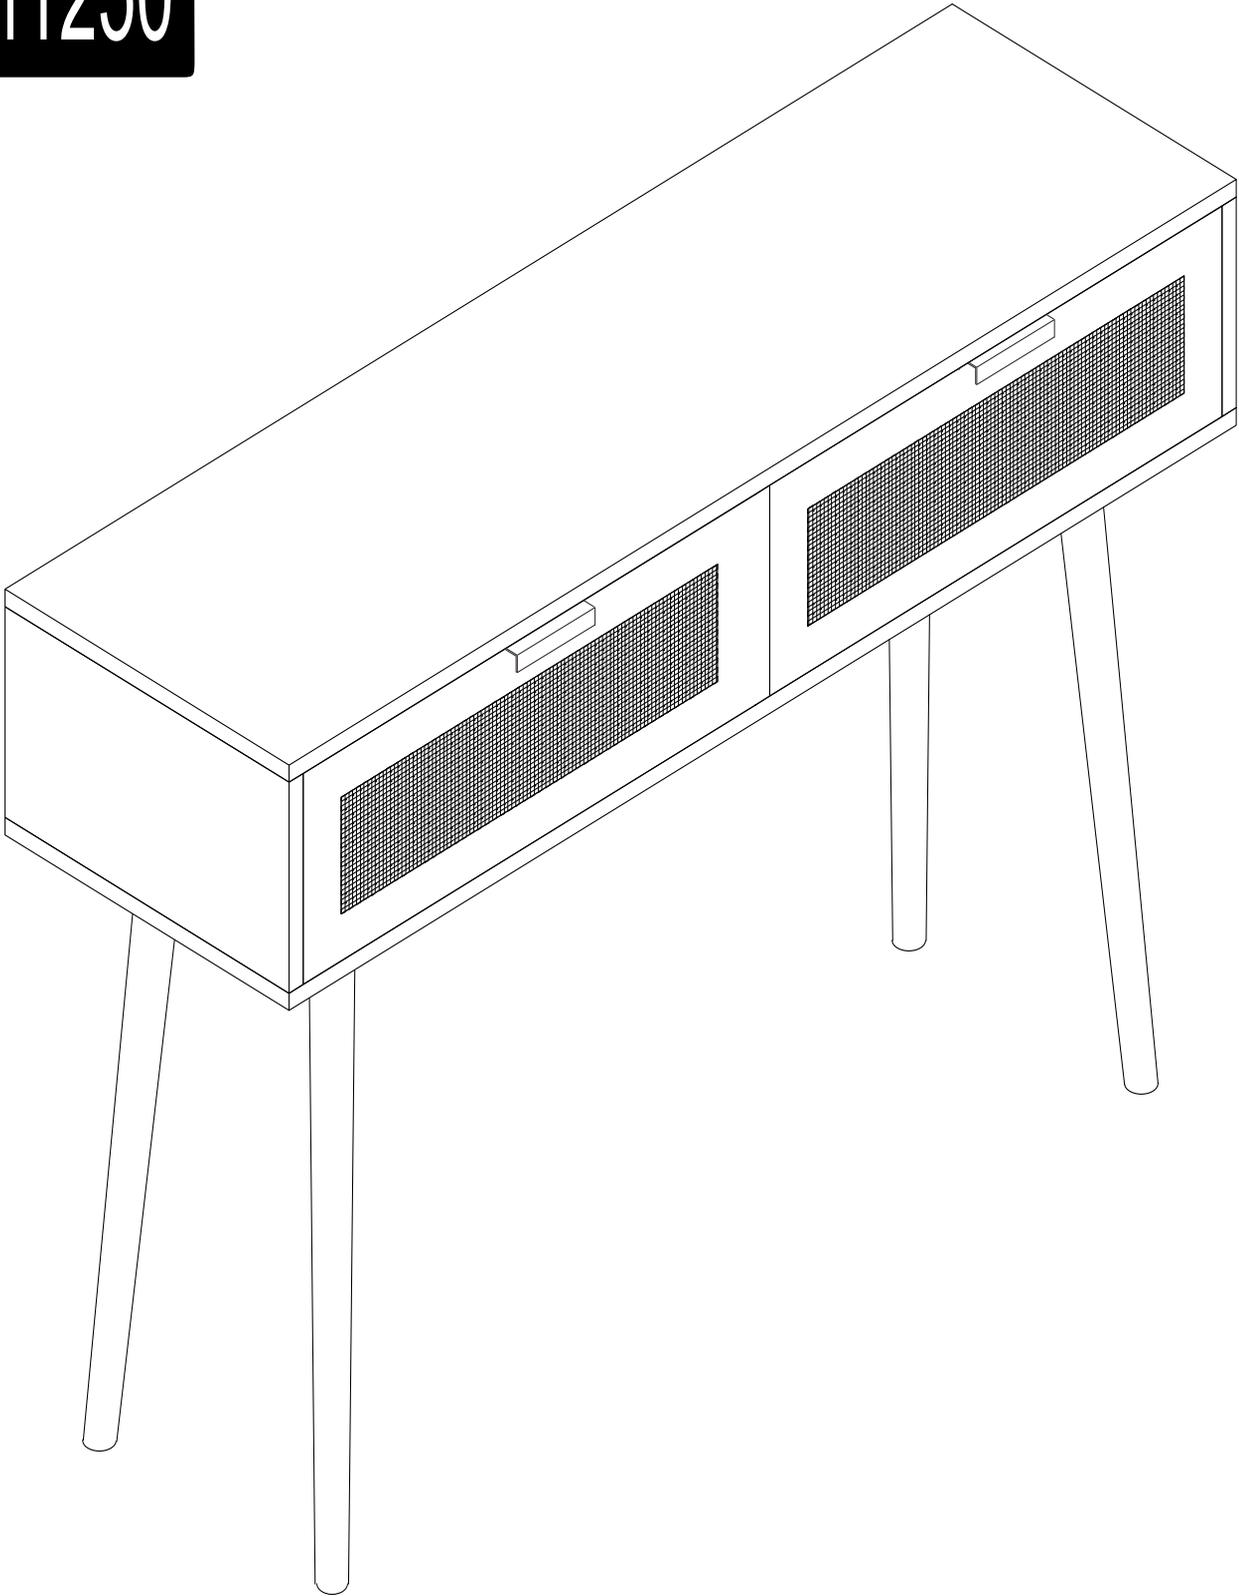

Fittings


Please check that you have all the fittings listed below:

NOTE: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than required.

Bag 1

A×14 	B×14 	C×16 	D×12 	E×8 
F×4 	G×12 	H×6 	I×16 	J×4 
K×2 	L×8 	M×4 	N×10 	O×1 
P×1 	Q×1 	R×4 	S×1 	T×8 
U×4 				

Tools required




Phillips screwdriver
(small & medium)




Flathead screwdriver
(small & medium)

Panels

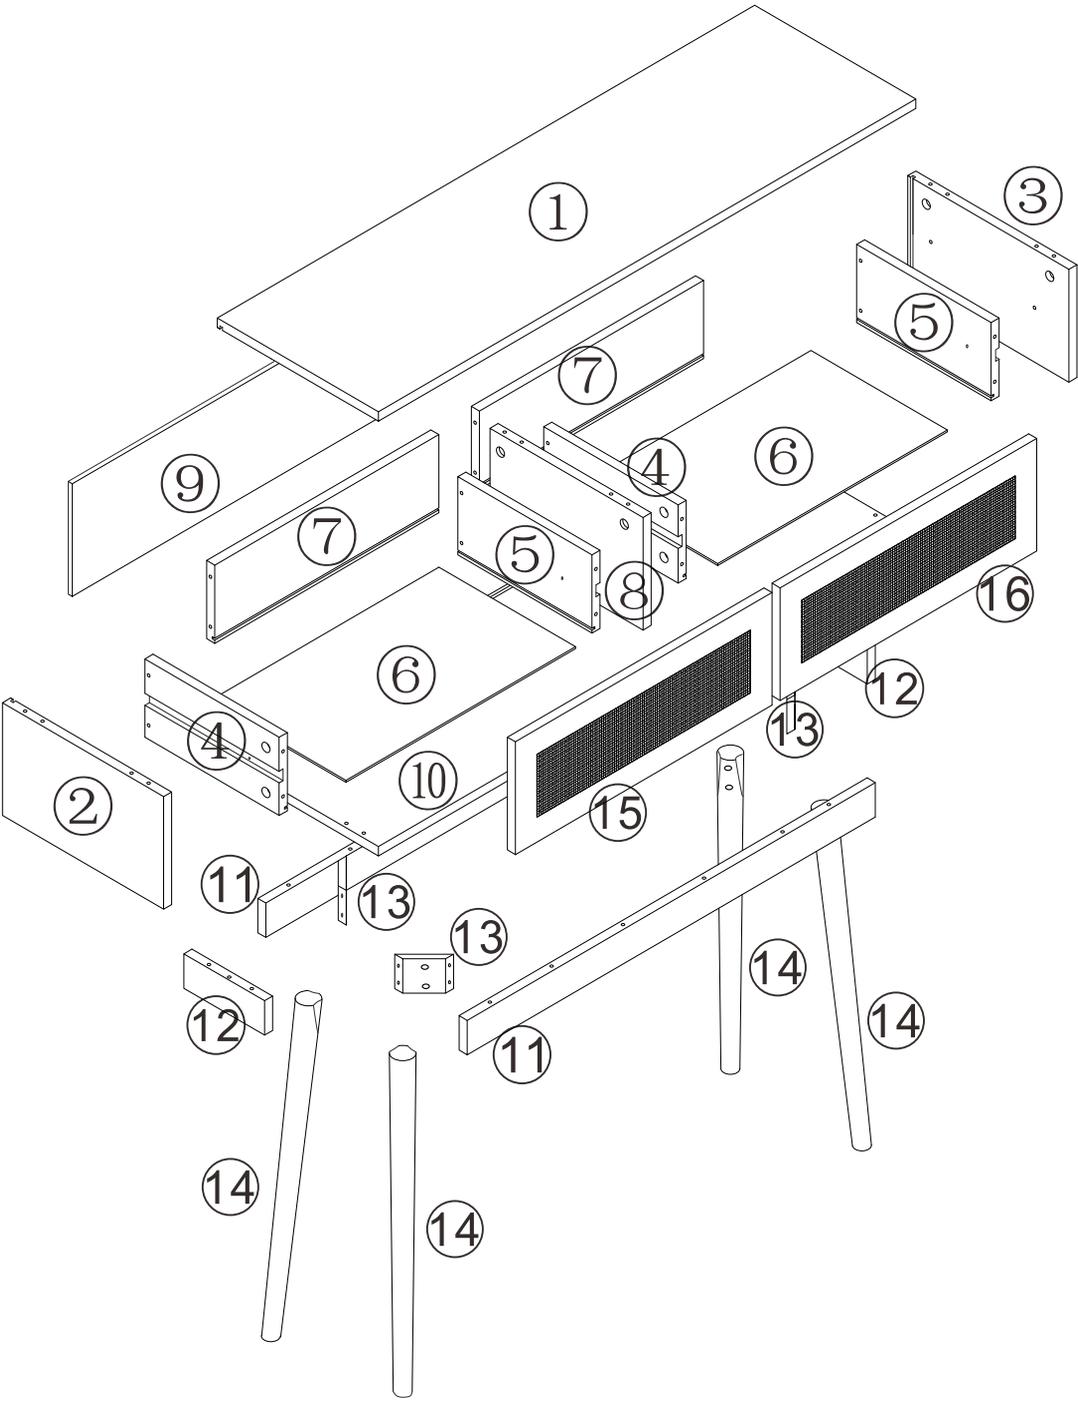


1


A×14	B×14	C×16	D×12	E×8
F×4	G×12	H×6	I×16	J×4
K×2	L×8	M×4	N×12	O×2
P×2	Q×2	R×4	S×2	T×8
U×4				

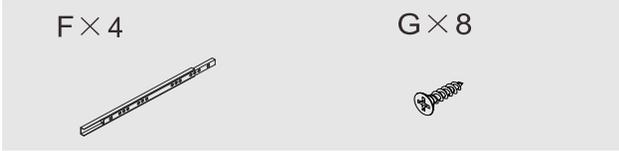


- Fix hardware F to Part 2 with screw G.
- Fix hardware F to Part 3 with screw G.
- Fix hardware F to Part 8 with screw G.

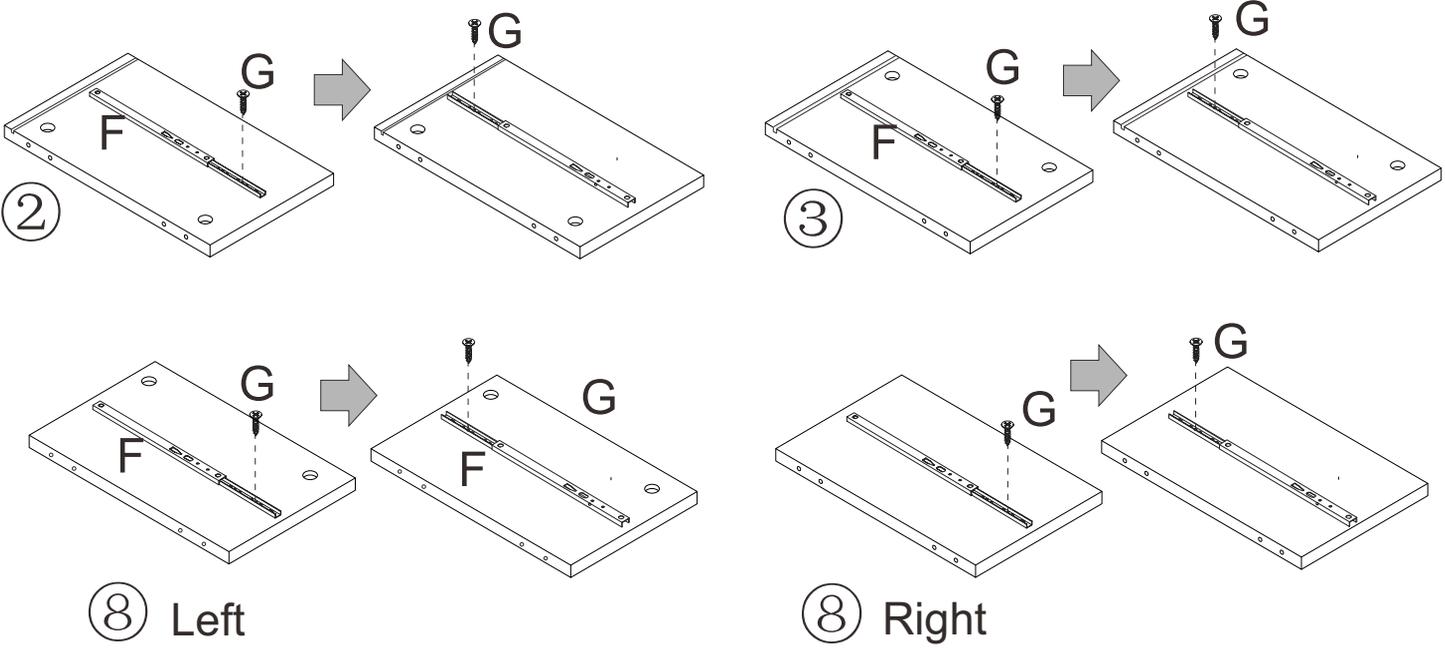


2

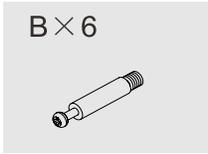


• Screw hardware B to Part 1.

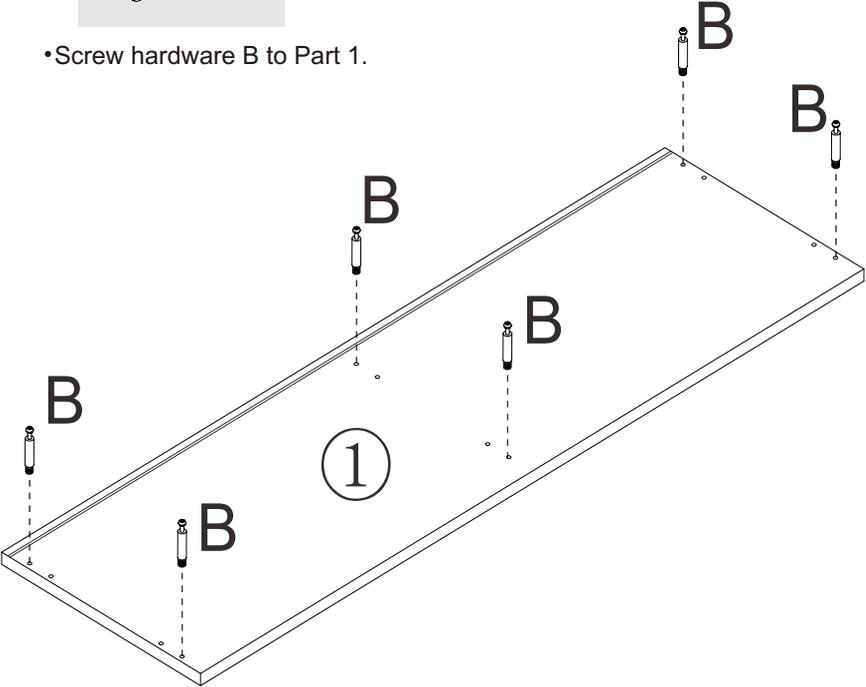

3

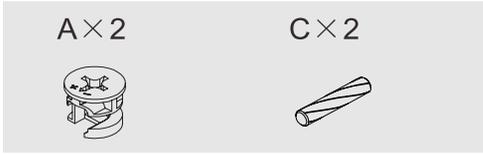


- Connect Part 8 to Part 1 with hardware C, then tight Part 8 to Part 1 with hardware A.

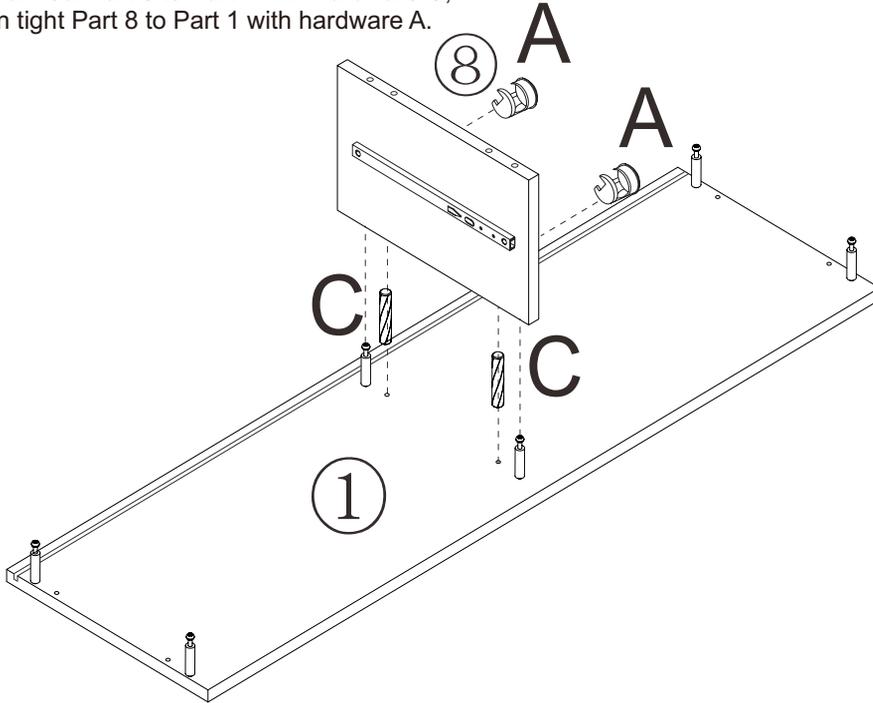

4




- Connect Part 2/3 to Part 1 with hardware C, then tight Part 2/3 to Part 1 with hardware A.

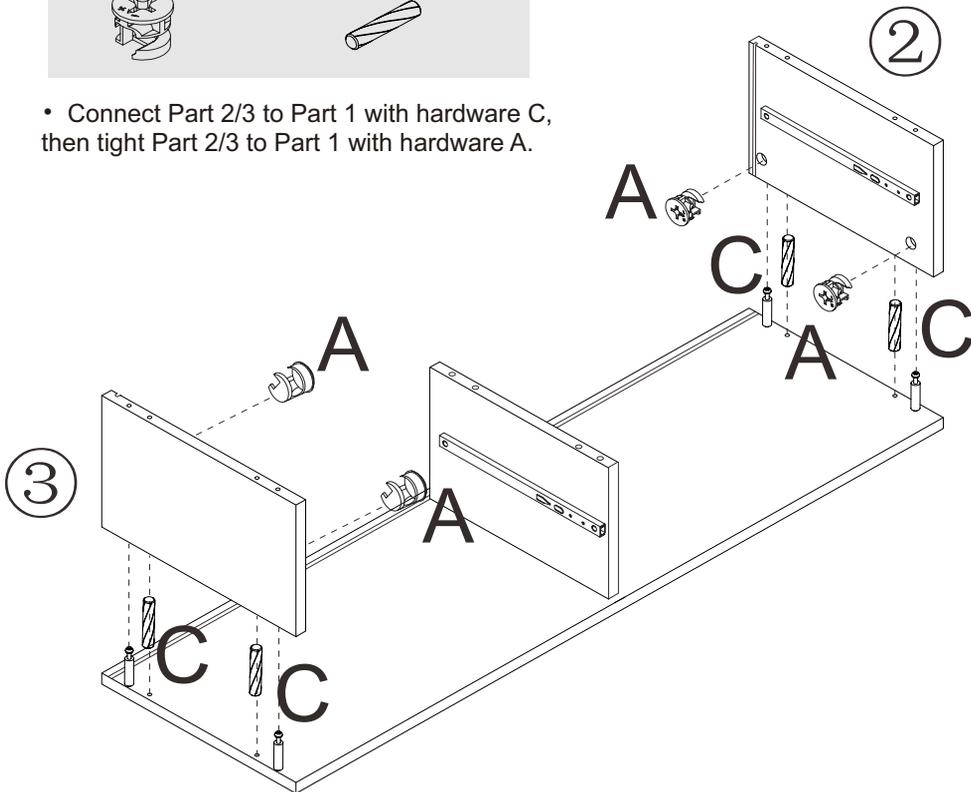

5

- Put Part 9 to the kerf of Part 1/2/3.

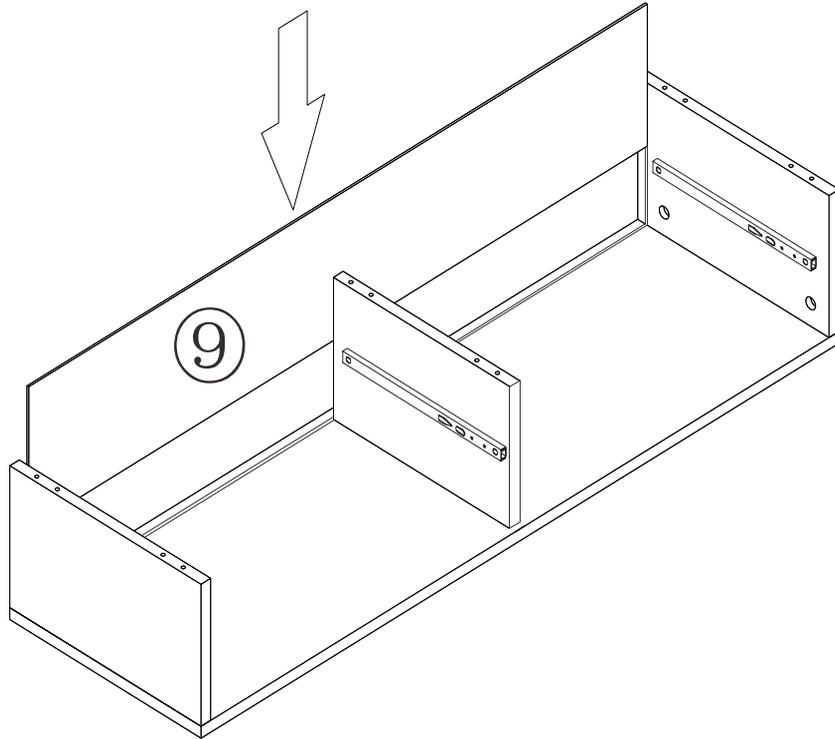

6


C × 6




H × 6




- Connect Part 10 to Part 2/3/8 with hardware C, then tight Part 10 to Part 2/3 /8 with screw H.

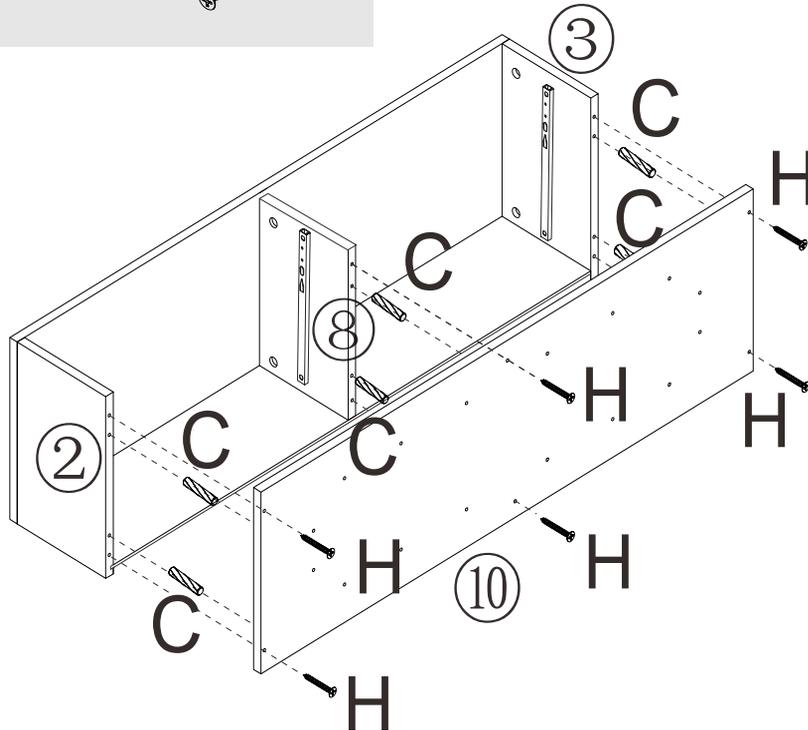


7

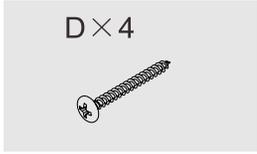


- Connect Part 12 to Part 10 with hardware D.

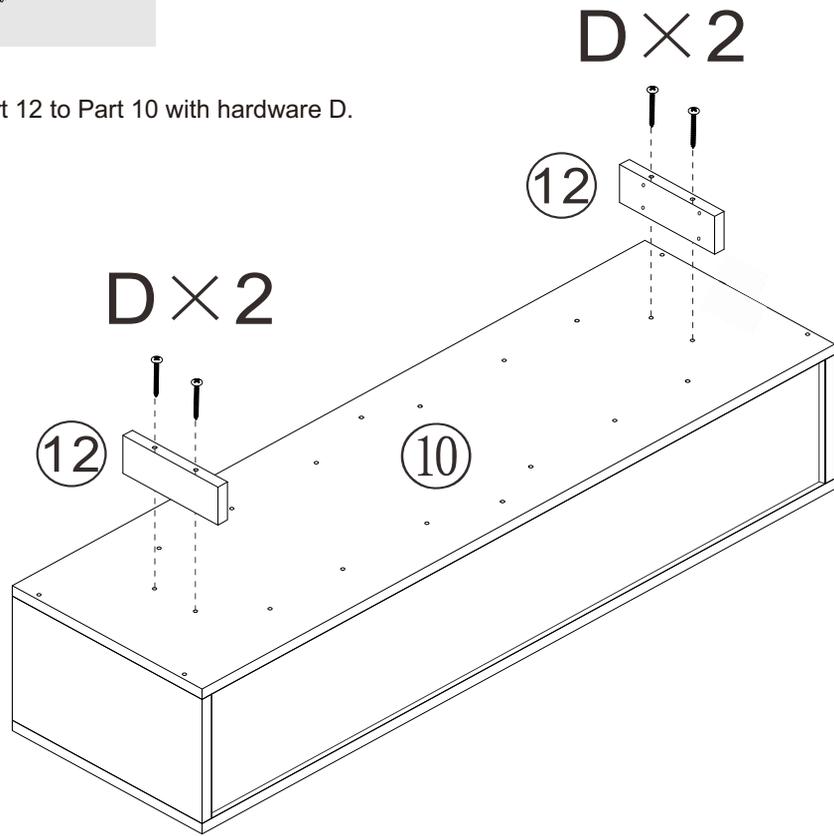


8

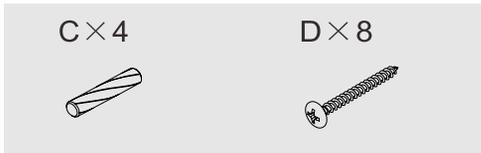


- Connect Part 11 to Part 10 with hardware C, then tight Part 11 to Part 10 with screw D.

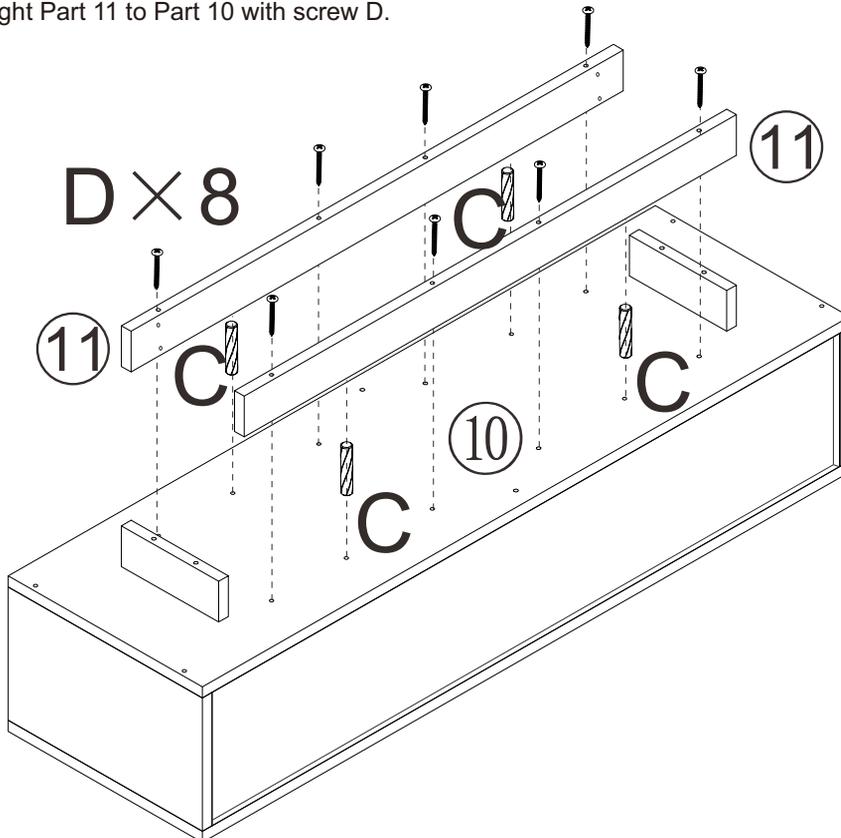

9

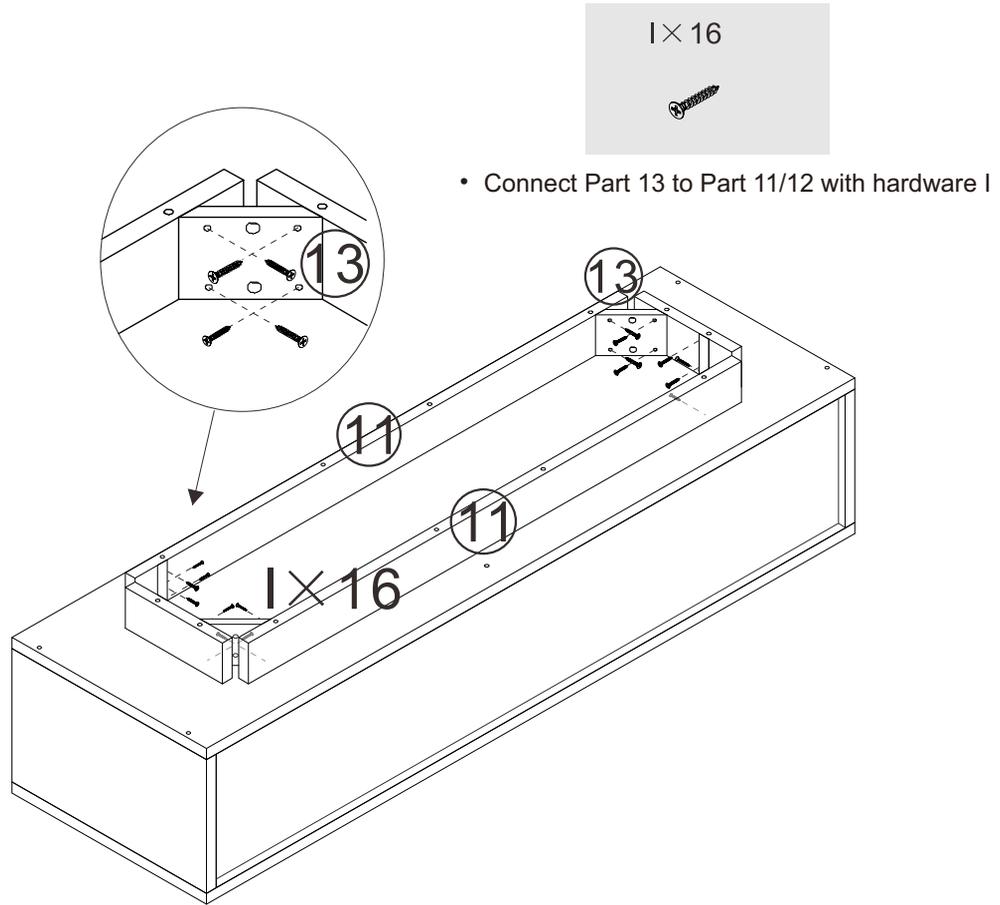


10

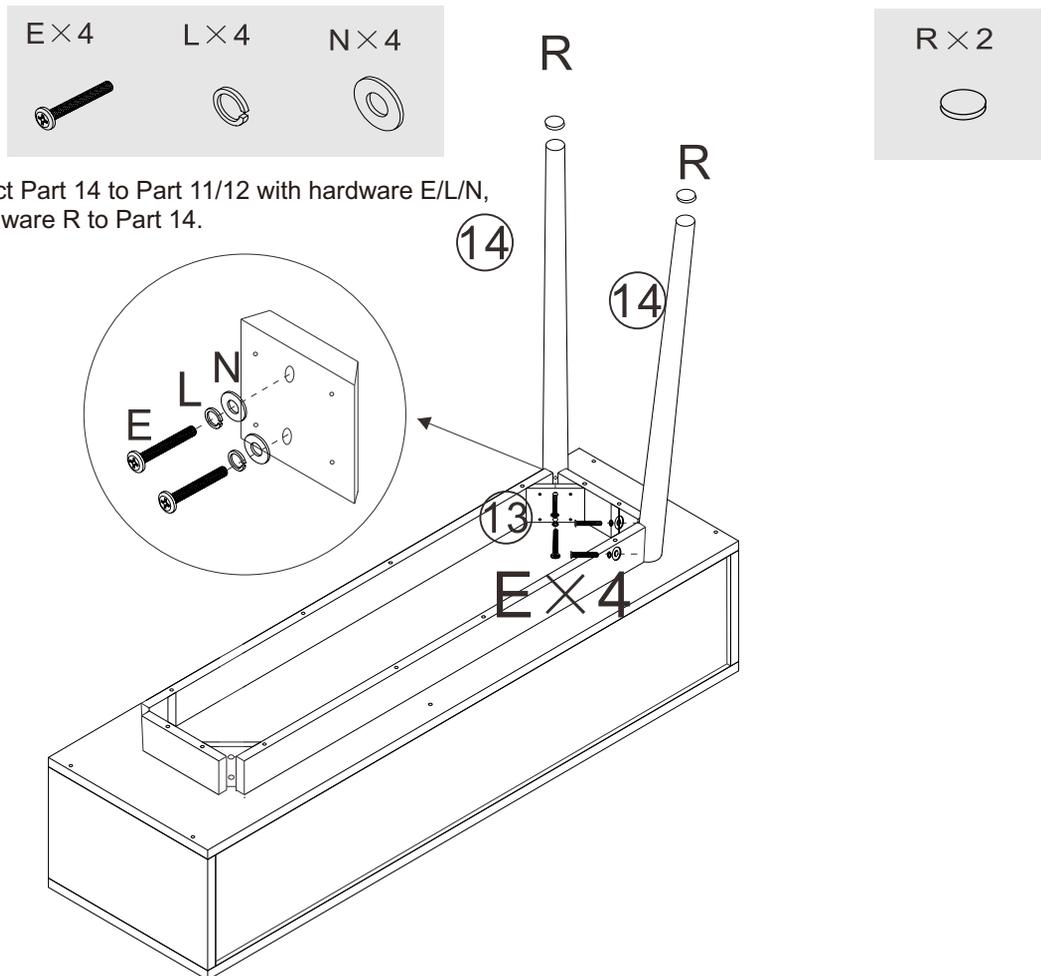

11





• Connect Part 14 to Part 11/12 with hardware E/L/N, stick hardware R to Part 14.

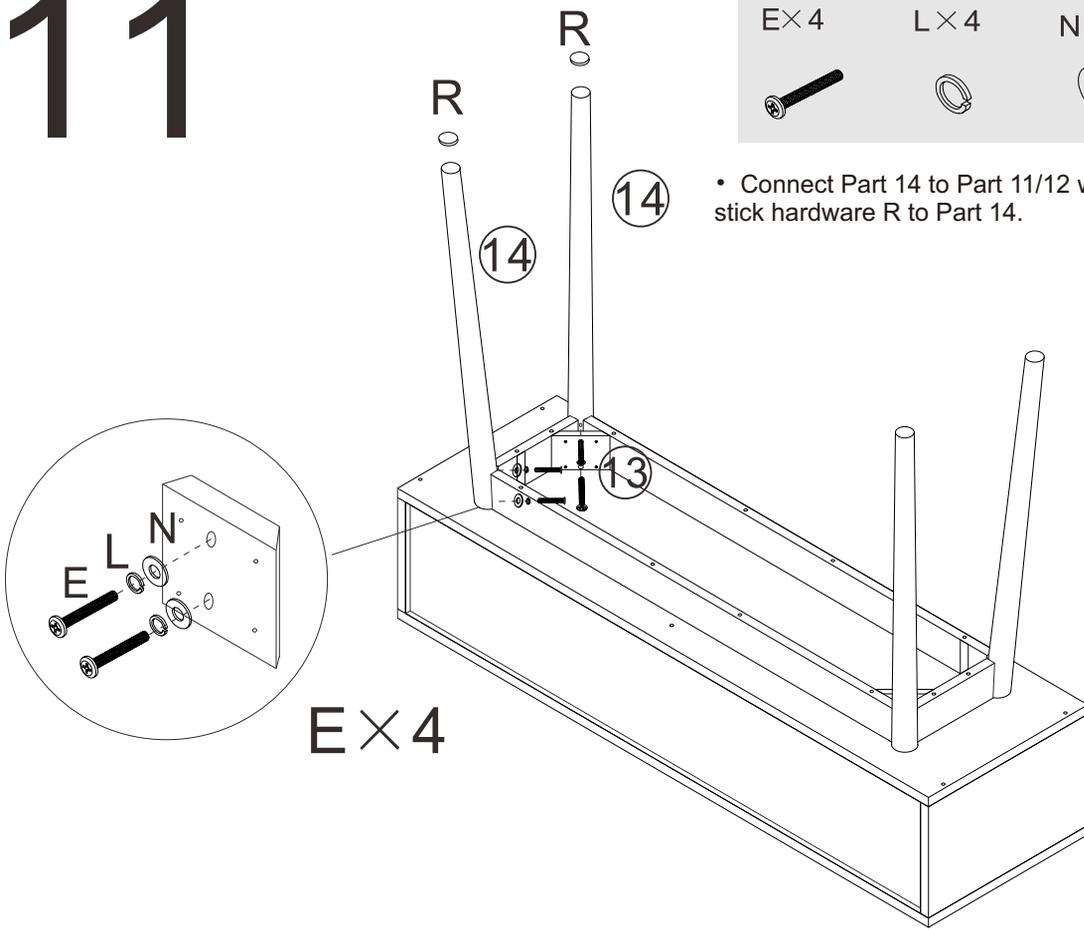


12



- Fix Part 7 to Part 4/5 with hardware T, then put Part 6 to the kerve of Part 4/5/7.
- Fix hardware K to Part 15 with screw G.
- Fix hardware B to Part 15 and tight Part 15 to Part 4/5 with hardware A.

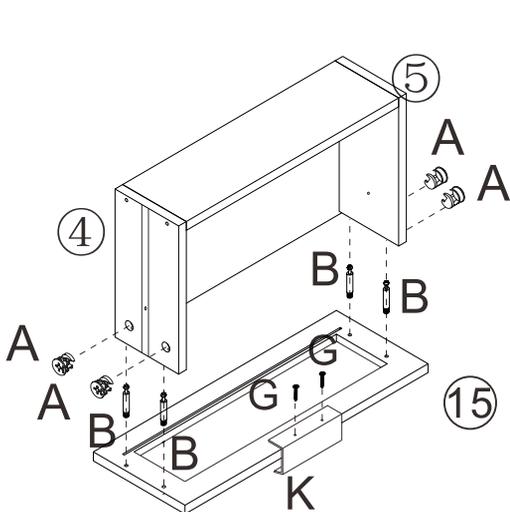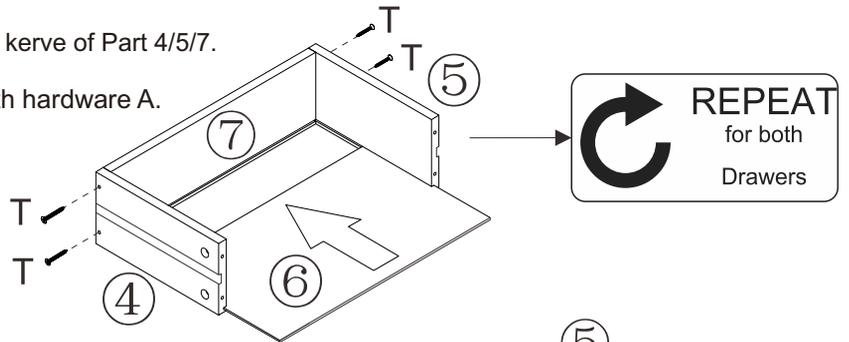

left drawer

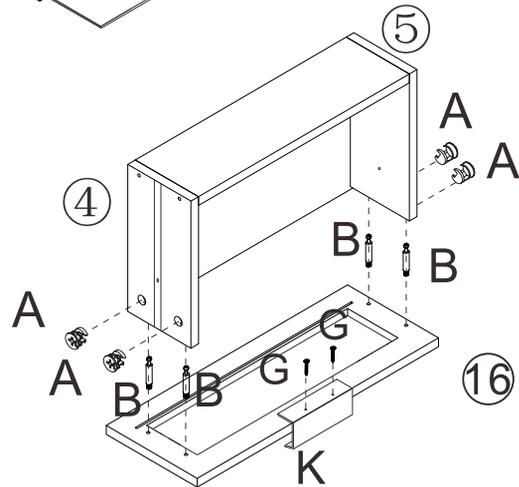


right drawer


13




•Put the drawers into frame, and fix hardware J to Part 4/5.

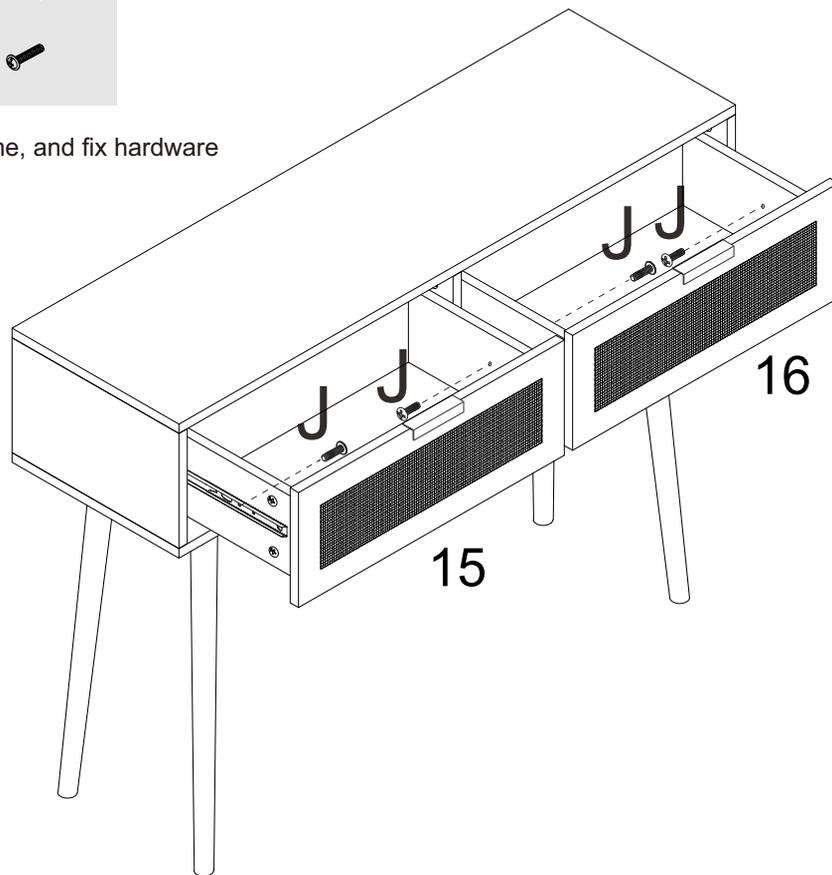


14

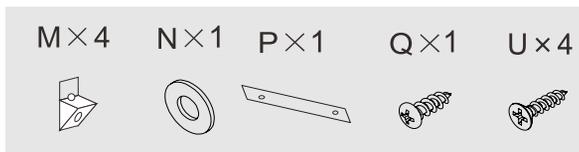

•Fix hardware M to four corner with screw U.
•Fix hardware P and N to Part 1 with screw Q.

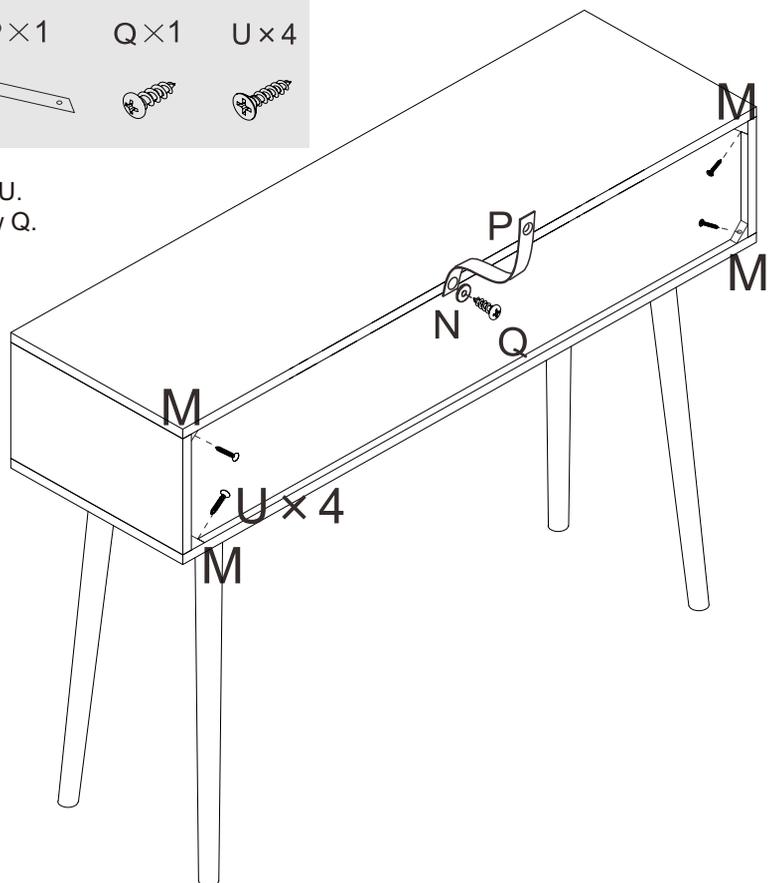

15

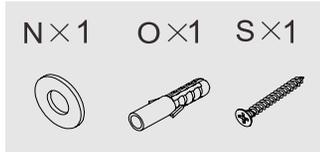

•Fix hardware O to wall, then fix hardware O and P to the wall with screw S.

WARNING!

IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH THE
WALL ATTACHMENT DEVICE PROVIDED

