



Installing your EHS-2010 Cable

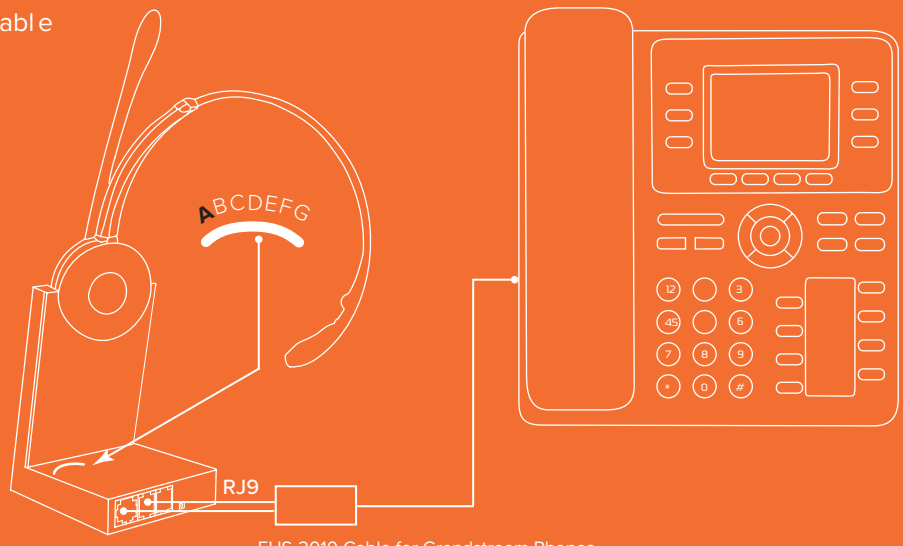


EHS-2010 Cable for Grandstream Phones

Installing your EHS-2013 Cable

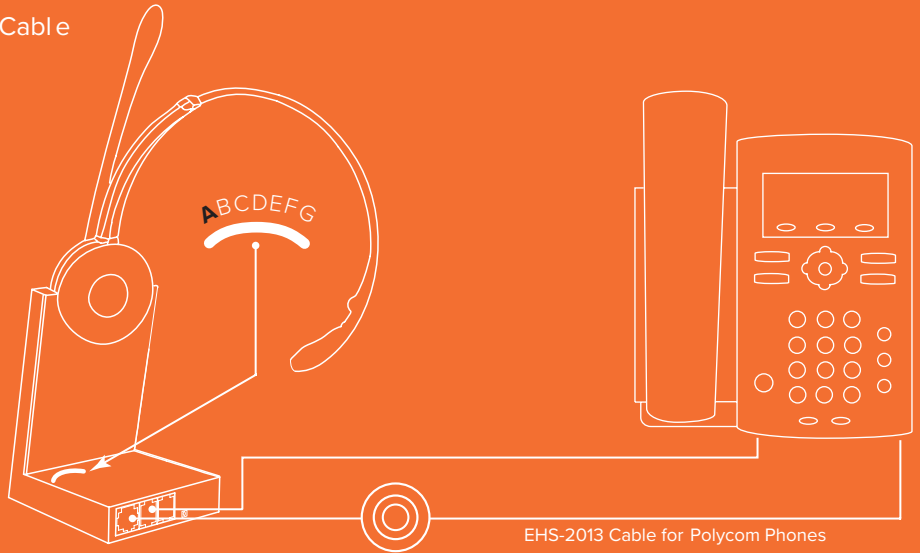


EHS-2013 Cable for Polycom Phones

Installing your EHS-2015 Cable

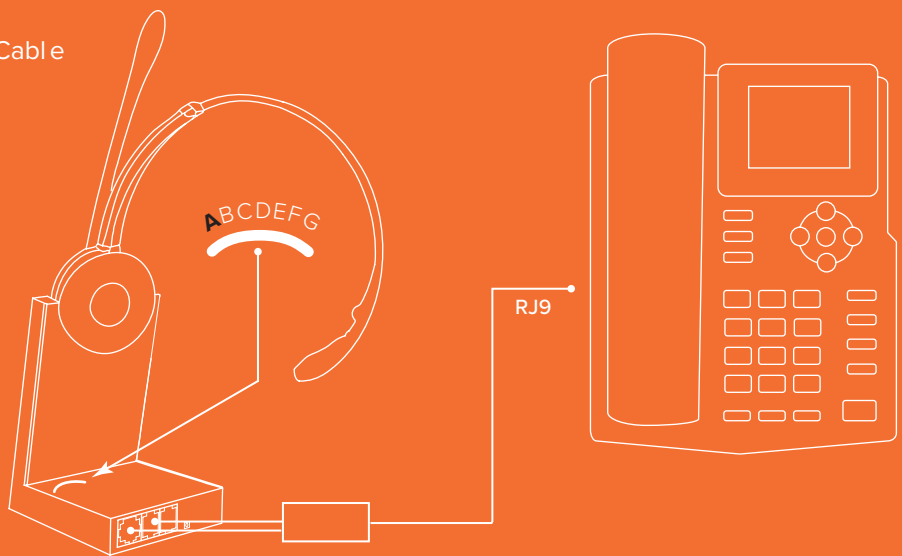

EHS-2015 Cable for Fanvil Phones

Installing your EHS-2018 Cable

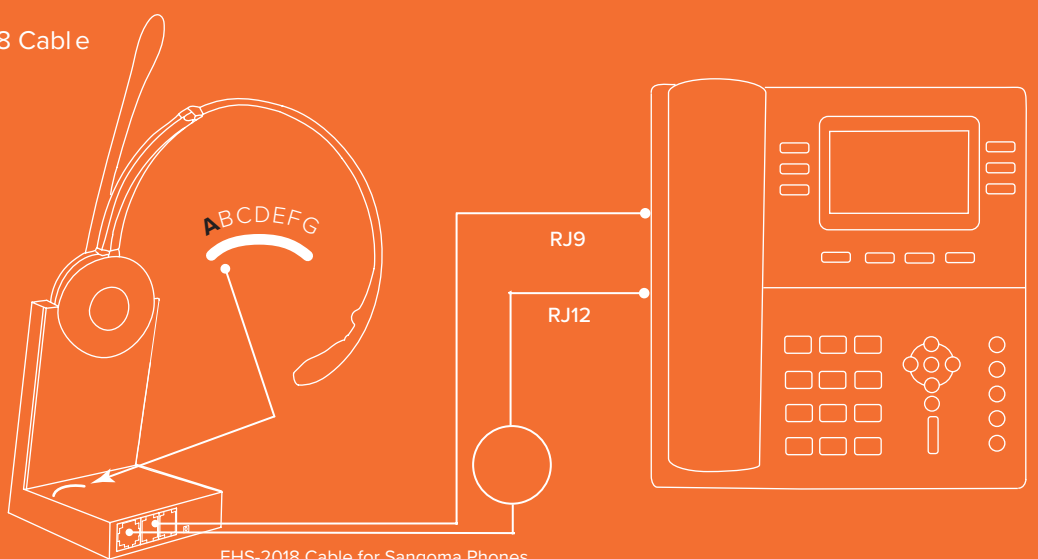

EHS-2018 Cable for Sangoma Phones



EHS Cable Installation Guide - for the Following Cables/Phones

EHS-2002 for Aastra Phones

EHS-2004 for Aastra, Hanlong, Siemens,
and Tiptel Phones

EHS-2005 for Avaya, ShoreTel and
Toshiba Phones

EHS-2006 for Cisco Phones

EHS-2007 for Panasonic Phones

EHS-2009 for Alcatel-Lucent Phones


EHS-2010 for Grandstream Phones

EHS-2013 for Polycom Phones

EHS-2015 for Fanvil Phones


EHS-2018 for Sangoma Phones

Installing your EHS-2004 Cable

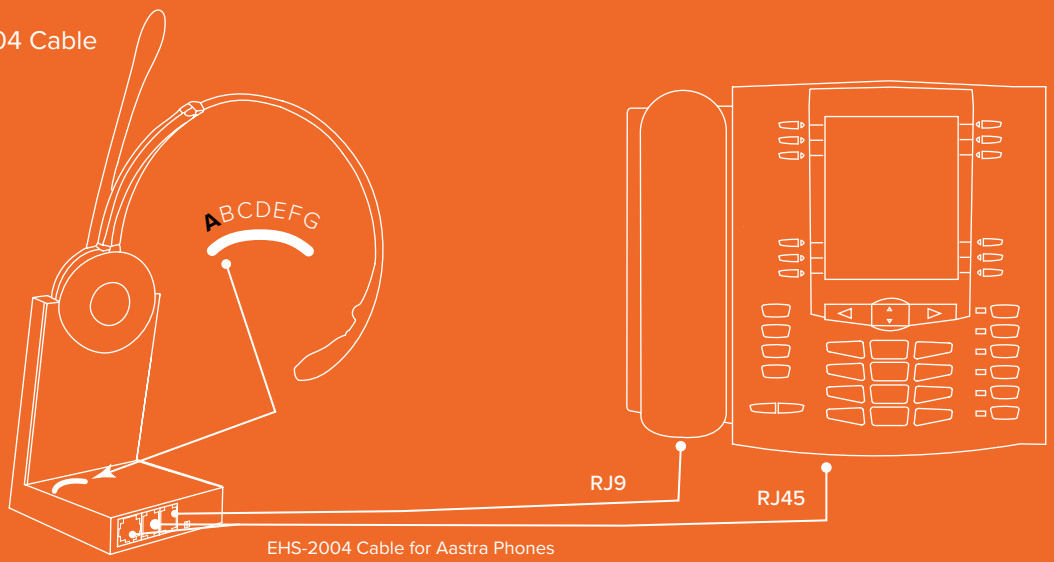


EHS-2004 Cable for Aastra Phones

Installing your EHS-2005 Cable

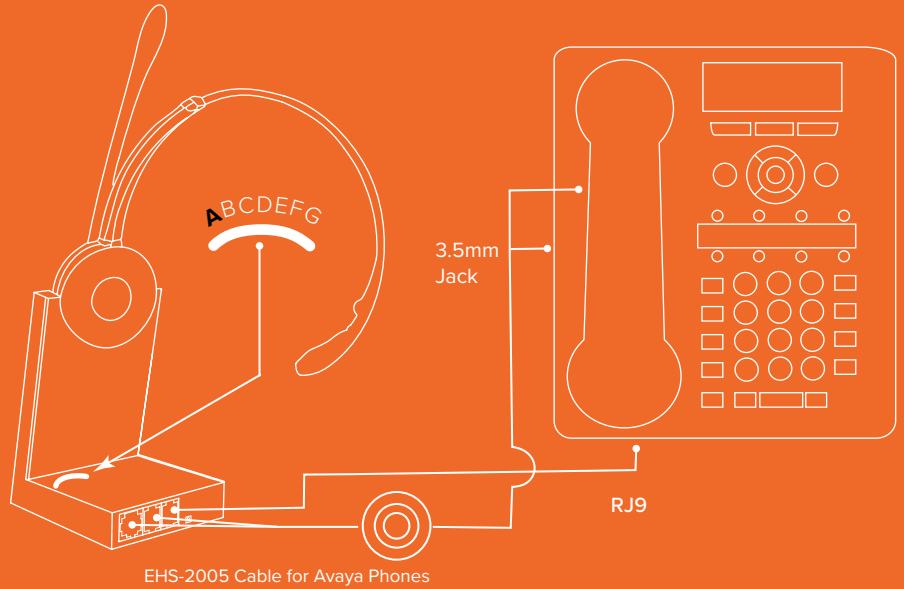


EHS-2005 Cable for Avaya Phones

Installing your EHS-2006 Cable

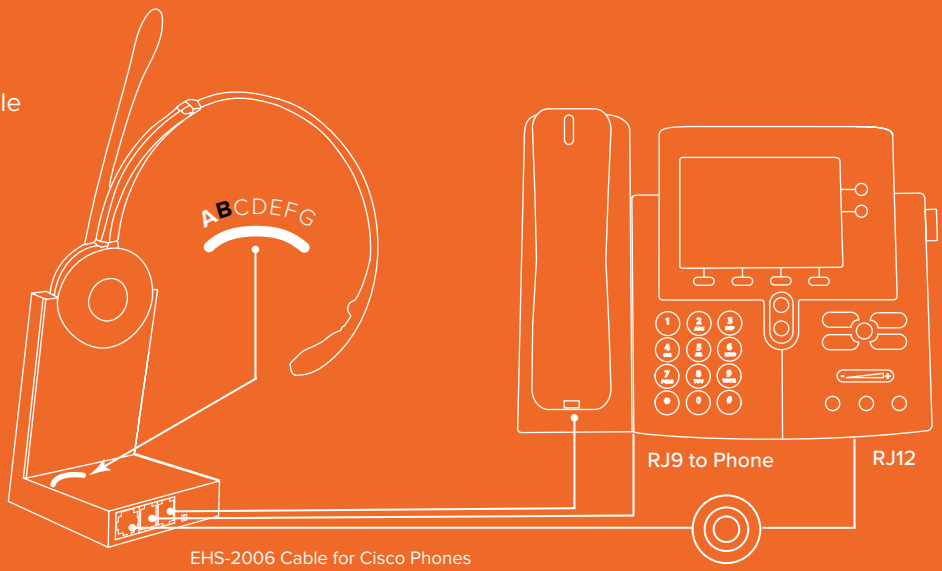

EHS-2006 Cable for Cisco Phones

Installing your EHS-2007 Cable

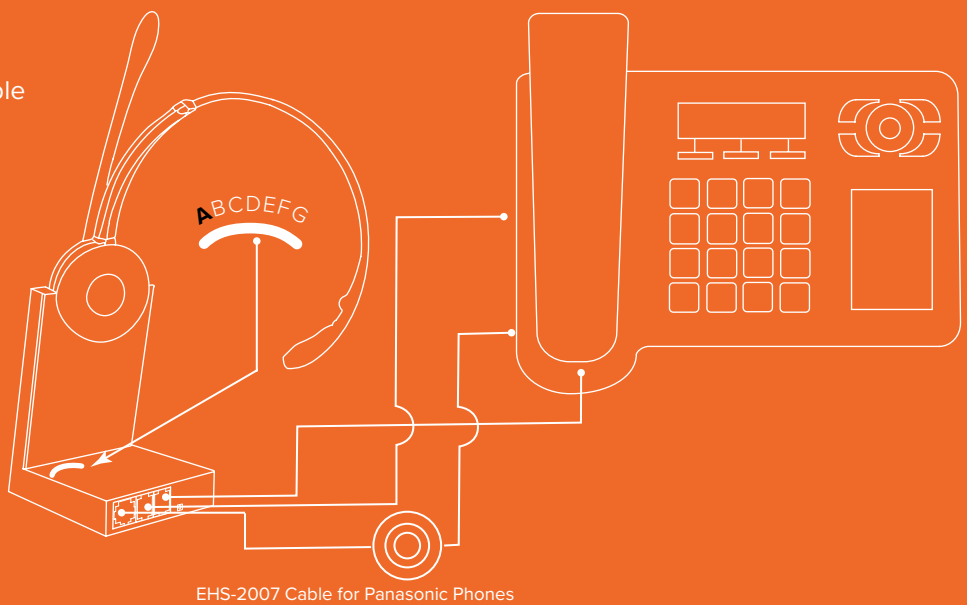

EHS-2007 Cable for Panasonic Phones