


# HAPPINESS HAPPINESS INSTALLATION




- If you have any questions with the product, please contact us by:
- **Email: [customerservice@zoy-living.com](mailto:customerservice@zoy-living.com)**  
(we will reply to you within 24 hours)


WB001GT2017

Cabinet

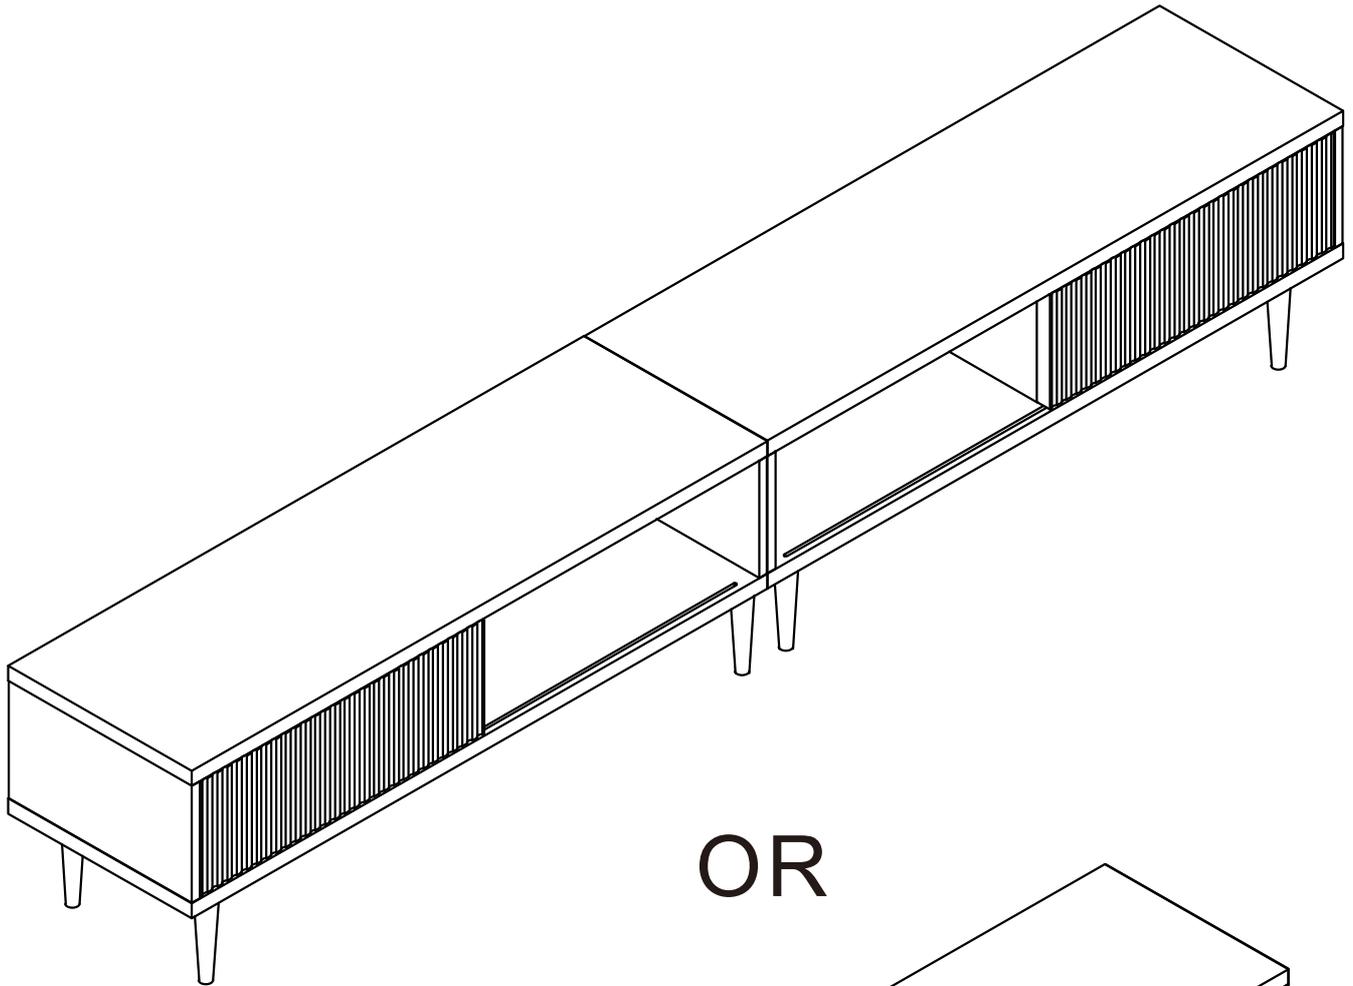


OR

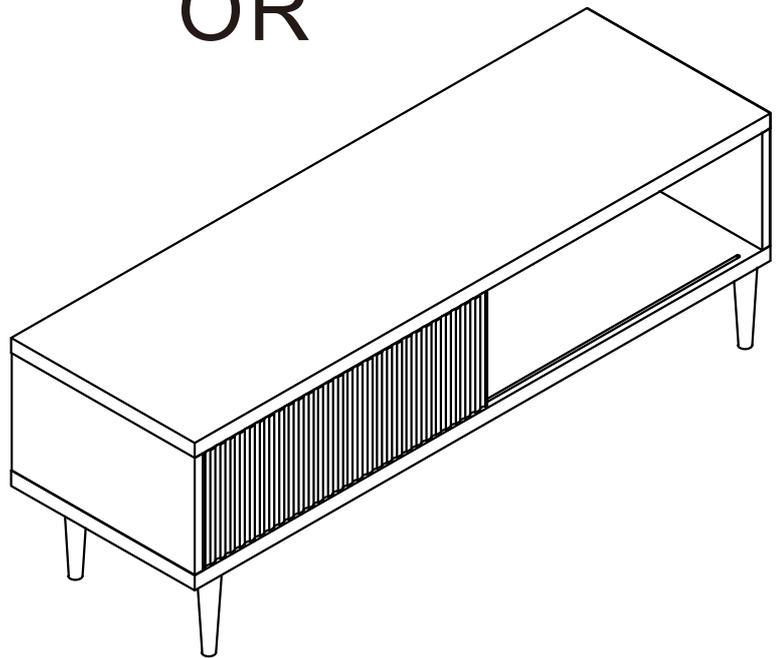

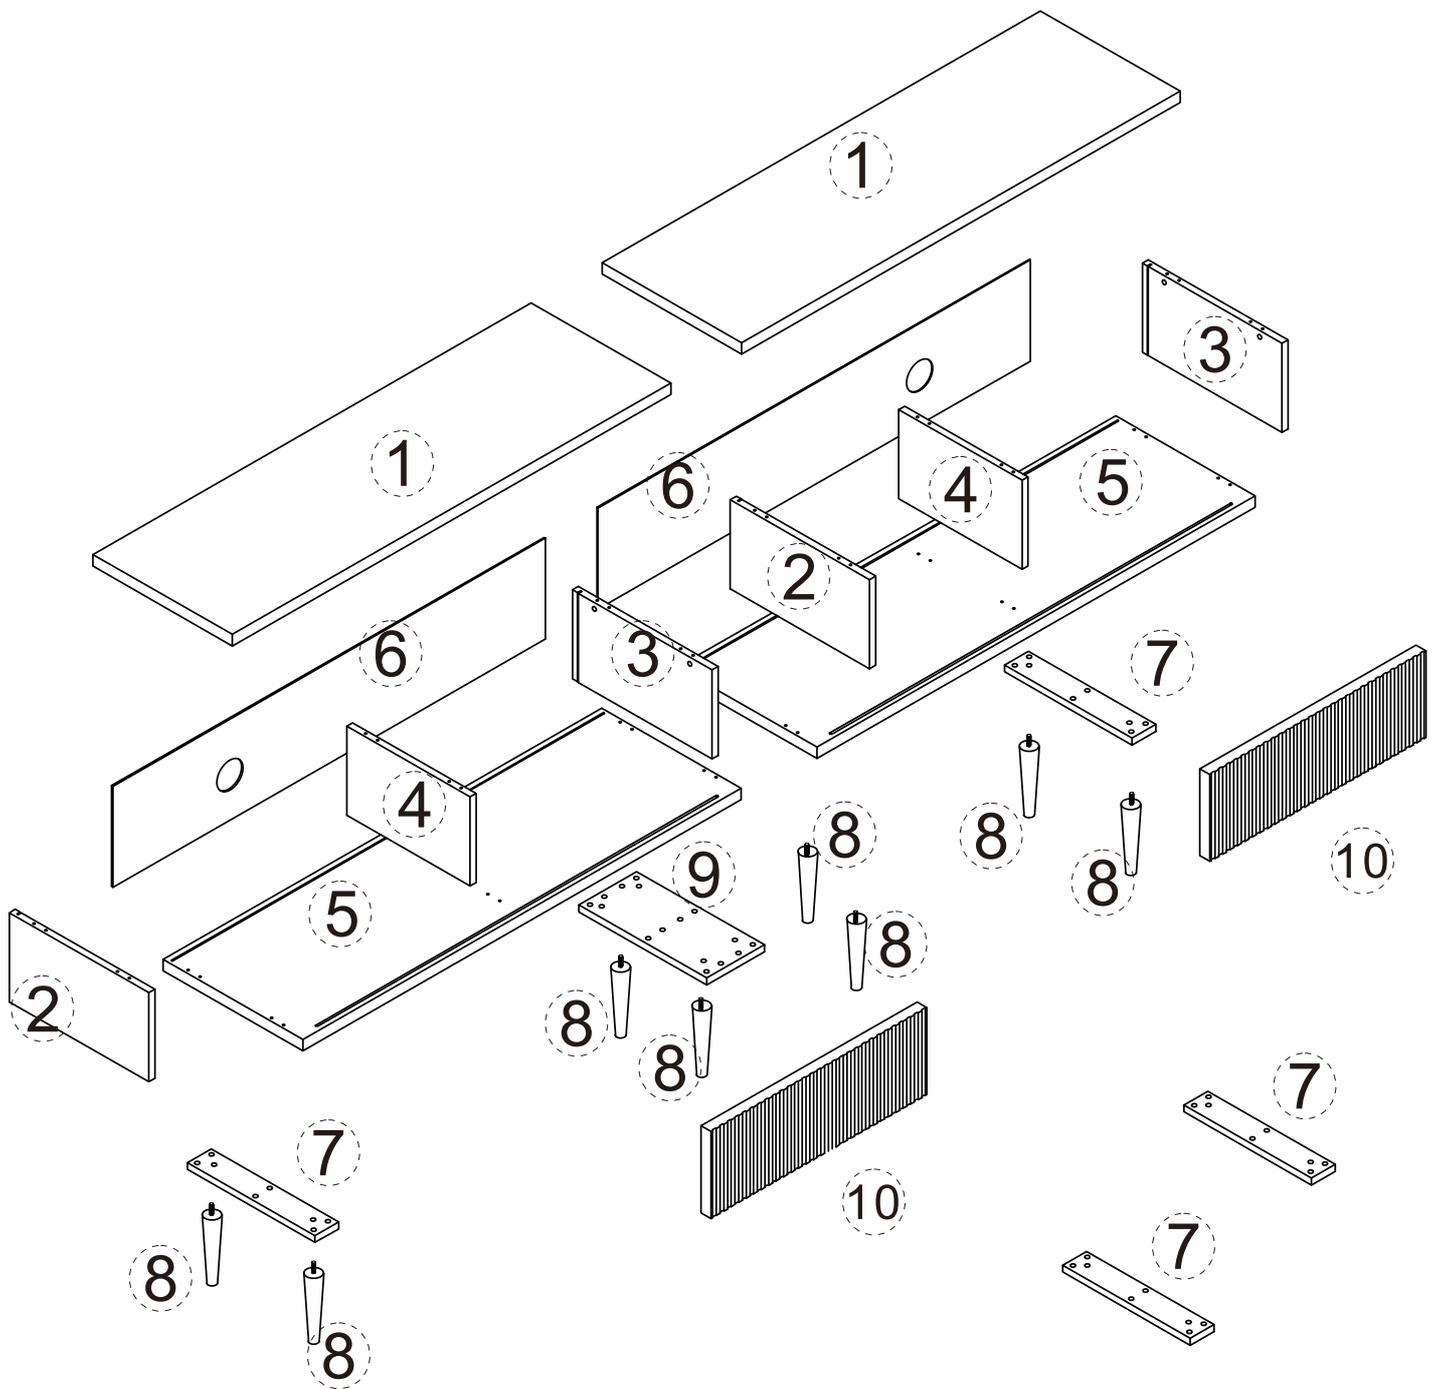

Ax12PCS



Bx12PCS




Cx24PCS



M4\*35  
Dx12PCS



M4\*25  
Ex24PCS



Fx8PCS



M3.5\*14  
Gx32PCS



Hx4PCS





Ix4PCS

# SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

## CAM-LOCK




WHEN FITTING CAMLOCK  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING QUICKFIT  
TURN CLOCKWISE UNTIL SECURE

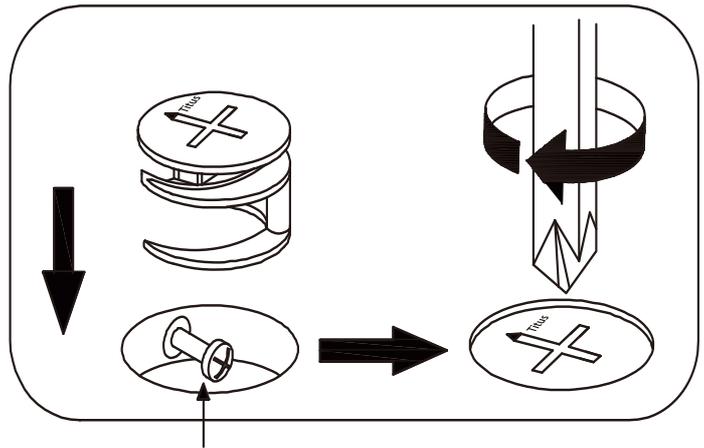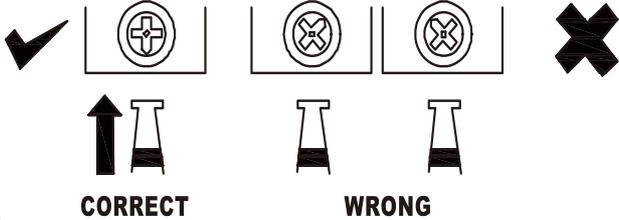


Quickfit head needs to be in centre

## QUICKFIT

Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

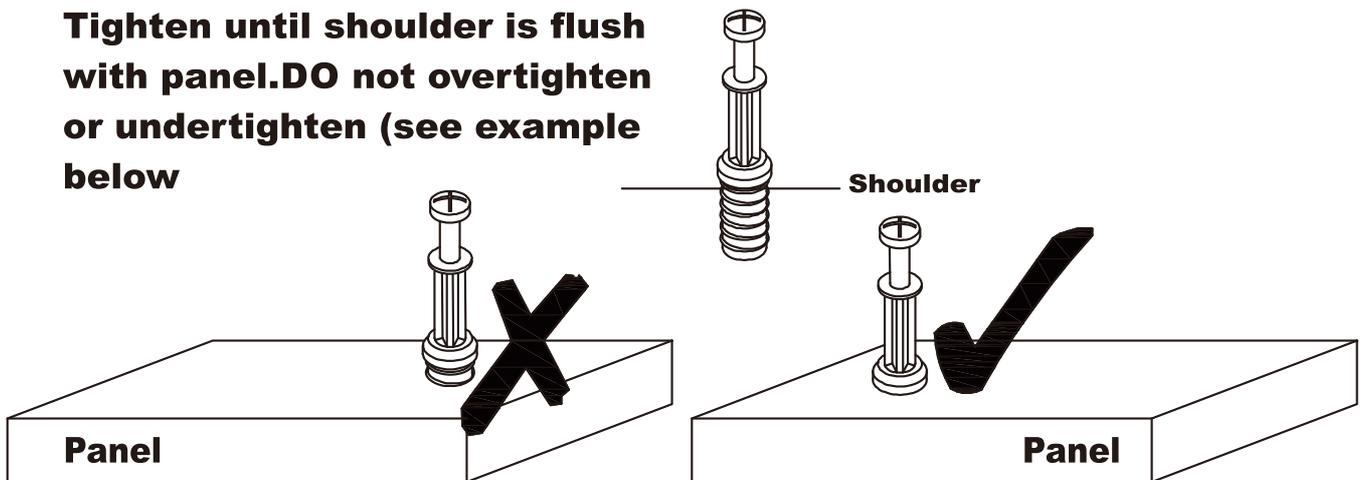


# Step 1

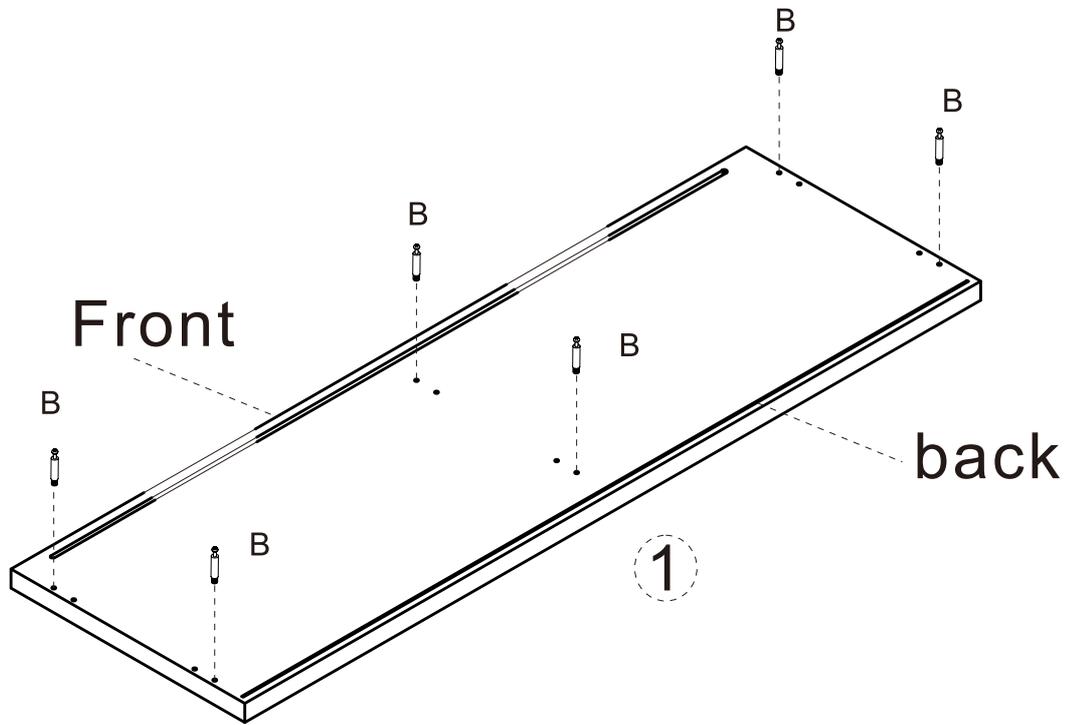

x2

B	12pcs
---	-------


# Step 2

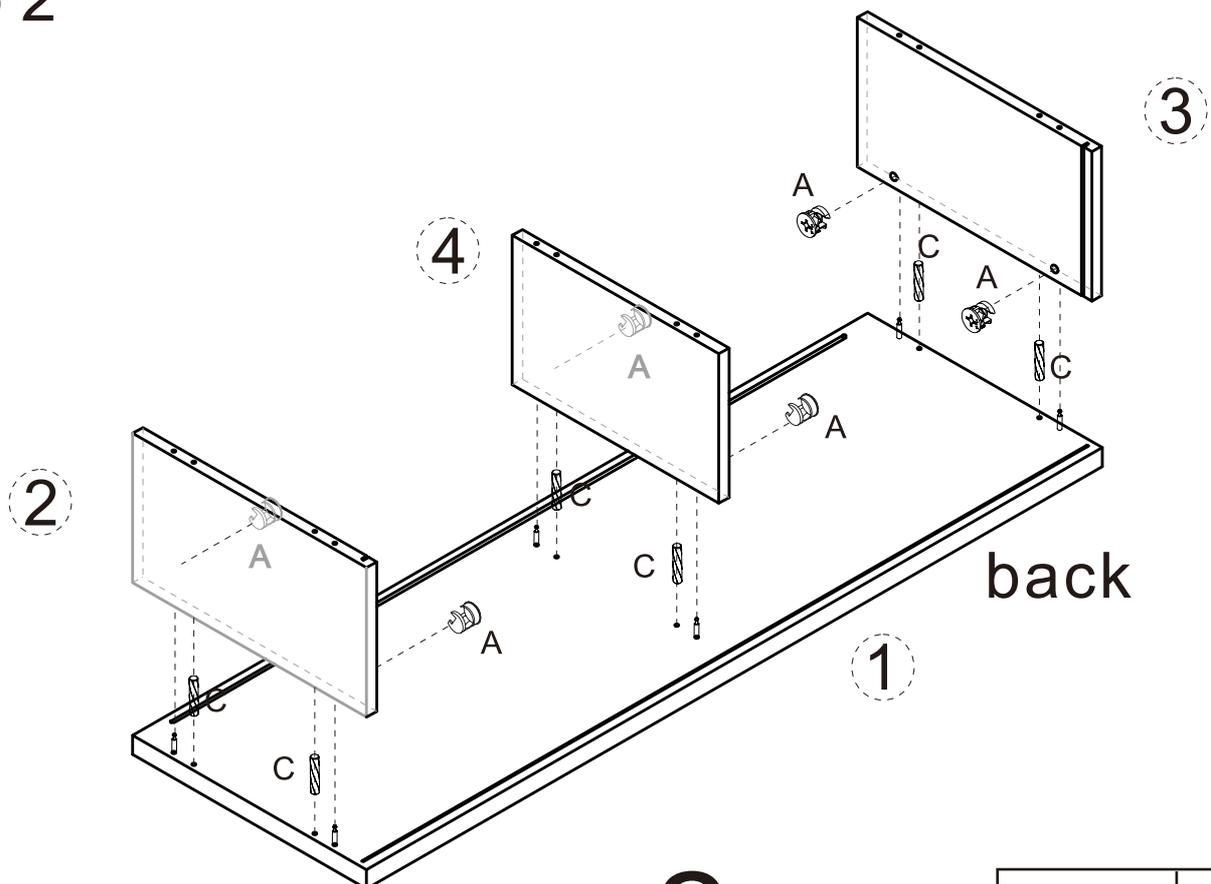


x2

A	12pcs
C	12pcs

# Step 3



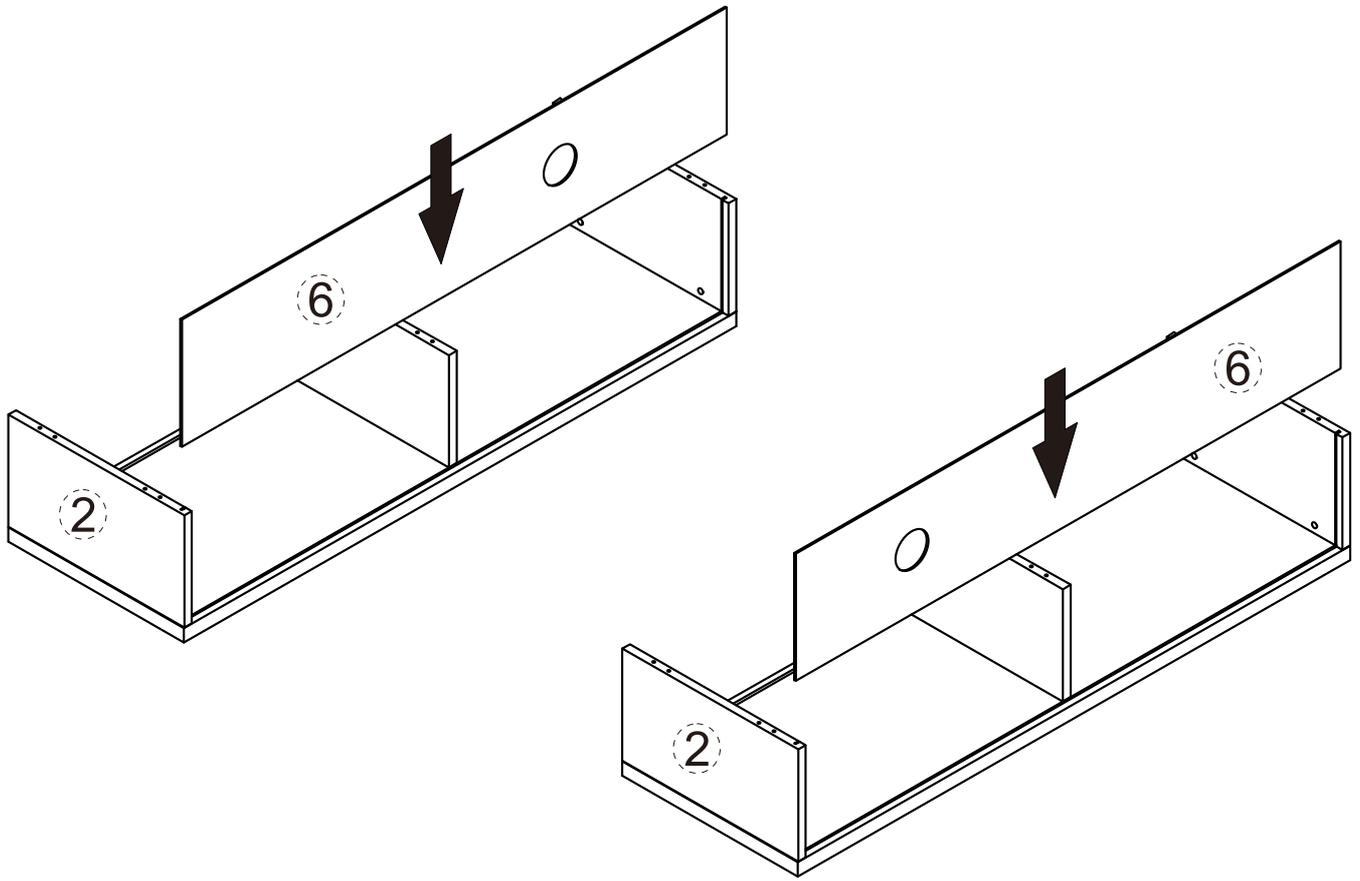


# Step 4

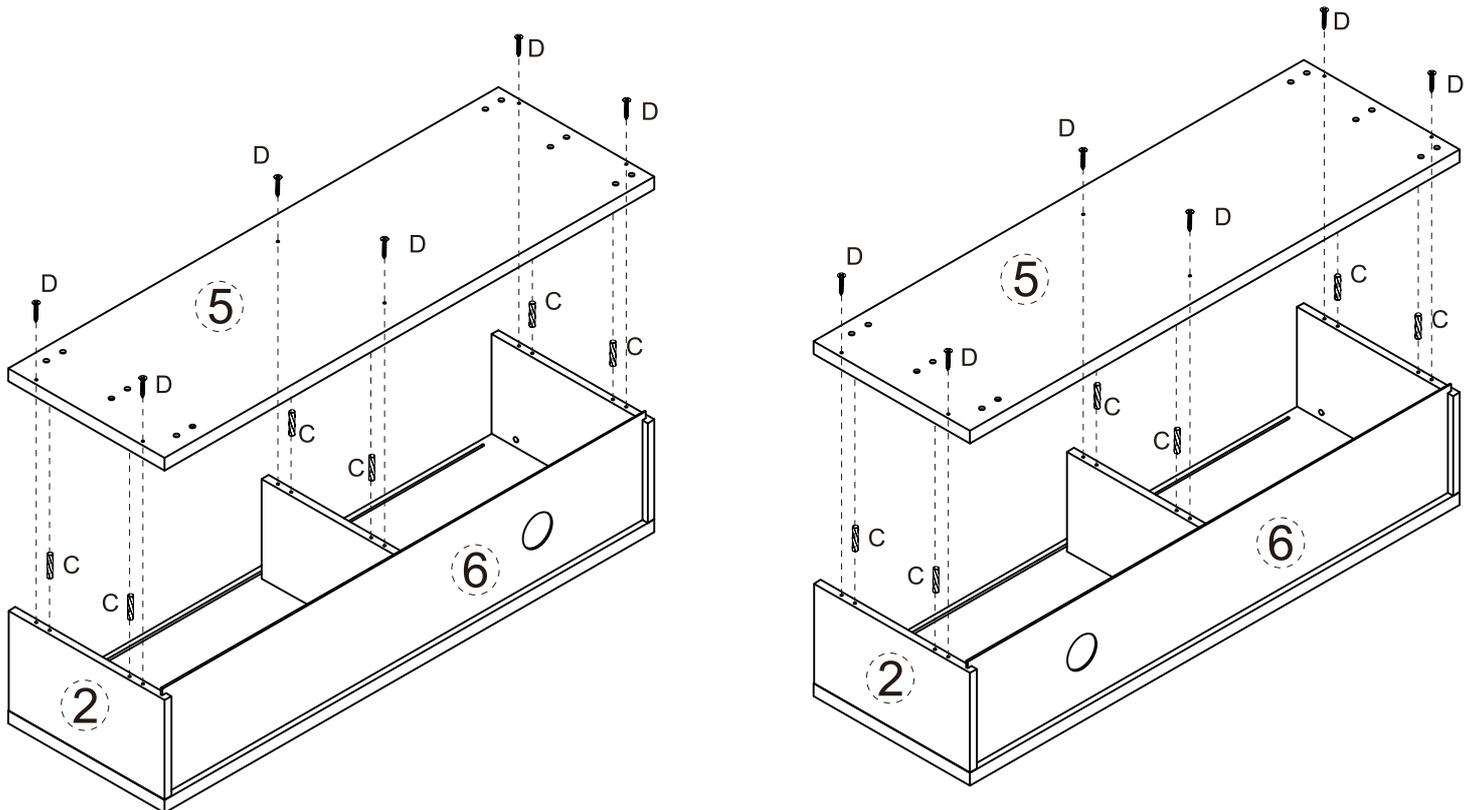




C	12pcs
D	12pcs

# Step 5

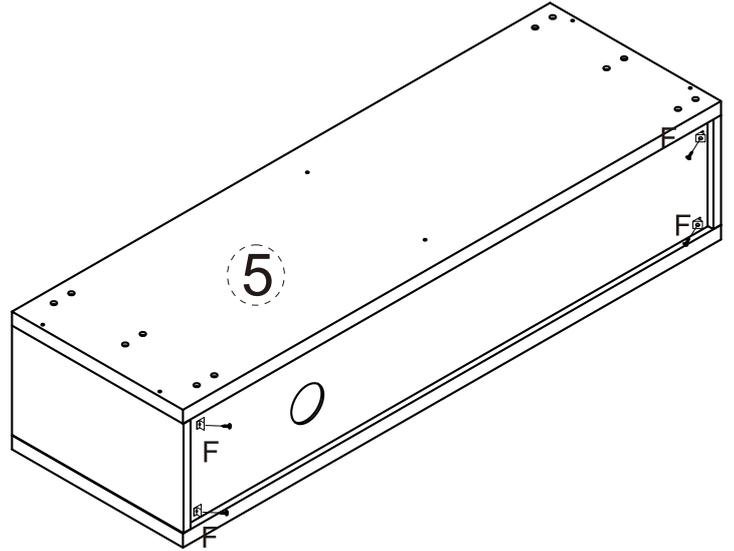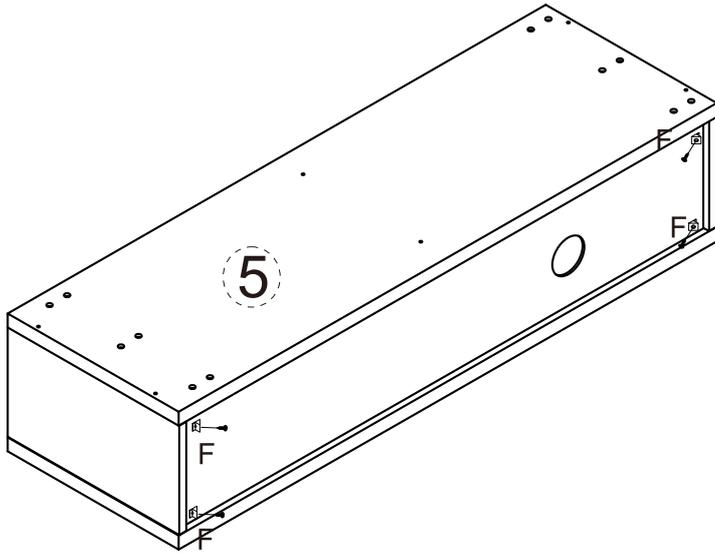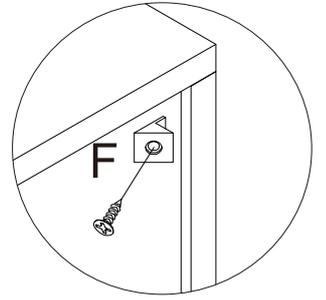

F	8pcs
---	------


# Step 6a

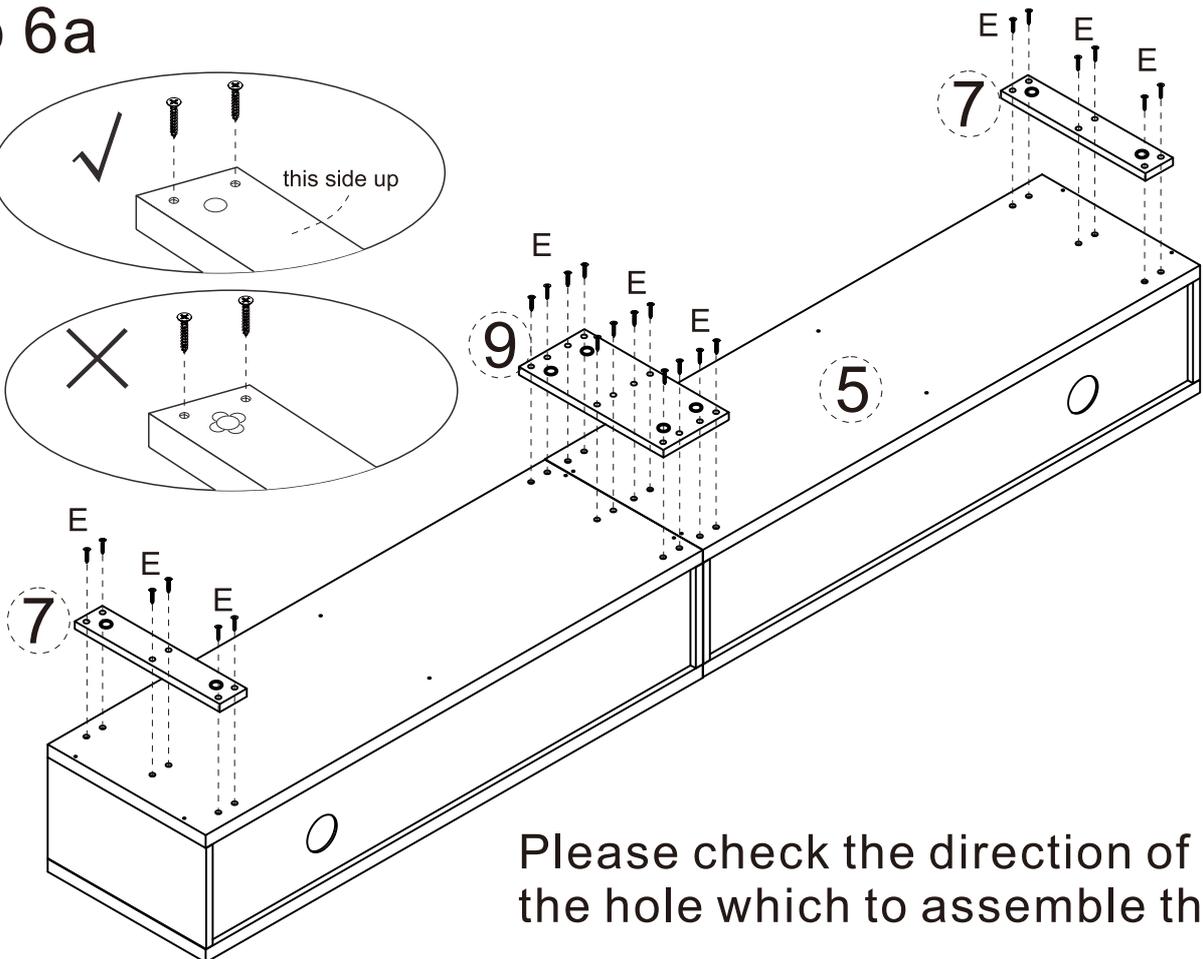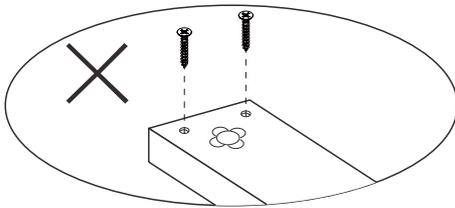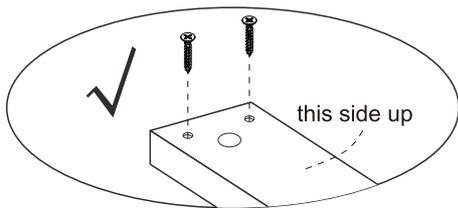


Please check the direction of the hole which to assemble the leg.

E	24pcs
---	-------



# Step 7a

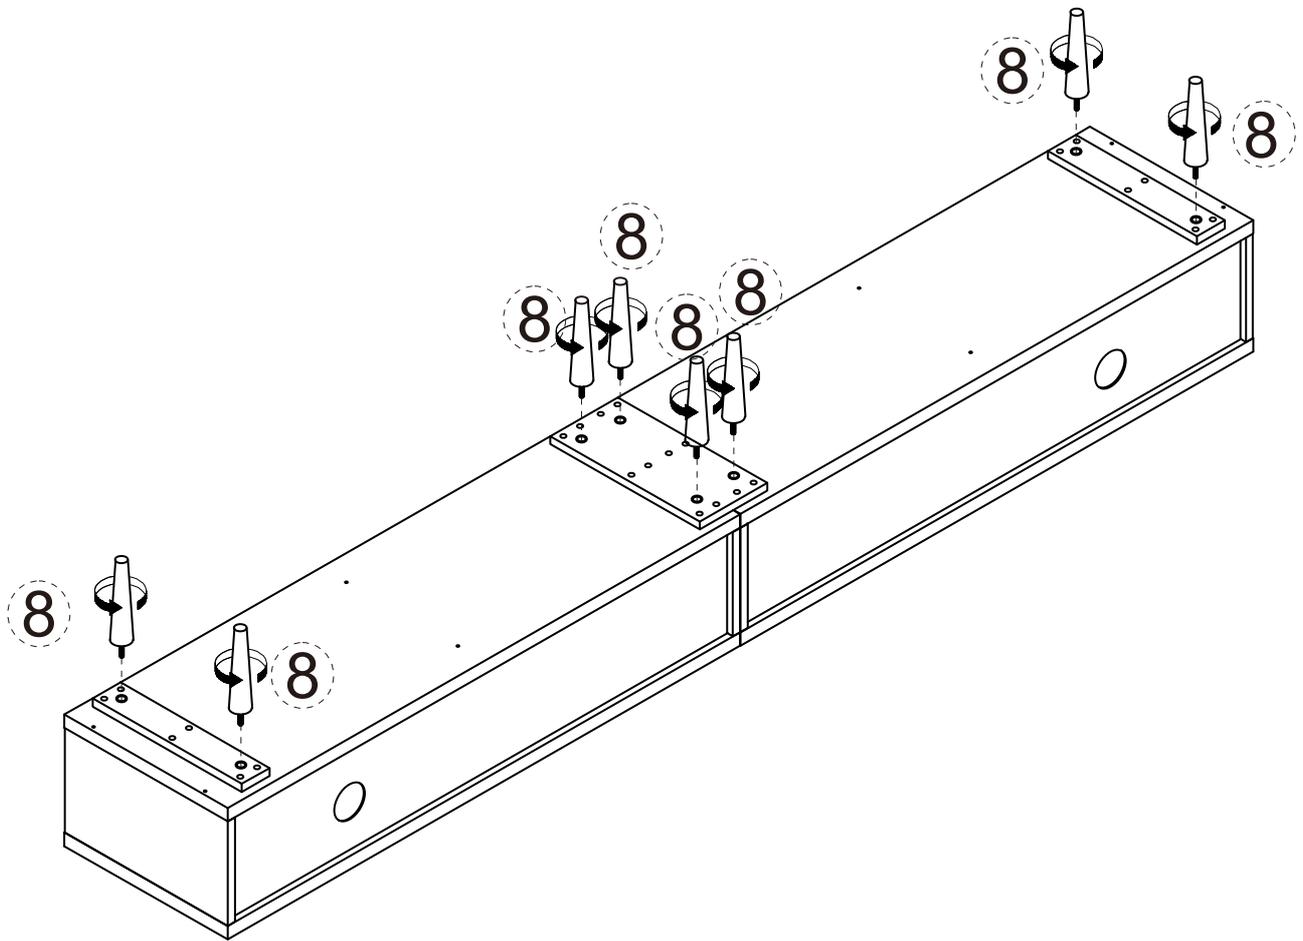



# Step 8a

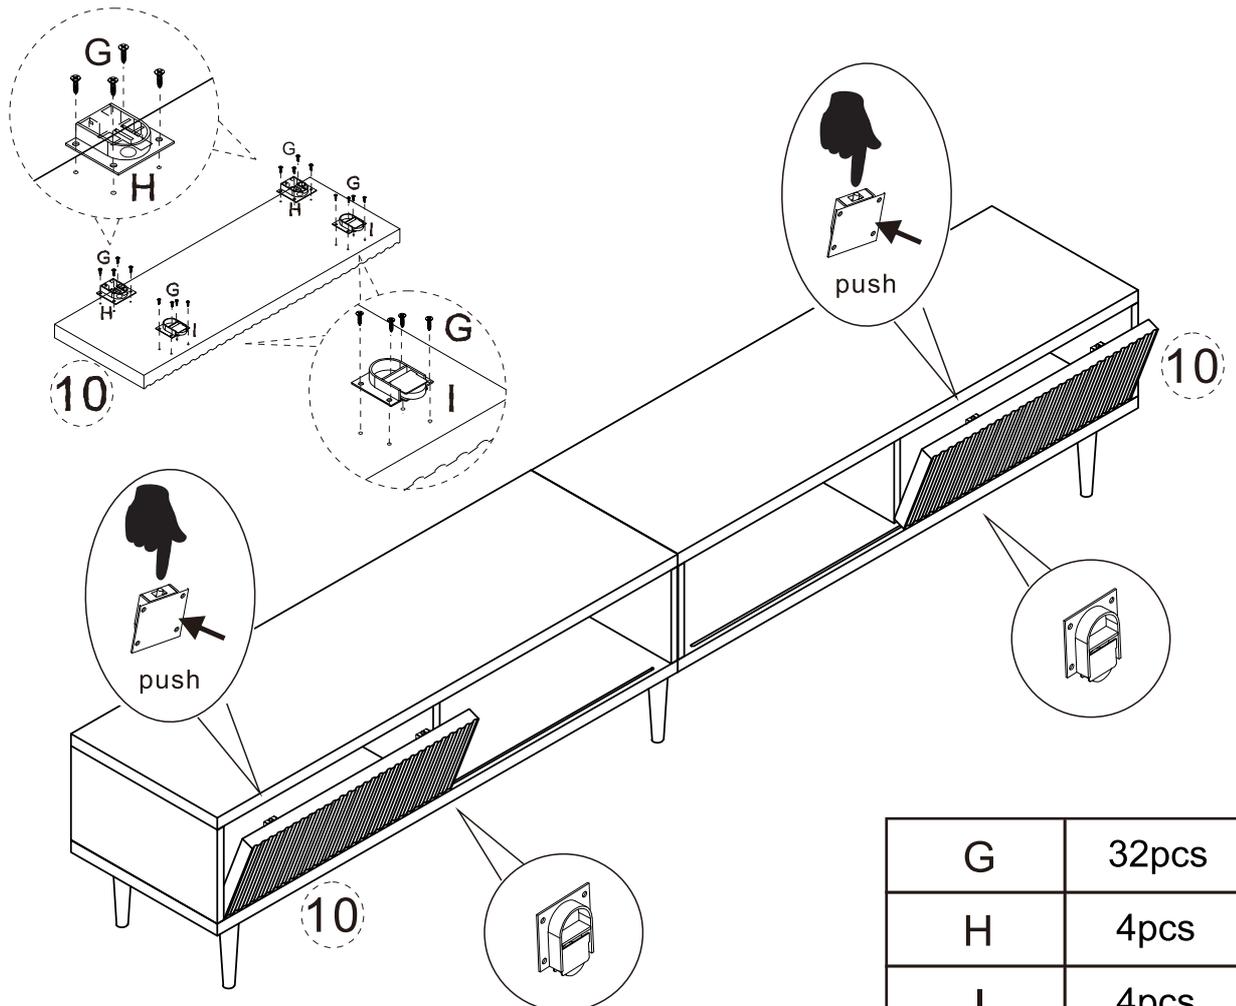

# Step 6b


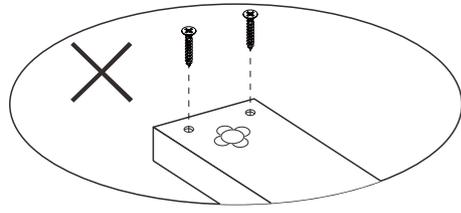
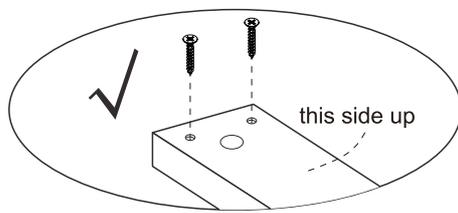


Please check the direction of the hole which to assemble the leg.

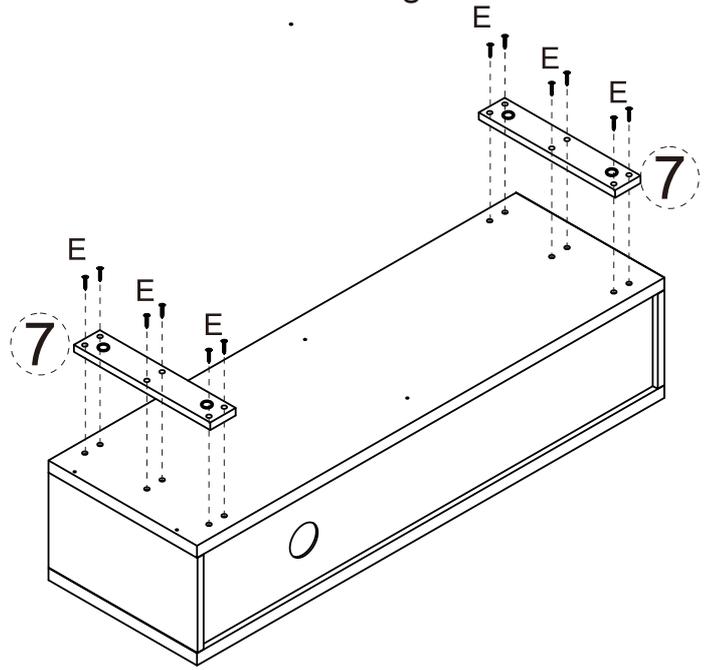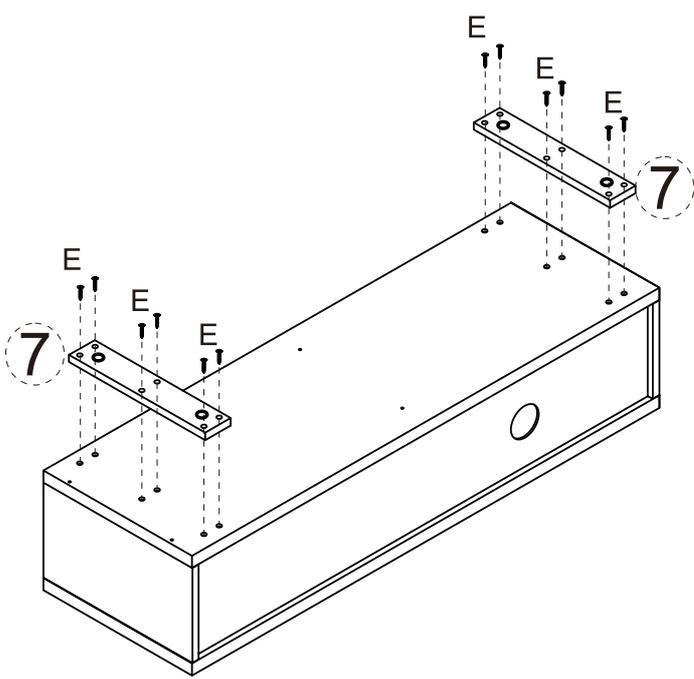

E	24pcs
---	-------

# Step 7b

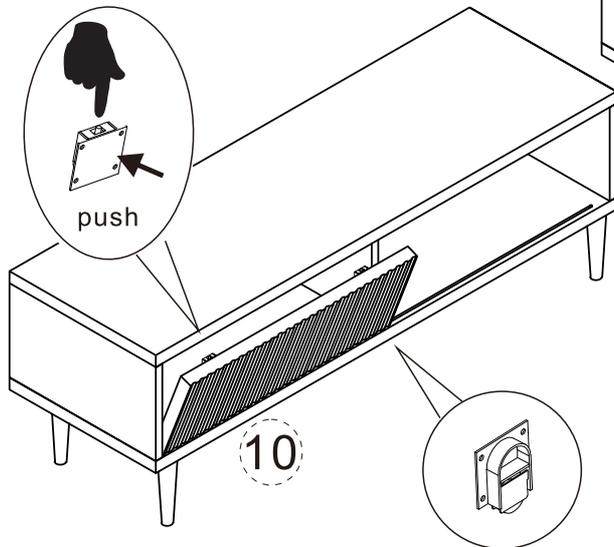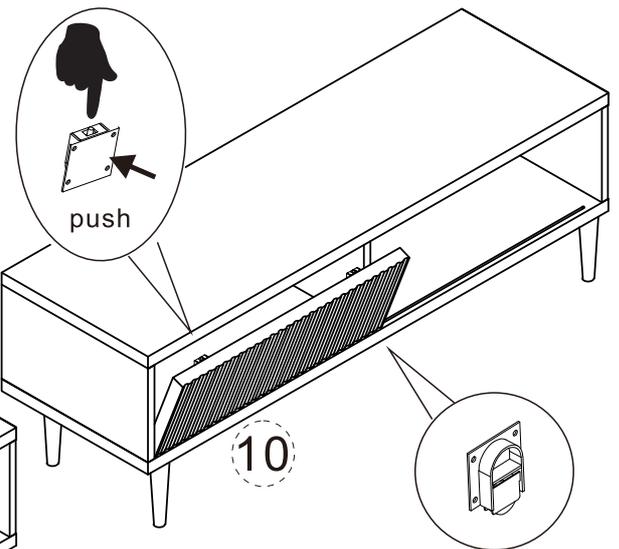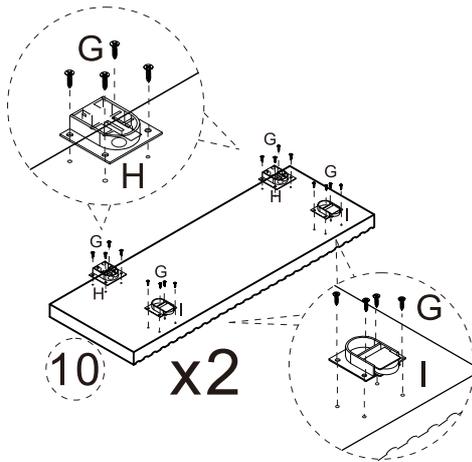

G	32pcs
H	4pcs
I	4pcs