




Walker<sup>®</sup>  
Edison


Item # : DM35JER  
Assembly Instructions

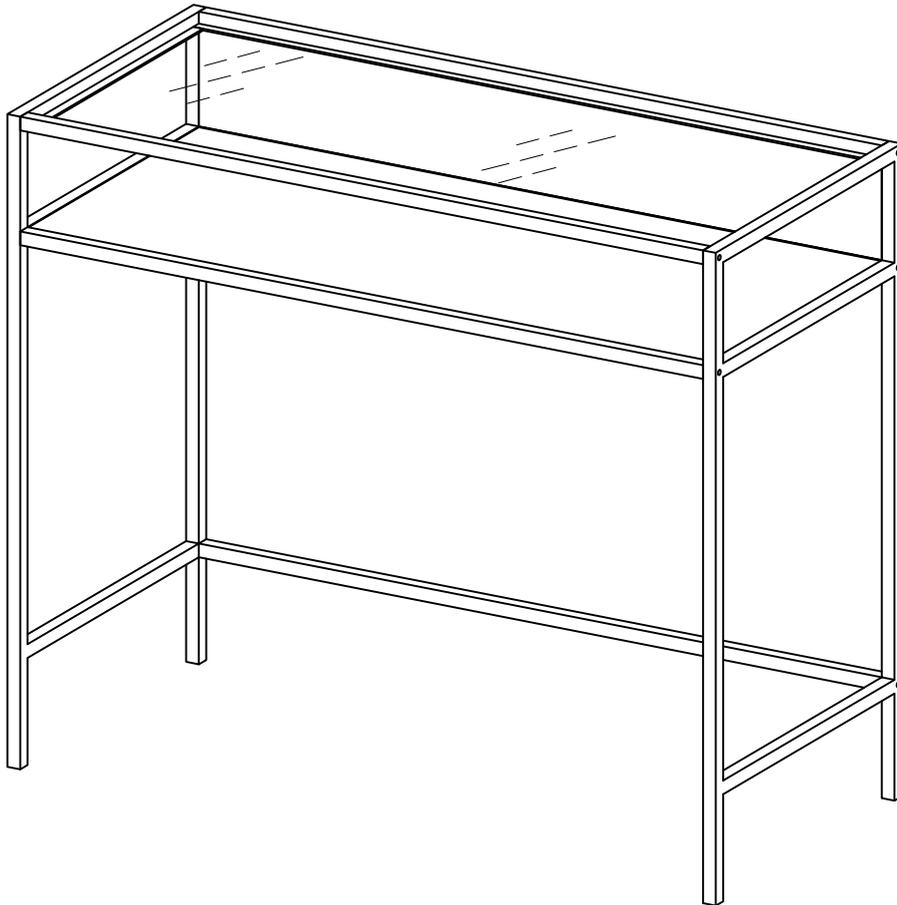


*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. [www.walkeredison.com](http://www.walkeredison.com)*


Revised 04/20/2017

# Parts List

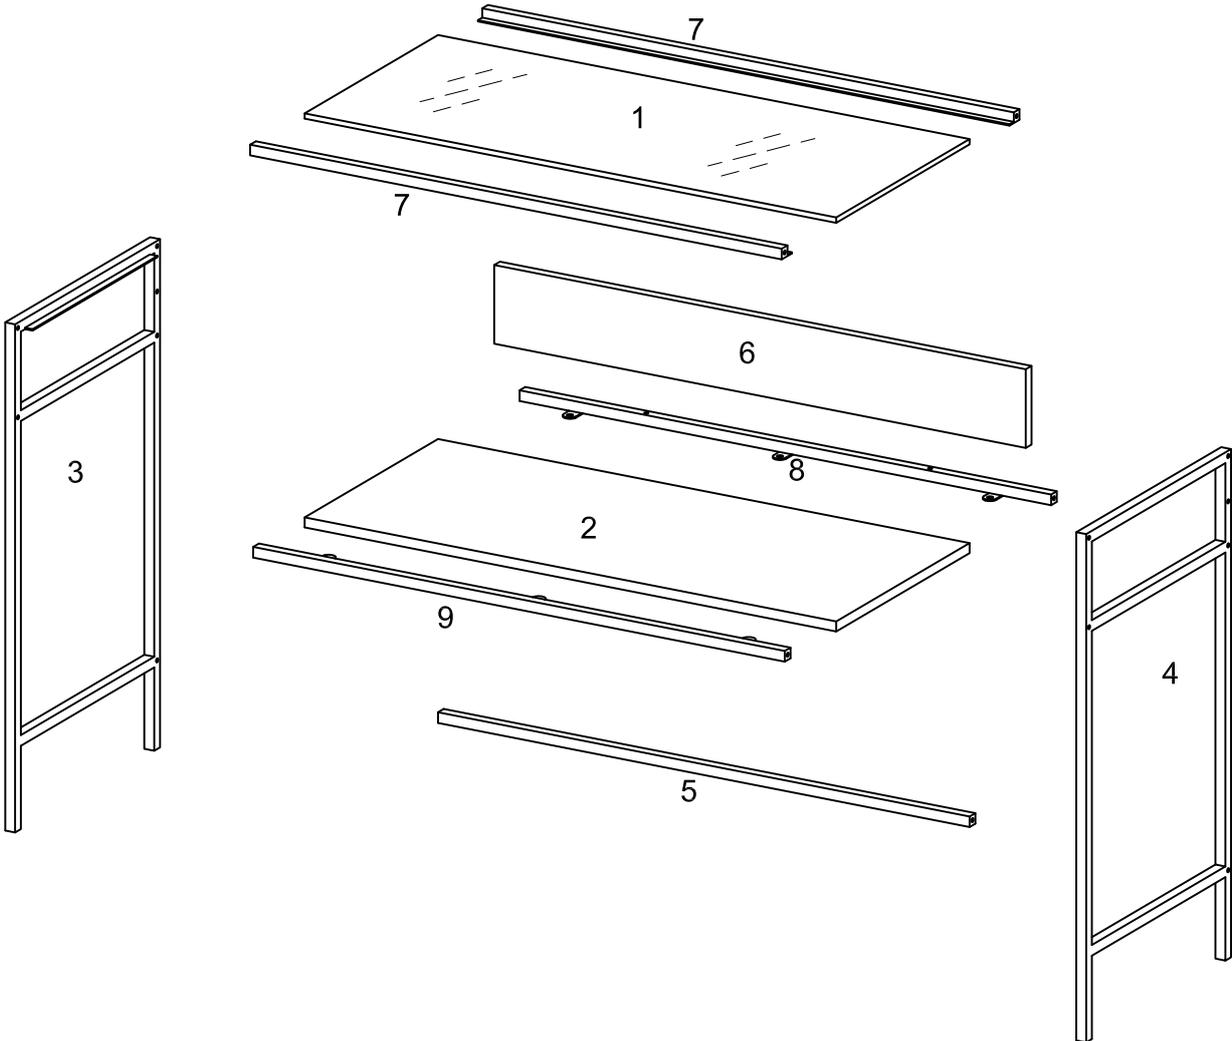

# Hardware List


A		Ø1/4"x12mm	Bolt	6 pcs
B		Ø1/4"x25mm	Bolt	10 pcs
C		Ø4x35	Screw	4 pcs
D		M4	Hex key	1 pc
E			Glass pad	10 pcs

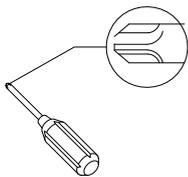

Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Step 1

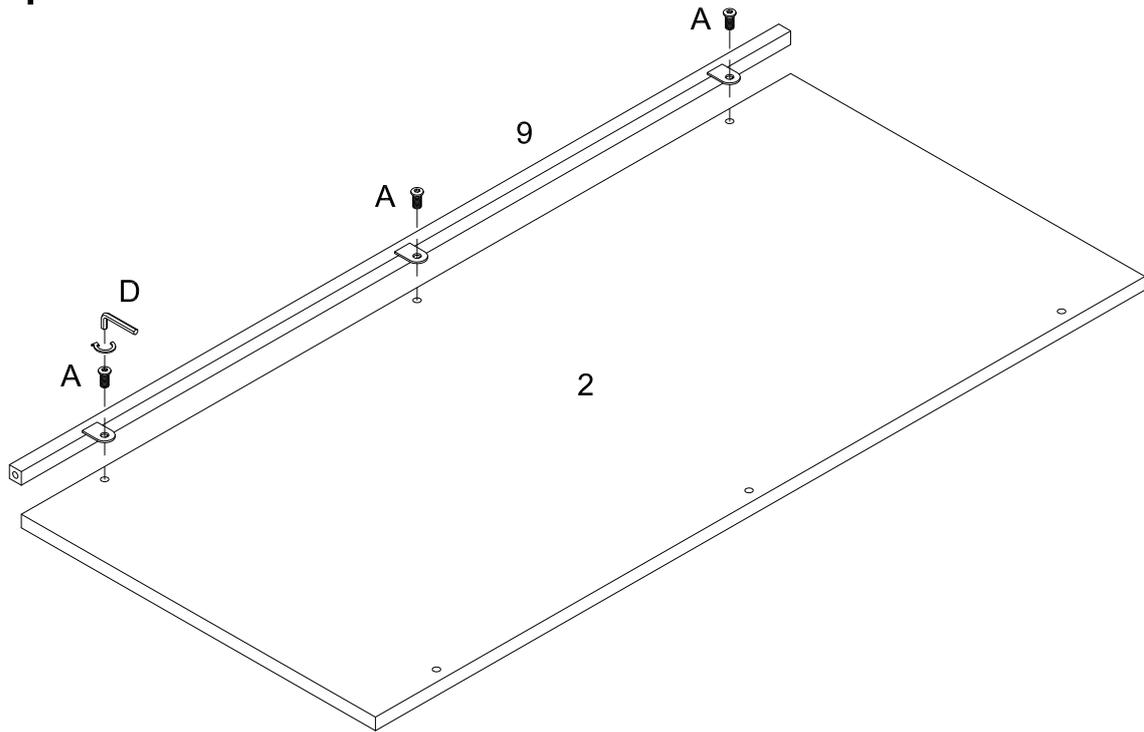


Attach part (9) to part (2) using bolt (A) with hex key (D).

# Step 2

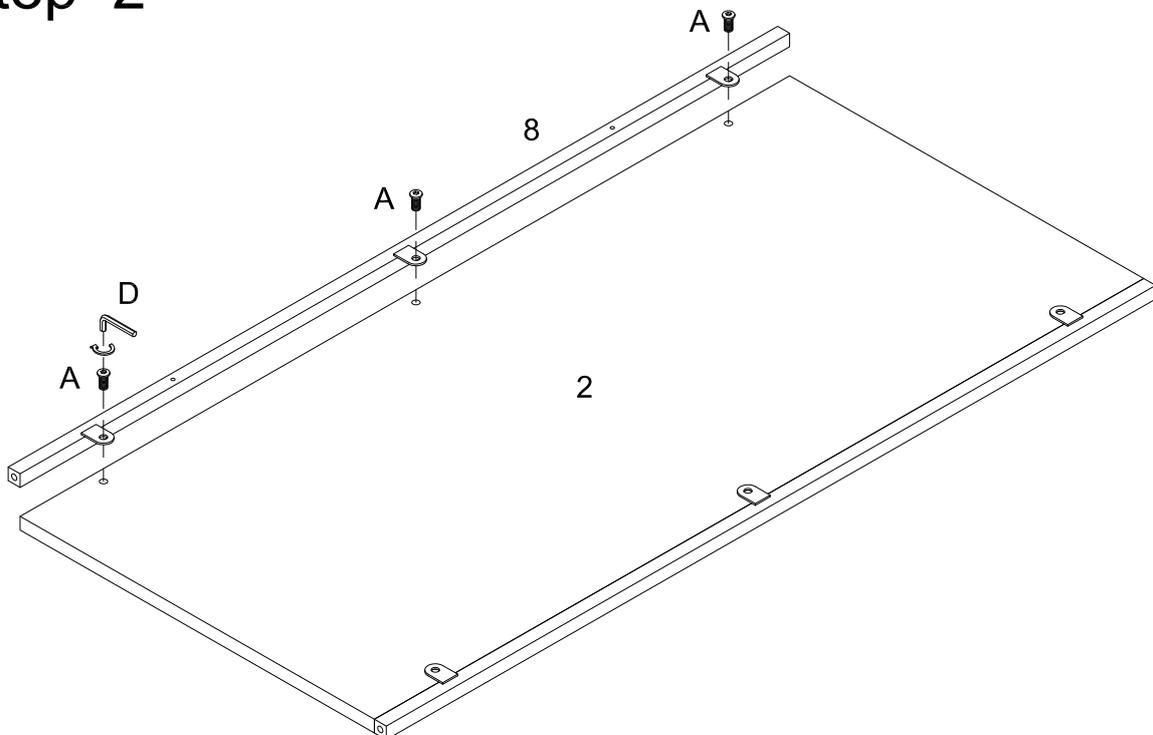


Attach part (8) to part (2) using bolt (A) with hex key (D)

## Step 3

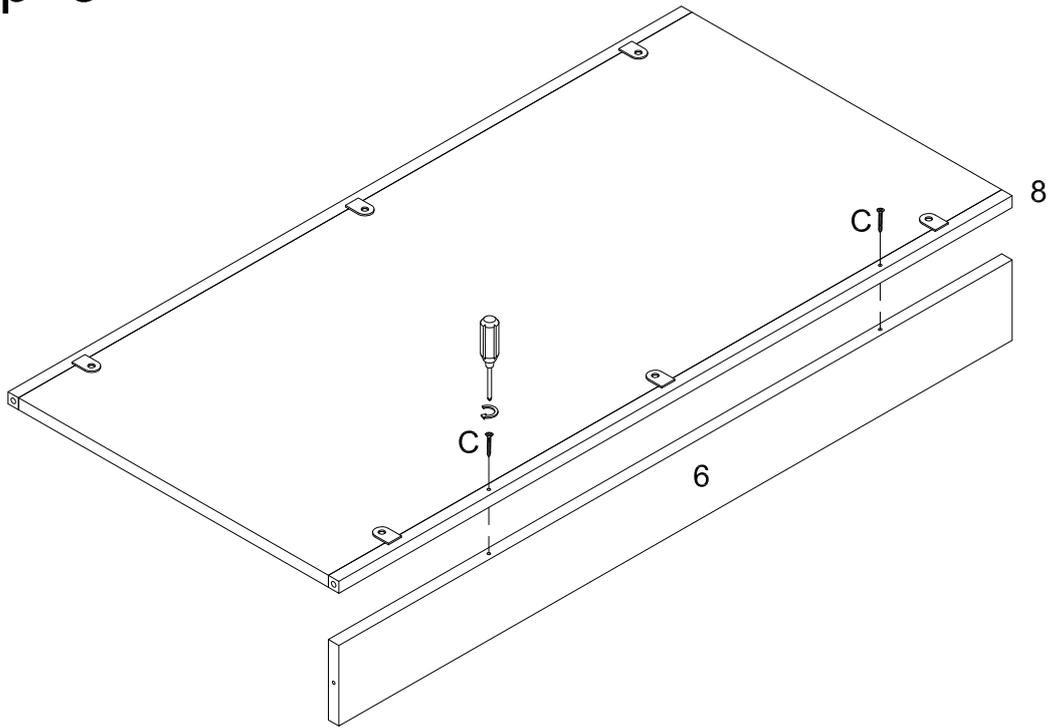


Attach part (8) to part (6) using screw (C) with screwdriver.

## Step 4

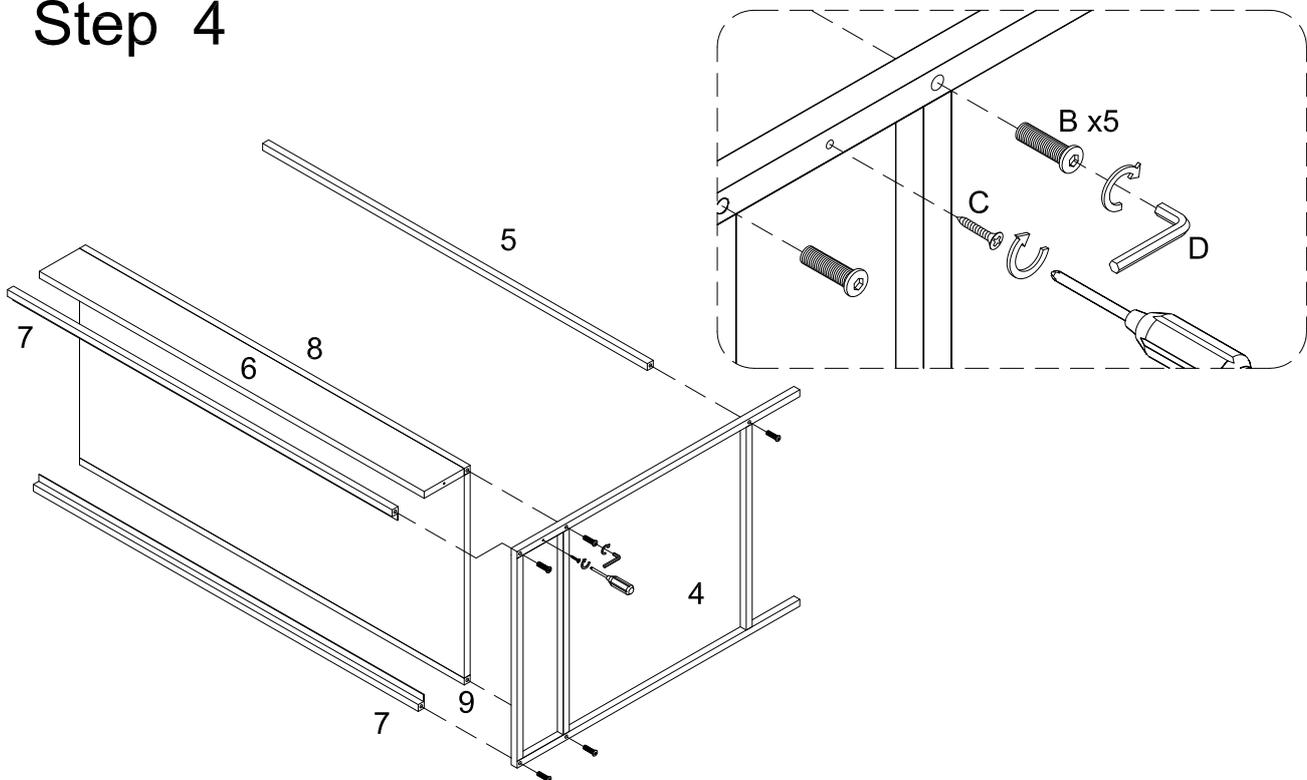


Attach part (4) to part (5,7,8,9) using bolt (B) with hex key (D), and to part (6) using screw (C) with screwdriver.

## Step 5

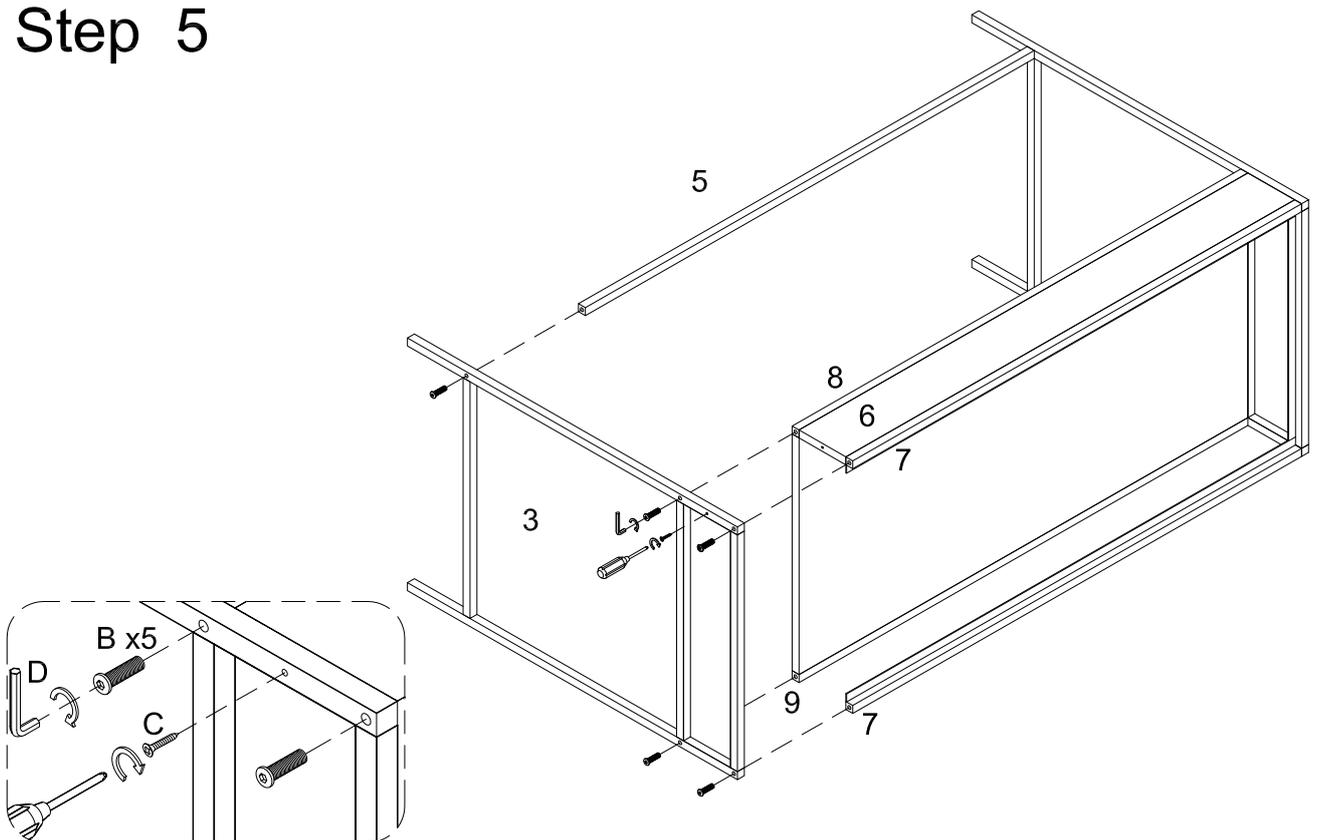


Attach part (3) to part (5,7,8,9) using bolt (B) with hex key (D), and to part (6) using screw (C) with screwdriver.

## Step 6

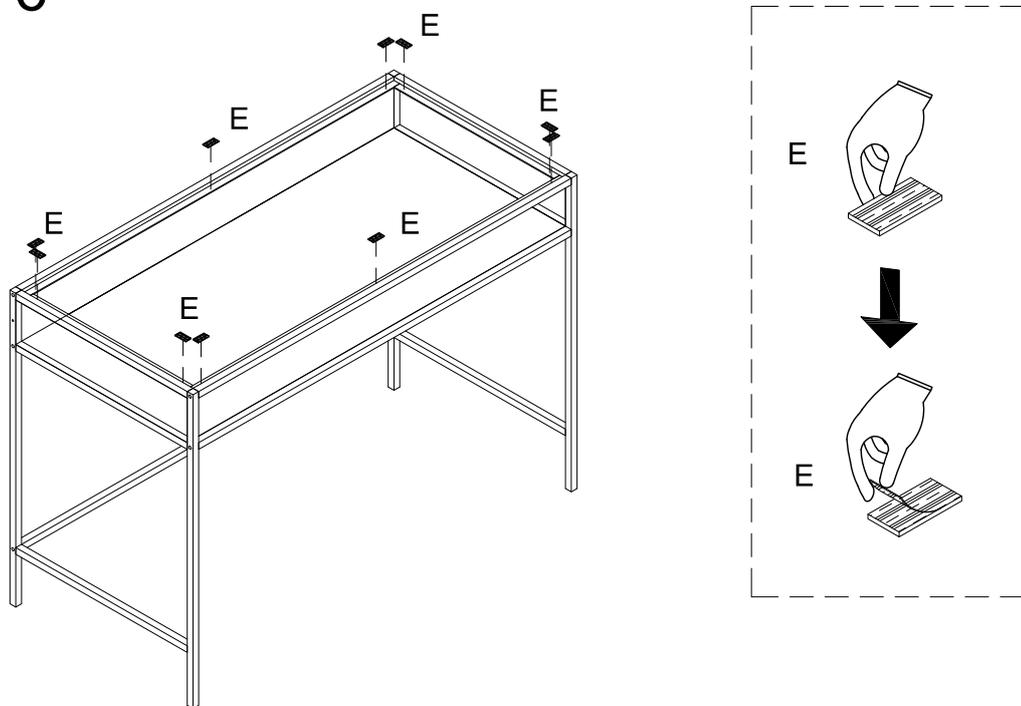


Remove cover tape on glass pads (E), then stick it as diagram.

## Step 7

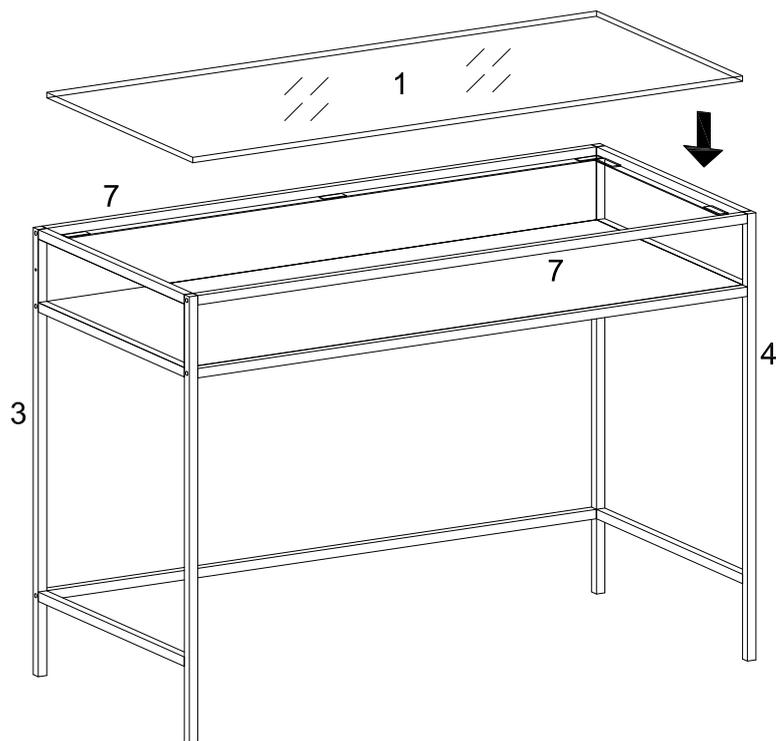

Place glass (1) as per diagram carefully.

## Step 8

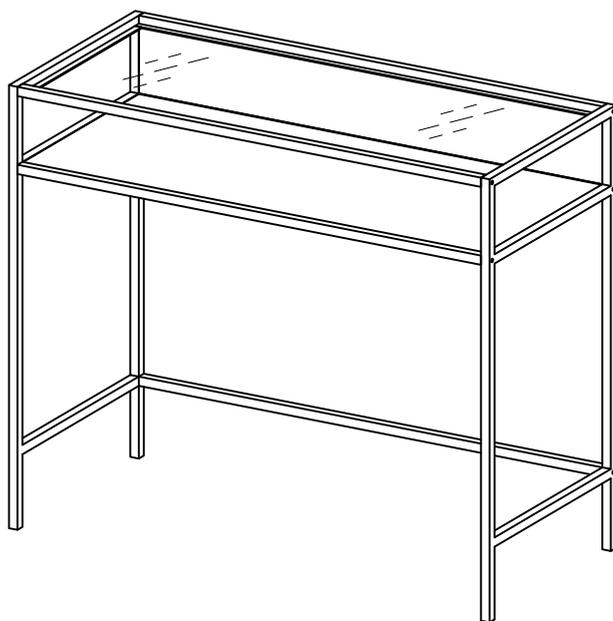

Final Assembly