


ASSEMBLY INSTRUCTION

SW 8000-86D6D













REAR

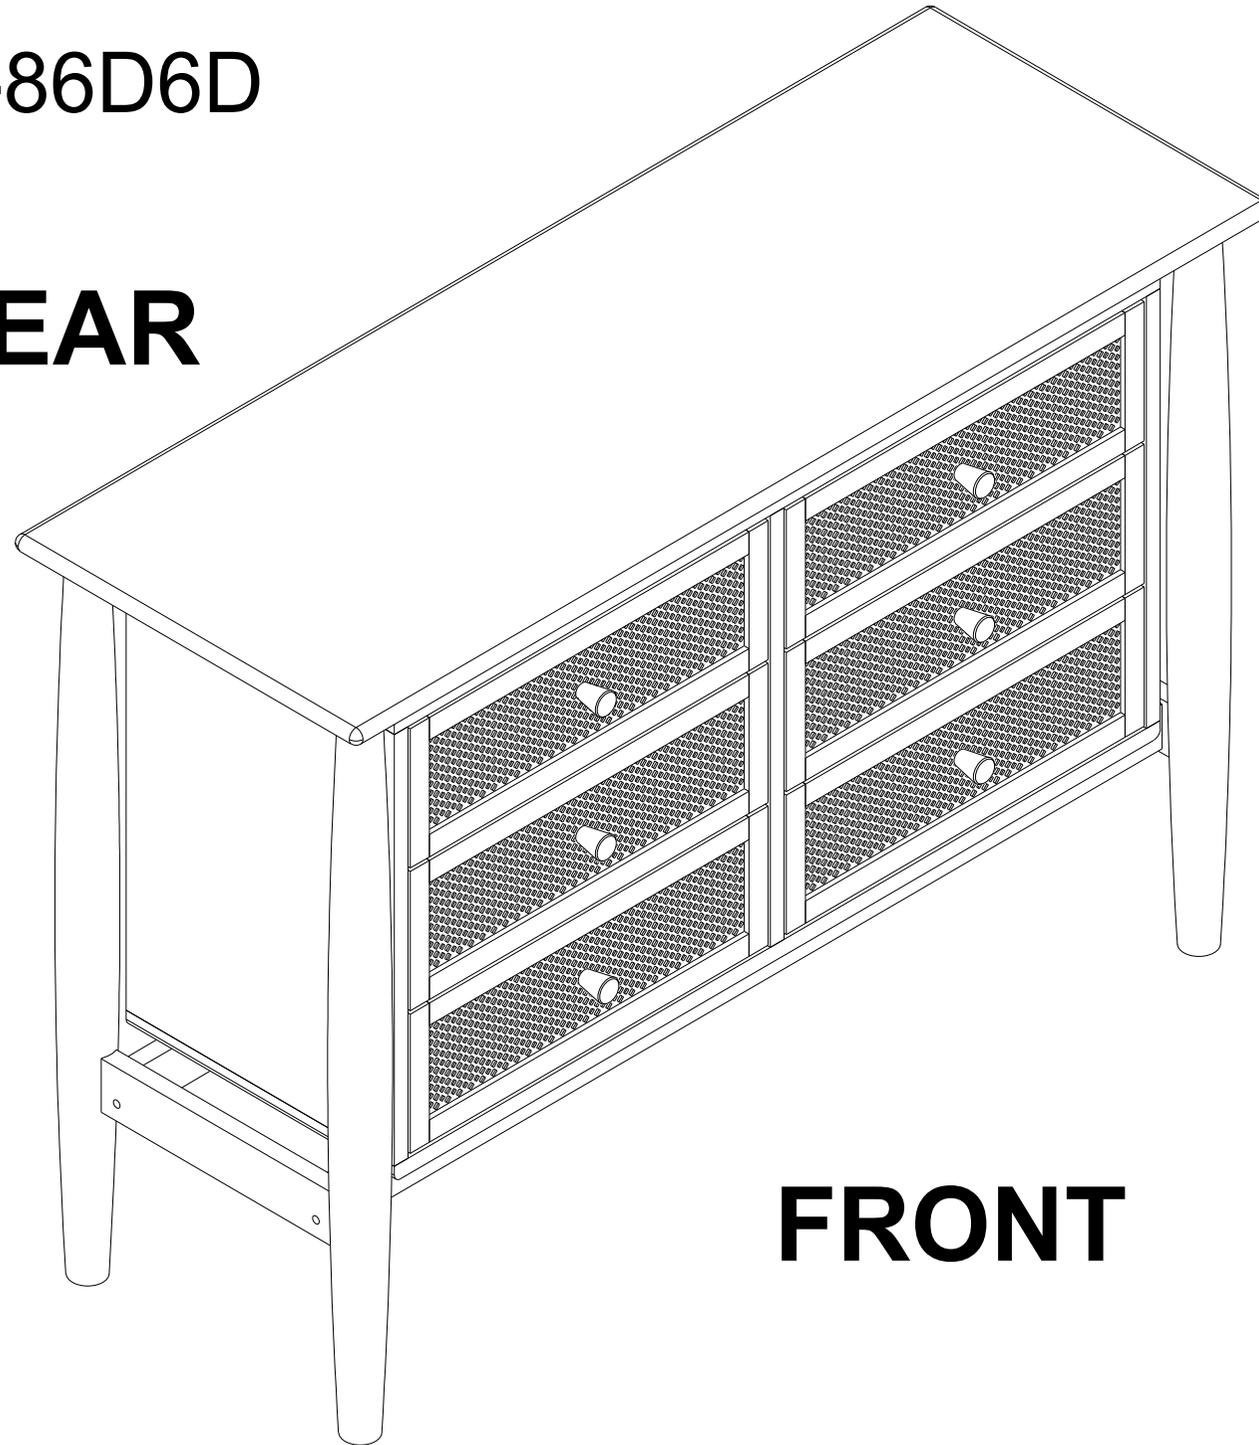







FRONT






PART LIST
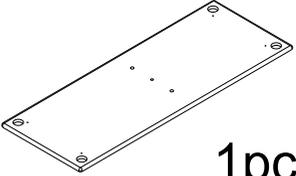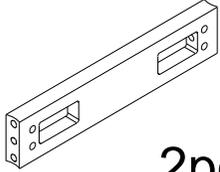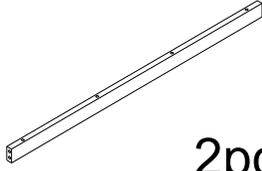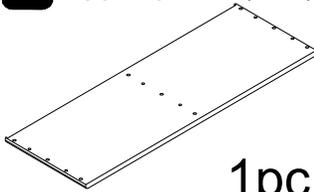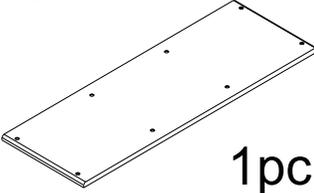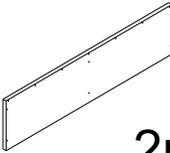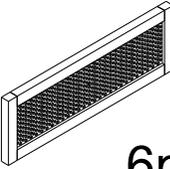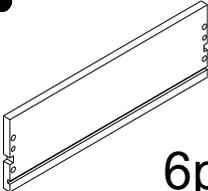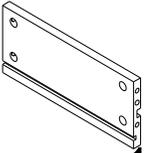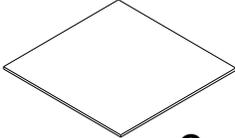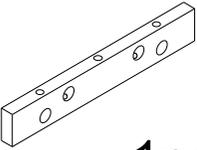
<p>1 Table Top</p>  <p>1pc</p>	<p>2 Post</p>  <p>4pcs</p>	<p>3 Support Rail</p>  <p>2pcs</p>	<p>4 Bottom Rail</p>  <p>2pcs</p>	<p>5 Upper panel (Box)</p>  <p>1pc</p>	<p>6 Bottom Panel (Box)</p>  <p>1pc</p>
<p>7 Side Panel (Left)</p>  <p>1pc</p>	<p>8 Side Panel (Right)</p>  <p>1pc</p>	<p>9 Division</p>  <p>1pc</p>	<p>10 Back Panel</p>  <p>2pcs</p>	<p>11 Drawer Front Panel</p>  <p>6pcs</p>	<p>12 Drawer Back Panel</p>  <p>6pcs</p>
<p>13 Drawer Side Panel</p>  <p>12pcs</p>	<p>14 Drawer Base Panel</p>  <p>6pcs</p>	<p>15 Top Panel Support</p>  <p>1pc</p>			


HARDWARE LIST
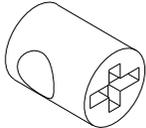
<p>A MINI FIX SPREADING BOLT 24MM</p>  <p>70pcs</p>	<p>B MINIFIX HOUSING Ø15*12MM</p>  <p>18pcs</p>	<p>C MINIFIX HOUSING Ø15*10MM</p>  <p>52pcs</p>	<p>D WOOD DOWEL M8*30MM</p>  <p>49pcs</p>	<p>E PAN HEAD M3.5*30MM</p>  <p>26pcs</p>	<p>F CSK SCREW M3.5*16MM</p>  <p>8pcs</p>
<p>G SHELF SUPPORT</p>  <p>12pcs</p>	<p>H HANDLE</p>  <p>6sets</p>	<p>I JCBC M6X50MM</p>  <p>16pcs</p>	<p>J Barrel Nut</p>  <p>4pcs</p>	<p>K M4 ALLEN KEY WITH BALL</p>  <p>1pc</p>	<p>L L bracket</p>  <p>4pcs</p>
<p>M U WASHER</p>  <p>4pcs</p>					

STEP 1

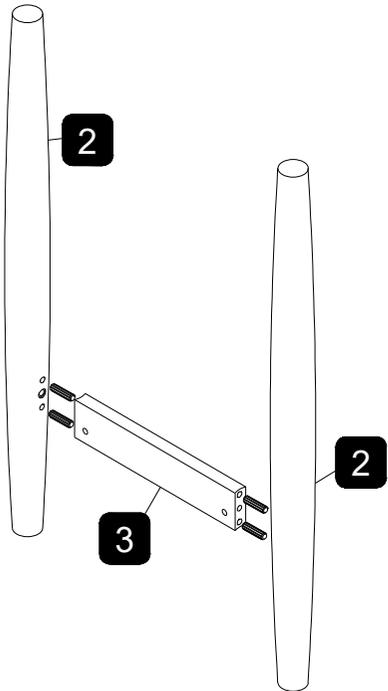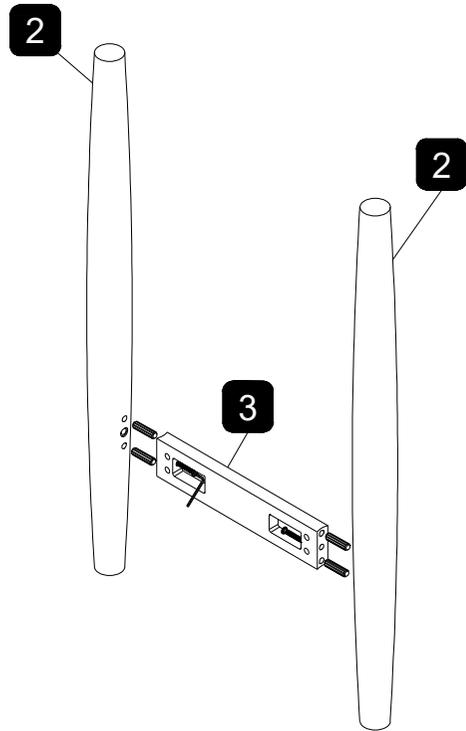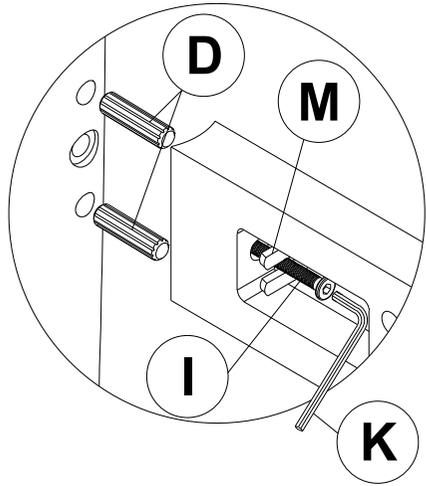


STEP 2

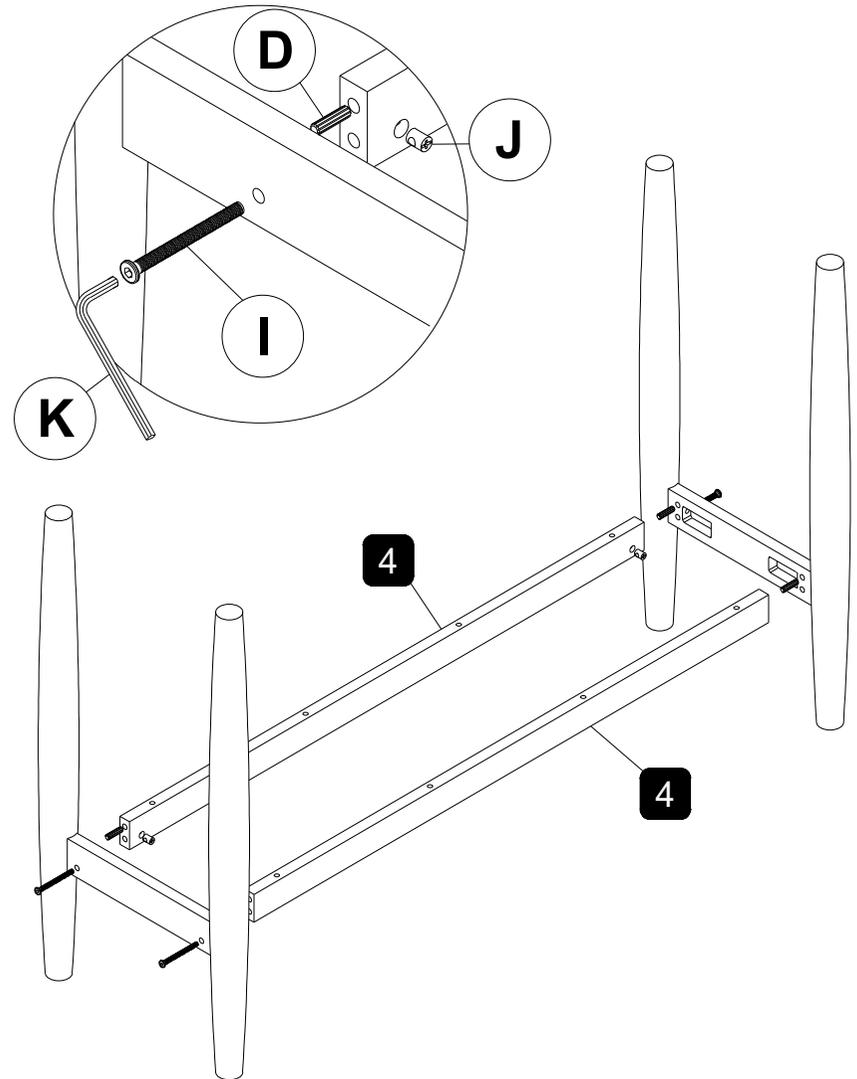

D X 8pcs




I X 4pcs



K X 1pc



M X 4pcs



D X 4pcs



I X 4pcs







J X 4pcs



K X 1pc

STEP 3

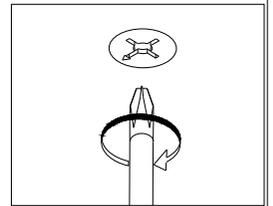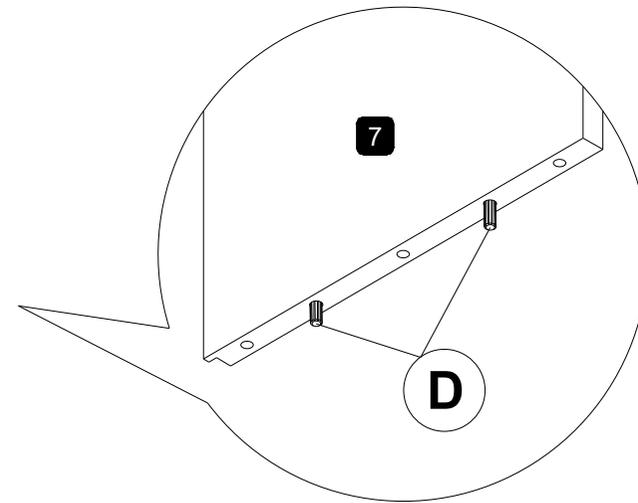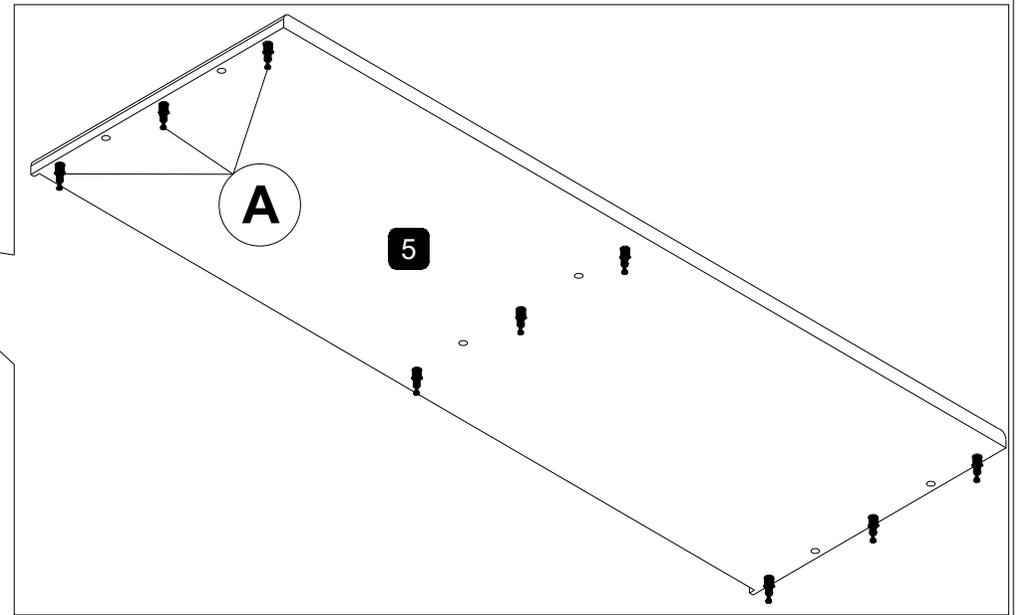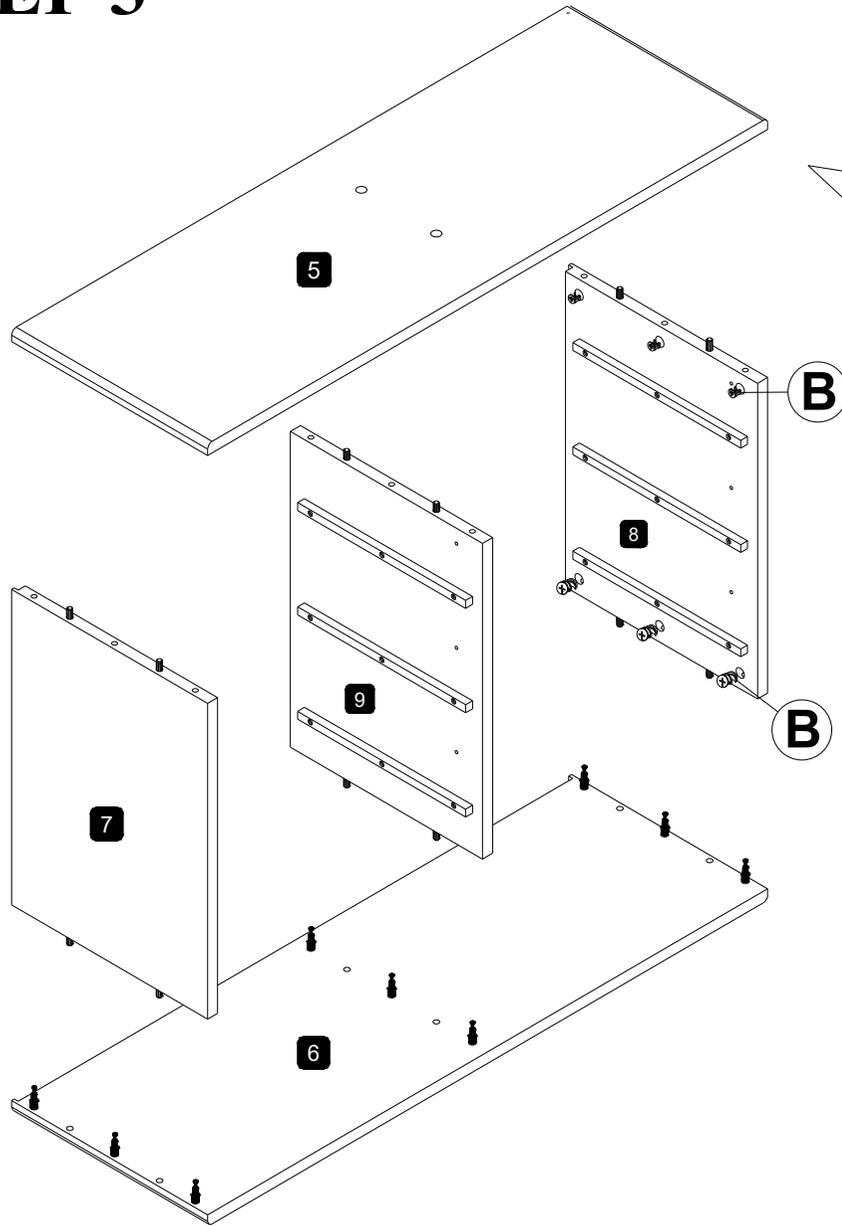

A X 18pcs





B X 18pcs






D X 12pcs

STEP 4

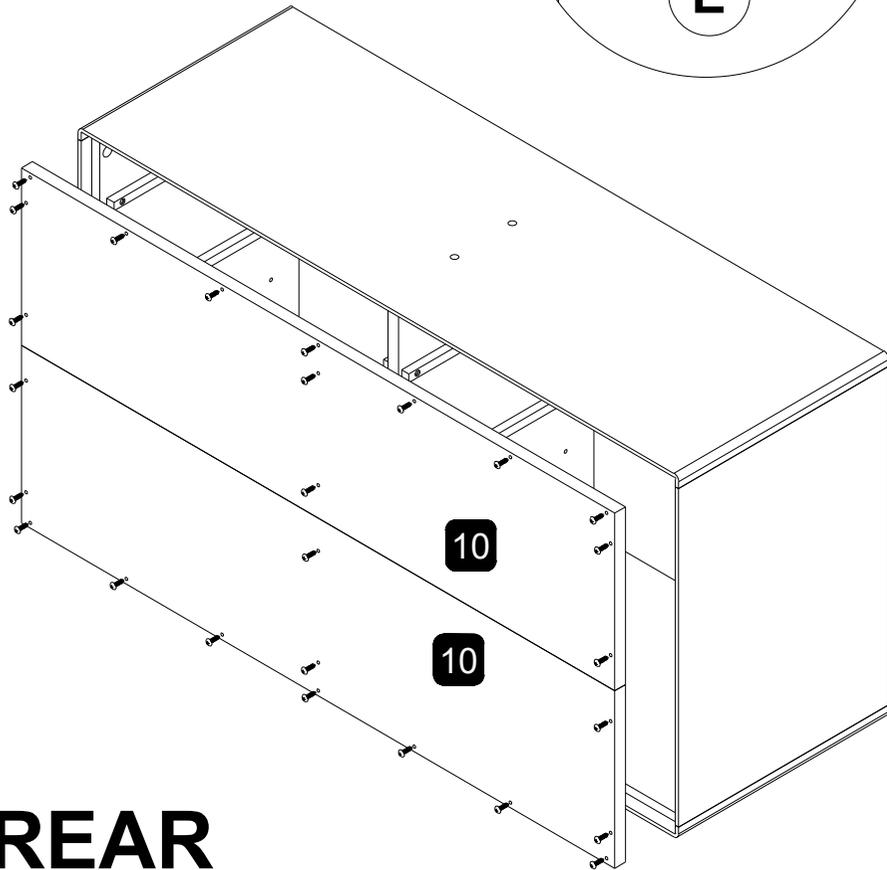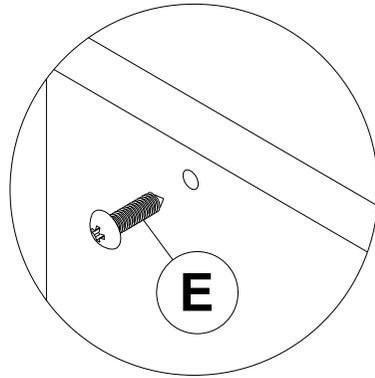


REAR

STEP 5

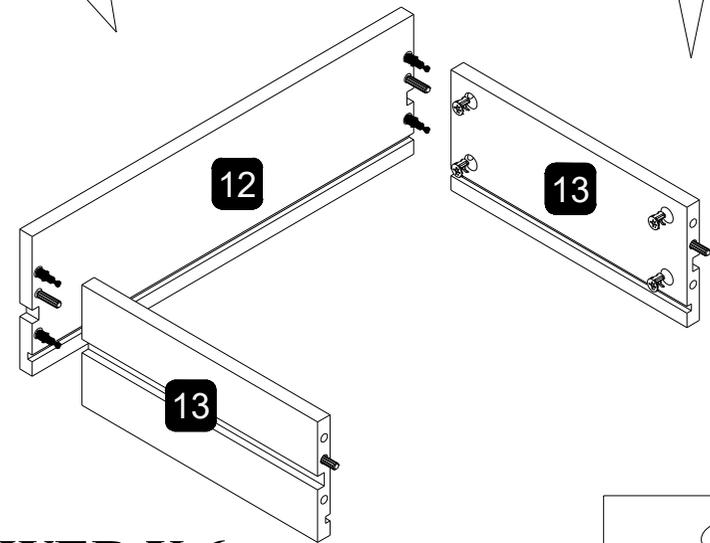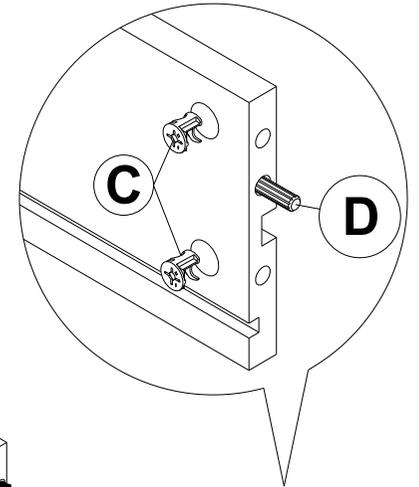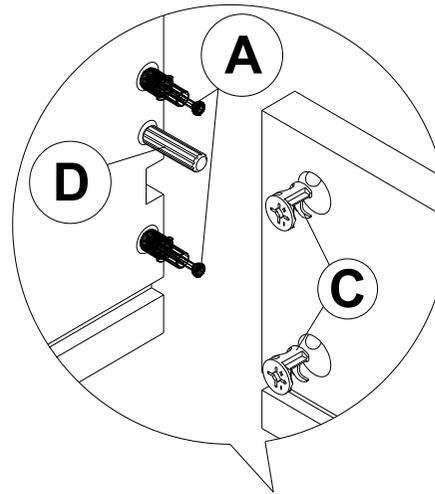


DRAWER X 6

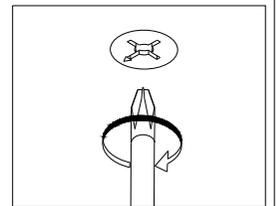

 E X 26pcs


 A X 24pcs

 C X 48pcs

 D X 24pcs





STEP 6

DRAWER X 6

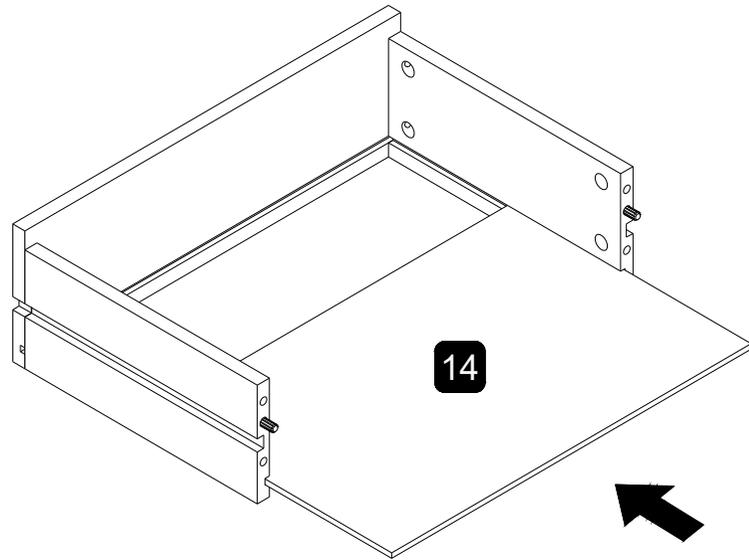

STEP 7


DRAWER X 6

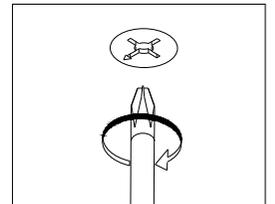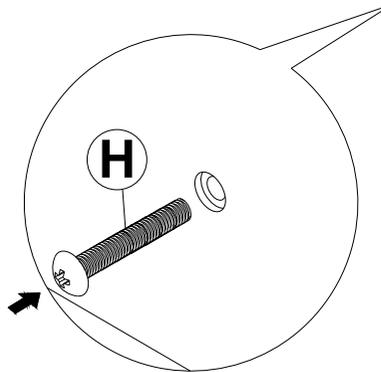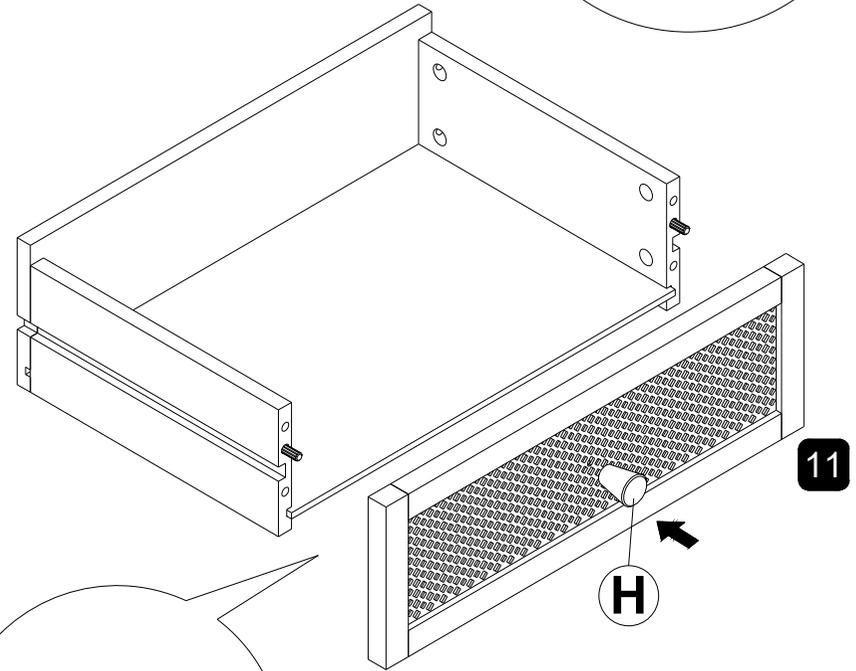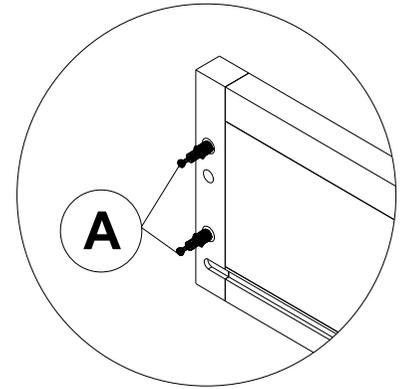

 A X 24pcs


 H X 6sets

STEP 8

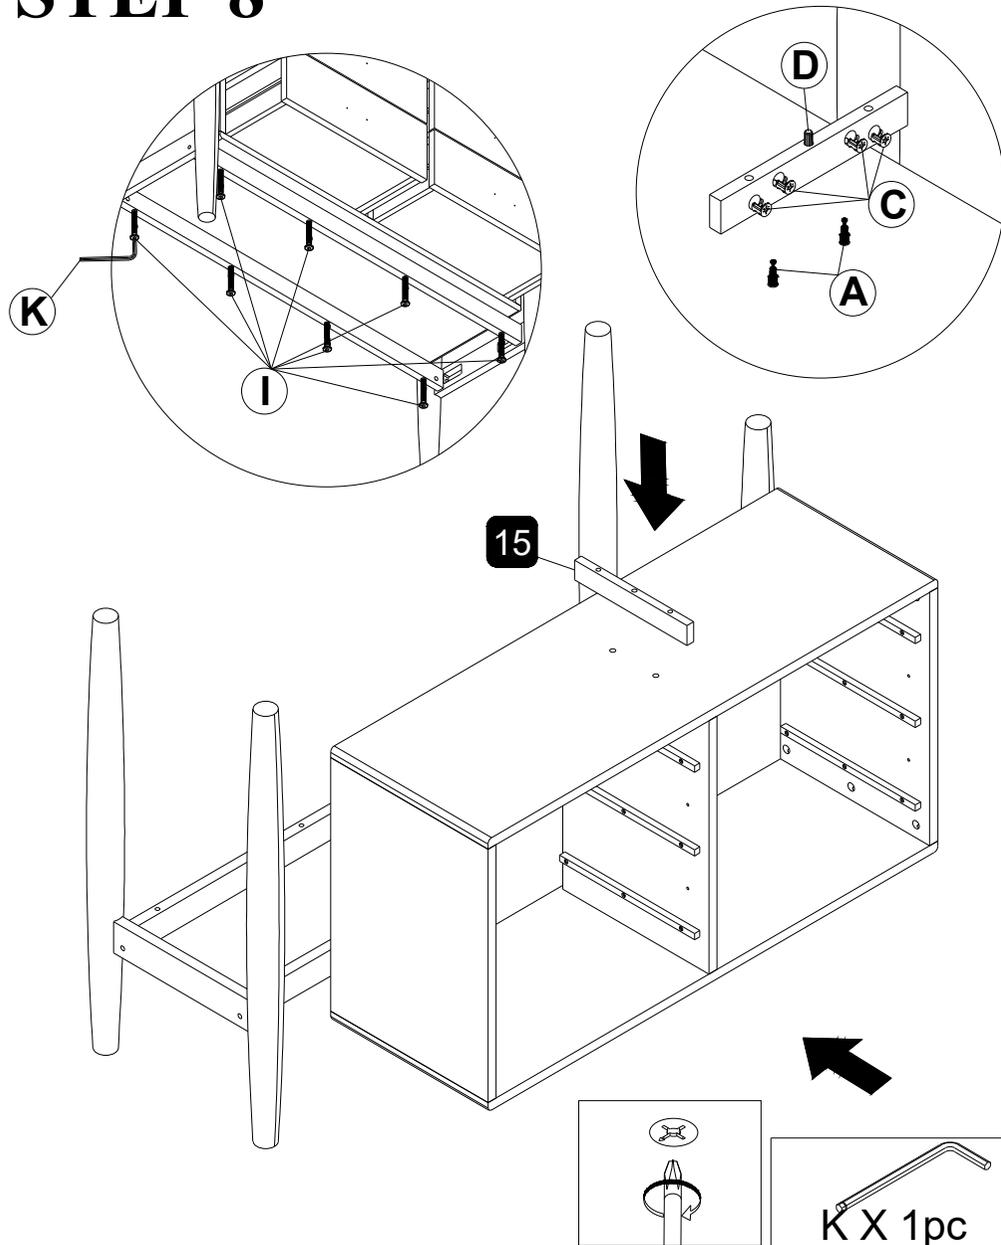



- 
A X 2pcs
- 
C X 4pcs
- 
D X 1pc
- 
I X 8pcs

STEP 9

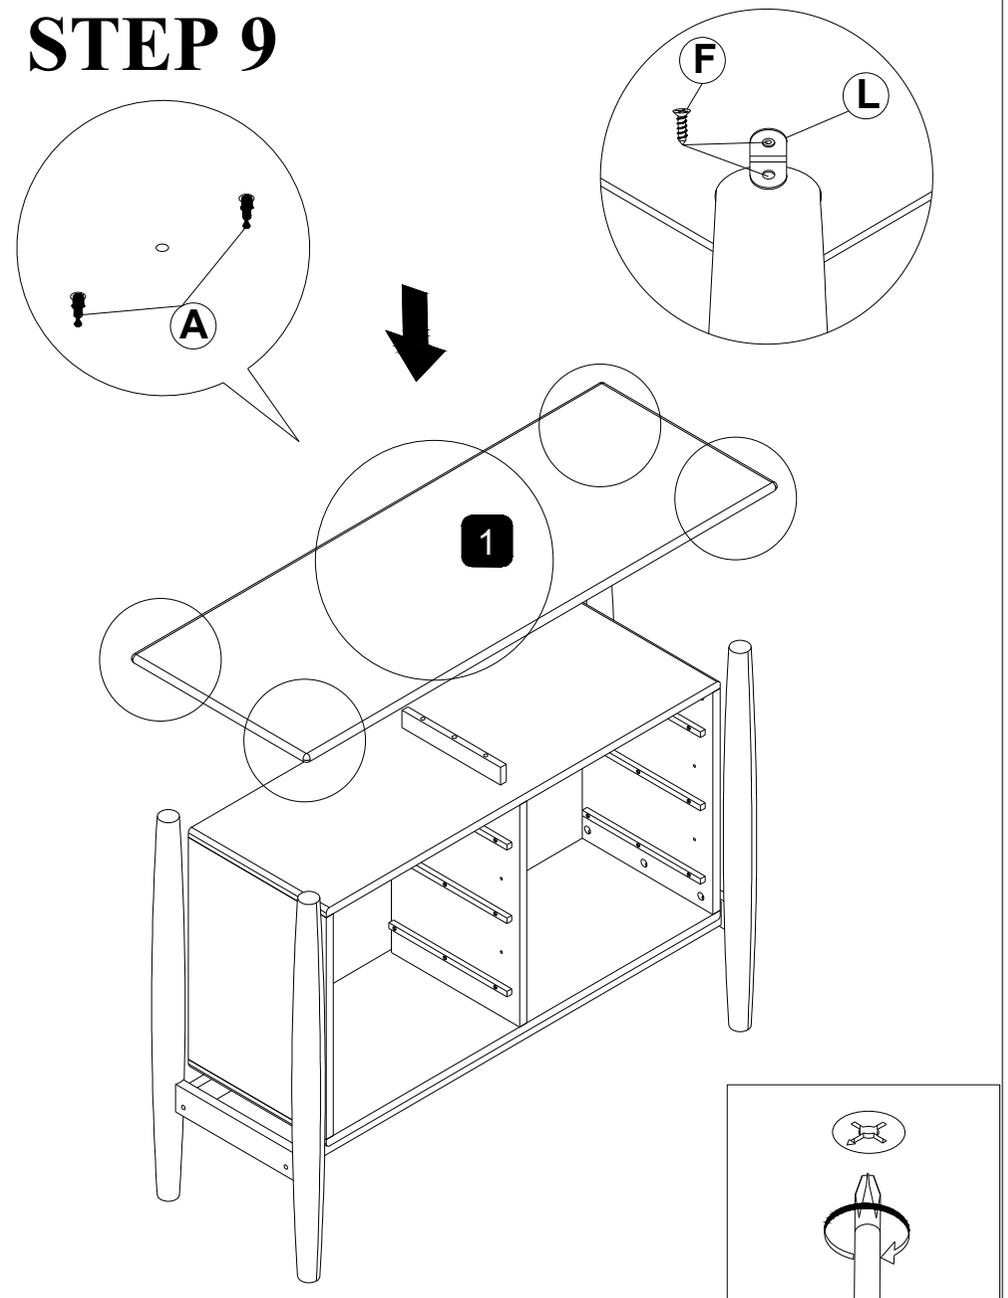

- 
A X 2pcs
- 
L X 4pcs
- 
F X 8pcs

STEP 10

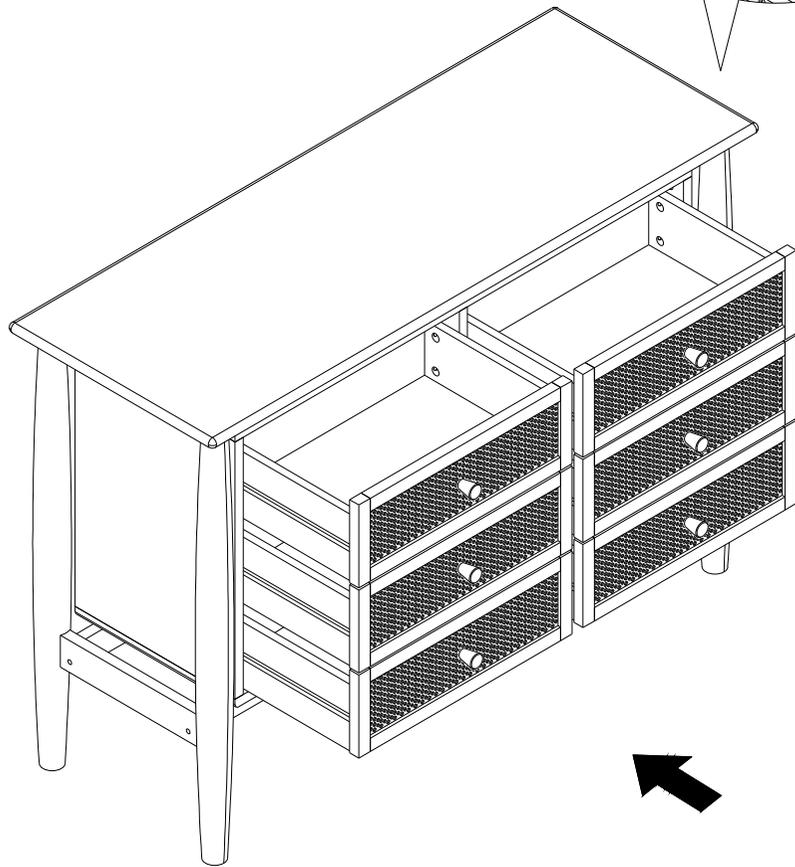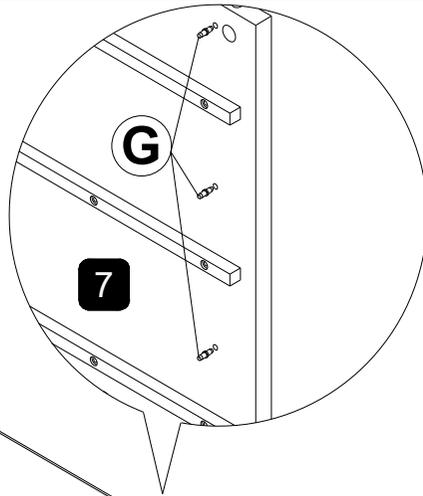

ASSEMBLY COMPLETE

CONTINUE TO ASSEMBLY
ANTI TIPPING KITS





G X 12pcs

ANTI TIP KIT

WARNING : Tipping furniture can cause serious injury or death. Please ensure you install the Anti Tipping Kit supplied with this furniture to prevent tipping. If you are unsure how to install, please refer to a qualified professional for installation advice. PLEASE EDUCATE YOUR CHILDREN THAT CLIMBING ON DRAWERS OR PULLING ALL DRAWERS OUT SIMULTANEOUSLY IS **DANGEROUS** AND MAY INJURE THEM.

WARNING!! When drilling a wall, ensure that there are no hidden electrical, water or gas pipes.

Please keep this document for future reference.

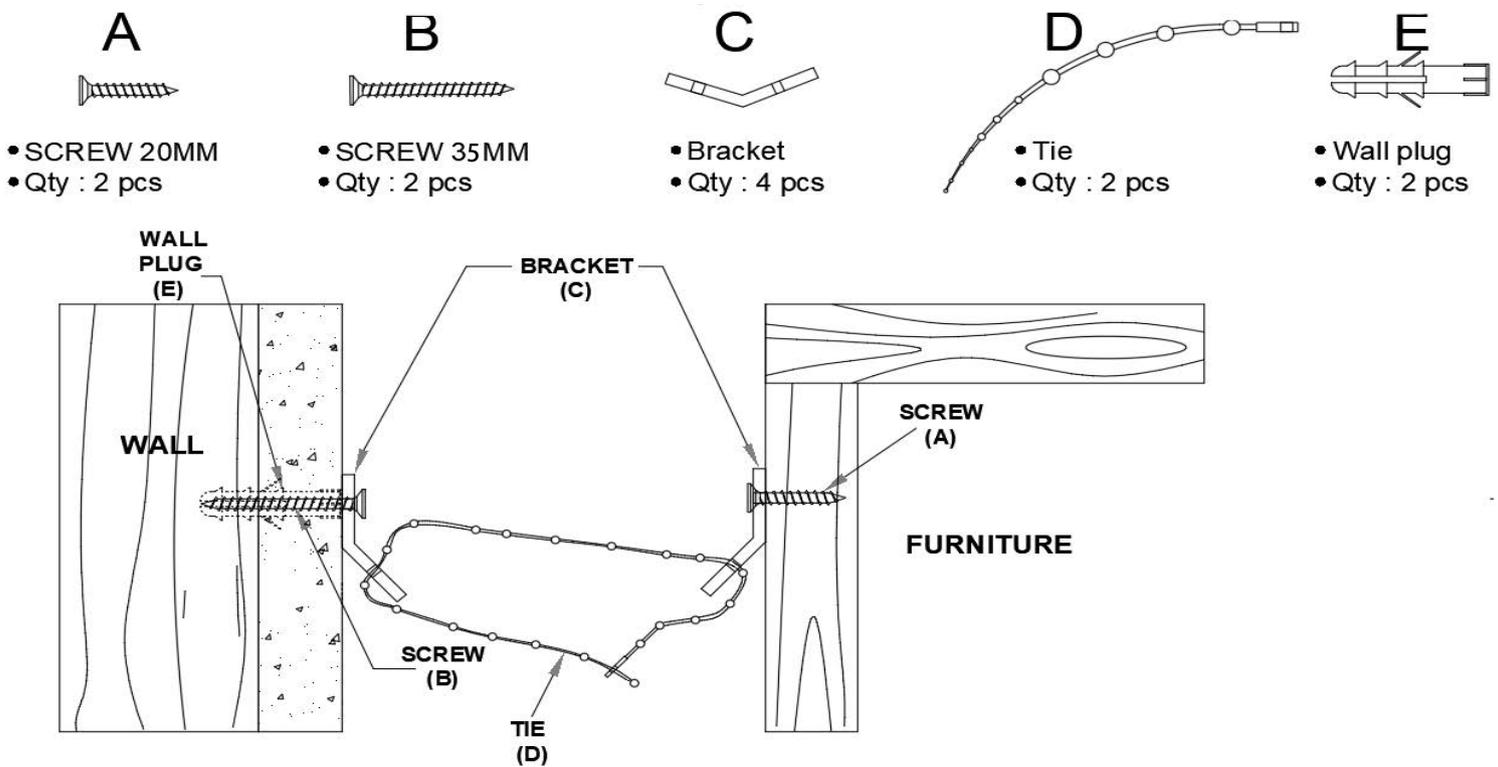

INSTRUCTIONS

STEP 1

Decide the location you want to position your furniture

STEP 2

Determine the material the wall is constructed of. Ideally find a wall stud in order to attach a bracket. If this is not possible and you need to secure the bracket into plasterboard or concrete/brick, YOU MUST GO TO A HARDWARE STORE AND SEEK ADVICE TO WHAT FIXTURES YOU REQUIRE TO SECURE THE BRACKET EFFECTIVELY. Without the proper anchor hardware this Anti Tip kit will be ineffective.

ANTI TIP KIT

STEP 3

Attach one of the BRACKETS(C) to selected position on the wall using SCREW(B) and WALL PLUGS(E) **OR** appropriate hardware that will securely anchor the bracket to the wall. Make sure you accurately measure the position of the wall bracket so it will marry up with the position of the second bracket that will be attached to the rear of the furniture piece.

STEP 4

Attach the second BRACKET(C) to the rear of your furniture using SCREW(A). Ensure you attach bracket into a solid piece of timber and not backing board as this will not provide a strong anchor point and may damage your furniture. The bracket should be positioned approximately in the center of the furniture and slightly lower than the top to avoid seeing the tie.

STEP 5

Once both brackets are securely installed, position your furniture as close to the wall as possible and thread the NYLON TIE(D) through both brackets as shown and tighten until snug. Do not over tighten.

Installation is now complete

PLEASE CHECK REGULARLY THAT THE ANTI TIP HARDWARE IS INSTALLED PROPERLY.

PLEASE NOTE WARRANTY DOES NOT COVER DAMAGE CAUSED TO FURNITURE BY ANTI TIP INSTALLATION. IF YOU ARE NOT CONFIDENT INSTALLING THIS ANTI TIP KIT YOU SHOULD ENGAGE A PROFESSIONAL TRADESMAN WHO IS QUALIFIED TO CARRY OUT THE WORK.

IF ANY COMPONENTS OF THIS KIT ARE MISSING OR DAMAGED PLEASE DO NOT COMMENCE INSTALLATION AND CONTACT SELLER IMMEDIATELY FOR SPARE PARTS