
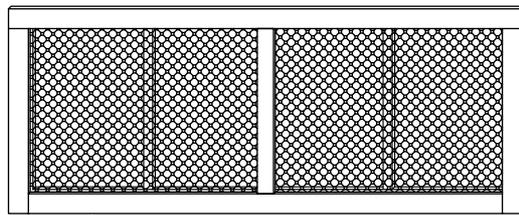


Full Headboard


Assembly Instructions

WII-0419


1 Parts List

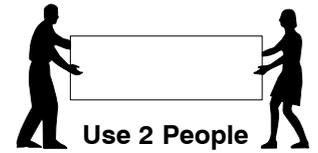


A Headboard Panel x 1



B Headboard Side Panel (Left hand) x 1



C Headboard Side Panel (Right hand) x 1



D Support Bar x 2




Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Hardware List



1 M6 x 60mm JCB x 4



2 M6 x 35mm JCB x 4



3 Barrel Nut x 4



4 Wood Dowel (M10 x 40mm) x 4



5 Spring Washer x 4




6 Flat Washer x 4



7 M4 Allen Key x 1

3 Fit the Headboard Side Panel (B & C) to the Headboard Panel (A).

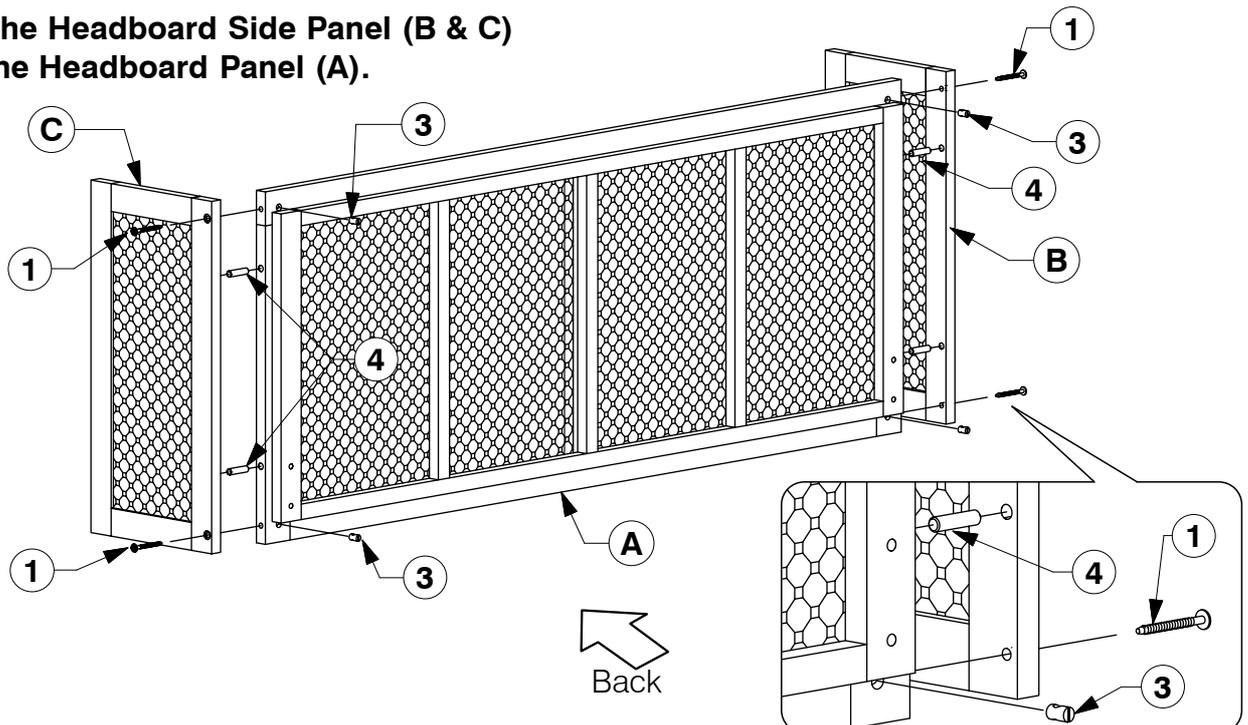


97151 Full / Queen Headboard

Assembly Instructions

W11-0419

4 Assemble the Support Bars (D) to the Headboard Panel.

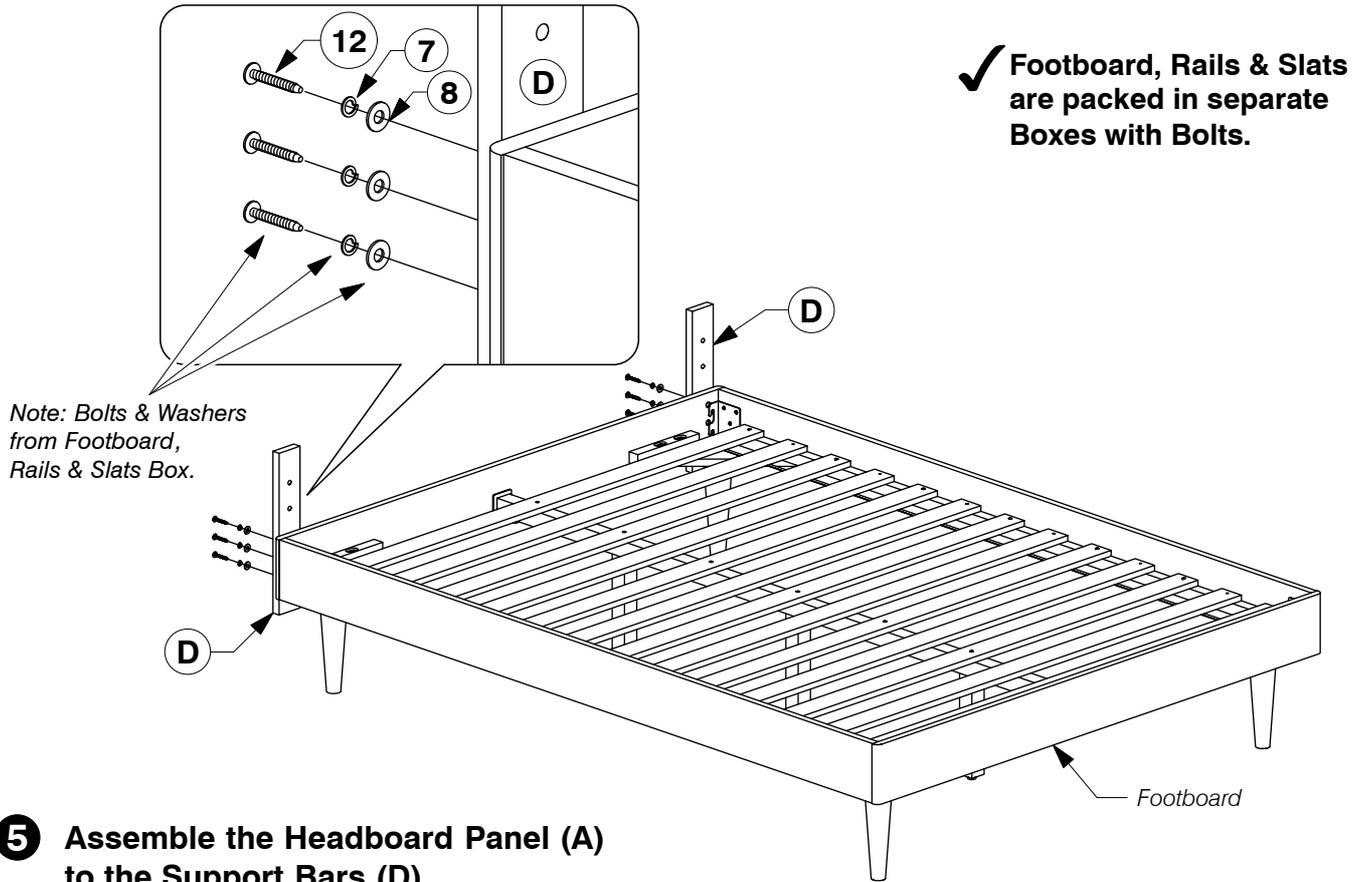

5 Assemble the Headboard Panel (A) to the Support Bars (D).

