






INSTALLATION GUIDE


For Samsung




JOIN OUR PROUD
SAHARACASE COMMUNITY

We are so excited to have you become part of the Sahara Case community. You're not just holding an ordinary case but rather a fine crafted product that will provide maximum protection for your phone while looking great.



#SAHARACASE


SaharaCase
COUPON

10% OFF
Your Next Purchase

OFF10
COUPON CODE

50% OFF
Screen Protector

HSPTM015
COUPON CODE

1 Go to www.saharacase.com

2 Add products to your cart


3 At checkout insert the code

Saharacase Warranty

1 Year SaharaCase
Replacement Warranty

30 day Free Tempered Glass
replacement shipped to your door.

Questions? Contact :
- support@saharacase.com
- saharacase.com/support
- 888.850.2871




ZERODAMAGE®
TEMPERED GLASS

Follow these 6 Easy Steps


Watch the Installation video

Installation Guide


<https://saharacase.com/support/install-videos>

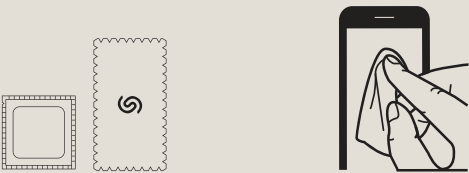


1. Wash your hands with soap and dry them. Clean the screen of your device thoroughly with the provided alcohol pad and lint free cloth.

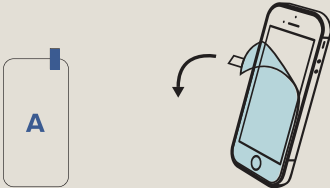


2. Apply Blue Lint Remover (Sticker A) to your screen. Then peel off to remove any extra lint and dust.

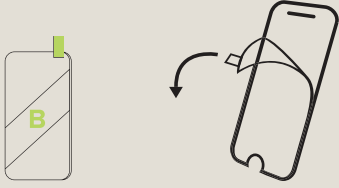


3. Peel back the protective layer (Sticker B) from screen protector. This is the adhesive side of your screen protector and should be facing the phone screen.



4. Line up the bottom edge of the screen protector and apply the adhesive side to the screen. Press the middle of the screen protector with your finger after aligning the screen, and the protector will start the self-adhering process.



5. Carefully purge the remaining bubbles using the included squeegee, starting from the center and going towards the sides. To realign the screen use the squeegee to peel the tempered glass, without touching the adhesive side with your fingers.

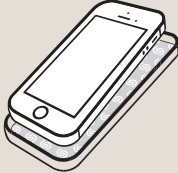

6. Insert the phone into Sahara Case.