



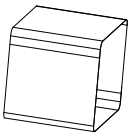

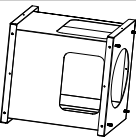


Parts supplied

No.	Part	Qty.
1	 Extension chimney	1
2	 Extension bracket	1
3	 M15/64" x 3/16" nut	4
4	 Span washer (dia. 7/16" x 11/32" x 1/64")	4
5	 Washer (dia. 1/2" x 1/4" x 3/64")	4
6	 Short screw 1/8" x 15/32"	2

Installing the hood

Step 1:

- Refer to the Use & Care Guide of range hood and below chart of "Dimension A", locate the upper bracket to lower bracket to make the correct mounting height above the cooktop. (fig. ①)

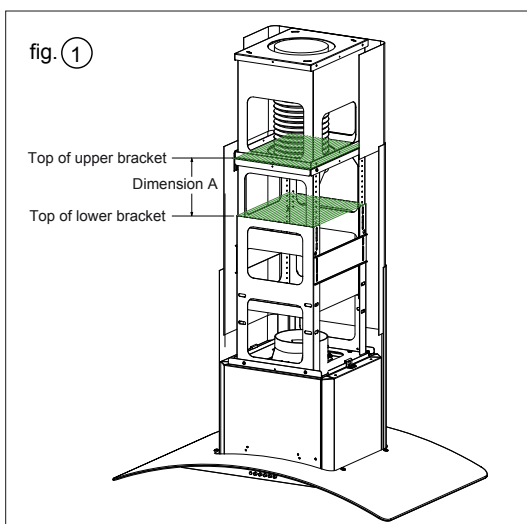


Desired range hood distance above a 36" high cook top

10 Feet Ceiling height								
Mounting height	29"*	30"*	31"*	32"*	33"	34"	35"	36"
A	13-25/32"	12-25/32"	11-25/32"	10-25/32"	9-25/32"	8-25/32"	7-29/32"	6-25/32"

*: Recommended mounting height


Step 2:

- Mount upper and lower bracket by securing 8 short screws and washers (19 and 12 in Use & Care Guide). (fig. ②)

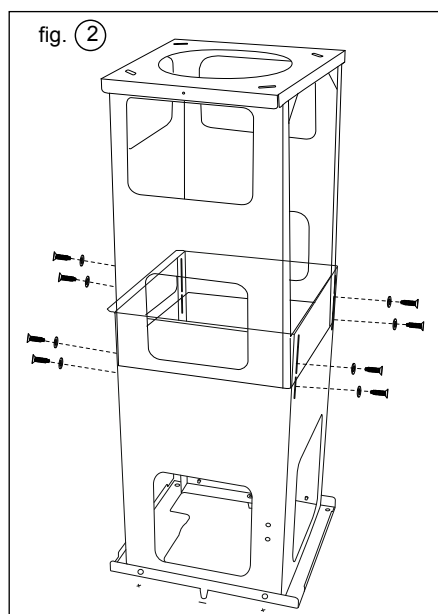


Step 3:

- Mount the Extension bracket (2) on the bracket assembly (Upper and lower bracket) with 4 sets of nuts (4) and washers (3). (fig. ③)

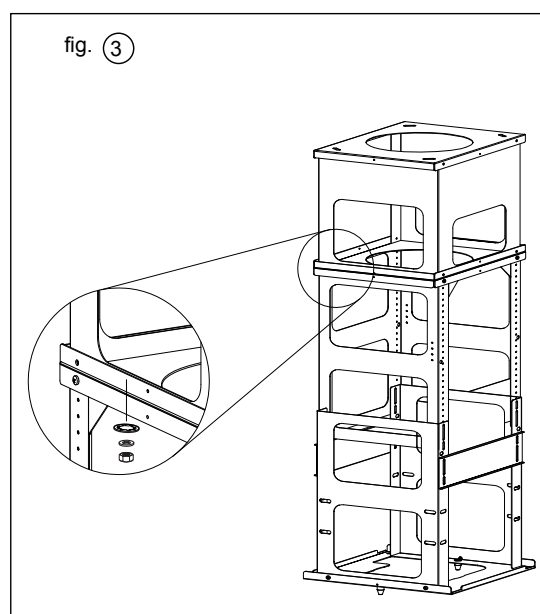


Step 4:


- Mount the bracket assembly to the ceiling with 4 sets of long screws and washers (10, 11 in Use & Care Guide). (fig. ④)
- Make sure the power cable for the range hood is routed inside the bracket.

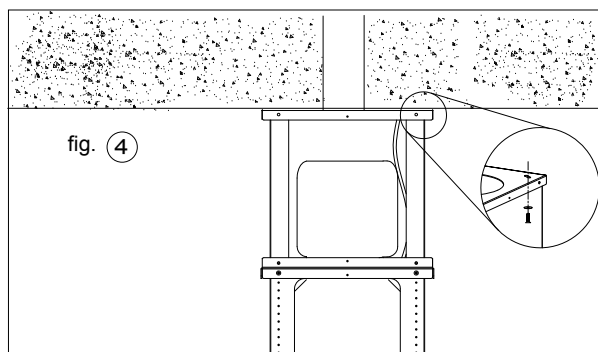**Step 5:**


- Attach the exhaust duct. In the example below, round metal duct furnace pipe has been used. Add the duct tape to the metal duct furnace pipe to insure a tight connection. (fig. ⑤)

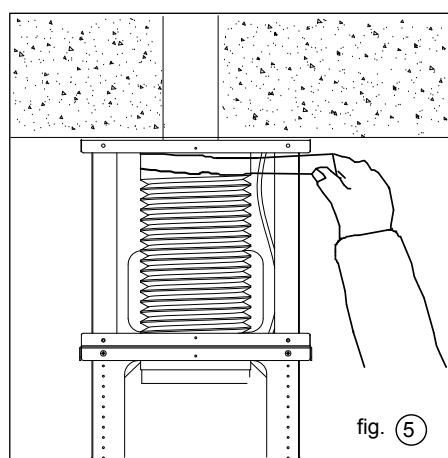**Step 6:**


- Fix the extension chimney on extension bracket
- Place the lower and upper chimney on the bracket assembly, and hold it up with screwdriver (fig. ⑥)

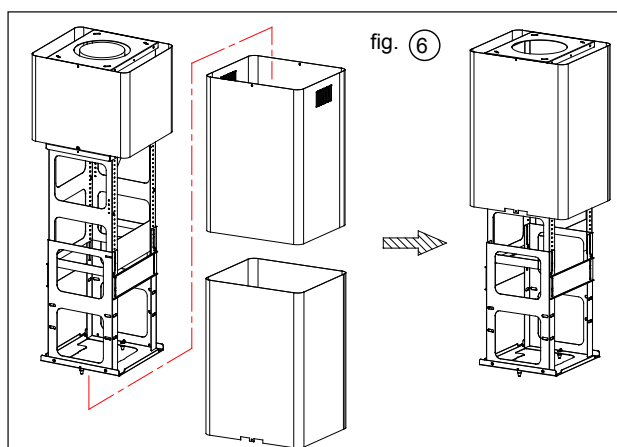**Step 7:**

- Push the range hood onto the lower bracket. And fix them with 4 sets of nuts, span washers and washers (13, 14 and 15 in the Use & Care Guide.) (fig. ⑦)

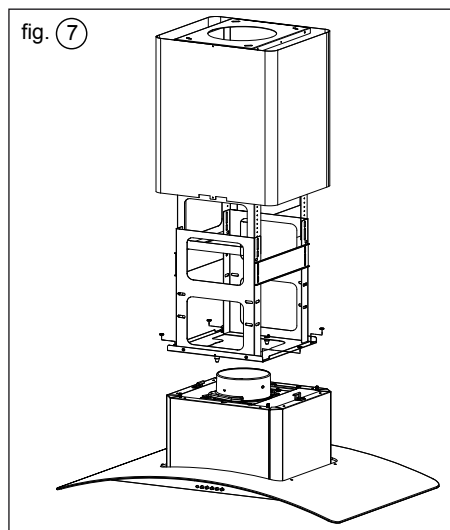**Step 8:**

- Connect the power cord
- Connect the duct pipe to the collar (fig. ⑧)

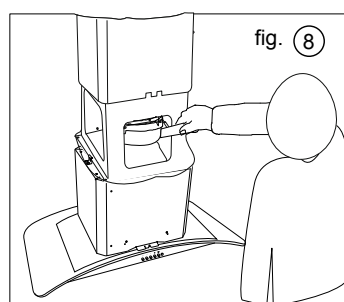**Step 9:**

- Pull down the lower chimney
- Fix the upper and lower chimney with 4 short screws (fig. ⑨⑩)

