WD405CS / WD405CB


LG SIGNATURE

LG SIGNATURE 1.0 cu. ft. 29" SideKick™ Pedestal Washer

1.0 cu. ft. Right Size Capacity
Premium Brushed Platinum Steel
SmartDiagnosis™
Electronic Control Panel with Dual LED Display
Compatible with LG Signature Washer (WM9900HSA, WM9901HBA)







Touch Buttons

WASH PROGRAM

3 Motion Technology

Formula Intimates, Hand Wash, Rinse+Spin, Tub Clean, Downloaded

WASH OPTIONS

Number of Options 5
Warm Water, Rinse, Control Lock, Wi-Fi, Remote Start
WASHER DETAILS

 No. of Temps
 2

 Warm, Cold

 Twin Wash*Compatible
 Yes

 CONVENIENCE FEATURES

 End of Cycle Signal
 Yes

 Auto Suds Removal
 Yes

 Forced Drain System
 Yes

 Child Lock
 Yes

 Leveling Legs
 4 Adjustable Legs

 Smart Diagnosis (v3.0)
 Yes

MOTOR AND AGITATOR

 Motor Type
 Direct Drive Motor

 Motor Speed
 Variable

 Max RPM
 700

MATERIALS AND FINISHES

 NeveRust* Stainless Steel Drum
 Yes

 Cabinet
 VCM

 Control Panel
 Plastics

 Top Plate
 N/A

 Door Rim
 Glass / Black

 Door Cover
 Transparent Tinted Glass

 Brushed Platinum Steel (S)

 Brushed Black Steel (B)

POWER SOURCE Rating

Electrical Requirements 120V, 5 Amps
Type Electric

ACCESSORIES

Magnetic Remote Control

DIMENSIONS

Product (WxHxD) (
Carton (WxHxD) 3
Weight (Product/Carton) 1

LIMITED WARRANTY
Parts and Labor

Direct Drive Motor Drum

WD405CS WD405CB N/A

29" x 14 1/8" x 30 7/8"
(52 3/4" with drawer open)
31 9/16" x 16 1/2" x 33 27/32"
108 / 118 lbs

Limited Lifetime 195174072271 195174119785

10 Years

UL Listed

WD405CS/ WD405CB

LG SIGNATURE SideKick™ Pedestal Washer

QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS

 Product (WxHxD)
 29" x 14 1/8" x 30 7/8"

 Depth with Drawer Open
 52 3/4"

 Carton Dimensions (in) (WxHxD)
 31 9/16" x 16 1/2" x 33 27/32"

POWER SOURCE

Ratings UL Listed
Electrical Requirements 120V, 5 Amps

INSTALLATION

MARNING

- Two or more people are required when moving, unpacking, and stacking the washer. Failure to follow this warning may result in damage to property or serious bodily harm.
- Store and install the washer where it will not be exposed to weather or to temperatures below freezing. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Properly ground the washer to conform with all electric governing codes and ordinances. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- To reduce the risk of electric shock, do not install the washer in humid spaces.
 Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- To ensure proper air flow, do not block the large opening on the bottom of the washer with carpeting or other materials.
- Do not remove the ground prong. Do not use a 2-prong adapter or 2-wire extension cord. Failure to follow these warnings can cause serious injury, fire, electric shock, or death.

A CAUTION

- This pedestal washer must be installed underneath a matching front-loading LG washing machine manufactured after 2009. (The 29" wide machine must be stacked under a 29" wide LG front-loading washer. The 27" wide machine must be stacked under a 27" wide LG front-loading washer.)
- The pedestal washer will not work as a standalone unit.
- The pedestal washer must be stacked under an LG brand appliance in order to operate properly.

Power Outlet


- The power outlet must be within 60 in. (1.5 m) of either side of the washer.
- The appliance and outlet must be positioned so that the plug is easily accessible.

Flooring

- To minimize noise and vibration, the washer MUST be installed on a solidly constructed floor.
- Allowable slope under the entire washer is a maximum 1 inch. difference from side to side or from front to back.
- Installing on carpeting and soft tile surfaces is not recommended.
- Never install the washer on a platform or weakly supported structure.



PRODUCT DIMENSIONS

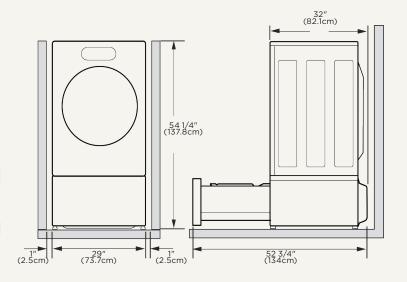


 To ensure sufficient clearance for water lines and airflow, allow minimum clearances of at least 1 in. (2.5 cm) at the sides and 4 in. (10 cm) behind the unit. Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

CONNECTING THE DRAIN HOSE


Please read the Owner's Manual installation instructions first after purchasing this product or transporting it to another location.

CONNECTING THE WATER LINES WITH FULL-SIZE APPLIANCES

 Front-loading washer and pedestal washer with dryer

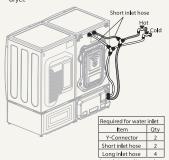


Front-loading washer and pedestal washer with Turbo Steam dryer

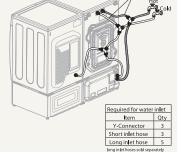


CONNECTING THE DRAIN HOSE WITH FULL-SIZE WASHER


 Front-loading washer and pedestal washer with dryer.

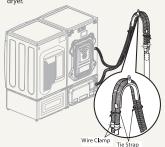

 Front-loading washer and pedestal washer with hybrid dryer

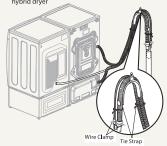

DETAIL VIEW OF DRAIN CONNECTOR CONNECTION



For narrow standpipes, insert hybrid dryer drain hose in center of drain connector. DO NOT insert dryer drain hose further than 1 inch (2.5 cm). Use tie straps to keep hoses in place.