



A66 MASSAGE CHAIR

OPERATION INSTRUCTIONS

SAVE THESE INSTRUCTIONS



(Please Read the Manual Carefully Before Installing and Using the Product)

Thanks for purchasing our product. Please read this instruction manual carefully in order to know how to use this product correctly. Please pay attention to all safety warnings. Keep this manual in safe place for future reference.

Note: Our company reserves the right to alter the design and manual appropriately to suit the functions of products circulating in the market and in that case you may be informed. The specific product functions and color shall prevail in kind.

CONTENTS

Before Use

Safety Precautions	02-04
Installation Parts	05
Place Massage Chair	06-07
Before Use	08-09
Product Structure	10-11
Armrest Shortcut Keys	12-13

Usage Method

Operation Instructions	14-23
Important Safety Instructions	24-25

Maintain

Cleaning and Maintenance	26
Name and content identification table of hazardous substances in this product	27

Important

Troubleshooting	28
Product Specifications	29

Safety Precautions (must be observed)

- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

 Warning	Indicates that serious injury or death may result from improper use.
 Caution	Indicates that misuse may cause minor injury or property damage.

- Please pay attention to the symbol before each safety item.

 Forbidden	Absolute prohibition
--	----------------------

The following populations should not use this product

 Forbidden	<ul style="list-style-type: none"> ■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not play with instruments. ■ Patients with osteoporosis. ■ Patients with heart disease or wearing electronic medical devices such as a pacemaker. ■ People who have a fever. ■ Pregnant women or women on their menstrual period. ■ Patients who are injured or have a skin disease. ■ When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product. ■ People who are told by their physicians to have rest or who feel unwell. ■ People whose bodies are wet are forbidden to use this product. ■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product. ■ If the supply cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department
--	---

Safety Precautions (must be observed)

Important safety warnings	
 Warnings	<ul style="list-style-type: none"> ■ Do not allow children to touch any movable part of this product. ■ Use the well-grounded power supply unit suitable for this product. ■ Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product. ■ Operate this product as instructed in this manual. ■ Do not use any parts or accessories which are not recommended. ■ Do not use this product outdoors. ■ Please read the Operation Instructions carefully before operation. ■ Never use this product for any other purpose not listed herein. ■ 20 minutes of usage each time is recommended. ■ Do not use this product if the cover or leather is broken or damaged. ■ Do not drop anything into this product. ■ Never fall asleep while using this product. ■ Do not use this product if you are drunk or feel unwell. ■ Do not use this product within one hour after a meal. ■ Do not use this product with excessive force to avoid any injury.

Safety precautions	
 Caution	<ul style="list-style-type: none"> ■ Check whether voltage is consistent with the specification of this product. ■ Never insert or pull out the plug with a wet hand. ■ Do not let water flow into this product to avoid electric shock or cause damage to this product. ■ Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden. ■ Do not damage the wire or modify the circuit of this product. ■ Do not clean live parts of this product with a wet cloth such as a power switch and plug. ■ Be away from this product in case of power failure to avoid any injury if power is restored suddenly. ■ Stop using this product at once while it works abnormal, and consult your local supplier. ■ Stop using this product if you feel unwell, and consult your health care practitioner.

Storage conditions	
 Caution	<ul style="list-style-type: none"> ■ Storage room temperature: 5 °C to 40 °C. ■ Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Safety Precautions (must be observed)


Product service and maintenance	
 Caution	<ul style="list-style-type: none"> ■ This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission. ■ Do not forget to turn off the main power switch after usage. ■ Do not use this product if the power socket becomes loose. ■ In case of none use for long period, it is recommended to unplug the machine and store in a dry and dust free room. ■ Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine. ■ Please clean this product with dry cloth. Never use thinner, benzene or alcohol. ■ The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed. ■ Do not use a sharp object to stab at this product. ■ Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving. ■ Please use this product intermittently. Do not keep it working continuously for a long period of time.

Operating environment	
 Caution	<ul style="list-style-type: none"> ■ Do not use this product in a very moist environment such as the bathroom. ■ Stop using this product immediately when the ambient temperature changes sharply. ■ Do not use this product in any heavily-dusty or caustic environment. ■ Do not use this product in a small space or a place without good ventilation.

Solutions to ordinary malfunctions	
 Caution	<ul style="list-style-type: none"> ■ If the motor sounds during operation of this product, this is the normal operation sound. ■ If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on. ■ If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.


Installation parts

Footrest Installation Instructions

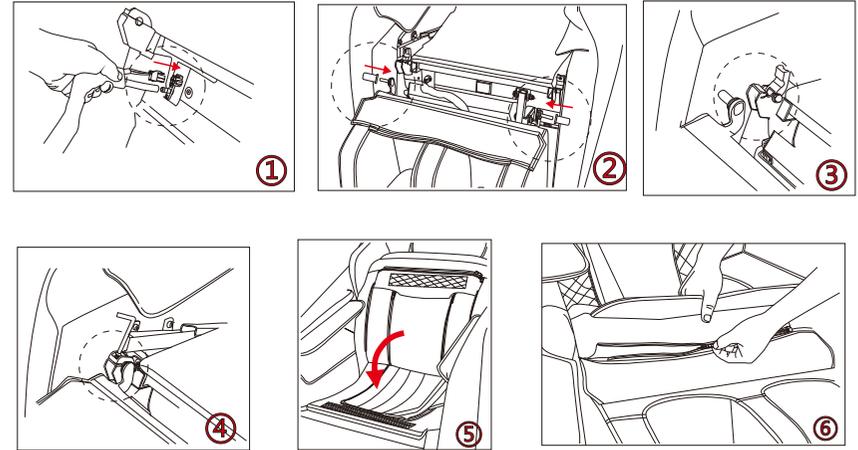

- ①. Connect the wiring harness terminal of the footrest and connect the air tubes
- ②. Install the calfrest axle sleeve
- ③. Open the calfrest hanger cover
- ④. Secure the calfrest assembly
- ⑤. Attach the cover
- ⑥. Zip up the zipper connecting the calfrest and the cover

Install tablet holder

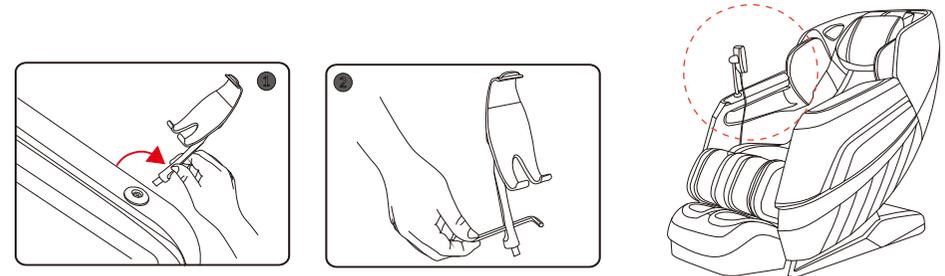

Insert the lower end of tablet holder into the socket and turn clockwise to secure the holder into place. Use an allen key to tighten the remote control bracket.


Place massage chair

Installation placement

Make sure there is enough space for the massage chair can be tilted at least 8 cm.



Do not expose the massage chair directly to high temperature environment due to sunlight (such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft cushion for long-term use in a designated location. When laying the cushion, the size of the cushion should be enough to cover. Keep the range where the machine touches the floor and the range where your feet touch the floor.

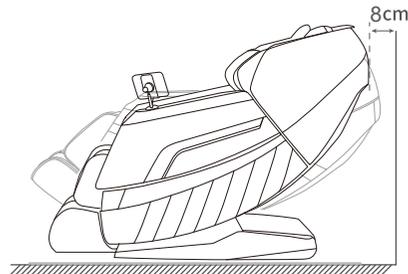


Product lift instruction

Require team work to lift and move the chair to avoid injury.



1. Please lift the massage chair to move it on vulnerable ground such as wooden floor.
2. When moving on a similar wooden floor, it is recommended to lift it. Avoid damage to the casters. When the floor is lifted and moved to the designated position, be careful to keep your hands out of the way to avoid injury, and be careful of your feet being crushed. Do not let go of the unit until the unit is completely flat, the floor may be damaged, therefore, it is recommended to place mats, etc. on the floor.

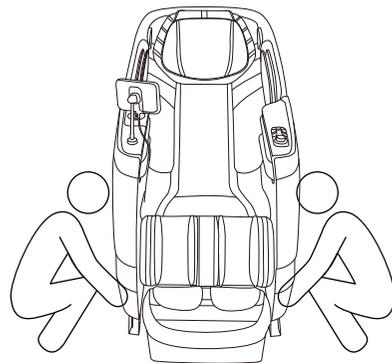

Place massage chair


Move method

Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.

NOTE: Excessive force to tilt will cause the chair to tip over completely and product damage.





1. Before moving, please shut down the machine properly, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

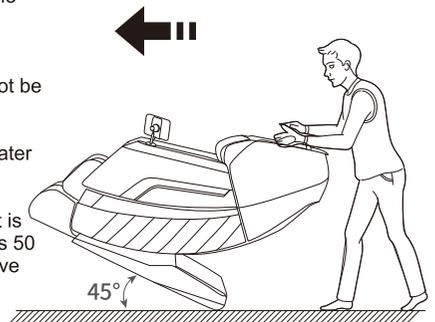

How to disassemble and use headrest cushion and backrest cushion


Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

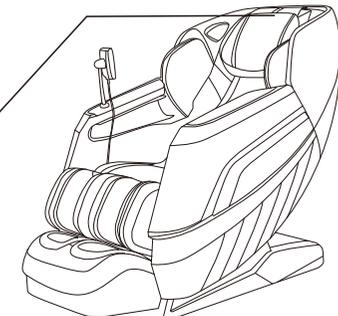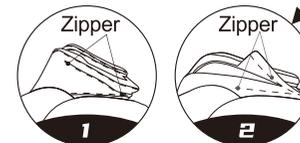

Before use


Check around

Make sure that there are no people, pets and other objects around the unit.

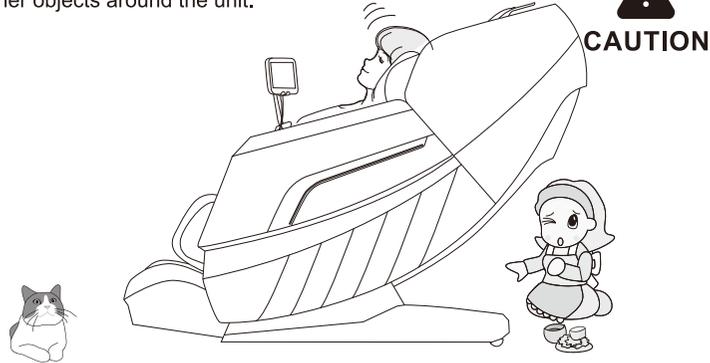

Make sure there are no foreign objects in the gaps of the machine

Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.
Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.
Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

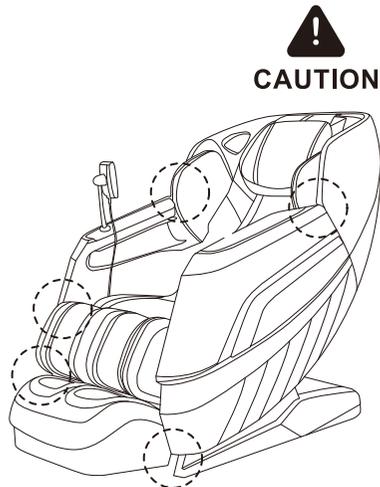


Before Use


Turn on the power

! Caution


Plug in power cord

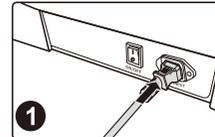

Schematic diagram of power on

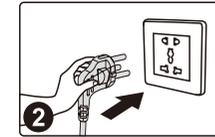

Turn on the power switch ("I" position)

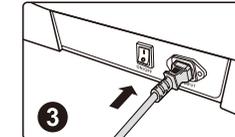


Warn

- Please check whether the power cord and power plug are damaged before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.


Product Structure

Parts description

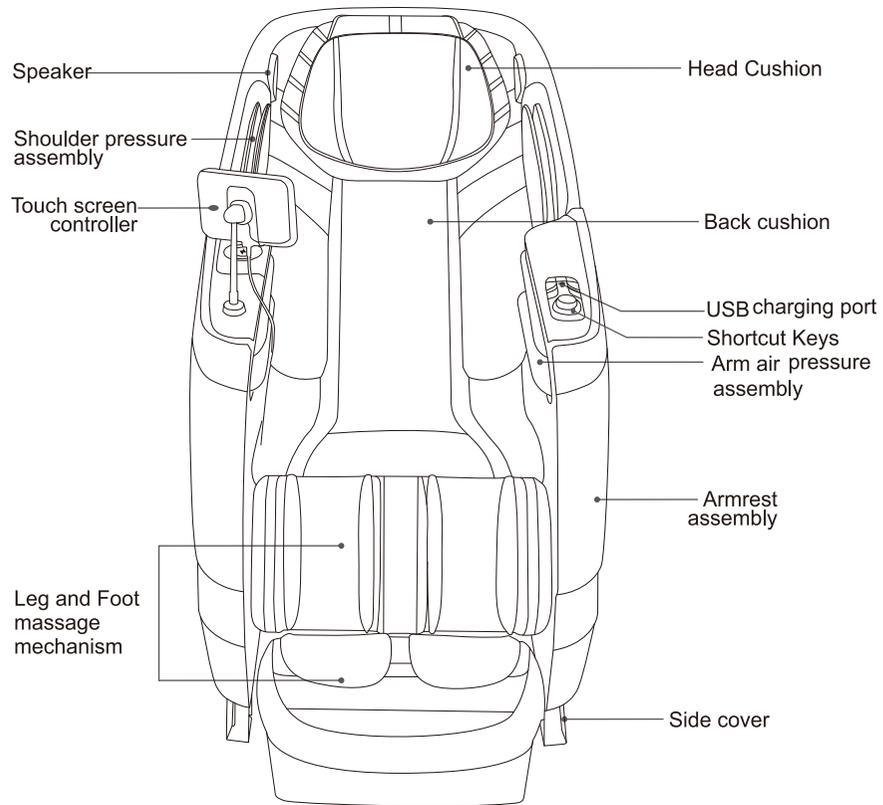


Product Structure

Function distribution

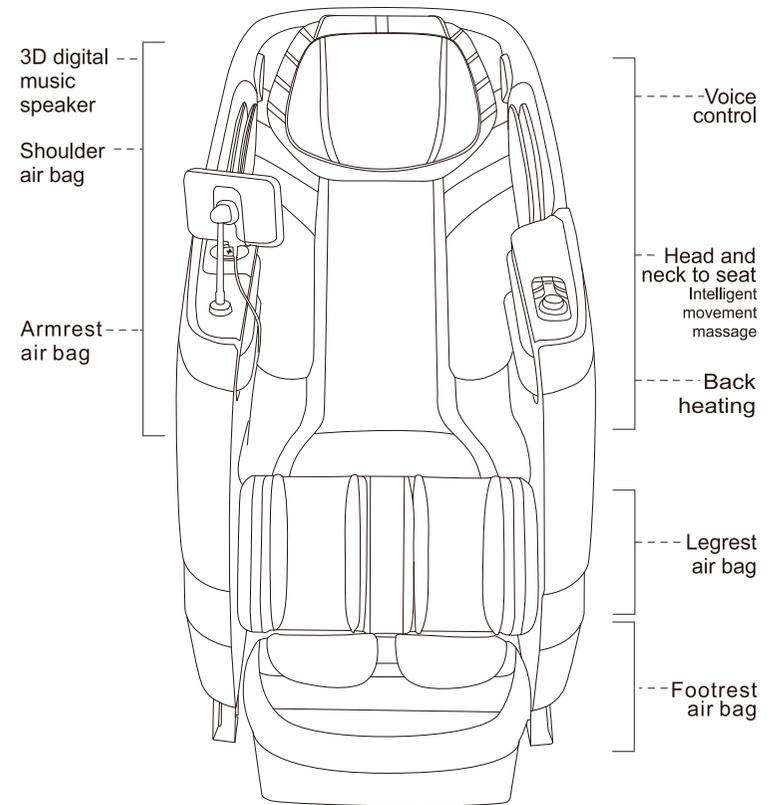

Armrest Shortcut Keys

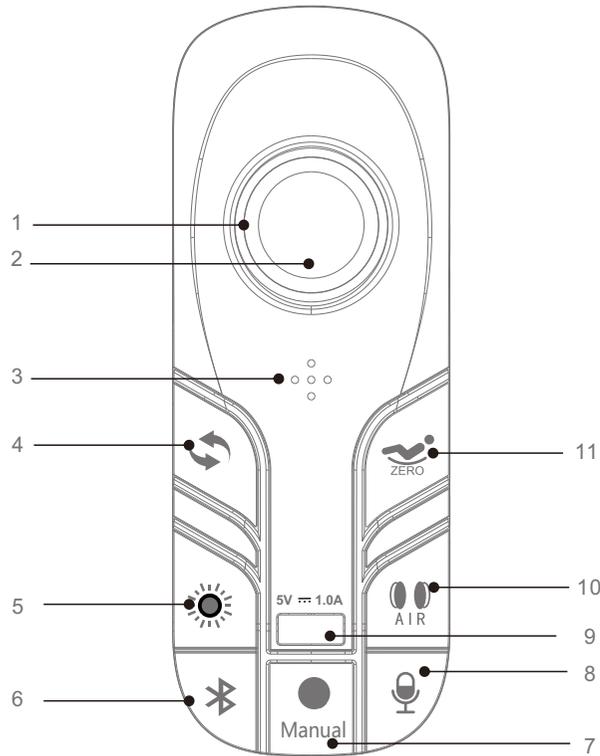

- 1.Linkage adjustment key: Adjust the linkage of the backrest frame and calf frame lifting.
- 2.ON/OFF key: Turn the massage chair on/off.
- 3.Voice control input port.
- 4.Auto mode key: Switches between automatic massage functions.
- 5.Heat function key: Turn the heat function on/off.
- 6.Bluetooth function key: Turn the Bluetooth function on/off.
- 7.Manual mode key: Switch between various massage techniques.
- 8.Voice control key: Turn on/off the voice control function.
- 9.USB charging port: For intelligent device charging.
- 10.Air pressure key: Switch air pressure mode functions.
- 11.Zero Gravity key: Adjust the massage chair to the zero-gravity angle.

Armrest Shortcut Keys

Function	Description
	Power key: Press and hold for 2 seconds to turn on. Press briefly to pause during use. Press and hold for 3 seconds to turn off.
	Linkage lying knob: By rotating this knob clockwise, the backrest will move downward slowly and the legrest will rise slowly; by releasing it, such DOWN/UP action of the backrest and the legrest will be stopped. Linkage sitting knob: By rotating this knob counterclockwise, the backrest will rise slowly and the legrest will move downward slowly; by releasing it, such UP/DOWN action of the backrest and the legrest will be stopped
	Auto mode key: each time the key is short pressed, it will be switched to next automatic massage function.
	Zero-gravity key II : the positions of the legrest and the backrest can be automatically adjusted to the positions II for zero gravity.
	Heat treatment key: Click the key to enable or disable the heat treatment function.
	Air pressure key: Each time the button is pressed, it switches to an air pressure mode, with a total of four modes (including turning off air pressure), which can be switched cyclically.
	Bluetooth On/Off Switch, default set to On.
	Press this key to switch the manual program.
	Voice wake up button: short press this button to wake up the voice control function. Long press 3 seconds to open/close voice control function
	USB jack: USB charging port, you can charge smart devices (such as mobile phones).

Operation Instructions

Button distribution of control panel



Heat Adjustment

Press this button to cycle through the heating of the waist, legs, waist and legs simultaneously, and turn off the heating.

Seat Adjustment

Click to enter the seat adjustment page, where you can adjust the zero-gravity mode among three levels. The backrest can be adjusted up and down, and the calf rest can be extended or retracted, allowing for various adjustments.



Operation Instructions

Please refer to page 4 for locating the power cord socket. Plug in the power cord into the socket and turn on the power switch. Once done, the indicator light will illuminate, confirming the power connection.

1. Power On Interface

Press the "⏻" button on the remote control to power on. Enter the power on interface, select the corresponding icon, and enter the corresponding operating mode.



2.Startup Procedure


Once powered on, the massage chair will initiate a self-check process on its interface.



Operation Instructions

3. Smart Posture Detection

Upon startup, the chair initiates the smart posture detection process. This function automatically adapts the massage position to the user's body size for optimal comfort. Press "▶" to pause the detection, "✕" to skip it, and "⏻" to power down directly.

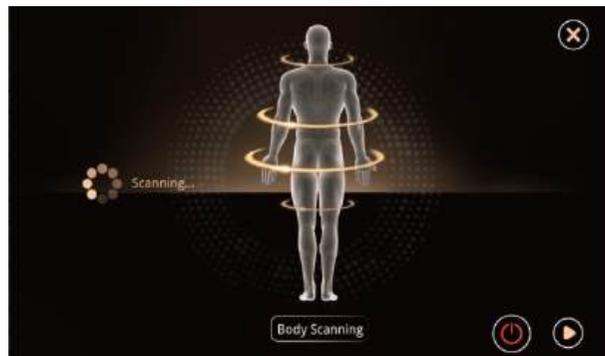

4. Shoulder Position Detection

After the posture detection is completed, the massage chair will automatically enter the shoulder position detection. Then, use the "Up/Down" buttons to control the upward and downward movement of the rollers. When the rollers are in the ideal position, press "ok" to confirm the position, "▶" to pause the detection, "✕" to skip the detection, and "⏻" to shut down directly.



Operation Instructions

5. Technique

In manual mode, press the "Technique" button to choose from the techniques and three massage intensities. 4D Method combined with other Technique, The lower part allows manual adjustment of Technique, Focus Zone, Airbags Massage.



6. Focus Zone

In manual mode, press the "Focus Zone" button to choose among Spot, Region, Whole Body. The position of the massage balls can be adjusted up and down using "▲" and "▼" buttons.



Operation Instructions

7. Airbag Massage

Enter the manual mode and select from various airbag positions for Calf, Waist, Arm, and shoulder.



8. AI Voice Control

Click to turn AI voice control on or off.



Operation Instructions


9. Settings

Enter the settings interface to adjust brightness levels, button sound volume, Bluetooth on/off, LED light on/off, screen Closure time, Time of massage, and choose from four language options.



10. Shutdown Interface

Click "⏻" to enter the shutdown interface and perform massage chair reset.

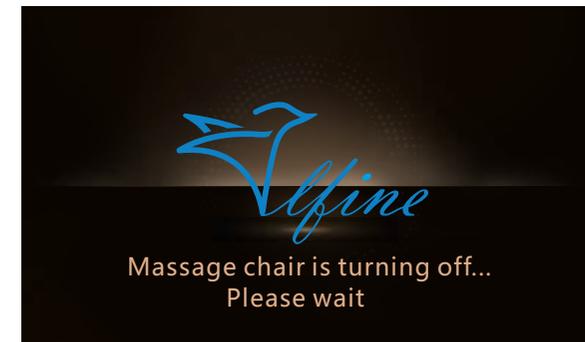

Operation Instructions

Flat Button Functions Description

-  **Power On/Off Key**
Press this key to enter the power on state. Press again to turn off the device.

Panel Automatic Programs Description

-  **Smart Massage:** Five automatic programs targeting different body areas, including Shoulder & Neck & Neck, Waist & Hip Massage, Spine Care, Joint Care, Leg Care, etc.

-  **Shoulder & Neck Massage:** Unique massage techniques targeting the shoulders and neck, effectively relieving shoulder and neck soreness and improving fatigue.
-  **Waist & Hip Massage:** Unique massage techniques targeting the waist and hips, effectively relieving waist and hip soreness and improving lower back fatigue.
-  **Spine Care:** Unique massage techniques targeting the spine, effectively relieving spinal soreness and improving spine fatigue.
-  **Joint Care:** Unique massage techniques targeting the joints, effectively relieving joint soreness and improving joint fatigue.
-  **Leg Care:** Unique massage techniques targeting the legs, effectively relieving leg soreness and improving leg fatigue.

-  **Health Care:** Five automatic programs simulating various scenarios from daily life, including Stress Relieving, Energy, Deep Massage, Sports Recovery, Brain Refresh, etc.

-  **Stress Relieving:** Gentle massage strength. Comforts the whole body, promotes blood circulation, relaxes the body and mind, effectively relieves various discomforts caused by long and continuous work, and eliminates overall fatigue.
-  **Energy:** Gentle and comfortable massage to relieve physical fatigue, relax the body and mind, and boost vitality.
-  **Deep Massage:** Combining kneading and acupressure techniques, as if with gentle hands, deeply massages to alleviate exhaustion and stress.
-  **Sport Recovery:** Relieves post-exercise muscle soreness, discomfort in the neck, shoulders, back, waist, and legs, and helps muscles recover after exercise.
-  **Brain Refresh:** Intense massage focused on the shoulders and neck, targeting gravitational pressure, and unblocking the body and mind.

Operation Instructions

-  **Relaxation:** Five combination modes targeting different body needs, including Comfort Massage, Quick Massage, Stretch Massage, Shiatsu Massage, and Airbag Massage.

-  **Comfort Massage:** Moderate massage strength, specially designed for female users, providing a massage program that shapes a graceful and light figure without burden.
-  **Quick Massage:** Quick and precise combination massage, saving time and relaxing the body.
-  **Stretch Massage:** Full-body stretching to cater to users who need to stretch their muscles, relieving fatigue and restoring body vitality and flexibility.
-  **Shiatsu Massage:** Utilizing kneading and acupressure massage techniques, as if gentle hands are providing a deep massage to soothe weariness and tension.
-  **Airbag Massage:** Gentle and sequential compression by airbags, progressively providing deep relaxation and decompression throughout the entire body.

-  **VIP:** Four sets of simulated automatic modes for different usage scenarios, including Good-night Sleep, Yoga Massage, Office Regimen, and TV Mode.

-  **Good-night Sleep:** Gentle massage with coordinated backrest elevation and rocking, alleviating fatigue and promoting a restful sleep, easing tension for a serene slumber.
-  **Yoga Massage:** Incorporates stretching movements for the body and legs, suitable for users who need to stretch their entire body muscles, providing moderate pressure to effectively restore body vitality and flexibility.
-  **Office Regimen:** Delicate massage with gentle strokes covering the entire body, promoting blood circulation, and inducing relaxation.
-  **TV Mode:** Soft massage suitable for older users, effectively rejuvenating the body and improving blood circulation.

-  **Special:** Three sets of simulated automatic modes featuring different massage techniques from various countries, including Thai Massage, Chinese Massage, and Swedish Massage.

-  **Thai Massage:** Simulates the techniques used in Thai massage, with a stronger intensity, providing a relaxing experience for the entire body.
-  **Chinese Massage:** Applies moderate pressure and combines various Chinese Tui Na techniques, such as acupressure, kneading, tapping, and patting, to deeply relax the muscles of the back.
-  **Swedish Massage:** Gradually applies varying levels of pressure to the entire body, effectively alleviating muscle soreness and promoting the recovery from fatigue.

Operation Instructions


Armrest Control Function Description

-  Refer to page 6 for the shortcut key: Press and hold this key for 3 seconds to power on or power off the massage chair.
- After powering on, Short press to pause massage, then short press to resume massage
-  After powering on, rotate the knob clockwise to raise the backrest; rotate it counterclockwise to lower the backrest.



NOTE

- *When adjusting the leg massage component, please do not sit in the massage chair. Pressing down suddenly on the leg component can cause damage to the mechanism.
- * Moreover, it may even cause the chair to overturn, resulting in unexpected injuries.
- * Before sitting in the massage chair, please ensure that the backrest is in an upright position. Adjust the recline angle according to personal preferences after sitting.
- * Do not place hands or objects in the gap between the seat and the leg component to prevent potential injuries.
- * When adjusting the angle, make sure there are no obstacles or small animals behind or under the backrest and leg component.

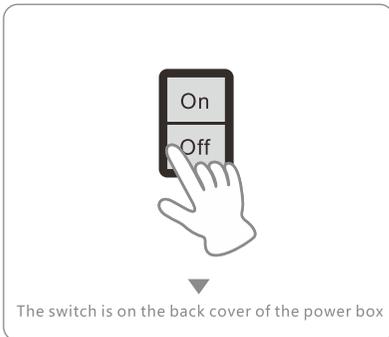

- *Press the power switch at the armrest to stop all massage motions.
- *When not in use for a long period of time, be sure to turn off the power switch.
- *Disconnect the power cord from the electrical outlet.
- *Do not drag the power cord to avoid damage to the cord, leading to fire or electric shock.

Bluetooth Connection

- *When the massage chair is on,the Bluetooth is on as the default setting,you may turn on Bluetooth on your mobile device,choose" A388 " to pair.
- *You can enjoy music when Bluetooth is connected.

Operation Instructions

AI voice control

- ▶ Supported Language: English
- ▶ To wake up the "Voice Module," users should speak "Hi Alfi" into the microphone. When the massage chair is in the shutdown mode, saying any of the following commands within 10 seconds will directly activate the massage.
- ▶ Voice Wake-up Commands.
Turn voice on or off in Setting

Voice Wake-up Commands	AI Response
Hi Alfi	I'm here
Massage on	OK,Massage on
Massage stop	OK,Massage stop
Comfort Massage	OK,Comfort Massage
Quick Massage	OK,Quick Massage
Stretch Massage	OK,Stretch Massage
Good-night Sleep	OK,Good-night Sleep
Shoulder and neck Massage	OK,Shoulder and Neck Massage
Air massage on	OK,Air massage on
Air massage stop	OK,Air massage stop
Up the seat position	OK,Up the seat position
Down the seat position	OK,Down the seat position
Change the other mode	OK,Change the other mode
Go little down	OK,Go little down
Go little up	OK,Go little up
Turn on the heat	OK,Turn on the heat
Turn off the heat	OK,Turn off the heat

Important Safety Instructions



warning

Before using, please read all instructions. Use the original power cord, and follow the specifications for power connection and switch operation to prevent safety hazards. When using electronic products, follow basic safety precautions to check for the risks of electric shock, burns, fire, or personal injury, including the following:

- Be sure to use an outlet that matches the plug.
- Make sure that the plug is fully inserted into the socket to reduce the risk of short circuit or fire.
- After use or before cleaning, be sure to unplug the plug in time.
- Do not use this product at high temperatures.
- Do not store or use this product outdoors or in direct sunlight.
- If there is a sudden power failure during use, please set the switch to the "0" position immediately, and unplug the plug to avoid damage to the product when a call comes in.
- Do not operate the massage chair if the cord is wet or damaged.
- Do not insert or unplug the plug with wet hands to avoid accidents.
- When a child, handicapped, or handicapped person is near or using a massage chair, someone must be present to look after him.
- Only use this product for the purposes described in this manual.
- Do not use accessories not provided by Momoda.
- Do not stand, sit or jump on the calf rest. So as not to cause damage.
- Please do not try to sit on the armrest or backrest, so as not to tip the massage chair over and cause an accident.
- Do not go to sleep during the massage.
- Please keep the massage chair clean and avoid inserting other objects into the gaps of the massage chair
- Do not move the massage chair directly by pulling the power cord.
- Before each use, check whether there are abnormal cracks in the flannelette of the backrest of the massage chair.
- This product is designed for home use only.
- When you are not sure whether you can use the massage chair, please consult your doctor.
- In order to avoid discomfort or injury caused by using this massage chair, the following people should consult a physician before using this product; Those receiving treatment, those with back disease, those with abnormal or distorted cervical spine.
- If you feel pain during use, please stop using it immediately. If it is damaged during use, please seek medical attention immediately.
- Do not massage red, swollen or inflamed skin.
- This product only provides comfortable massage enjoyment for the family. It is not a professional massage medical device, so it cannot replace professional treatment.
- It is recommended to use the massage chair for 30 minutes a day, and massage the same part should not exceed 15 minutes, otherwise excessive massage will result in counterproductive effects, and long-term use will cause the massage chair to overheat and shorten the service life of the product.
- Do not use this product in an environment where gas or oxygen is injected.
- This product is not suitable for children under 12 years of age.

Important Safety Instructions



warning

- Those who are not allowed to use this product: those who are physically, emotionally, or mentally defective, or who lack experience and knowledge. Unless they are supervised or instructed by the person responsible for their safety regarding the use of the product.
- Children should be supervised to ensure that they do not play with the massage chair.
- If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or maintenance department.
- The surface of the appliance heats up, so people who are not sensitive to heat must pay attention to it.
- Do not use this machine under a voltage that does not meet the standards of this machine.
- This product must use a grounded three-core power socket, and there should be a reliable and good grounding device.
- Damaged leather or cloth covers should be replaced in time. Do not use this machine to avoid personal injury.
- Do not allow water or moisture to enter the hand controller to avoid control failure.

10 Abnormalities and handling methods

Possible situation	Approach
The sound made during operation	The sound produced by the structural design will not affect the machine. Check if the power head is plugged in or is powered on. Check whether the power switch of the massage chair is in the "I" position.
The power is plugged in, but the massage chair cannot be operated.	Check whether the power cord is damaged. Check that the fuse is damaged and replace the fuse. Check whether the manual control line is inserted well and screwed
The backrest cannot be raised and lowered freely.	Check whether there are foreign objects stuck in the backrest and lower legs. Check whether the connecting wire is loose.
During use, the controller can be operated, but the massage chair cannot be operated.	After a long period of operation, if the temperature of the machine is too high, the massage chair will be automatically in the temperature protection state, please turn off the power and use it for 30 to 50 minutes to let the internal heat dissipation of the machine.
During use, the controller cannot be operated, and the massage chair also stops operating	After the automatic timing function is activated. If the set time is up, please press the button again to control it.

If an abnormal situation occurs, in order to prevent accidents, please stop using it and unplug the power cord.

If the following solutions are still invalid, please contact the after-sales service center.

Product Maintenance

Clean PU leather and plastic parts

Wipe the leather with a soft, dry cloth.

■ Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.

■ When using commercially available leather care products (rags), please follow the instructions for use.

■ If the Pu leather is particularly dirty, wipe it by the following methods.

- ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
- ② Use the above soft cloth to wipe the leather surface.
- ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
- ④ Wipe with a wrung soft cloth.
- ⑤ Let it air dry naturally.


■ When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

■ Do not use a hair dryer to dry the surface.

■ As the color of the fabric will stain the surface of the Pu leather, be careful when wiping the chair with denim and colored fabrics.

■ Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

■ Pu leather may be discolored, so when using hair dye, please cover the touched part with a towel.

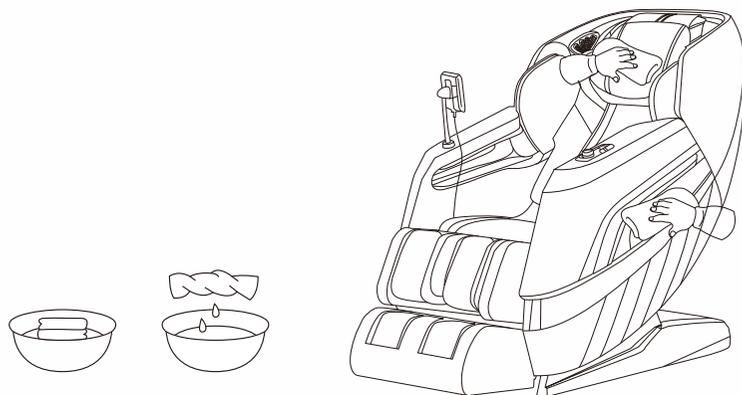

Name and content identification table of hazardous substances in this product

Name	Harmful Materials					
	(Pb)	(Hg)	(Cd)	(Cr)	(PBB)	(PBDE)
Case	○	○	○	○	○	○
Circuit Board※	○	○	○	○	○	○
Metal	○	○	○	○	○	○
Rubber	○	○	○	○	○	○
Power Cable	×	○	○	○	○	○
Internal Signal Connection Line	○	○	○	○	○	○
Leather	○	○	○	○	○	○

This form is compiled in accordance with the provisions of SJ/T 11364

※ Circuit board components include parts made up of printed circuit board machines, such as resistors, capacitors, integrated circuits, connectors, etc.

○ Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.

× Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572.

Environmental protection use period description

This electrical product is used under the conditions described in the manual, and the harmful substances or elements contained in this product will not leak out, and will not cause pollution to the environment or cause serious damage to people and property for a period of 10 years.



Our company reserves the right to improve the product and the manual. If there is any change, we will not notify you. The appearance of the product is subject to the actual product; this booklet has been carefully checked, but it does not rule out the possibility of printing errors or misunderstandings in the content. Please forgive me.

Troubleshooting

Fault	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.
Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.
Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.
Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.
Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product Specifications

Model: A66
 Configure: 01
 Name: Massage Chair
 Rated voltage: 120V~ 60Hz
 Rated power:160W
 Rated time: 20min
 Safety structure: Class I

Material description: P U,ABS, steel parts, electric and electron components

MATERIAL	PU	LEATHER	CLOTH	WOOD