

QUICK SETUP GUIDE

3.5 mm to Bluetooth
Audio Adapter

NS-ADAPT35MMBT

PACKAGE CONTENTS


- 3.5 mm to Bluetooth audio adapter
- USB-C charging cable
- Carrying pouch
- 2-pin adapter
- Quick Setup Guide

Before using your new product, please read these instructions to prevent any damage.

FEATURES

- TX Mode: Transmit from 3.5 mm sources to Bluetooth playback devices
- RX Mode: Receive Bluetooth audio on 3.5 mm playback devices
- Switch between transmitting and receiving Bluetooth signals
- USB-A to USB-C cable recharges your adapter
- Memory pairing recalls up to 8 devices

PRODUCT OVERVIEW

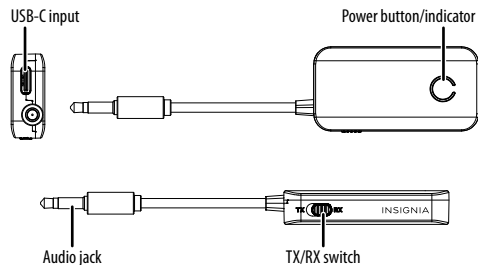

BEFORE FIRST USE

Charge your Bluetooth audio adapter's battery fully before first use. See "CHARGING THE BATTERY."

To prevent pairing to the incorrect device in a crowded environment (such as an airplane), pair your Bluetooth device to your Bluetooth audio adapter ahead of time.

CHARGING THE BATTERY


The indicator flashes red when your Bluetooth audio adapter's battery is low.

Connect a USB-C cable (included) from your Bluetooth audio adapter to a USB-C charging port or to an AC power adapter (not included). The power indicator glows red when charging and turns to green when finished.

Note: You may use your Bluetooth audio adapter while it is charging. It may take between 2.5 and 4.5 hours to reach a full charge. The battery supports up to 17 hours of use in RX mode and 20 hours in TX mode.

CHOOSING BETWEEN TX (TRANSMITTING)
AND RX (RECEIVING) MODES


- **TX Mode:** Use Transmitting Mode (TX) to transfer audio from a 3.5 mm audio device to Bluetooth earbuds, headphones, or other audio devices. This mode can be used with airplane in-flight entertainment systems and gym equipment that provides audio. See "USING TX (TRANSMITTING) MODE" to complete setup.
- **RX Mode:** Use Receiving Mode (RX) to transfer audio from your Bluetooth device (such as a phone or laptop) to 3.5 mm devices such as cars, boats, and other sound systems that do not support a wireless connection. See "USING RX (RECEIVING) MODE" to complete setup.

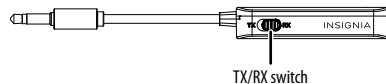

USING TX (TRANSMITTING) MODE

To prevent pairing to the incorrect device in a crowded environment (such as an airplane), pair your Bluetooth device to your Bluetooth audio adapter ahead of time.

- 1 Put your Bluetooth earbuds, headphones, or other audio device into pairing mode.
- 2 Press and hold the power button for three seconds to turn your Bluetooth audio adapter on. The power indicator flashes three times.

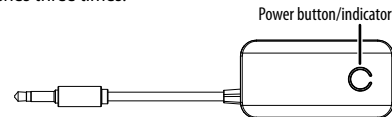


- 3 Slide the TX/RX switch to **TX**. The power indicator blinks red and green while pairing, then automatically connects to your audio device. The power indicator glows green to show it is connected, then turns off after 10 seconds.
- 4 Connect your Bluetooth audio adapter to a 3.5 mm source (such as a phone, tablet, or in-flight entertainment systems).

Note: A 2-pin adapter is included for in-flight entertainment systems that require 2-pin input. Insert the audio jack into the 2-pin adapter, then plug the adapter into the in-flight entertainment system.

- 5 **(Optional)** To connect a second Bluetooth device, put your second Bluetooth device into pairing mode, then press the power button two times. The power indicator flashes red and green to show it is pairing, then your Bluetooth audio adapter automatically connects. The power indicator glows green and blue to show it is connected.
- 6 To mute or unmute, press the power button.

USING RX (RECEIVING) MODE

- 1 Press and hold the power button for three seconds to turn your Bluetooth audio adapter on. The power indicator flashes three times.

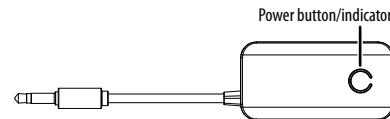

- 2 Slide the TX/RX switch to **RX**. The power indicator blinks red and blue while pairing.
- 3 Connect your Bluetooth audio adapter to a 3.5 mm output device (such as a speaker).
- 4 Search for **Insignia NS-ADAPT35MMBT** in your phone or laptop's Bluetooth devices list and select it to connect. The power indicator glows blue to show it is connected, then it turns off after 10 seconds.
- 5 To play/pause, press the power button.

UNPAIRING YOUR BLUETOOTH AUDIO ADAPTER

To unpair, choose one of the following options:

- Press and hold the power button for three seconds to turn your Bluetooth audio adapter off.
- Turn off your Bluetooth device.
- Open Bluetooth settings on your Bluetooth source, locate **NS-ADAPT35MMBT** in the list of connected devices, then select it to disconnect.
Note: Bluetooth functionality varies by operating system. Check with your device's manufacturer for specific instructions.
- To reset the pairing, quickly press the power button three times to unpair all devices. This removes all of your paired devices. If unpairing is successful, the power indicator blinks red three times.

USING THE POWER BUTTON

MODE	BUTTON CLICKS	FUNCTION
TX	1	Mute
	2	Pair a second device
	3	Remove all paired devices
RX	1	Pause/play
	2	Pair a new device
	3	Remove all paired devices

TROUBLESHOOTING

No sound is coming through my device.

- Make sure that the TX/RX switch is in the correct mode.
- Make sure that your device is connected. The power indicator glows green (one device) or green and blue (two devices) when connected via TX mode and glows blue when connected via RX mode.
- Make sure that the volume is turned up on your device.
- Make sure that your Bluetooth audio adapter has enough battery. Recharge if necessary.

My device isn't connecting.

- Make sure that the TX/RX switch is in the correct mode.
- Make sure that your device has Bluetooth enabled.
- Make sure that your Bluetooth audio adapter has enough battery. Recharge if necessary.
- Make sure that your device is compatible with your Bluetooth audio adapter. If using TX mode, your Bluetooth audio adapter may be connecting to a different Bluetooth device. Make sure that other Bluetooth audio devices are turned off when connecting. Your Bluetooth audio adapter will prioritize pairing to its last connected device.

IMPORTANT SAFETY INFORMATION



CAUTION

- Do not expose this product to moisture or excessive temperatures.
- Do not use aerosol, solvent, or abrasive agents to clean this product.
- Keep out of the reach of children to avoid accidental swallowing.
- Stop use if the battery swells.
- Stop use if this product is submerged in liquid.

SPECIFICATIONS

- **Dimensions (L x W x H):** 2.56 x .98 x .39 in. (65 x 25 x 10 mm) including cable
- **Battery power/capacity:** 300mAh / 1.11Wh
- **Input:** USB-C 5W (5V/1A)
- **Bluetooth:** 5.3
- **Bluetooth Range:** 33 ft. (10 m)
- **Weight:** .6 oz (17 g)

LEGAL NOTICES

FCC COMPLIANCE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- It is recommended that a dealer or an experienced radio/tv technician is contacted for help.

RF Exposure: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
Richfield, MN 55423
©2026 Best Buy. All rights reserved.