




**SP-PA15BT**  
Portable Wireless Speaker

## Instruction Manual



Website: [www.jvc.com/usa](http://www.jvc.com/usa)

1

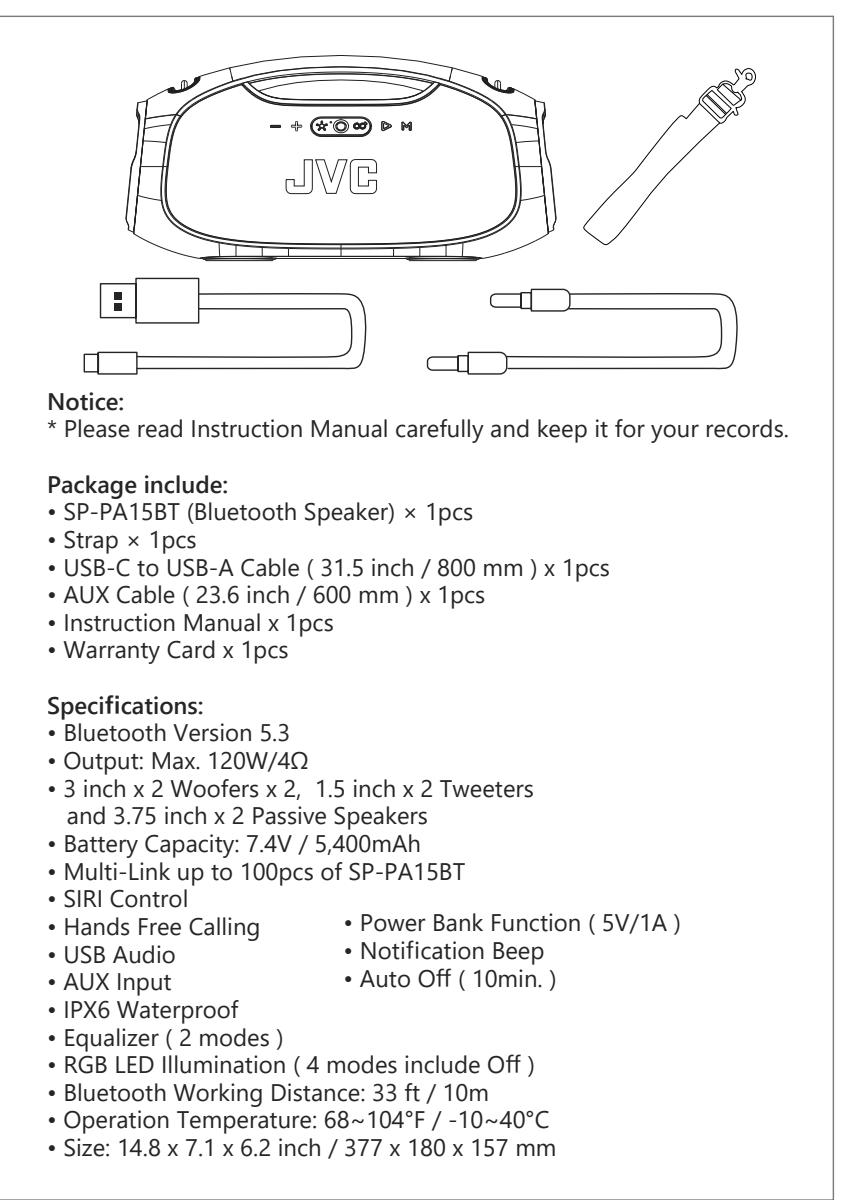


**Notice:**  
\* Please read Instruction Manual carefully and keep it for your records.

**Package include:**  
• SP-PA15BT (Bluetooth Speaker) x 1pc  
• Strap x 1pc  
• USB-C to USB-A Cable (3.15 inch / 800 mm) x 1pc  
• AUX Cable (23.6 inch / 600 mm) x 1pc  
• Instruction Manual x 1pc  
• Warranty Card x 1pc

**Specifications:**  
• Bluetooth Version 5.3  
• Output: Max. 120W/4Q  
• 3 inch x 2 Woofers x 2, 1.5 inch x 2 Tweeters and 3.75 inch x 2 Passive Speakers  
• Battery Capacity: 7.4V / 5.400mAh  
• Multi-Link up to 100pcs of SP-PA15BT  
• SIRI Control  
• Hands Free Calling • Power Bank Function (5V/1A)  
• USB Audio • Notification Beep  
• AUX Input • Auto Off (10min.)  
• IPX6 Waterproof  
• Equalizer (2 modes)  
• RGB LED Illumination (4 modes include Off)  
• Bluetooth Working Distance: 33 ft / 10m  
• Operation Temperature: 68~104°F / -10~40°C  
• Size: 14.8 x 7.1 x 6.2 inch / 377 x 180 x 157 mm


**Safety Instructions:**  
• Never disassemble SP-PA15BT in an attempt to make any repair as this could result in electrical shock, burns, or product failure.  
• Use extra caution in high temperatures.  
• Do not expose SP-PA15BT to direct heat or flame.  
• SP-PA15BT is not covered under Warranty when the product has metal rust, surface spoiling and any other natural oxidation.  
• Damage, shock, and/or injury can occur if these warnings are not heeded.  
• SP-PA15BT may become warm while charging.  
• Make sure to always completely turn off both the SP-PA15BT and power outlet before unplugging.  
• Make sure SP-PA15BT has plenty of ventilation.  
• Do not press the buttons too hard as it could damage SP-PA15BT.  
• Only use dry cloth to keep SP-PA15BT clean from dust.  
• Do not use chemicals on SP-PA15BT.  
• Never try to repair SP-PA15BT yourself, take it to a Certified Technician. Trying to remove panels or repairing it yourself could lead to electrical shock. When it is not in use, make sure it is correctly turned off and stored in a cool dry place.  
• Do not insert foreign objects into SP-PA15BT.  
• Avoid dropping SP-PA15BT, as harsh impacts could damage it.

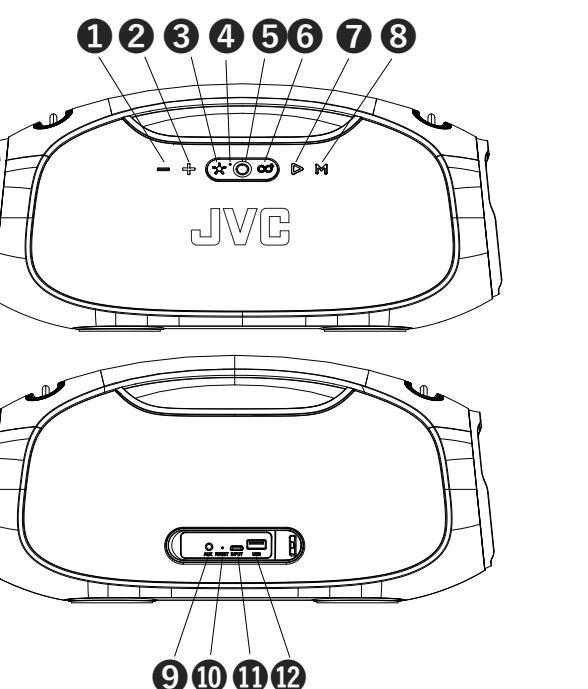

No.	Button / Slot	No.	Button / Slot
1	-	7	Play
2	+	8	M (Mode)
3	LED Illumination	9	AUX (AUX Slot)
4	Microphone Hole	10	RESET (Reset Slot)
5	Power with LED	11	INPUT (USB-C Slot)
6	Multi-Link with LED	12	USB (USB-A Slot)

\* Rating label is placed on the exterior of the bottom.

**Power Control (Auto Power Off):**  
• While slotted in USB Drive and AUX Cable, it will change Mode by Short-Press "M" Button ⑧ as below.  
• It will skip the Mode, if USB Drive or AUX Cable or both of them are removed.

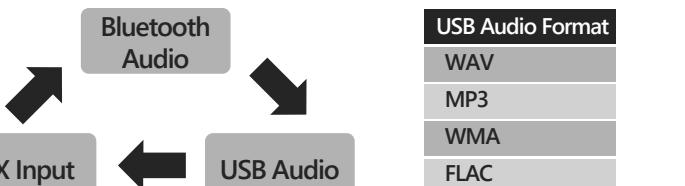

### Mode Change:

• While slotted in USB Drive and AUX Cable, it will change Mode by Short-Press "M" Button ⑧ as below.  
• It will skip the Mode, if USB Drive or AUX Cable or both of them are removed.



**USB Audio and Mode Change:**  
• USB Audio Mode will be activated while USB Drive is slotted in to the USB-A Slot ⑪ and select USB Audio Mode by Short-Press "M" Button ⑧.  
• SP-PA15BT will change mode to USB Audio automatically when you slot in USB Drive.  
• The playable Audio Formats are the table as above.  
• USB Drive Condition: Up to 128GB

**Auxiliary (AUX) Input and Mode Change:**  
• AUX Input Mode will be activated while AUX Cable is slotted in to the AUX Slot ⑨ and select AUX Input Mode by Short-Press "M" Button ⑧.

• SP-PA15BT will change mode to AUX Input Mode automatically when you slot in AUX Cable.

• While in AUX Input Mode, Short-Press "Play" Button ⑦ to operate Mute On.  
• When Mute On, it will be Mute Off by Short-Press below any 3 Buttons "Play" Button ⑦, "+" Button ②, "-" Button ①.

**LED Illumination:**  
• You can change 4 modes of LED Illumination (include Off) by Short-Press "LED Illumination" Button ③.

**Equalizer:**  
• You can change 2 modes of Equalizer by Long-Press "M" Button ⑧.


**WARNING FOR BATTERY:**  
Please do not handle the battery in the following manners.  
It can lead to an explosion or leakage of flammable liquids and gases.  
• Dispose in fire, discard, crush or cut.  
• Leave in extremely high temperature environment  
• Leave in extremely low pressure environment

**Power Bank (Auto Power Off):**  
• Bluetooth Mode: SP-PA15BT will Power Off automatically if not connected within 10 minutes while being Powered On.  
• USB Audio Mode: While SP-PA15BT is Powered On and the USB Audio is in the Paused state by Short-Press "Play" Button ⑦, SP-PA15BT will Power Off after 10 minutes.  
• AUX Input Mode: While SP-PA15BT is Powered On and the AUX Input Audio is in the On State by Short-Press "Play" Button ⑦, SP-PA15BT will Power Off after 10 minutes.

**Power Bank Function:**  
• Connect other device to the 5V/1A USB (USB-A Slot) ⑪ via Charging cable, while the SP-PA15BT is Power On.

**Charging:**  
• Low Battery Notification Beep will occur when the battery is lower than 20%.  
• Red LED Indicator ③ will blink.  
• Connect to the USB-C Charging Port ⑩ located under the Rear Silicone Cover.  
• Connect the USB-A (lager end of the Cable) to your Computer's USB Port or an AC adaptor (Not included) 5V/2A as Regular Charging or 9V/3A as Fast Charging.  
• LED Indicator ③ will turn on when the battery is charging.  
• Red LED Indicator ③ will Turn Off when fully charged.

**Re-Boot (Recovery) and Reset:**  
• Re-Boot: Please Short-Press inside of the Reset Slot ⑩ by Rounded Pin.  
• Reset: Long-Press "Play" Button ⑦ for over 10 sec

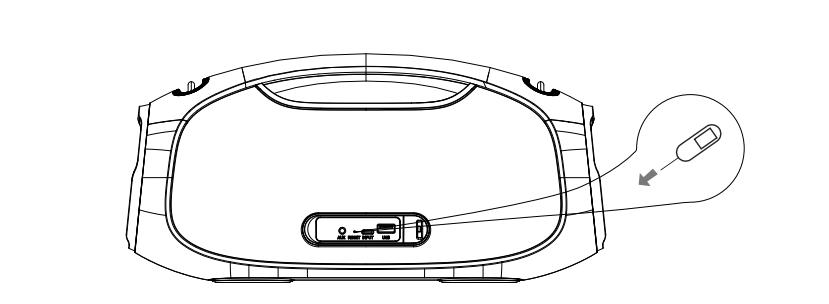

**For USA:**  
**FCC CAUTION**  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Note :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**For Customer Use:**  
Enter the Model No. and Serial No. (on the rating label of unit) below.  
Retain this information for future reference.  
**Model No.**  
**Serial No.**

**Supplier's Declaration of Conformity**  
Model Number : SP-PA15BT  
Trade Name : JVC  
Manufacturer : JVC KENWOOD USA Corporation  
Address : 1440 Copperas Drive, Irving, TX 75038  
Telephone Number : (873)49-38178  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID : 2AYBO-SPPA15BT IC : 282B-SPPA15BT



**ATTENTION :**  
The product you have purchased is powered by a rechargeable battery that is recyclable. Please call 1-800-6-BATTERY for information on how to recycle this battery.

### PRODUCT REGISTRATION FOR THE CUSTOMER IN CANADA

EN : <https://myjvckenwood.ca>  
FR : <https://myjvcckenwood.ca/fr>

MADE IN CHINA

Function	Button / Slot	Operation
Power On / Off	① Power	Long Press (2 sec.)
Volume Up	② +	Short Press
Volume Down	③ -	Short Press
Play / Pause (Bluetooth, USB Audio)	④ Play	Short Press
Mute On (AUX)	⑤ Play, ② +, ③ -	Short Press
Mute Off (AUX)	⑥ Play, ② +, ③ -	Short Press
Next Song (Bluetooth, USB Audio)	⑦ +	Long Press
Previous Song (Bluetooth, USB Audio)	⑧ -	Long Press
Mode Change (Bluetooth Audio / USB / AUX)	⑨ M	Short Press
SIRI (Bluetooth)	⑩ Play	Long Press (2 sec.)
Bluetooth Disconnect	⑪ Multi-Link	Long Press (2 sec.)
Bluetooth Connect (After Disconnect)	⑫ Multi-Link	Long Press (over 3 sec.)
Multi Link or TWS Connect / Disconnect (Bluetooth)	⑬ Multi-Link	Short Press
Receive / End Phone Call (Bluetooth)	⑭ Play	Short Press
Reject Phone Call (Bluetooth)	⑮ Play	Long Press (2 sec.)
Switch Phone Calling Device to Phone	⑯ Play	Long Press (2 sec.) while talking
LED Illumination Control (4 modes)	⑰ LED	Short Press
Equalizer Control (2 modes)	⑱ M	Long Press (2 sec.)
USB Audio	⑲ USB-A Slot	Connect USB Flash Drive
AUX	⑳ AUX Slot	Connect through AUX Cable
Charge Battery (Standard / Fast Charge)	㉑ USB-C Slot	Connect via USB Cable with Charger (Standard 5V/2A or Quick 9V/2A Charger)
Power Bank (5V/1A)	㉒ USB-A Slot	Connect through USB Cable
Re-Boot (Recovery)	㉓ Reset Slot	Short Press by Rounded Pin
Reset	㉔ Play	Long Press (over 10 sec.)

**Note:**  
\* Above operation can be processed on Bluetooth devices synchronously.

\* Rating label is placed on the exterior of the bottom.

\* Please do not Bluetooth Pair each SP-PA15BT and Device separately.

It will not connect as Multi-Link

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Long-Press "Power" Button ③ for 2sec. "Blue LED Indicator" ④ will flash rapidly to indicate that SP-PA15BT is in Bluetooth Pairing Mode.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Long-Press "Power" Button ③ for 2sec. "Blue LED Indicator" ④ will be instantly ON when connected.

\* You will hear the Notification Beep, and the "Blue LED Indicator" ④ is instantly ON when connected.

\* On your Bluetooth enabled Device (Smartphone, Tablet, Media Player) navigate to the Bluetooth setting menu. Turn On the Bluetooth feature and search for "JVC SP-PA15BT", Type Password "0000" or "1234" if requested.

\* You will hear the Notification Beep, and the "Blue LED Indicator" ④ is instantly ON when connected.

\* SP-PA15BT will be automatically reconnected to the last Paired Bluetooth Device when Powered On again.

\* Long-Press "Play" Button ⑦ will Activate SIRI.

\* Long-Press "Play" Button ⑦ again will Deactivate SIRI.

\* Google Assistant and other Voice Assistants are not Compatible.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Any use of such marks by JVCKENWOOD Corporation (JVC) is under license. Other trademarks and trade names are those of their respective owners.

**Hands Free Call:**

\* Under Bluetooth connection state, you can receive call by Short-Press "Play" Button ⑦ while Incoming call and End the call by Short-Press "Play" Button ⑦ again.

\* You can switch talking to your mobile phone by Long-Press "Play" Button ⑦ during the call.

\* You can reject the call by Long-Press "Play" Button ⑦ while Incoming call.

\* Short-Press "Multi-Link" Button to exit the Multi-Link state.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-Link connection with Slave Device.

\* Short-Press "Multi-Link" Button to turn on Multi-Link ready for Multi-