

Installation Guide

LPKTVDR1 LP Conversion Kit for Tuscany Ranges

LP Orifice Conversion Kit Contents

Description	Part Number/Marking	Quantity
Rear Surface Burner (B)	072154-000 / 78	1
Rear Surface Burners (C)	072156-000 / 105	3
Front Surface Burner (D)	072155-000 / 120	4
Conversion label	PF030377	1
LPKTVDR Conversion Instructions	073988-000	1

NOTE: Depending on the model being converted, some of the orifices may not be used.

IMPORTANT - Please Read and Follow!

WARNING



FIRE/EXPLOSION HAZARD

If the information in this guide is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

WHAT TO DO IF YOU SMELL GAS:

- **DO NOT** try to light any appliance.
- **DO NOT** touch any electrical switch.
- **DO NOT** use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

CAUTION



Be sure the electric power is turned off at the breaker box while the unit is being converted.

CAUTION




Before placing the appliance into operation, always check for gas leaks with a soapy water solution or other acceptable method. **DO NOT** use an open flame to check for leaks.

Regulator Conversion

- Remove hex nut from top of regulator.
- Unsnap plastic plunger from hex nut.
- Reverse plunger and reinstall onto hex nut by pressing firmly.

NOTE: Plunger is marked "NAT" or "LP".


Converted fuel type will be shown on the lower portion of plunger.

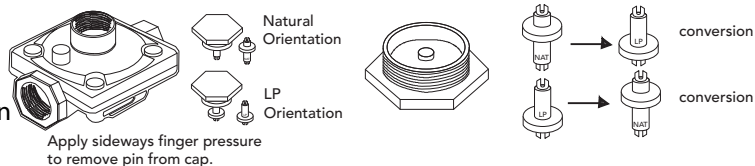


- Reinstall hex nut onto regulator in configuration desired.

Orifice Locations


36" W / 4 Surface Burners

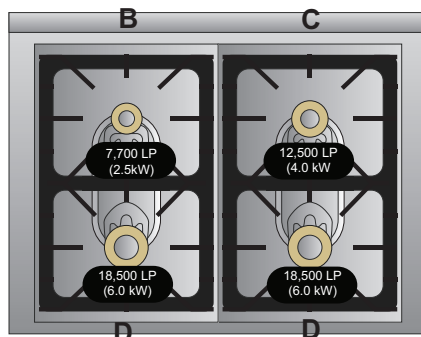


48" W / 6 Surface Burners

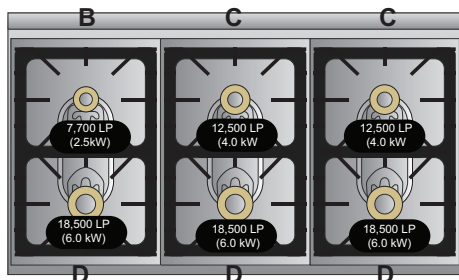


48" W / 4 Surface Burners/Induction

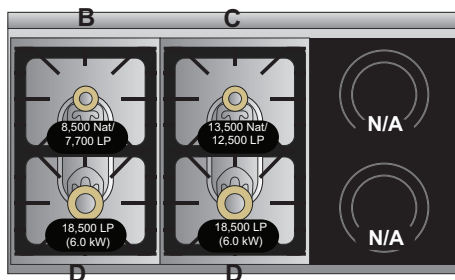


48" W / 4 Surface Burners/Griddle

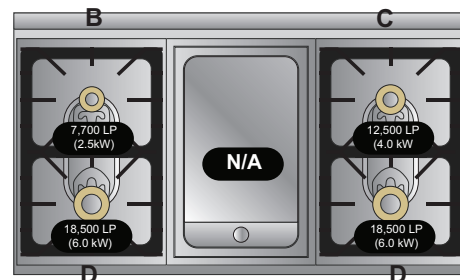


66" W / 8 Surface Burners

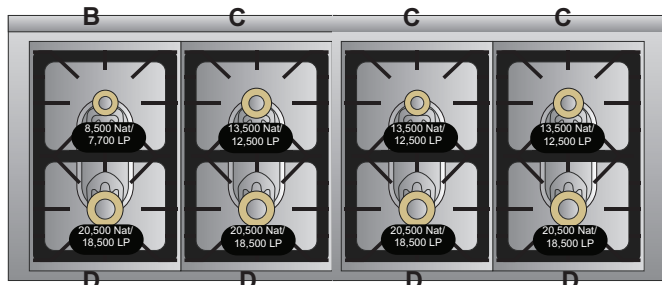

66" W / 6 Surface Burners/Griddle

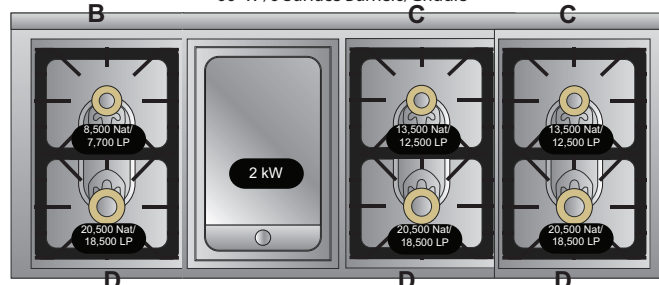

66" W / 6 Surface Burners/Induction

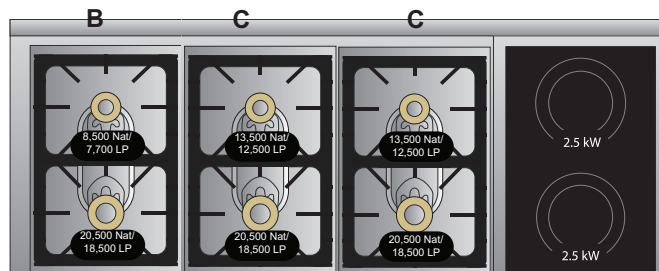

Surface Burner Conversion

Remove grates, surface burner caps and frenchtop (if applicable)


Surface Burner Conversion

- Locate appropriate orifice
- Remove screw (Item #1) flat-head screwdriver.
- Lay the burner flange to side - do not disconnect the igniter wire.(Item #2).
- Use a nut driver to remove orifice (Item #3).
- Replace with correct orifice - refer to next page.

Tech tip: Tape can be applied to the inside of the socket to assist in the removal of the surface burner orifices. This can prevent the orifices from falling into the range during removal.

- After replacing the orifice, replace Item#2 burner flange.
- Reinstall screw and reverse procedure to reassemble.


NOTE: For proper placement of the burner head, rotate until burner head seats into groove.

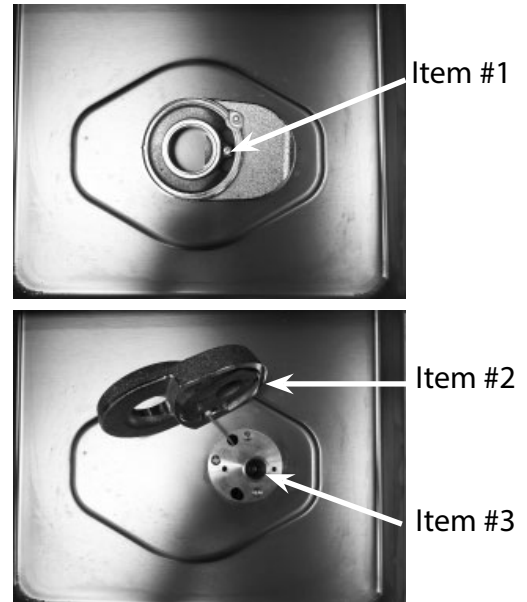

Rating Label Location

When the LP/Propane conversion is complete, complete the enclosed conversion label and place it next to the rating label. The rating label is located under the control panel.

This appliance was converted on _____ day-month-year to	
☐ Nat.	or ☐ LP gas
by: _____	
(name and address of organization making the conversion), which accepts the responsibility that this conversion has been properly made .	
PF030377	

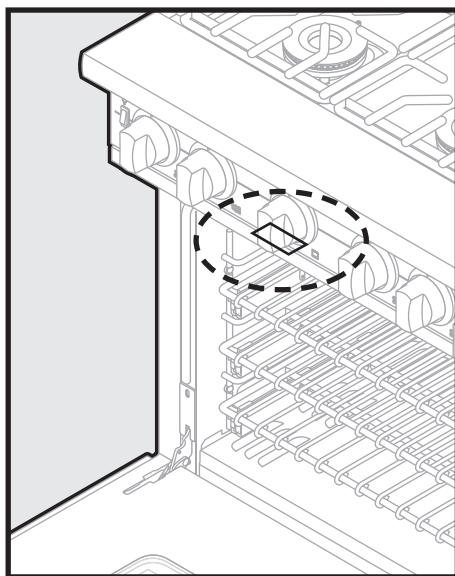

Guide d'installation

LPKTVDR1 LP Kit de Conversion pour Cuisinières Tuscany

Contenu du kit de conversion de l'orifice PL

Description	Numéro de pièce/Marquage	Quantité
Brûleurs de surface arrière (B)	072154-000 / 78	1
Brûleurs de surface arrière (C)	072156-000 / 105	3
Brûleurs de surface avant (D)	072155-000 / 120	4
Étiquette de conversion	PF030377	1
Instructions de conversion du LPKTVDR	073998-000	1

REMARQUE : En fonction du modèle à convertir, certains orifices ne peuvent pas être utilisés.

IMPORTANT - À lire et à suivre!

AVERTISSEMENT



RISQUE D'INCENDIE/ D'EXPLOSION

Si les instructions de ce manuel ne sont pas parfaitement suivies, cela peut provoquer un incendie ou une explosion qui entraînerait des dégâts matériels, des blessures corporelles ou la mort.

CONSIGNES EN CAS D'ODEUR DE GAZ :

- NE PAS tenter d'allumer quelque appareil que ce soit.
 - NE PAS toucher aux interrupteurs électriques.
 - N'UTILISEZ aucun téléphone dans votre bâtiment.
 - Appelez immédiatement votre fournisseur de gaz à partir d'un téléphone chez un voisin. Suivez les instructions du fournisseur de gaz.
 - Si vous n'arrivez pas à joindre votre fournisseur de gaz, appelez les pompiers.
- L'installation et l'entretien doivent être réalisés par un installateur qualifié, une agence d'entretien ou le fournisseur de gaz

MISE EN GARDE



S'assurer que l'alimentation électrique est désactivée coupée au niveau du boîtier de disjoncteurs lors de la conversion de l'appareil.

MISE EN GARDE





Avant de faire fonctionner l'appareil, toujours vérifier qu'il n'y a pas de fuites de gaz à l'aide d'une solution d'eau savonneuse ou toute autre méthode acceptable. NE PAS utiliser de flamme nue pour rechercher une fuite.

Conversion du régulateur

- Déposer l'écrou hexagonal du dessus du régulateur.
- Ôter le piston plastique de l'écrou hexagonal.
- Inverser le piston et le réinstaller sur l'écrou hexagonal en appuyant fermement.


REMARQUE : Le piston porte les marques « NAT » ou « PL ». Le type de combustible converti s'affiche sur la partie inférieure du piston.

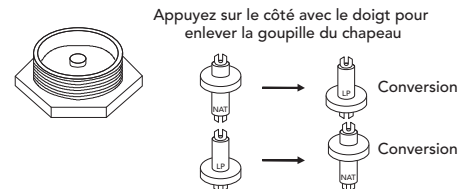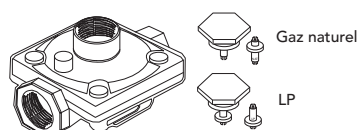


- Réinstaller l'écrou hexagonal sur le régulateur dans la configuration voulue.

Emplacements de l'orifice


36 po W / 4 Brûleurs de surface

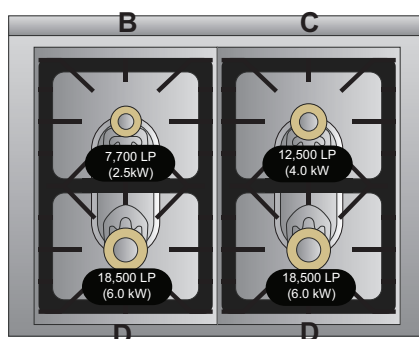


48 po W / 6 Brûleurs de surface

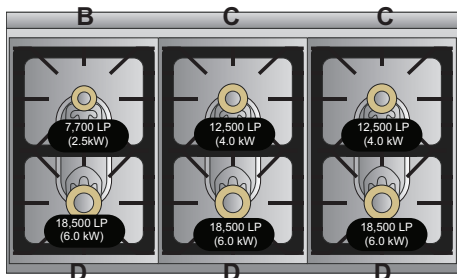


48 po W / 4 Brûleurs de surface/Induction

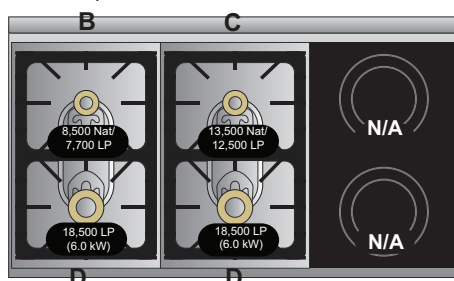


48 po W / 4 Brûleurs de surface/ plaque chauffante

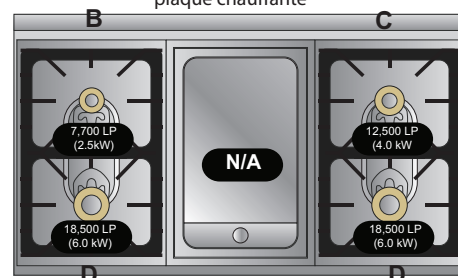


66 po W / 8 Brûleurs de surface

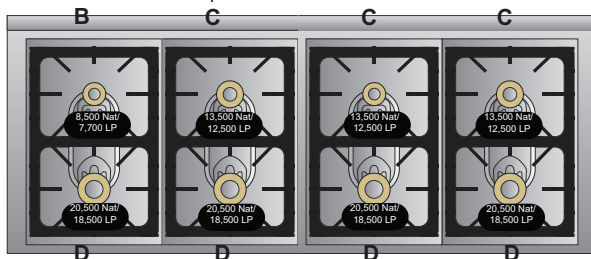

66 po W / 6 Brûleurs de surface/ plaque chauffante

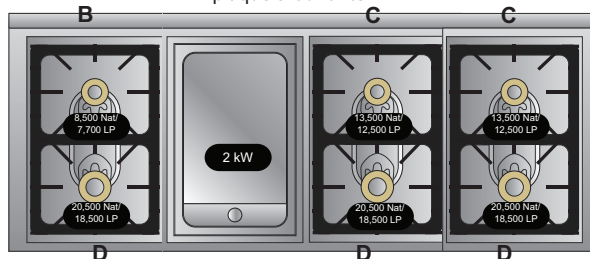

66 po W / 6 Brûleurs de surface/Induction

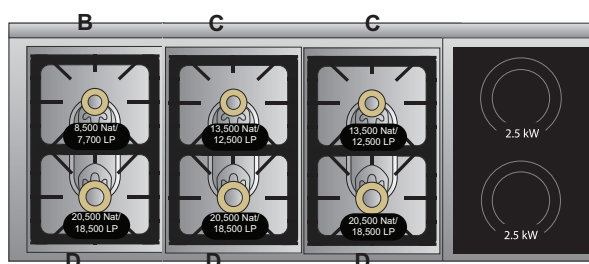

Surface Burner Conversion

Déposer toutes les grilles, têtes de brûleur de surface et la plaque française


Conversion du brûleur de surface

- Localiser l'orifice approprié
- Déposer tournevis à tête plate vis (Article n°1).
- Poser la bride brûleur de côté - ne débranchez pas le câble de l'allumeur. (Article n°2).
- Utiliser un tourne-écrou pour enlever l'orifice (Article n°3).
- Remplacer par orifice correct - reportez-vous à la page précédente.

Conseil technique : Appliquer du ruban à l'intérieur de la douille pour faciliter la dépose des orifices du brûleur de surface. Cette méthode permet d'éviter que les orifices tombent dans la cuisinière pendant la dépose.

- Après avoir remplacé l'orifice, remettez la bride brûleur Article #2.
- Poser à nouveau les vis et inverser la procédure pour la réinstallation.

REMARQUE : Pour installer correctement la tête du brûleur, tourner jusqu'à ce que la tête du brûleur se fixe dans la rainure.

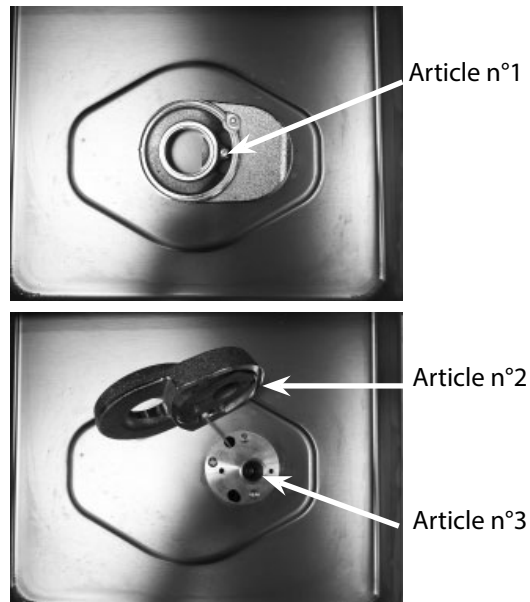


Emplacement de l'étiquette de caractéristiques nominales

Lorsque la conversion du PL/Propane est terminée, remplir l'étiquette de conversion ci-jointe et la placer à côté de l'étiquette de caractéristiques nominales.

L'étiquette de caractéristiques nominales est située sous le panneau de commande.

This appliance was converted on _____ day-month-year to	
☐ Nat. or	☐ LP gas
by: _____	
(name and address of organization making the conversion), which accepts the responsibility that this conversion has been properly made .	
PF030377	

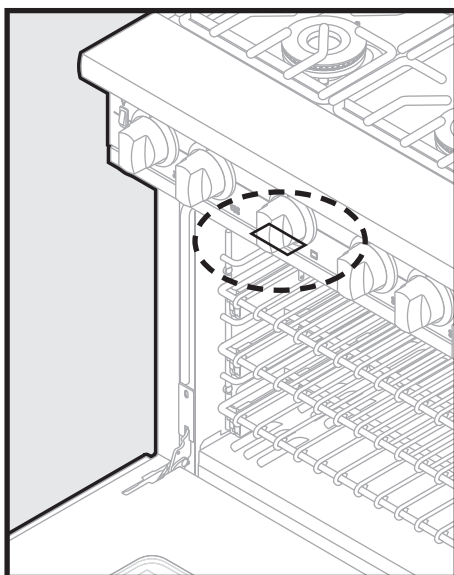

Viking Range, LLC
111 Front Street
Greenwood, Mississippi 38930 USA
(662) 455-1200

For product information, call 1-888-(845-4641)
or visit our web site at vikingrange.com

Pour obtenir des renseignements sur le produit, appeler au 1 888 (845-4641)
ou visitez notre site Web à vikingrange.com.