




## **30" GAS FREESTANDING SELF CLEAN RANGE**

### **MODELS:**

WFG550S0HB1 (Black)

WFG550S0HW1 (White)


# COOKTOP PARTS

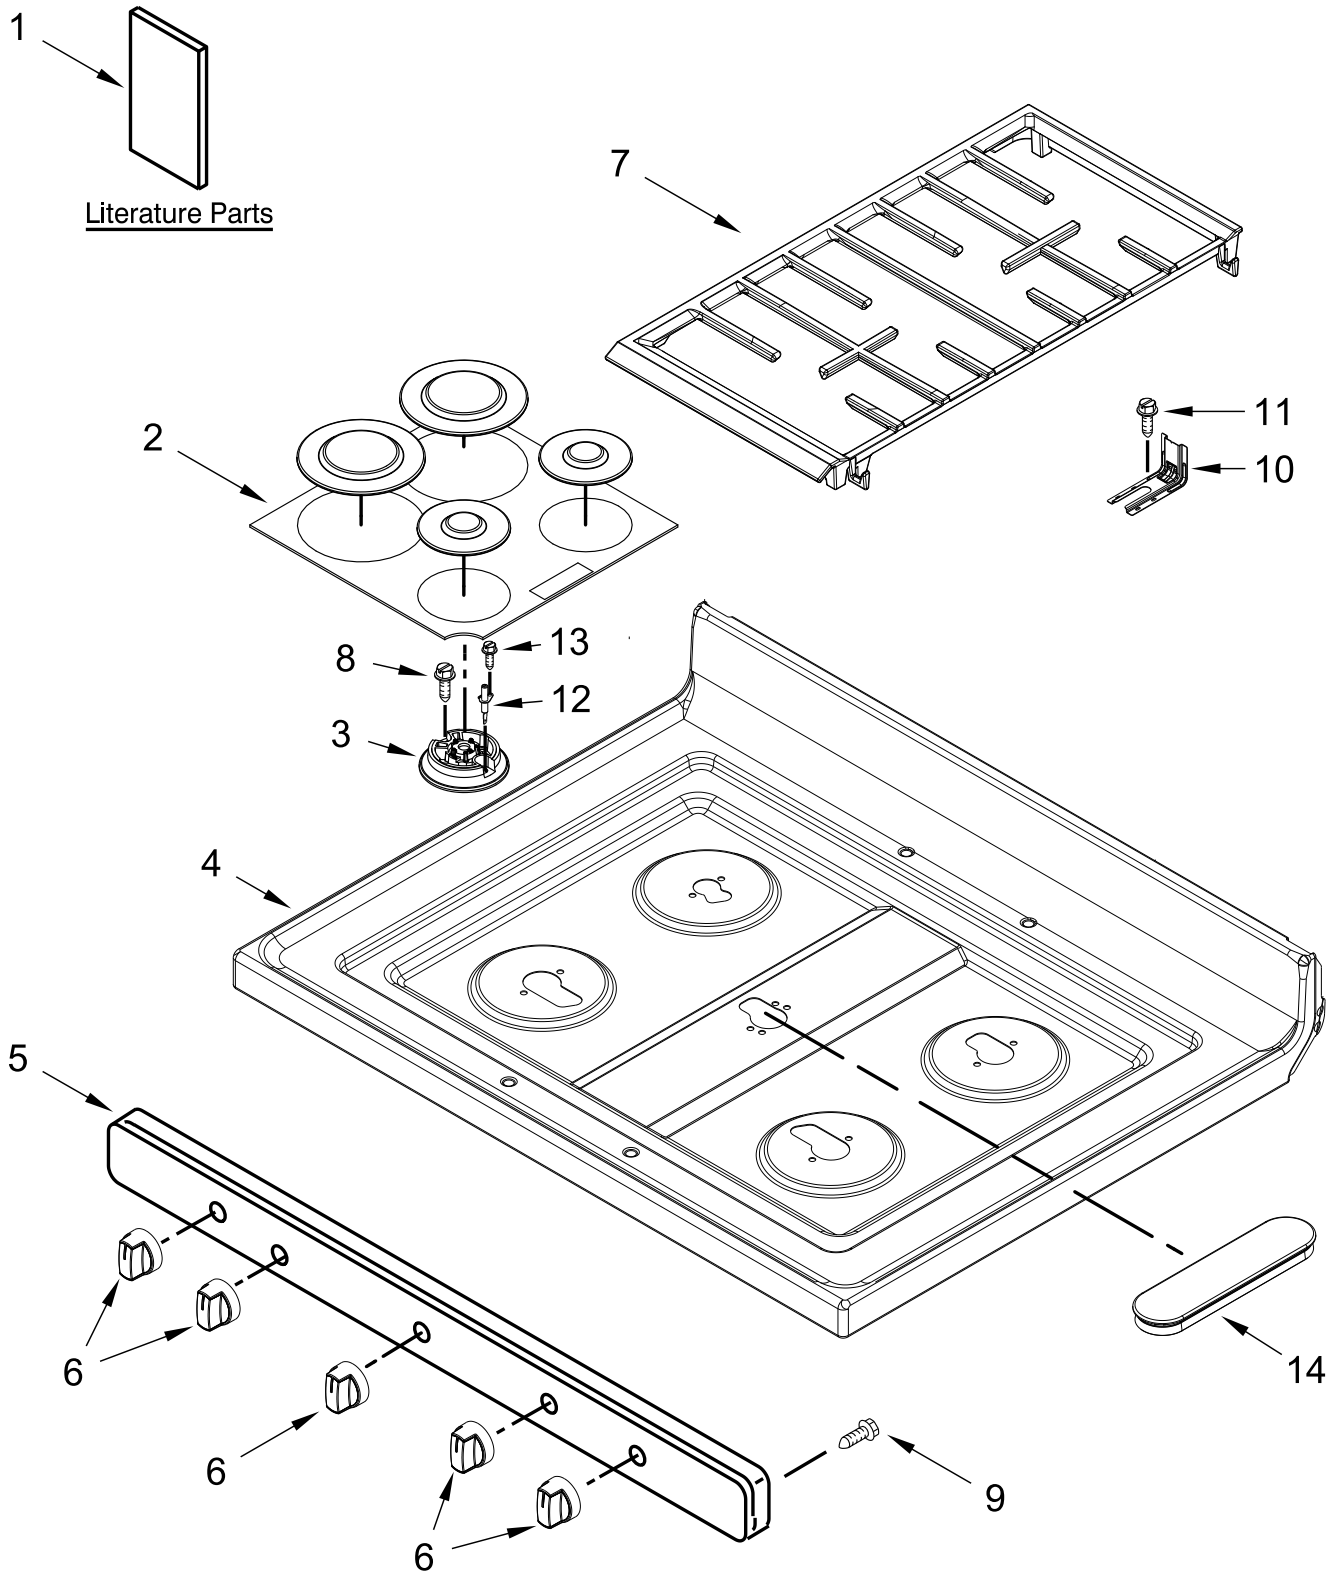

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	14	W10298664	Spreader, Flame
	W11122558	Instructions, Installation		W10884167	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11121658	Guide, Use and Care		W10888303	White			
	W11102748	Sheet, Tech (English)	5		Panel, Manifold		W10849001	Harness, Main
	W11032799	Diagram, Wiring		W11089578	Black		W10753750	Harness, Bake/Broil
2		Kit, Burner Cap		W11089577	White		W10809927	Harness, Cooktop
	W10850506	Black (Set of 4)	6		Knob, Control		3196520	Clip, Wire
3	W10515455	Assembly, Burner (17.5K)		W11023140	Black		W10334923	Clip, Gas Wiring
		(Left Front & Right Front)	7	W11023142	White		313438	Clip, Harness
	W10515454	Assembly, Burner (9.5K)		W11037721	Black			
		(Left Rear & Center)	8	3400701	Screw			
	W10515453	Assembly, Burner (6K)	9	3196557	Screw			
		(Right Rear)	10	W10306542	Bracket, Anti-Tip			
			11	7101P485-60	Screw, Anti-Tip Kit			
			12	W10515459	Electrode			
			13	8273062	Screw			


# CONTROL PANEL PARTS

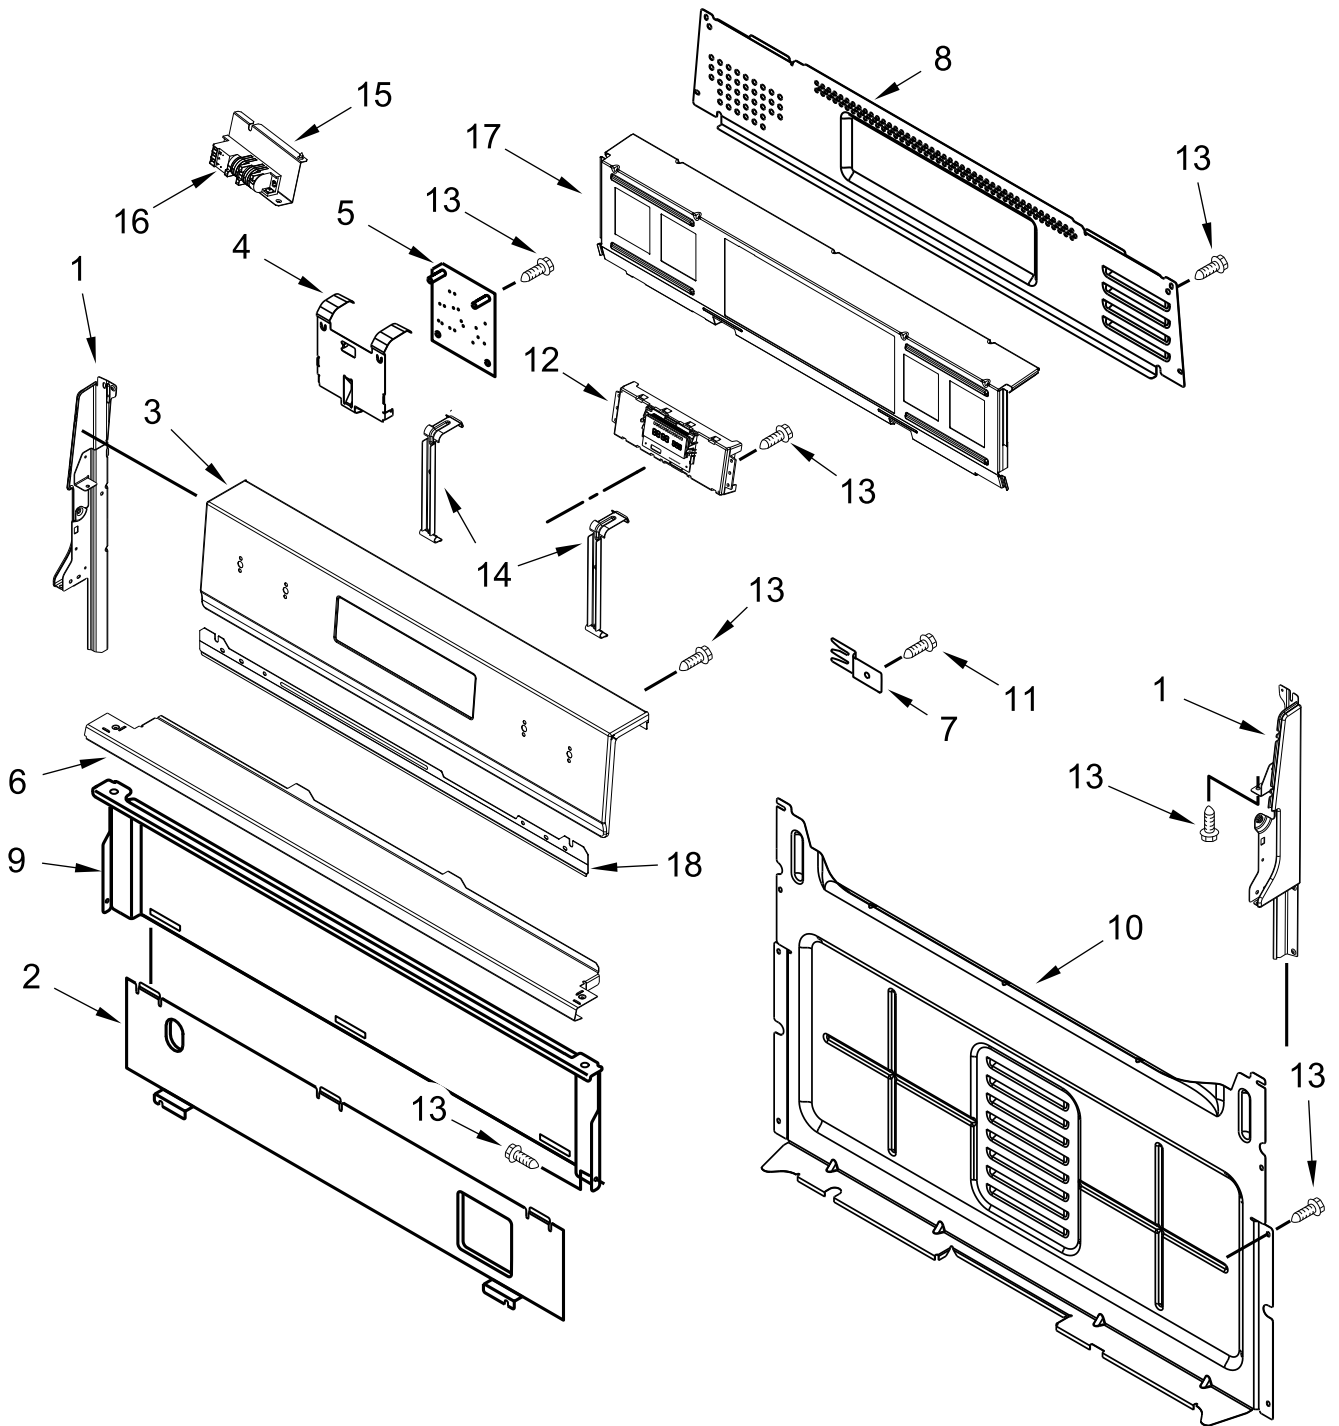

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	6	W10516123	Bracket, Console Mounting	13	3196178	Screw
	W11213290	Black (Left)				14	W10856361	Bracket, Control
	W11213292	Black (Right)	7	8523412	Bracket, Rear Cooktop	15	W10797001	Bracket, Ignitor
	W11213291	White (Left)				16	W10475149	Module, Spark (5+0)
	W11213293	White (Right)	8	W10198745	Cover, Upper	17	W10901802	Panel, Backer
2	8053505	Shield, Heat	9	W10192841	Shield, Heat	18		Bracket, Eye Brow
3		Panel, Control	10	W10184251	Cover, Back			
	W10869986	Black	11	3196169	Screw		W11051312	Black
	W10869987	White	12		Electronic, Control (LCX)		W11051311	White
4	W10762981	Bracket, Mounting		W11204531	Black			
5	W10920631	Module, Spark DSI		W11204532	White			


# MANIFOLD PARTS

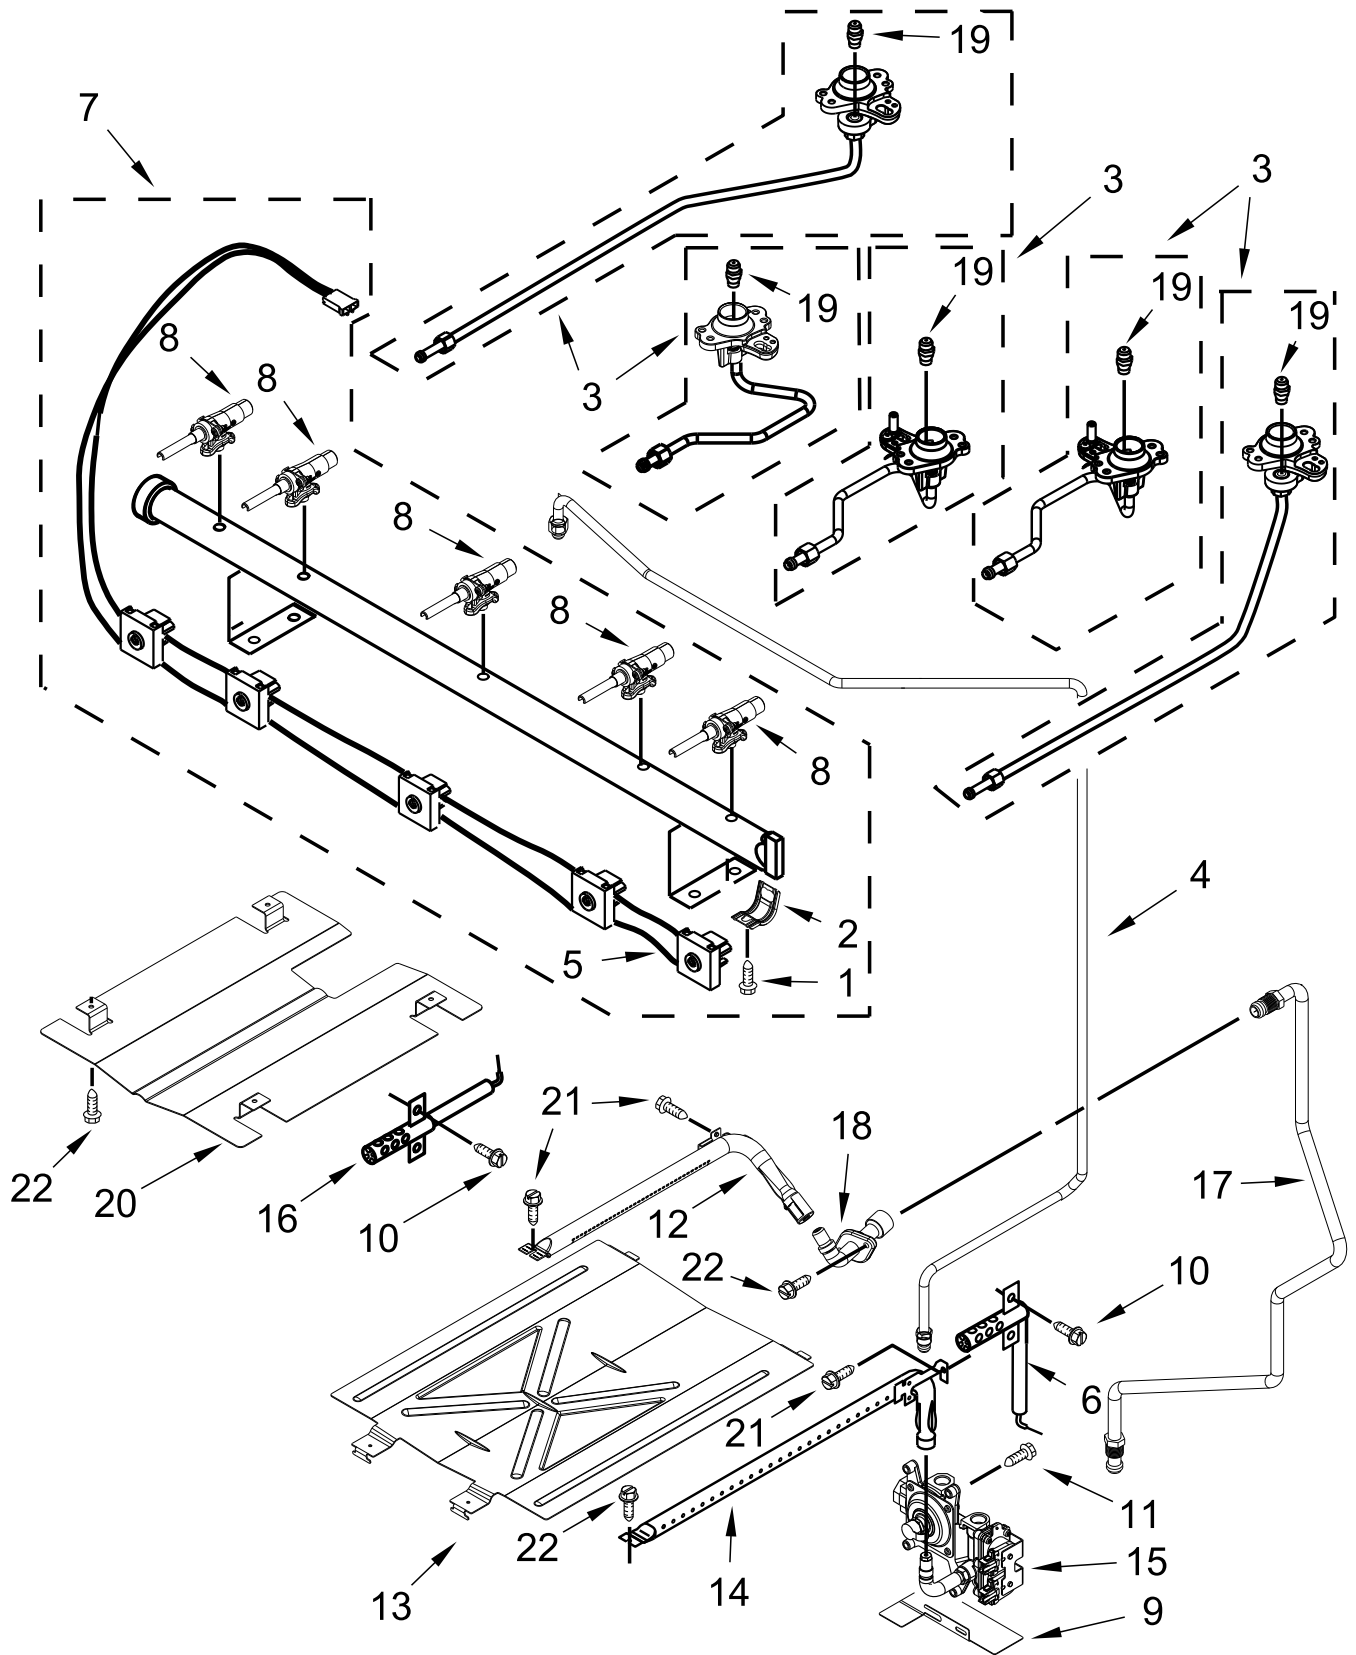

# MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	7	W10859728	Assembly, Manifold	19	W10347414	Orifice (15K) (Left Front & Right Front)
2	W10295996	Bracket, Saddle Valve	8	W10279615	Valve, Gas (Left Front & Right Front)		W10170508	Orifice, Natural (9.5K) (Left Rear)
3	W10473936	Assembly, Orifice Holder (15K) (Left Front)		W10279614	Valve, Gas (Left Rear)		W10170506	Orifice, Natural (5K) (Right Rear)
	W10473932	Assembly, Orifice Holder (9.5K) (Left Rear)		W10247744	Valve, Gas (Right Rear)		W10657947	Orifice (8K) (Center)
	W10474166	Assembly, Orifice Holder (15K) (Right Front)		W10850894	Valve, Gas (Center)	20	W10137062	Spreader, Flame (Broiler)
	W10474162	Assembly, Orifice Holder (5K) (Right Rear)	9	W10224921	Bracket, Aegis	21	3196265	Screw
	W10836764	Assembly, Orifice Holder (8K) (Center)	10	3196385	Screw	22	W10362924	Screw
4	W10215439	Tubing (Manifold to Regulator)	11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
5	W10811691	Harness, Igniter (Includes Switches)	12	8054078	Burner, Broiler		W11087531	Kit, LP 5 Orifice Conversion
6	9758079	Electrode, Bake	13	W10184491	Spreader, Flame (Oven)		W10566537	Kit, LP Bake and Broil
			14	9758078	Burner, Bake		W10400495	Orifice, LP Bake
			15	W10602001	Regulator			
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W10592836	Fitting, Broiler			


# CHASSIS PARTS

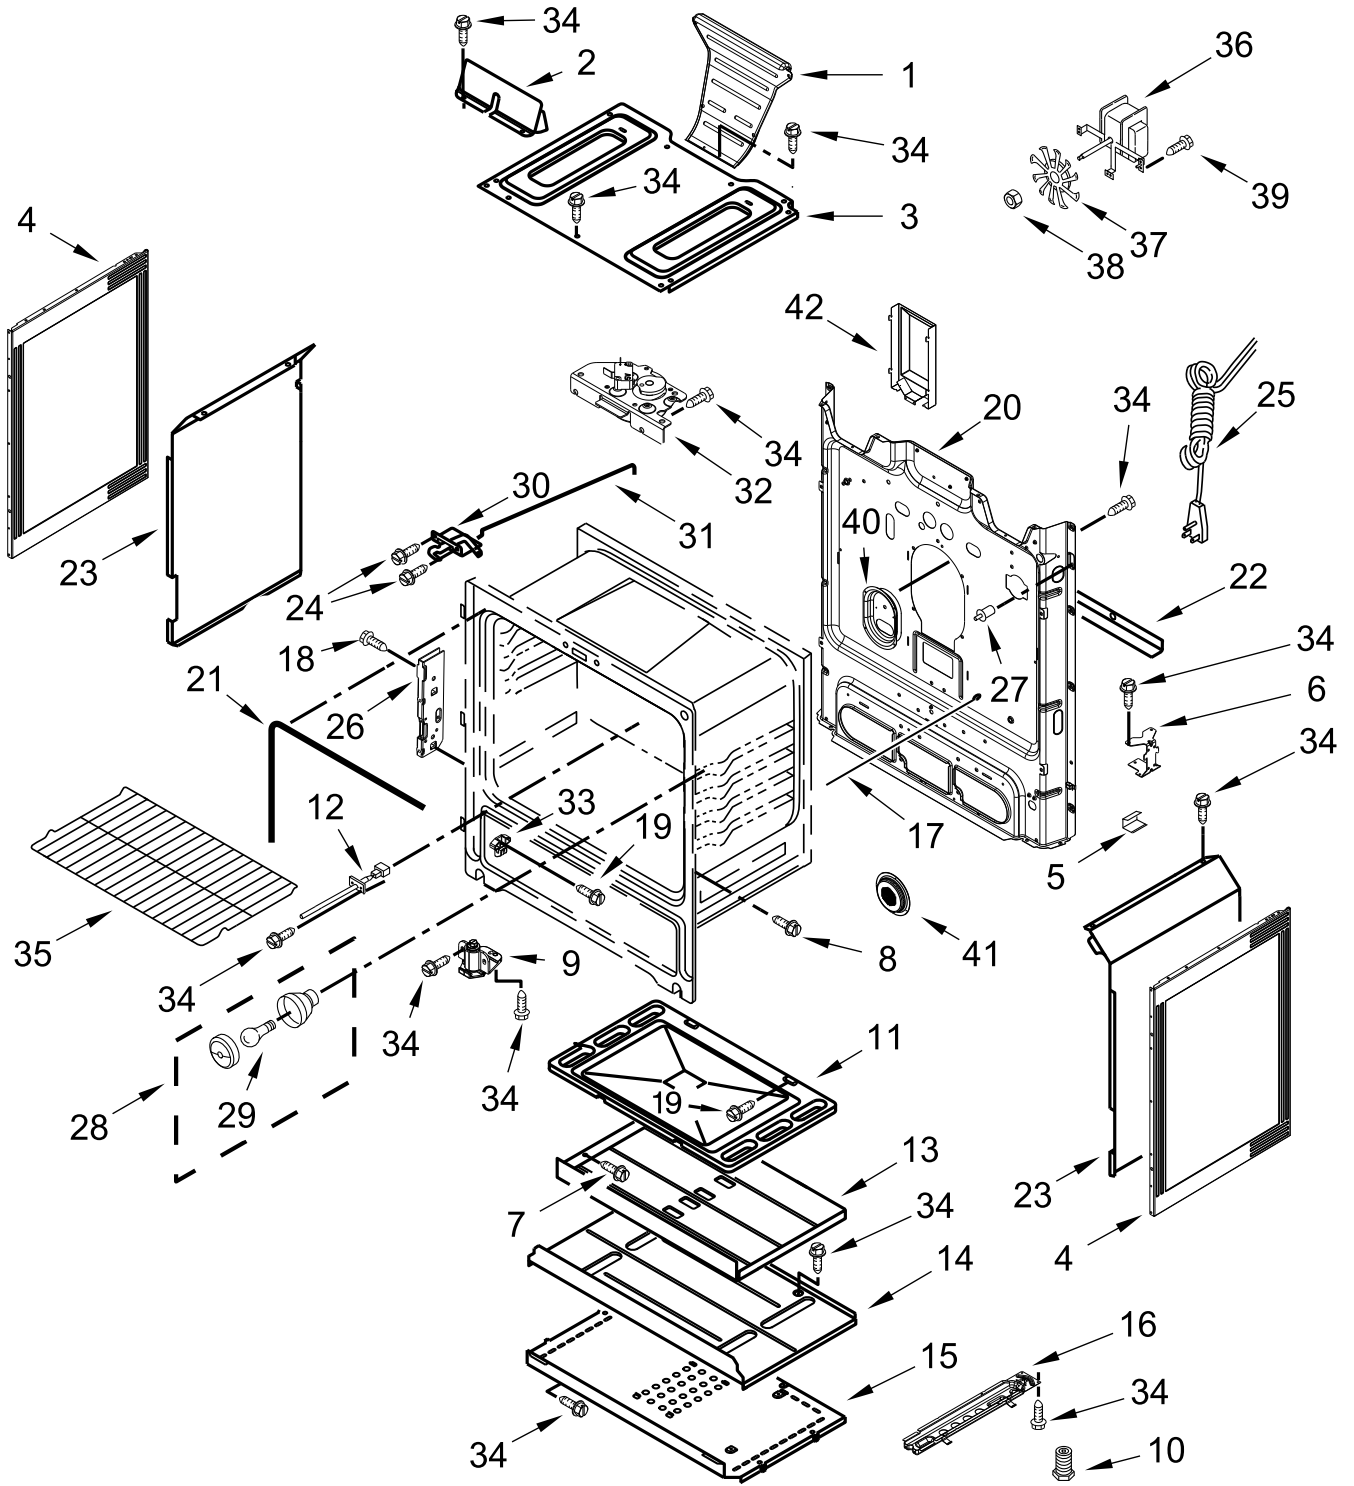

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	16	W10390008	Assembly, Base Rail (Left)	30	9761013	Assembly, Door Latch (Front)
2	8272747	Shield, Flue				31	W10078370	Rod, Push Latch
3	8273036	Box-Burner, Gas Sealed		W10390007	Assembly, Base Rail (Right)	32	W10107820	Assembly, Door Latch (Rear)
4		Panel, Side	17	9757239	Rod, Door Switch	33	W10674705	Glide, Drawer Front
	W10162245	Black	18	W10031780	Screw	34	3196178	Screw
	W10575396	White	19	3400080	Screw	35	W10268578	Rack, Oven
5	W10137382	Clip, Panel	20	W10416099	Main, Back	36	W10167915	Fan Motor, Conv
6	8523249	Bracket, Manifold	21	W10658354	Seal, Door	37	W10116351	Blade, Fan
7	W10362924	Screw	22	W10435470	Brace, Main Back	38	W10213748	Nut
8	3196560	Screw	23	9761449	Retainer, Insulation (Left)	39	4449809	Screw
9	W10341186	Assembly, Front Foot		9761448	Retainer, Insulation (Right)	40	W10134126	Bracket, Fan
10	W10058460	Foot, Leveling				41	W10134124	Cover, Conv Fan
11	3195097	Bottom, Oven	24	3196560	Screw	42	W10158780	Cover, Rear Fan
12	W10586204	Sensor	25	W10624590	Cord, Power			FOLLOWING PARTS NOT ILLUSTRATED
13	8053967	Baffle, Burner Oven	26	W10289077	Receiver, Hinge		8524099	Insulation, Wrap
14	8053969	Shield, Heat	27	W10627802	Switch, Door		W10180437	Insulation, Back
15	8053968	Shield, Lower	28	W10454648	Assembly, Light			
			29	311255	Bulb, Oven Light			

# DOOR PARTS

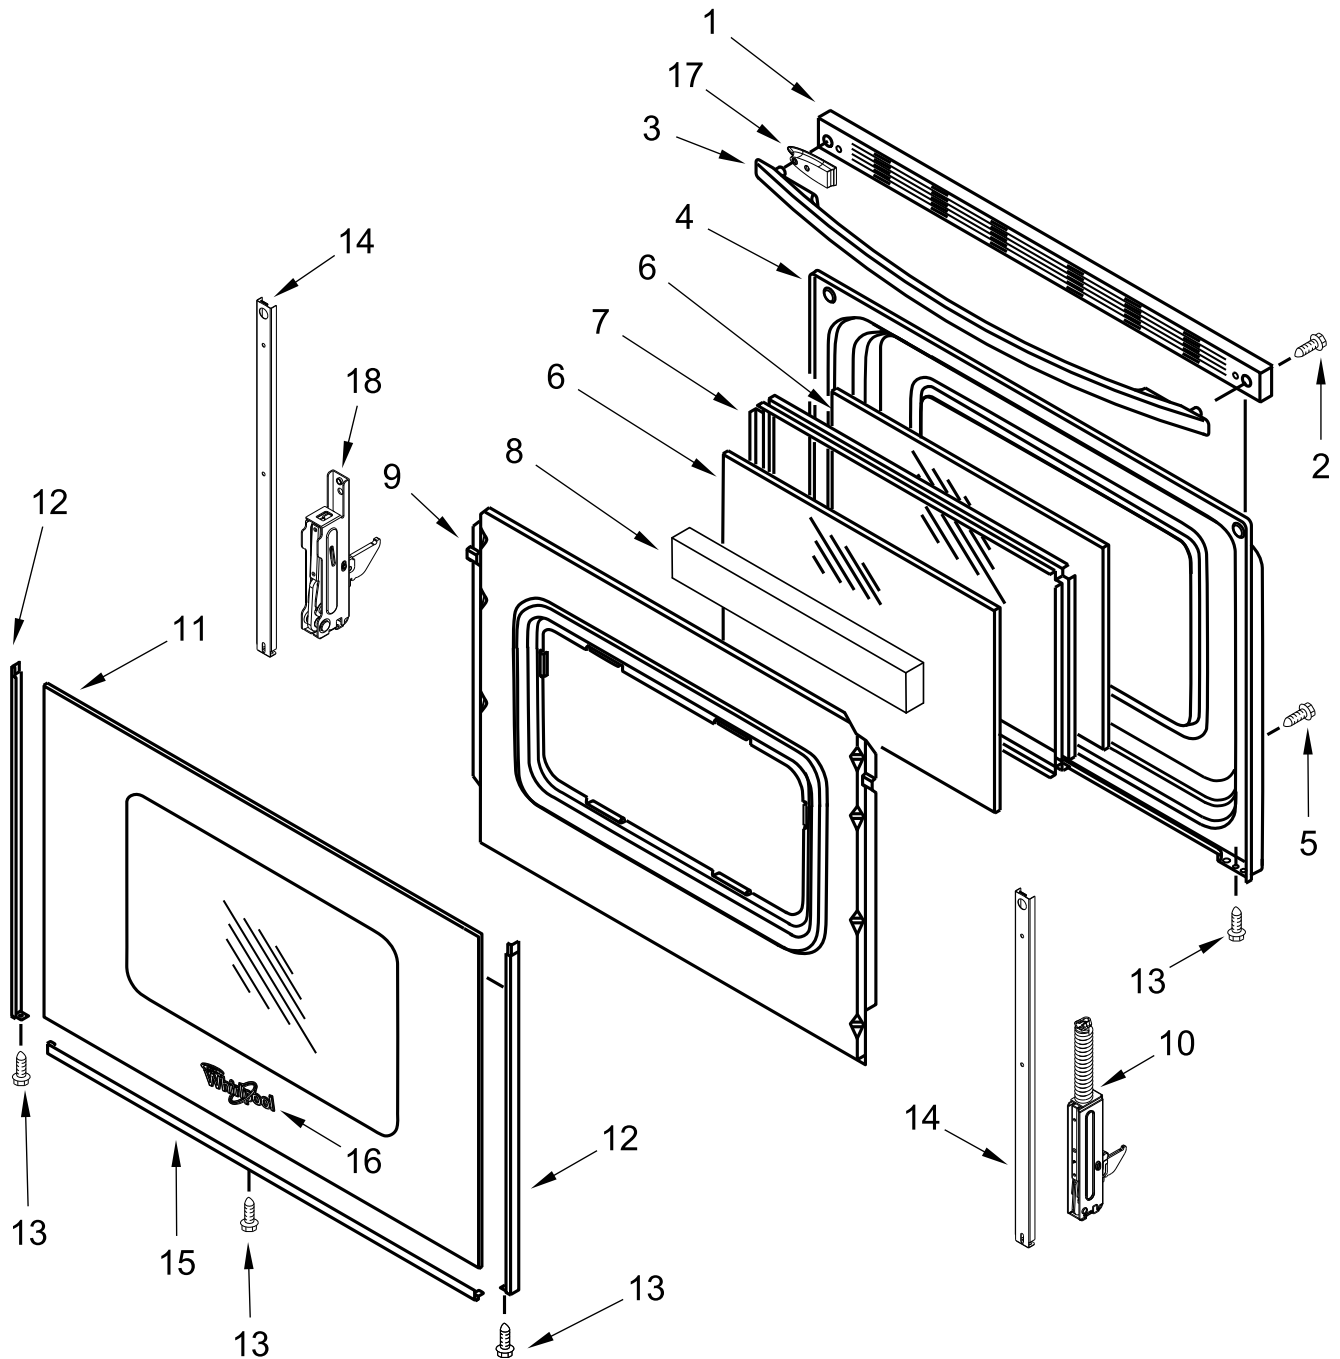


# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
	W10310920	White
2	W10480830	Screw
3		Handle, Door
	W11022643	Black
	W11022644	White
4	9761344	Liner, Door
5	W10031790	Screw
6	W11044424	Glass, Inner
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	9761357	Retainer, Insulation
10	W10299224	Hinge, Active (With Spring)
11		Glass, Outer Door
	W10884159	Black
	W10409945	White
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	W10544179	Strap, Door
15		Trim, Bottom
	8523177	Black
	8523175	White
16	W10884775	Nameplate
17		Standoff, Handle
	W11037027	Black
	W11037028	White
18	W10299227	Hinge, Door (Passive)

# DRAWER PARTS

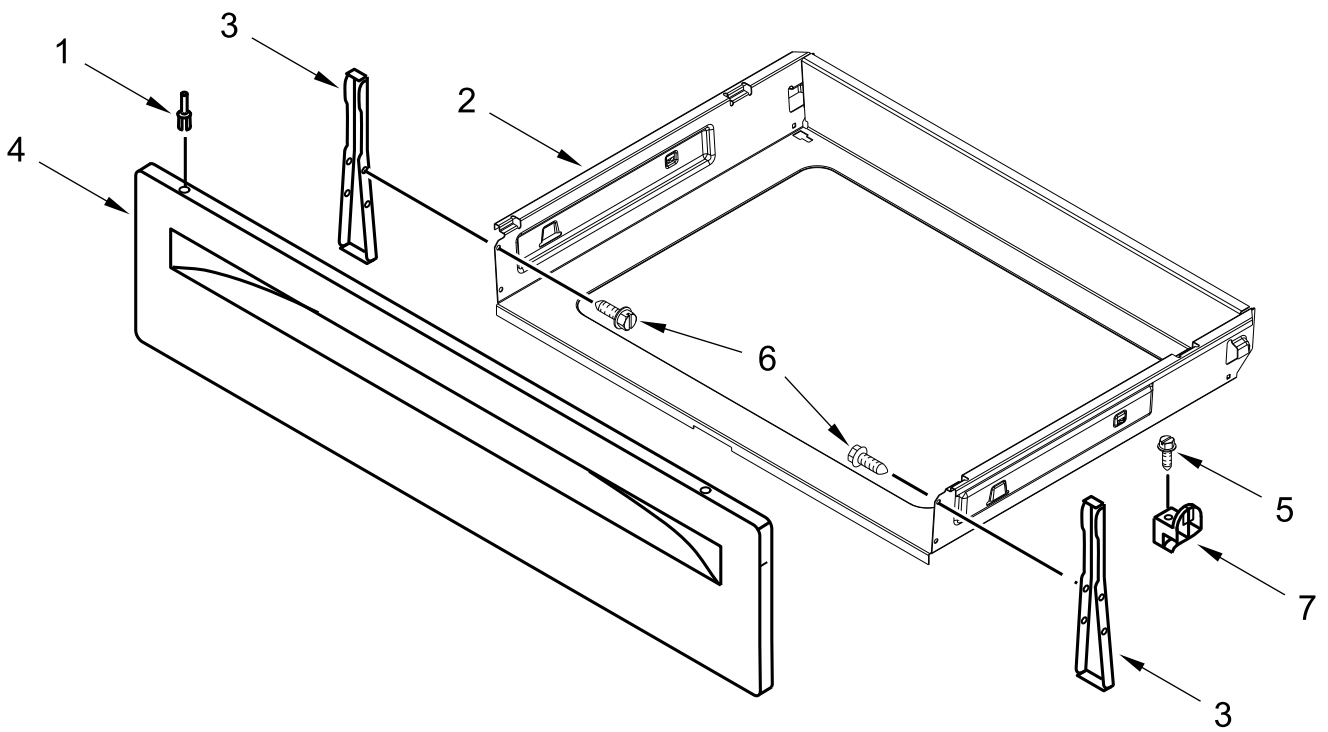

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Rivet, Push
	3196813	Black
	3196814	White
2	W10688022	Drawer, Storage
3	W10462911	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Panel, Drawer Front
	W11123976	Black
	W11123977	White
5	3196178	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	3196169	Screw
7	W10674708	Glide, Drawer Rear

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10268578	Rack, Oven
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting