

[Skip to content](#)

Manuals+

User Manuals Simplified.



CARSON PRO Magnivisor Deluxe CP-60 Instruction Manual

Home » [Carson](#) » CARSON PRO Magnivisor Deluxe CP-60 Instruction Manual 

CARSON PRO®

MAGNIVISORDELUXE™ CP-60

Contents [[hide](#)]

- [1 Directions for use:](#)
- [2 Cleaning / Care instructions:](#)
- [3 File Downloads](#)
- [4 Related Manuals](#)

Directions for use:

Inserting / Removing Lens:

- Select desired lens for use.
- Place lens tabs into the holder located under the visor (Fig. 1).
- The flat part of the lens should face inward. The curved portion should face out.

- Press each tab firmly into the holder until you hear each side click into place.
- Simply pull on the lens to remove it from the holder.

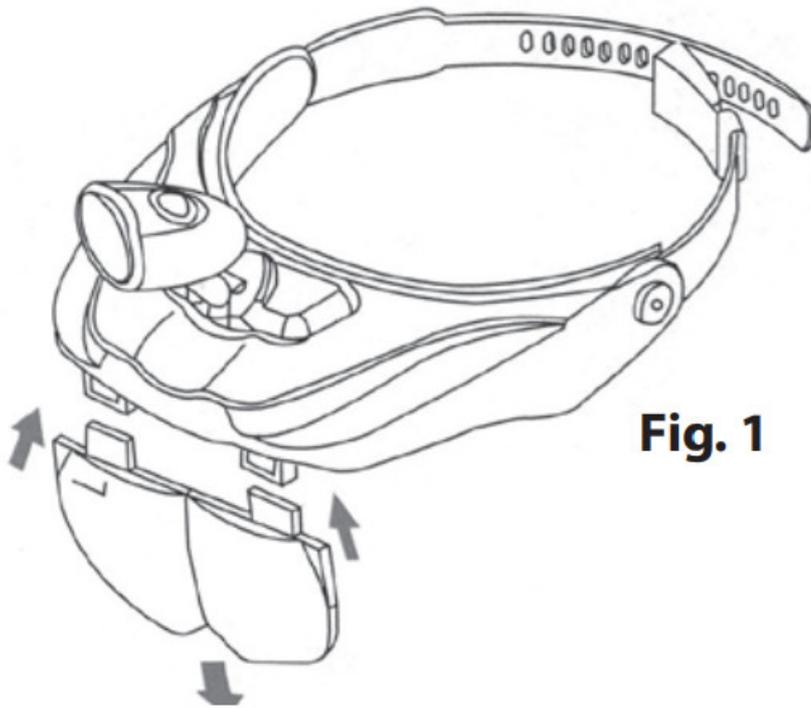


Fig. 1

Adjusting Head Strap:

- Press on buckle marked “open” to release strap lock (Fig. 2).
- Adjust the strap to the desired size.
- Release buckle to lock the strap in place.

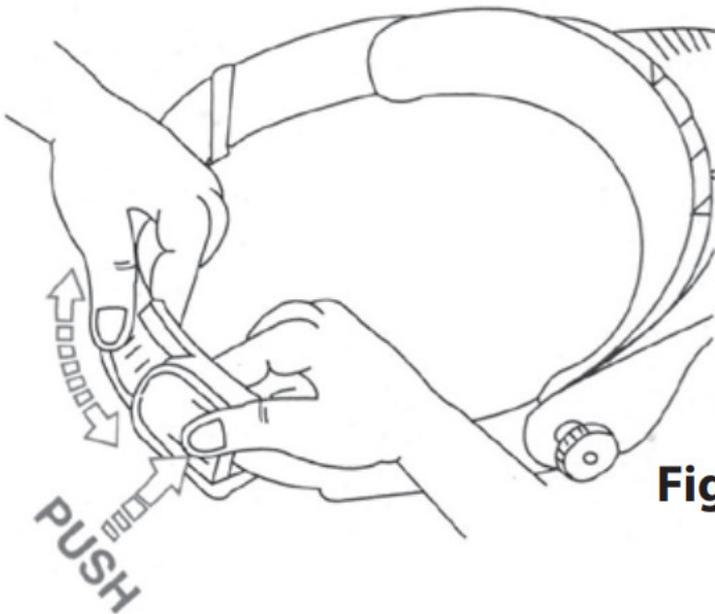


Fig. 2

Using Your Magnifier:

- Once placed on your head, the visor can be adjusted up or down as needed.
- Adjust the lens to the desired viewing angle.
- Place an LED lamp in the opening on top of the visor (Fig. 3).
- To activate LED lights, simply push the red button located on top of the lamp.
- Adjust the LED light as needed to illuminate your viewing subject.
- The LED lamp can be adjusted 30 degrees to the right or left and about 90° up or down.
- The LED lamp is removable and can be used as independent light source.
- LED lamp features built-in magnets and can be attached to metal surfaces.

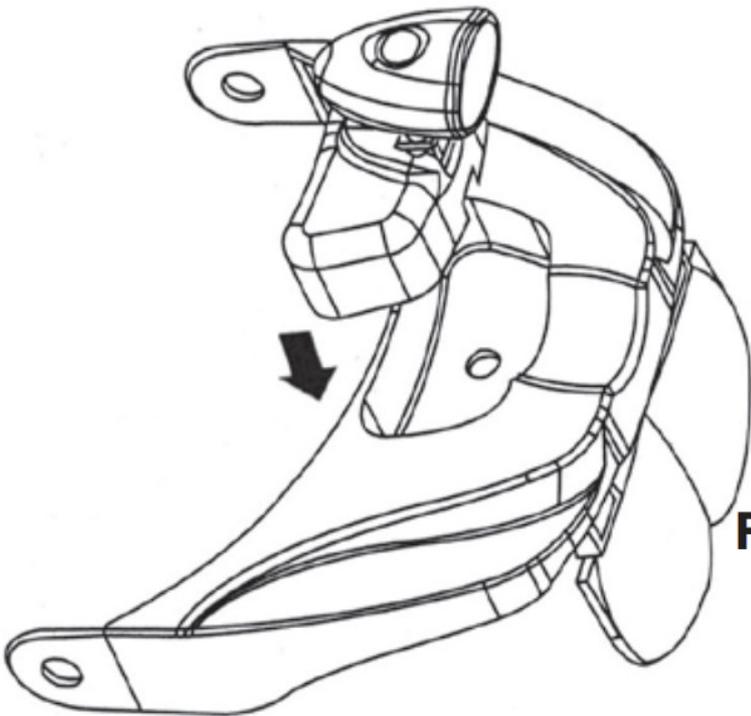


Fig. 3

Battery Installation:

- Remove LED lamp from magnifier frame.
- Open battery door located on the bottom of the lamp (Fig. 4).
- Insert batteries according to the polarity diagram printed on the battery door.
- Uses 3 AAA batteries (alkaline batteries are recommended).
- Approximate battery life is 40 – 50 hours.

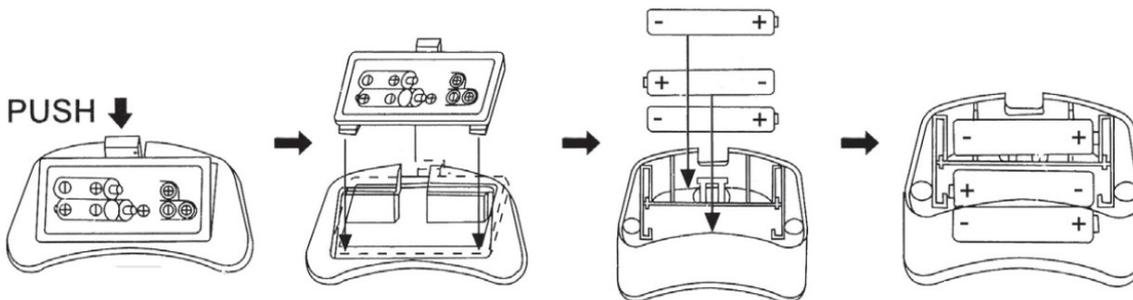


Fig. 4

Cleaning / Care instructions:

- Handle lenses with care to avoid scratching. Always store items in boxes when not in use.

Warning:

Do not look directly at the sun with this product or the naked eye. Doing so may cause permanent irreversible eye damage.

Important: Clean using a microfiber lens cloth only. Do not use any abrasives, chemical cleaners, or solvents.

File Downloads



CARSON Instruction Manual [Download](#) [optimized]
 PRO Magnivisor Deluxe CP-60 [Download](#)

Related Manuals

1. **CARSON PRO MagniFlash Instruction Manual** Instructions High power aspheric lens provides maximum magnification with minimal...
2. **Lochinvar CP 180-85, CP 199-85, CP 199-100, CP 270-100, CP 360-100 Commercial Gas Water Heater Typical Specification Manual** Typical Specification CPAK-SPEC-03 Typical Specification for Lochinvar® Copper-Pak@...
3. **CARSON SL-55 LED Sight Pro Flashlight User Guide** LED Sight Pro™ LED Flashlight SL-55 Congratulations on selecting your new...
4. **CARSON Smartphone Telescope Adapter Instruction Manual** Smartphone Telescope Adapter Included with: RP-100SP Telescope , RP-200SP Telescope...
5. **CARSON MagniLoupe 4-Piece Eye Loupe Set Instruction Manual** ML-20 INSTRUCTIONS FOR USE www.carson.com/ML20guide Using as Eye Loupe Select...
6. **CARSON Mini Brite 5X LED Lighted Magnifier Instruction Manual** PO-55 MINIBRITE™ 5X LED LIGHTED MAGNIFIER Instructions for use: Installing...