



Quick Start Guide
Guide de démarrage rapide
Guida rapida di avvio

iOS
Android

Includes

- 1 iBaby Air
- 1 Travel Pouch
- 1 Power Adapter
- 1 Quick Start Guide

Getting Started


What you need to get started:



Installing Your iBaby Air


Step 1

Verify that your smart device is connected to a Wi-Fi network. Your router must provide Wi-Fi connection for Internet access.

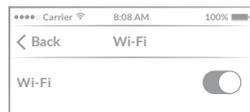


Step 2

Connect the power adapter to the back of your iBaby Air & press the power button on the top. You will see a soft PINK light flashing.

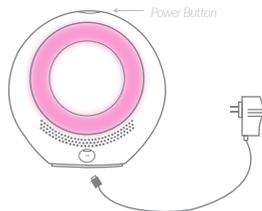

Step 3

Wait for a BLUE light to start flashing.
Note: if you do not wait for the light change, the installation might be unsuccessful.

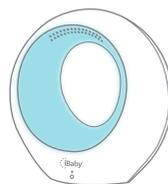

Step 4

From App Store or Google Play, download the iBaby Care App onto your supported device and launch the app.



Download on the App Store



GET IT ON Google play

Step 5

Open the app & follow the in-app instructions to install your iBaby Air successfully.

Installation Indicators

- If the installation fails, you will see an **ORANGE** light flashing to alert you. Check your Wi-Fi.
- When the installation starts, the **BLUE** light will start rotating.
- Once the installation is completed, your iBaby Air will turn to a default air indicator light:

Superb (0 - 25)	Poor (25 - 50)
Oops (50 - 75)	Alert (75 - 100)

 * Refer to the in-app Reading Guide for more information.

For questions, contact us at

iBaby Labs, Inc
780 Montague Expy, Ste 601
San Jose, CA USA

+1 (650) 396-2436
support@ibabylabs.com
www.ibabylabs.com

Get to Know Your iBaby Air

