# **Virtual Reality Glasses**


User's Guide for Model IVR37-1691-01

### **Features**

- Suitable for most smartphones 3.5-6"
- Aspheric optical lens
- 3D video playback and support
- Lens and focus adjustment
- Camera access for AR apps
- FOV: 95 100 degrees
- Adjustable headstrap and foam pad

### **Includes**


- Headstrap
- **Warnings and Precautions** 
  - Wearing this device for prolonged periods may cause fatigue. Take breaks as needed.
  - Virtual Reality apps may cause epileptic seizures in some people. This device is not intended for people suffering from epilepsy or people sensitive to seizures.
  - Do not use while operating a motor vehicle, heavy machinery or performing physical activities.
  - Using this device may cause momentary loss of balance, only use in a safe area.
- Do not use while operating a motor vehicle or operating heavy machinery.
- Do not use while performing physical activities.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.

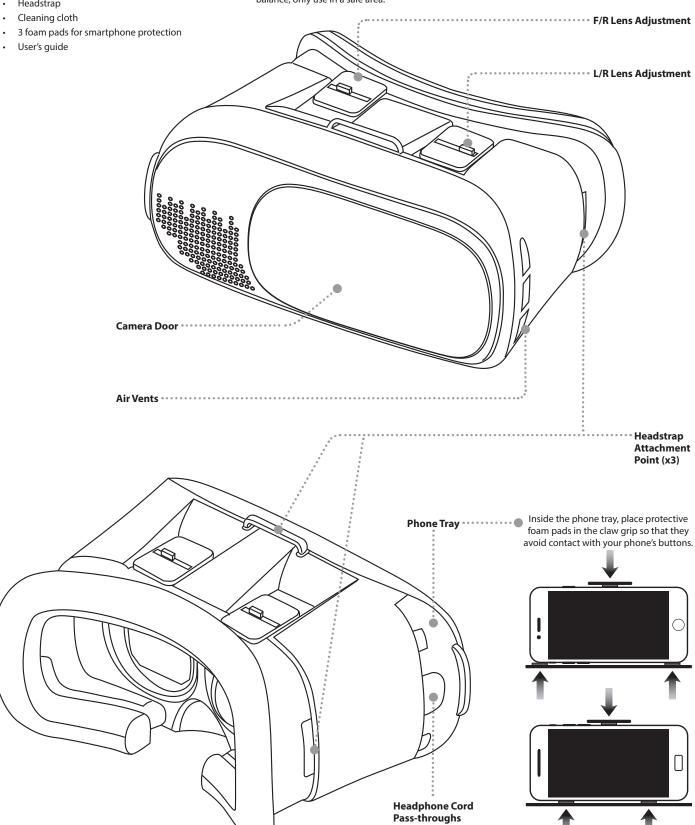

### **Download/Start App**


Scan a QR code or download a VR app from the Apple App Store or Google Play store. Start the app once it is installed and load your phone into the headset.


QR code is for example only and does not link to any VR apps.

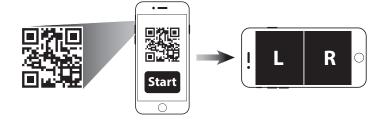

### **Load Phone into Headset**

Be sure to orient your phone so that its camera is on the left side of the headset. Slide the tray out and place your phone in the tray, using the spring loaded claw mechanism to hold your phone securely in place.

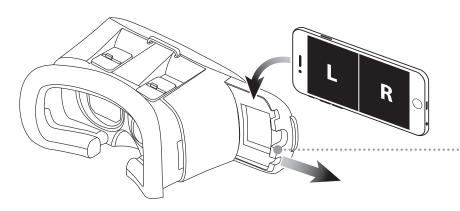

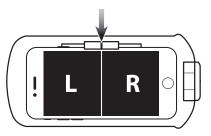

Align the center line of the phone's screen with the tick mark on the top of the claw.

### **Adjust Headset**

Put the headset on and adjust the headstrap and lenses to best fit your head.



# 45~-60°

### **Viewing Angle**

When using the headset for an extended period of time, maintaining this angle will help reduce fatigue.

### Cleaning

Use a cleaning cloth (included) as needed to keep the lenses clear. Do not use harsh chemicals or solvents, as they may damage the unit and its parts.

## **International Support**

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: **www.iLiveElectronics.com** 

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **www.iLiveElectronics.com** 

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **www.iLiveElectronics.com** 

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2017 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



Protect for Today Sustain for Tomorrow