

PANORAMA™

digital color video monitor




Thank you for purchasing the Panorama™ Digital Color Video Monitor by Summer Infant. This quick start guide will illustrate the few simple steps to get your device up and running.

SET-UP 1



Charge the Handheld

Charge for 7 hours before first use.

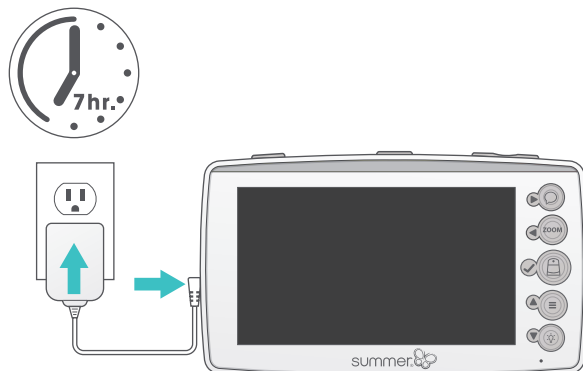


Install the Camera

Plug in camera. Place camera on a flat surface, such as a tabletop, or shelf or mount the camera on a wall using the screw and wall anchor provided.

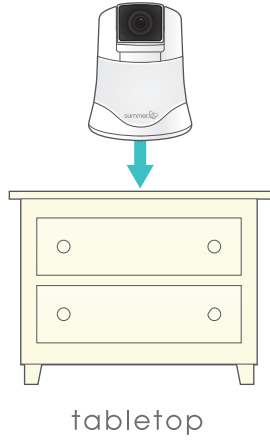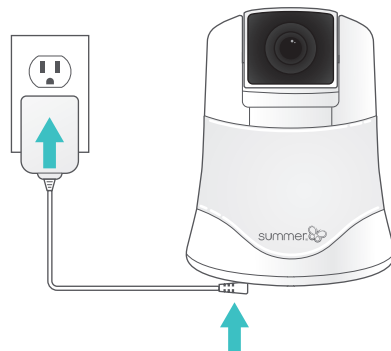

tabletop



or

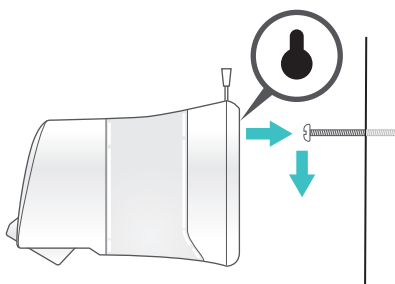

wall mount

Secure the Camera Cord


NEVER place the camera or cords within 3-feet of the crib. Secure the cord to your wall using the 6 security clips included to keep the cord away from baby's reach.

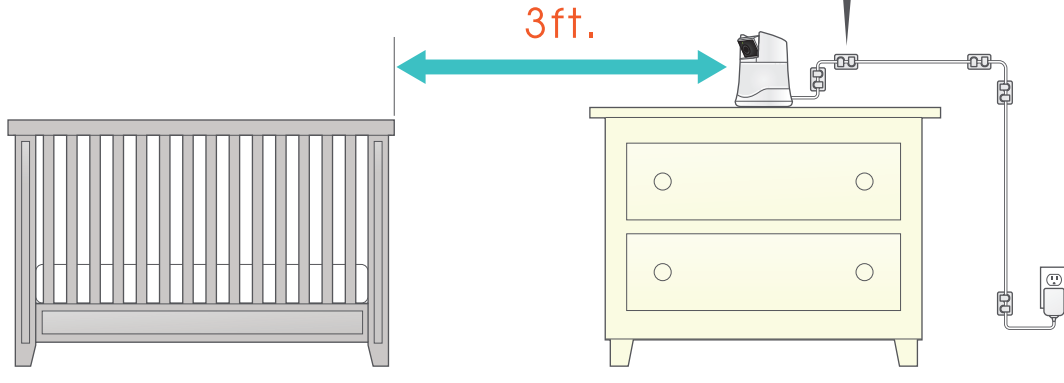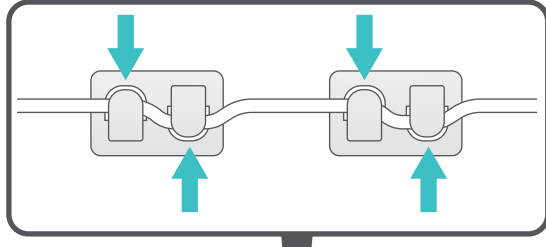

Read all warnings prior to using this product.

⚠ WARNING

STRANGULATION HAZARD: Children have strangled in cords. Keep this cord out of the reach of children (more than 3 ft. (0.9m) away).

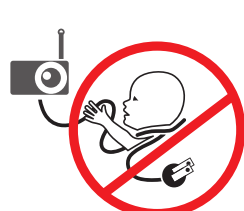

Power on the Camera and Handheld

Press the ON/OFF/Nightlight button on the **camera** and hold for 3 seconds. A green light will appear near the lens.

Press and hold the power button on the **handheld** unit for 3 seconds. The handheld will automatically sync with the camera. *(The handheld unit and the camera are paired at the factory for privacy reasons. If the handheld and camera are not paired with each other for any reason, see pairing section in the user guide.)*




Congratulation You are now ready to use your Panorama™ Digital Color Video Monitor!

SCREEN ICONS & FUNCTION BUTTONS 2

Screen Icons

- Nightlight On (Red/Blue)
- Image Zoom
- 71°F Temperature
- Reception
- Current Viewing Camera (1-4)
- Battery Life/ Plugged In

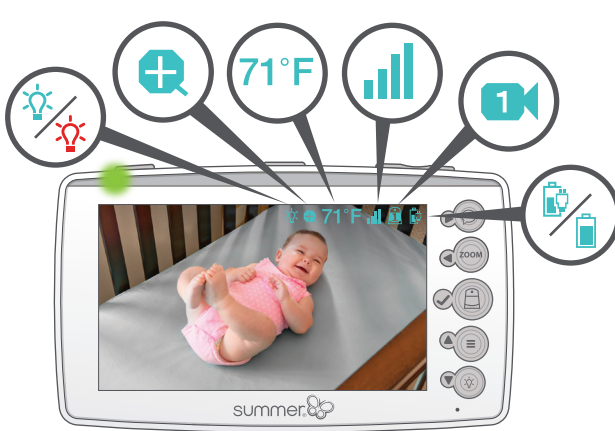

Function Buttons


- Power
- Video
- Volume Control
- Talkback/Navigate Right
- Zoom/Navigate Left
- Camera Control/Enter
- Menu/Navigate Up
- Nightlight/Navigate Down



Flip out the kick-stand and place the monitor on a stable, level surface.


Pan/Tilt Camera

Press the camera control button on the handheld to activate the camera's remote pan and tilt. An icon will appear on the screen indicating Pan/Tilt mode. Use the arrow buttons to pan left/right and tilt up/down. Press the camera button again to exit Pan/Tilt mode.

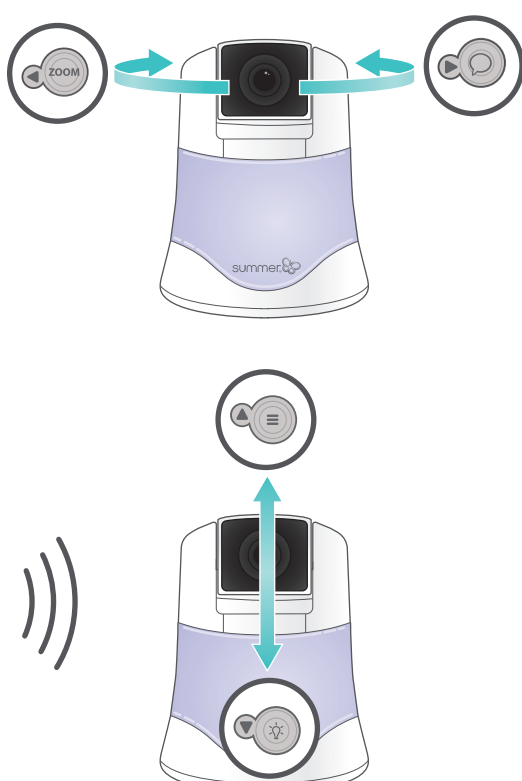


Nightlight



Press the nightlight button on the handheld to activate the soft glow nightlight on the camera. The light will glow blue. Blue light acts as a soothing soft glow nightlight. Nightlights are comforting to little ones, especially toddlers who become scared in a pitch black room.

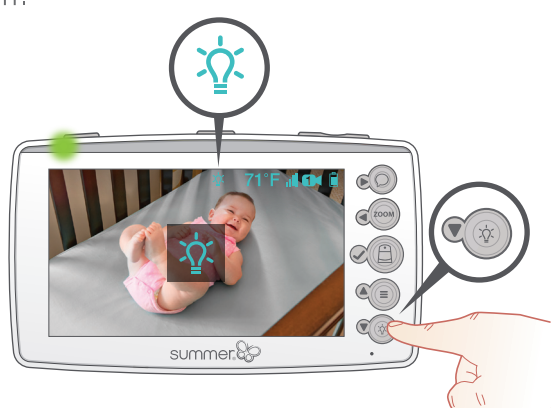

The nightlight can be turned on or off from the camera by pressing the ON/OFF/Nightlight button.

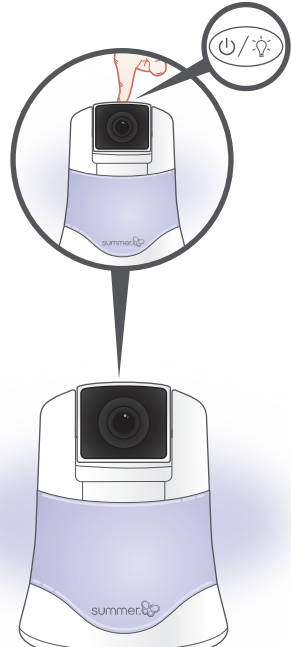

Press the nightlight button again to change the nightlight color to red. Red light helps soothe infants to sleep. This color is prominent in the sunset, nature's very own way of telling your little one it's time to go to sleep. An added bonus: young baby's find red light soothing as it is a familiar color to them- it's the only color light your baby was able to see in the womb.

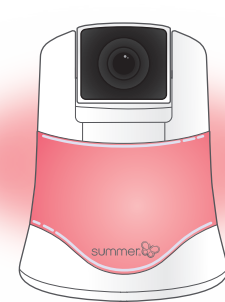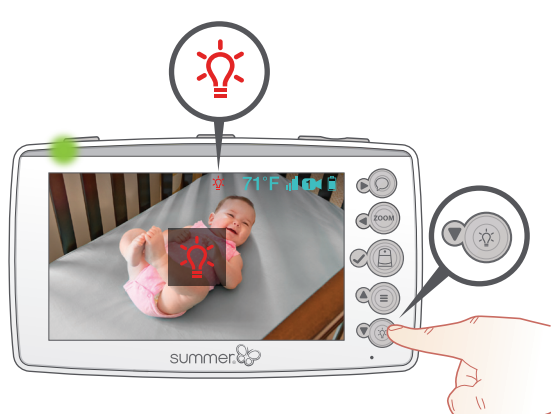


Zoom

Press the zoom button to magnify the screen. Press the button again to zoom out.




Talk-back

Press and hold the talk-back button to activate the talk-back feature. Release the button to end talk-back mode.

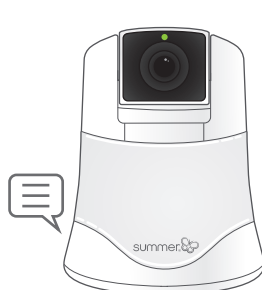

Sound Activated Lights

The LED light bar on the top of the handheld will light up as it picks up noises. Softer sounds will light up the green LEDs. Louder noises will light up the red LEDs.

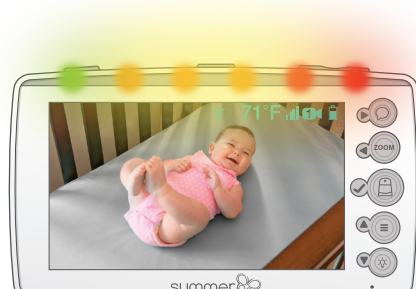


Video On/Off

Turn off the handheld's video by pressing the VIDEO button. The screen will go dark. This feature allows you to preserve battery life when not plugged into A/C adapter. The audio feature will remain activated allowing you to monitor sounds. Press the button again to resume video monitoring.



Brightness

Adjust the handheld screen brightness by pressing the menu button. Select brightness from the menu. Use the left and right arrow buttons to adjust the brightness.

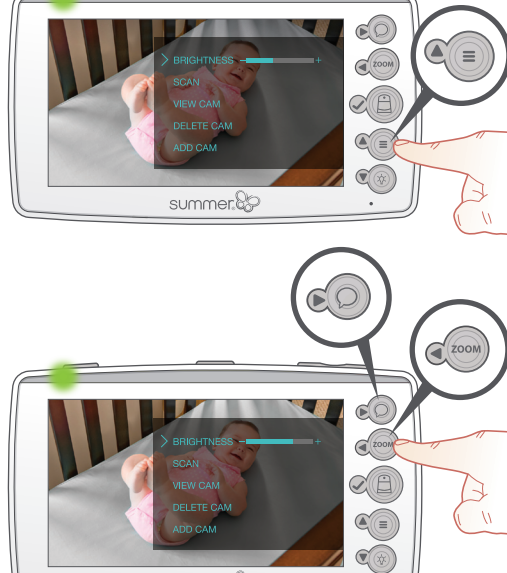

For understanding additional Menu features including: scan, select camera, delete camera, pair, and exit menu, please refer to the user's guide.